



Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for WHIRLPOOL MWA 10149 WH. You'll find the answers to all your questions on the WHIRLPOOL MWA 10149 WH in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual WHIRLPOOL MWA 10149 WH
User guide WHIRLPOOL MWA 10149 WH
Operating instructions WHIRLPOOL MWA 10149 WH
Instructions for use WHIRLPOOL MWA 10149 WH
Instruction manual WHIRLPOOL MWA 10149 WH

EN

A. "Door open" indicator

This washing machine is equipped with automatic safety functions which detect and diagnose faults at an early stage and react appropriately, e.g.:

B. "Service" indicator

C. "Water tap closed" indicator

D. "Clean pump" indicator

PROGRAMME CHART

MAYTAG®

E. Programme selector
 F. "Start/Pause" button
 G. "Temperature" button
 H. "Spin" button (incl. "Rinse hold")
 I. "Finish in" button
 J. "Dosing Aid" button
 K. "Soil level" button
 L. Eco monitor
 M. "Reset/Drain" button
 N. Child lock button combination
 O. Detergent overdosage indicator

Programme	Temperature °C	Care Labels	Max. Load kg	Type of wash/Notes <i>- Respect the manufacturer's recommendations on the care label</i>	Detergents and additives			Selectable options				Dosing aid		Spin		
					Pre-wash	Main wash	Softener	15° Green & Clean	Rapid	Pre-wash	Intensive rinse	Soil level	Soil level	Soil level	Spin	Max. Spin Speed rpm
Mixed	cold - 60°C		6.0	Lightly to normally soiled robust laundry made of cotton, linen, artificial fibres and their blends. Effective one-hour programme. Make sure to wash only similar colours together in one wash load.	—	Yes	*	*	—	—	*	*	*	*	*	max.
Fabrics	Cotton	cold - 95°C	10.0	Normally to heavily soiled towels, underwear, table and bed linen etc. made of cotton and linen.	*	Yes	*	*	*	*	*	*	*	*	*	max.
	Synthetics	cold - 60°C	3.5	Normally soiled garments made of artificial fibres (like polyester, polyacryle, viscose etc.) or their blends with cotton.	*	Yes	*	*	*	*	*	*	*	*	*	max.
	Delicates	cold - 40°C	2.5	Curtains and delicate clothing, dresses, skirts, shirts and blouses.	*	Yes	*	*	—	—	*	*	*	*	*	1000 ¹⁾
	Wool/Handwash	cold - 40°C	2.0	Woolens, labelled with the Woolmark and identified as machine washable, as well as textiles made of silk (except care labels), linen, wool and viscose marked as handwashable. This programme, at 40 °C, is tested and approved by The Woolmark Company for machine- and handwashable wool.	—	Yes	*	*	—	—	*	*	*	*	*	1000 ¹⁾
Colours	White	cold - 60°C	10.0	Normally to heavily soiled and robust white cotton laundry. Save energy by selecting a lower wash temperature and adding an oxygen-based bleach product, in addition to your detergent.	—	Yes	*	*	—	—	*	*	*	*	*	max.
	Light colours	cold - 60°C	6.0	White and pastel shaded garments made of delicate fabrics. Gentle wash programme to avoid graying or yellowing of your laundry. Use heavy duty detergent, if necessary also stain removers or bleaches on oxygen basis.	*	Yes	*	*	—	—	*	*	*	*	*	1000 ¹⁾
	Dark	cold - 60°C	6.0	Black and dark garments made of cotton, cotton blends and polyester. Special programme to reduce colour fading and local discoloration. Prefer to use a special liquid detergent for dark garments with this programme.	*	Yes	*	*	*	*	*	*	*	*	*	1000 ¹⁾
Eco	EcoCotton	cold - 60°C	10.0	Normally soiled cotton laundry. At 40 °C and 60 °C, most favourable programme in terms of combined water and energy consumption for washing cotton laundry. - Refer to programme for the Energy Label.	—	Yes	*	*	—	—	*	*	*	*	*	max.
	AquaEco	cold - 40°C	3.0	Lightly soiled laundry made of synthetic fibres or synthetics mixed with cotton garments. Saving programme with a very low water consumption. Use liquid detergent and the lowest recommended amount for 3 kg laundry. Do not use softener.	—	Yes	—	*	—	—	—	—	*	*	*	max.
	Speed 15	cold - 30°C	3.0	Briefly worn clothing made of cotton, artificial fibres and blends with cotton. Refresh programme. Use lowest recommended detergent amount.	—	Yes	*	*	—	—	—	—	*	*	*	max.
	Big Items	cold - 60°C	3.0	Blankets made of synthetic fibres, bedcovers filled with feathers, polyester or other artificial fibres, sleeping bags, bathmats and similar items.	*	Yes	*	*	—	—	*	*	*	*	*	1000 ¹⁾
	Rinse & Spin	—	—	10.0	Rinse and intensive spin programme. Same as the last rinse and the final spin in the "Cotton" programme.	—	—	*	—	—	—	—	*	*	*	max.
Spin	—	—	10.0	Intensive spin programme. Same as the spin cycle in the "Cotton" programme.	—	—	—	—	—	—	—	*	*	*	max.	

¹⁾ optional / Yes = dosing required
For improved garment care spin speed is restricted in these programmes.

The wool/handwash cycle of this machine, at 40 °C, has been tested and approved by The Woolmark Company for the washing of Woolmark garments labelled as "machine wash" or "hand wash" provided that the garments are washed according to the instructions on the garment label and those issued in this programme chart. M0702

Maytag is a registered trademark
5019 600 00149



[You're reading an excerpt. Click here to read official WHIRLPOOL MWA 10149 WH user guide](http://yourpdfguides.com/dref/4923560)
<http://yourpdfguides.com/dref/4923560>

Any time you try to change a programme setting with active child lock, the display will briefly show the key-like symbol. The programme setting cannot be changed anymore. The only change possible is to switch the washer off by turning the programme selector to the "Off/O" position. To deactivate the child lock, proceed in the same way as for activating it. **FAILURE INDICATORS** If one of the failure indicators lights up, or in case of any malfunction, consult the

"Troubleshooting Guide" in your Instructions for Use. Spin speed on display blinks: Unbalance during spinning. **DETERGENT DOSING**

RECOMMENDATION With the "Dosing Aid" button, you can make your washing machine indicate you the recommended detergent quantity for your wash load, depending on the soil level selected and the size of the load. • Helps to save detergent and protect the environment and also sensitive skin by avoiding detergent overdosing. • Before you use this function, you must adapt the washing machine to the dosing amounts which are recommended for the detergents you use. Also check if your region's water hardness corresponds with the water hardness level "soft" of your washing machine - if not adapt it.

• Select programme, options and cycle end **BEFORE** using the "Dosing Aid" button. @@@@@"15° Green & Clean" button • Enables ecological washing by saving energy used for waterheating, while maintaining a good wash result. • Bright colours live longer with this option; this was tested and approved by the German "wfk" laundry research institute. • Recommendable for lightly soiled laundry without stains. • Mals a programme before the end. • Press and hold the "Reset/Drain" button for a few seconds; an animation appears on the display. The water is drained; it may last some time until you can open the door. less more The indicator on the left is to show that the "Eco monitor" is active. The four indicators next to it show the degree of consumption: the 5019 600 00149 .



[You're reading an excerpt. Click here to read official WHIRLPOOL](#)

[MWA 10149 WH user guide](#)

<http://yourpdfguides.com/dref/4923560>