



Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for WHIRLPOOL OV A11 S. You'll find the answers to all your questions on the WHIRLPOOL OV A11 S in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual WHIRLPOOL OV A11 S
User guide WHIRLPOOL OV A11 S
Operating instructions WHIRLPOOL OV A11 S
Instructions for use WHIRLPOOL OV A11 S
Instruction manual WHIRLPOOL OV A11 S

FRAMTID^{GB}

OV 3



[You're reading an excerpt. Click here to read official WHIRLPOOL OV A11 S user guide](http://yourpdfguides.com/dref/4913752)
<http://yourpdfguides.com/dref/4913752>

Manual abstract:

.. Technical data Installation Electrical connection Environmental concerns IKEA GUARANTEE 12 13 14 16 16 17 Safety Information Your safety and that of others are very important This manual and the appliance itself provide important safety warnings, to be read and observed at all times. This is the danger symbol, pertaining to safety, which alerts users to potential risks to themselves and others. All safety warnings are preceded by the danger symbol and the following terms: DANGER! Indicates a hazardous situation which, if not avoided, will cause serious injury. WARNING! Indicates a hazardous situation which, if not avoided, could cause serious injury. All safety warnings give specific details of the potential risk present and indicate how to reduce risk of injury, damage and electric shock resulting from improper use of the appliance. Carefully observe the following instructions: - The appliance must be disconnected from the power supply before carrying out any installation work. - Electrical installation and maintenance must be carried out by a qualified technician, in compliance with the manufacturer's instructions and local safety regulations. Do not repair or replace any part of the appliance unless specifically stated in the user manual.

@@@Do not use multiple plug adapters or extension leads. Do not pull the power supply cable in order to unplug the appliance. @@@This appliance is designed solely for use as a domestic appliance for cooking food. No other type of use is permitted (e.g. heating rooms). The Manufacturer declines all responsibility for inappropriate use or incorrect setting of the controls. The appliance is not intended for use by persons (including children) with any physical, sensory or mental impairment, or without experience and knowledge of the appliance, unless supervised or previously instructed in its use by those responsible for their safety. The accessible parts of the appliance may become very hot during use. Young children should be kept away from the appliance and supervised to ensure that they do not play with it.

ENGLISH 5 - - - - During and after use, do not touch the heating elements or interior surfaces of the appliance - risk of burns. Do not allow the appliance to come into contact with cloths or other flammable materials until all the components have cooled sufficiently. At the end of cooking, exercise caution when opening the appliance door, letting the hot air or steam exit gradually before accessing the oven. When the appliance door is shut, hot air is vented from the aperture above the control panel. Do not obstruct the vent apertures. Use oven gloves to remove pans and accessories, taking care not to touch the heating elements. Do not place flammable materials in or near the appliance: a fire may break out if the appliance is inadvertently switched on. Do not heat or cook sealed jars or containers in the appliance. The pressure that builds up inside might cause the jar to explode, damaging the appliance. Do not use containers made of synthetic materials.

Overheated oils and fats catch fire easily. Always remain vigilant when cooking foods rich in fat and oil. Never leave the appliance unattended during food drying. If alcoholic beverages are used when cooking foods (e.g. rum, cognac, wine), remember that alcohol evaporates at high temperatures. As a result, there is a risk that vapours released by the alcohol may catch fire upon coming into contact with the electrical heating element. Scrapping of household appliances - This appliance is manufactured with recyclable or reusable materials. Dispose of it in accordance with local waste disposal regulations. Before scrapping, cut off the power supply cable.

- For further information on the treatment, recovery and recycling of household electrical appliances, contact your competent local authority, the collection service for household waste or the store where you purchased the appliance. ENGLISH 6 Product description 1 2 3 4 5 6 7 8 1 2 3 4 Control panel Cooling fan (not visible) Upper heating element Grill heating element 5 6 7 8 Rear oven lamp Oven fan Circular heating element (not visible) Oven door Accessories Baking tray Grill Pan Set 1x Wire Shelf 1x 1x ENGLISH 7 Control panel A A Function selector knob B Cooking time selector B C C Thermostat knob D Thermostat indicator light (red) D Daily use How to operate the oven • Turn the selector knob to the required function. The oven light switches on. • Turn the thermostat knob clockwise to the required temperature. The red thermostat led lights up, switching off again when the oven reaches the selected temperature. • At the end of cooking: Turn the knob to "0". Timer The minute minder allows a time of between 1 and 60 minutes to be set. To set the minute minder, first turn it clockwise all the way round and then set it to the desired time. Once the set time has elapsed, an acoustic signal will be emitted. ENGLISH 8 Oven functions table Function Description of function To switch on the oven light.

To grill steak, kebabs and sausages, to cook vegetables au gratin and to toast bread. Preheat the oven for 3 - 5 min. Place food on the 4th shelf. When grilling meat, use the drip tray to collect the cooking juices. Position it on the 3rd shelf, adding approx. half a litre of water. The oven door must be kept closed during the cooking cycle. To speed up defrosting of food. Place food on the middle shelf. Leave food in its packaging in order to prevent it from drying out on the outside.

To cook a variety of food requiring the same cooking temperature on a maximum of two shelves at the same time (e.g.: fish, vegetables, cakes). This function can be used to cook different foods without odours being transferred from one food to another. Use the 2nd shelf to cook on one shelf only. To cook on two shelves, use the 1st and 3rd levels. Preheat the oven to the required temperature and place the food in it when the set temperature is reached. 0 OVEN OFF LIGHT GRILL DEFROST FORCED AIR ENGLISH 9 Cooking tables Function Preheating Shelf (from the bottom) SWEETS, PASTRY, ETC X 2 Leavened cakes Biscuits/tartlets Biscuits/tartlets Choux buns Vols-au-vent/Puff pastry crackers Lasagna & Meat Meat & Potatoes Fish & Vegetables Meringues Lasagne, baked pasta, cannelloni, flans Bread/focaccia X X X X X X X X X 1-3 2 1-3 1-3 1-3 1-3 1-3 1-3 2 Type of food Temperature (°C) 160-180 160-170 150-170 180 180-200 200 200 180 90 190-200 Cooking time (min) 35-55 20-40 15-40 35-45 20-40 50-100 45-100 30-50 120-150 50-70 X 2 2 2 190-230 190-200 190-200 30-70 90-1 10 65-85 Lamb/Veal/Beef/ X Pork 1Kg X Chicken/Rabbit/ Duck 1Kg FISH X Baked fish/en papillote (fillet, whole) Cooking table with GRILL function X Toast Vegetable gratin Fish fillets/steaks Sausages/ kebabs/ spare ribs/ hamburgers X X X 2 170-190 40-60 4 3 3 4 200 200 200 200 2-5 40-60 30-40 30-50 ENGLISH 10 Cleaning and maintenance CLEANING WARNING! Never use steam cleaning equipment.



[You're reading an excerpt. Click here to read official WHIRLPOOL](http://yourpdfguides.com/dref/4913752)

[OV A11 S user guide](http://yourpdfguides.com/dref/4913752)

<http://yourpdfguides.com/dref/4913752>

Only clean the oven when it is cool to the touch. Disconnect the appliance from the power supply.

Accessories • Soak the accessories in water with washing up detergent immediately after use, handling them with oven gloves if still hot. • Food residues can be easily removed using a brush or sponge. Cleaning the rear wall and catalytic side panels of the oven (if present): **IMPORTANT: do not use corrosive or i**

abrasive detergents, coarse brushes, pot scourers or oven sprays which could damage the catalytic surface and ruin its self-cleaning properties.

••••• **MAINTENANCE WARNING!** Use safety gloves. Ensure the oven is cold before carrying out the following operations.

••••• Clean the surfaces with a damp cloth. ••• Finish off with a dry cloth. ••• Over time, these can ruin enamelled surfaces and the oven door glass.

••• food with a high sugar content). ••• Clean the door glass with a suitable liquid detergent.

•••••••••••••••• Open the door fully. 2. Lift the catches and push them forwards as far as they will go (Fig. 1). Fig. 1 ENGLISH 1 1 3. ••••• 2, 3, 4). To refit the door 1. Insert the hinges in their seats. 2.

Open the door fully. 3. Lower the two catches. 4. Close the door To replace the rear lamp 1. Disconnect the oven from the power supply. A Fig. 2 B B C Fig. 3 Fig. 5 2.

Unscrew the lamp cover (Fig. ••••• 3. Reconnect the oven to the power supply. **NOTE:** Only use 25-40W/230V type E-14, T300°C incandescent lamps. Lamps are available from IKEA After Sales Service.

D Fig. 4 ENGLISH 12 What to do if... Problem The oven does not work.

Possible cause No presence of mains electrical power. The oven is not connected to the electrical supply. The oven selector is turned to "0". The oven selector is turned to " ". The door is locked and will not release. The electronic programmer does not work. Electronic malfunction due to voltage variations.

Electronic malfunction due to voltage variations. Solution Verify the presence of mains electrical power. Connect the oven to the power supply.

Turn the oven selector and select a cooking function. Turn the oven selector and select a cooking function. Turn off the oven and restart it to see if the fault persists. •••••••••••••••• 2. •••••••••• Always specify: • a brief description of the fault; • the type and exact model of the oven; • the service number (number after the word Service on the rating plate), located on the right hand edge of the oven cavity (visible when the oven door is open); • your full address; your telephone number. If any repairs are required, please contact IKEA After Sales Service (to guarantee that original spare parts will be used and repairs carried out correctly). ENGLISH 13 Technical data Dimensions Width Height Depth Usable volume l Area of largest baking sheet (net surface) cm² Circular heating element W Grill W Cooling fan W Oven lamp W Total rating W Number of functions Energy consumption kWh 595 595 564 53 1200 2000 2450 21 25 2300 3 0.79 The technical informations are situated in the rating plate inside the appliance. ENGLISH 14 Installation After unpacking the oven, make sure that it has not been damaged during transport and tpurchase. •••••••••• The range of appliances named LAGAN and all appliances purchased in IKEA before 1st of August 2007.

Who will execute the service? IKEA service provider will provide the service through its own service operations or authorized service partner network. What does this guarantee cover? The guarantee covers faults of the appliance, which have been caused by faulty construction or material faults from the date of purchase from IKEA. This guarantee applies to domestic use only. The exceptions are specified under the headline "What is not covered under this guarantee?" Within the guarantee period, the costs to remedy the fault e.g.

repairs, parts, labour and travel will be covered, provided that the appliance is accessible for repair without special expenditure. On these conditions the EU guidelines (Nr. 99/44/ EG) and the respective local regulations are applicable. Replaced parts become the property of IKEA. What will IKEA do to correct the problem? IKEA appointed service provider will examine the product and decide, at its sole discretion, if it is covered under this guarantee.

If considered covered, IKEA Service Provider or its authorized service partner through its own service operations, will then, at its sole discretion, either repair the defective product or replace it with the same or a comparable product. What is not covered under this guarantee? • Normal wear and tear. • Deliberate or negligent damage, damage caused by failure to observe operating instructions, incorrect installation or by connection to the wrong voltage, damage caused by chemical or electrochemical reaction, rust, corrosion or water damage including but not limited to damage caused by excessive lime in the water supply, damage caused by abnormal environmental conditions. • Consumable parts including batteries and lamps. • Non-functional and decorative parts which do not affect normal use of the appliance, including any scratches and possible color differences. • Accidental damage caused by foreign objects or substances and cleaning or unblocking of filters, drainage systems or soap drawers. • Damage to the following parts: ceramic glass, accessories, crockery and cutlery baskets, feed and drainage pipes, seals, lamps and lamp covers, screens, knobs, casings and parts of casings. Unless such damages can be proved to have been caused by production faults. • Cases where no fault could be found during a technician's visit. • Repairs not carried out by our appointed service providers and/or an authorized service contractual partner or where nonoriginal parts have been used.

• Repairs caused by installation which is faulty or not according to specification. • The use of the appliance in a non-domestic environment i.e. professional use. • Transportation damages. If a customer transports the product to his home or another address, IKEA is not liable for any damage that may occur during transport. However, if IKEA delivers the product to the customer's delivery address, then damage to the product that occurs during this delivery will be covered by IKEA. ENGLISH 18 • Cost for carrying out the initial installation of the IKEA appliance. However, if an IKEA appointed Service Provider or its authorized service partner repairs or replaces the appliance under the terms of this guarantee, the appointed Service Provider or its authorized service partner will reinstall the repaired appliance or install the replacement, if necessary. This does not apply within Ireland, customer should contact the local IKEA dedicated after sales line or the appointed Service Provider for further information.

These restrictions do not apply to fault-free work carried out by a qualified specialist using our original parts in order to adapt the appliance to the technical safety specifications of another EU country.



[You're reading an excerpt. Click here to read official WHIRLPOOL](#)

[OV A11 S user guide](#)

<http://yourpdfguides.com/dref/4913752>

How country law applies The IKEA guarantee gives you specific legal rights, which cover or exceed all the local legal demands. However these conditions do not limit in any way consumer rights described in the local legislation. Area of validity For appliances which are purchased in one EU country and taken to another EU country, the services will be provided in the framework of the guarantee conditions normal in the new country. @@@@ Always refer to the numbers listed in the booklet of the specific appliance you need an assistance for.

Please also always refer to the IKEA article number (8 digit code) and 12 digit service number placed on the rating plate of your appliance. SAVE THE SALES RECEIPT! It is your proof of purchase and required for the guarantee to apply. The sales receipt also reports the IKEA name and article number (8 digit code) for each of the appliances you have purchased. Do you need extra help? For any additional questions not related to After Sales of your appliances please contact your nearest IKEA store call centre. We recommend you read the appliance documentation carefully before contacting us.
19 BELGIË - BELGIQUE - BELGIEN Telefoon/Numéro de téléphone/Telefon-Nummer: 02620031 1 Tarief/Tarif/Tarif: Lokaal tarief/Prix d'un appel local/Ortstarif Openingstijd: Maandag - Vrijdag 8.00 - 20.00 Heures d'ouverture: Lundi - Vendredi 8.00 - 20.00 Öffnungszeiten: Montag - Freitag 8.00 - 20.00 NORGE Telefon nummer: Takst: Åpningstider: ÖSTERREICH Telefon-Nummer: Tarif: Öffnungszeiten: 235001 12 Lokal takst Mandag - fredag 013602771461 Ortstarif Montag - Freitag 8.00 - 20.00 БЪЛГАРИЯ Телефонен номер: Тарифа: Работно време: Telefonní číslo: Sazba: Pracovní doba: ČESKÁ REPUBLIKA DANMARK Telefonnummer: Takst: Åbningstid: 02 4003536 Локална тарифа понеделник - петък 225376400 Místní sazba Pondělí - Pátek 8.00 - 20.

00 POLSKA 8.00 - 20.00 Numer telefonu: Stawka: Godziny otwarcia: Telefone: Tarifa: Horário: 8.00 - 20.00 PORTUGAL 225844203 Koszt połączenia według taryfy operatora Poniedziałek - Piątek 8.00-20.00 21316401 1 Tarifa local Segunda - Sexta 016590276 Local rate Monday - Friday 021 2044888 Tarif local Luni - Vineri DEUTSCHLAND Telefon-Nummer: Tarif: Öffnungszeiten: 70150909 Lokal takst Mandag - fredag 9.00 - 21.00 Lördag 9.00 - 18.00 (Åbent udvalgte søndage, se IKEA.dk) 06929993602 Ortstarif Montag - Freitag REPUBLIC OF IRELAND Phone number: Rate: Opening hours: 9.00 - 21.00 ROMÂNIA 8.00 - 20.
00 8.00 - 20.00 ΕΛΛΑΔΑ ESPAÑA Teléfono: Tarifa: Horario: Τηλεφωνικός αριθμός: 2109696497 Χρέωση: Τοπική χρέωση Ωρες λειτουργίας: Δευτέρα - Παρασκευή 913754126 Tarifa local Lunes - Viernes (España Continental) Număr de telefon: Tarif: Orar: РОССИЯ 8.00 - 20.00 8.00 - 20.00 Телефонный номер: 84957059426 Стоимость звонка: Местная стоимость звонка Время работы: Понедельник - Пятница 8.00 - 20.00 (Московское время) 8.00 - 20.00 SCHWEIZ - SUISSE - SVIZZERA FRANCE Numéro de téléphone: 0170480513 Tarif: Prix d'un appel local Heures d'ouverture: Lundi - Vendredi ÍSLAND ITALIA 9.00 - 21.00 Telefon-Nummer/Numéro de téléphone/Telefono: 0225675345 Tarif/Tarif/Tariffa: Ortstarif/Prix d'un appel local/Tariffa locale Öffnungszeiten: Montag - Freitag 8.00 - 20.00 Heures d'ouverture: Lundi - Vendredi 8.
00 - 20.00 Orario d'apertura: Lunedi - Venerdì 8.00 - 20.00 SLOVENSKO Telefónne číslo: Cena za hovor: Pracovná doba: Símanúmer: 5852409 Kostnaður við símtal: Almenn t mínútuverð Opnunartími: Mánudaga - Föstudaga Telefono: Tariffa: Orari d'apertura: 0238591334 Tariffa locale Lunedi - Venerdì (06-1)-3285308 Helyi tarifa Hétfőtől Péntekig 9.00 - 17.00 SUOMI (02) 50102658 Cena za miestny hovor Pondelok až piatok 8.00 - 20.00 Puhelinnumero: Hinta: Aukioloaika: 8.00 - 20.00 MAGYARORSZÁG Telefon szám: Tarifa: Nyitvatartási idő: Telefoon: Tarief: Openingstijd: SVERIGE 0981710374 Yksikköhinta Maanantaista perjantaihin 8.
00 - 20.00 0775-700 500 Lokal samtal Måndag - Fredag Lördag - Söndag 02076601517 Local rate Monday - Friday Telefon nummer: Taxa: Öppet tider: NEDERLAND 8.00 - 20.00 UNITED KINGDOM Phone number: Rate: Opening hours: 8.30 - 20.
00 9.30 - 18.00 09002354532 en/of 0900 BEL IKEA Lokaal tarief € 0,10 p/min Maandag t/m - Vrijdag 9.00 - 21.00 Zaterdag 9.00 - 20.00 Zondag 9.00 - 18.00 9.00 - 21.00 © Inter IKEA Systems B.V. 201 1 AA-556977-2 5019 610 01246/A .



[You're reading an excerpt. Click here to read official WHIRLPOOL OV A11 S user guide](http://yourpdfguides.com/dref/4913752)
<http://yourpdfguides.com/dref/4913752>