



Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for ZANUSSI CB 340 1C. You'll find the answers to all your questions on the ZANUSSI CB 340 1C in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual ZANUSSI CB 340 1C
User guide ZANUSSI CB 340 1C
Operating instructions ZANUSSI CB 340 1C
Instructions for use ZANUSSI CB 340 1C
Instruction manual ZANUSSI CB 340 1C

ZANUSSI

 Electrolux

FRIDGE - FREEZER

ZERB 8441

INSTRUCTION BOOK

GB

200370292

A/ZE/14-1, (05.)



[You're reading an excerpt. Click here to read official ZANUSSI CB 340 1C user guide](http://yourpdfguides.com/dref/954399)
<http://yourpdfguides.com/dref/954399>

Manual abstract:

By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling of this product. For more detailed information about recycling of this product, please contact your local city office, your household waste disposal service or the shop where you purchased the product. **2 IMPOR TANT S AFET Y INS TR UCTIONS** These warnings are provided in the interests of your safety. Ensure that you understand them all before installing or using this appliance. Your safety is of paramount importance. If you are unsure about any of the meanings or these warnings contact the Customer Care Department. Prior to installation Check the appliance for transport damage. Under no circumstances should a damaged appliance be installed. In the event of damage please contact your retailer. Installation This appliance is heavy.

Care should be taken when moving it. It is dangerous to alter the specifications or attempt to modify this product in any way. Ensure that the appliance does not stand on the electrical supply cable. If the supply cable is damaged, it must be replaced by a cable available from your local Service Force Centre. Make sure that the power plug has not been squashed or damaged during transit.

- A damaged power plug may overheat and cause a fire. As you unpack the appliance, check carefully for any signs of transit damage. Do not place heavy articles or the fridge/freezer itself on the power cord. - There is a risk of a short circuit and fire. Do not remove the power cord by pulling on its lead, particularly when the fridge/freezer is being pulled out of its niche.
- Damage to the cord may cause a short-circuit, fire and/or electric shock. - If the power cord is damaged, it must be replaced by a certified service agent or qualified service personnel. If the power plug socket is loose, do not insert the power plug. - There is a risk of electric shock or fire. @@Parts which heat up should not be exposed. @@@@Keep packaging materials away from children, to prevent the risk of suffocation! Safety precautions for isobutane Warning The refrigerant isobutane (R 600a) is contained within the refrigerant circuit of the appliance, a natural gas with a high level of environmental compatibility, which is nevertheless flammable. Keep ventilation openings, in the appliance enclosure or in the built-in structure, clear of obstruction. Do not use mechanical devices or other means to accelerate the defrosting process, other than those recommended by the manufacturer. Do not damage the refrigerant circuit. Do not use electrical appliances inside the food storage compartments of the appliance.

During Use This appliance is designed for domestic use only, specifically for the storage of edible foodstuffs. It is not intended for commercial or industrial use. Containers with flammable gases or liquids can leak at low temperatures. Do not store any containers with flammable materials, such as spray cans, fire extinguisher refill cartridges etc. in the appliance. Frozen food should not be refrozen once it has thawed out. Do not place carbonated or fizzy drinks in the freezer compartment. Ice lollies can cause 'frost/freezer burns' if consumed straight from the freezer. Do not remove items from the freezer compartment if your hands are damp/wet, as this could cause skin abrasions or frost/freezer burns. Bottles and cans must not be placed in the freezer compartment they can burst when the contents freeze.

Manufacturers' recommended storage times should be adhered to. Refer to relevant instructions. Maintenance and Cleaning Before cleaning, always switch off the appliance and disconnect from the electrical supply. When unplugging always pull the plug from the mains socket, do not pull on the cable. Servicing This product should be serviced by an authorised engineer and only genuine spare parts should be used.

Under no circumstances should you attempt to repair the appliance yourself. @@Contact your local Service Force Centre. @@@@Avoid damaging the cooling unit. @@@@Top with thermostat control knob 2. Light 3.

Glass shelves 4. Bottle rack 5. Cooling surface 6. Defrost water drain 7. Glass shelf 8. Vegetable boxes 9. Data label 10. Freezing compartment 11. Storing compartment(s) 12. Defrost water outlet 13.

Bottom plinth 14. 15. 16. 17. 18. 19. 20. 21. 22. 23.

24. 25. 26. @@@@The next paragraph will give instructions for setting. Controlling the temperature, setting The thermostat interrupts the operation of the appliance automatically for more or less time depending on the setting then restarts it assuring the required temperature.

The closer it is set to „Max." position the more intensive the refrigerating will be. When the thermostat knob is set to „Medium" position (between „Min." and „Max."), in the freezing compartment -18 °C, in the fresh food compartment +5 °C can be reached.

Setting it to „Medium" position is adequate for everyday use. The temperature coming about in the refrigerator is effected by not only the position of the thermostat but the ambient temperature, frequency of door openings and the quantity of etc. In the maximum „Max." position - in case of increased demand e.g. during heatwaves - the compressor may operate continually. This does not cause damages to the appliance. 6 The Refrigerator Below is the recommended storage positions for various food types: 1. Ready-cooked foods, fresh meat, cold cuts. 2.

Milk, dairy products. 3. Fruits, vegetables, salads. 4. Cheese, butter. 5. Eggs. 6. Yoghurt, sour cream. 7.

Small bottles, drinks. 8. Large bottles, drinks. Storage Shelves The shelves in the refrigerator compartment are adjustable to allow for the storage of large items. To re-arrange the shelves, open the door to 90°.

Storage Times The storage chart at the end of the instruction book gives information on storage times in the refrigerator compartment. The storage times quoted are intended as a guide only. Do not cover the shelves with paper or trays etc. as this will affect the air circulation within the refrigerator compartment. Do not put hot foods in the refrigerator, allow hot foods to reach room temperature naturally before placing in the refrigerator.

Cover foods, or place in closed dishes before placing them in the refrigerator, this prevents any transference of food smells. 7 The Freezer Freezing fresh food When freezing fresh food always place the food in the freezing compartment which is the top drawer in the freezer section. 1. Turn the thermostat control knob to the maximum setting. 2. Place the food to be frozen in the top drawer. 3. After 24 hours return the thermostat control knob to the medium setting and place the frozen food into the storage compartments. Thawing Deep frozen or frozen food, prior to being used, can be thawed in the fridge or at room temperature, depending on the time available. Small food items may even be cooked from frozen, in this case cooking will take longer.



[You're reading an excerpt. Click here to read official ZANUSSI CB 340 1C user guide](http://yourpdfguides.com/dref/954399)

<http://yourpdfguides.com/dref/954399>

More than 55 million Electrolux Group products (such as refrigerators, cookers, washing machines, vacuum cleaners, chain saws and lawn mowers) are sold each year to a value of approx. USD 14 billion in more than 150 countries around the world.

Printed By Océ Hungária Kft. 2006. 02. 17. .



[You're reading an excerpt. Click here to read official ZANUSSI CB 340 1C user guide](#)

<http://yourpdfguides.com/dref/954399>