



# Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for ZANUSSI F850. You'll find the answers to all your questions on the ZANUSSI F850 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual ZANUSSI F850  
User guide ZANUSSI F850  
Operating instructions ZANUSSI F850  
Instructions for use ZANUSSI F850  
Instruction manual ZANUSSI F850

**ZANUSSI**

Electrolux

WASHING MACHINE

洗衣機

F 750

F 850



INSTRUCTION BOOKLET

說明手冊

GB

CN

132983480



[You're reading an excerpt. Click here to read official ZANUSSI F850 user guide](#)

<http://yourpdfguides.com/dref/955752>

**Manual abstract:**

*Our contribution to the protection of the environment: we use recycled paper. 2 Contents Warnings Disposal 4-5 5 Maintenance Bodywork Door seal Detergent dispenser drawer Drain pump Water inlet filter Emergency emptying out Frost precautions 18 18 18 18 19 19 19 19 Tips for environmental protection 5 Technical specifications Installation Unpacking Positioning and levelling Water inlet Water drainage Electrical connection 6 7 7 7 7 8 8 Something not working? 20-21 Your new washing machine Description of the appliance Detergent dispenser drawer 9 9 9 Use Control panel Controls Washing hints Sorting the laundry Temperatures Before loading the laundry Maximum loads Laundry weights Removing stains Detergents and additives International wash code symbols Operating sequence Washing programmes 10 10 10 11 11 11 11 11 11 11 12 13 14-15 16-17 3 ENGLISH Warnings The following warnings are provided in the interests of overall safety. You must read them carefully before installing or using the appliance. Installation · All internal packing must be removed before using the appliance. Serious damage may be caused to the machine or adjacent furniture if the protective transit devices are not removed or are not completely removed. Refer to the relevant paragraph in the instruction book. · Any electrical work required to install this appliance must be carried out by a qualified electrician. · Any plumbing work required to install this appliance must be carried out by a qualified plumber. · After having installed the machine, check that it is not standing on its electrical supply cable. · If the appliance is placed on a carpeted floor, ensure that air can circulate freely between the feet and the floor.*

*· Leave the porthole door slightly ajar when the appliance is not in use. This preserves the door seal and prevents the formation of musty smells. · Always check that water has emptied out before opening the door. If not, drain the water following the instructions in the instruction book. · Always unplug the appliance and shut the water tap after use.*

*General safety · Repairs to the machine must be carried out only by qualified personnel. Repairs carried out by inexperienced persons could cause serious danger. Contact your local Service Centre. · Never pull the power supply cable to remove the plug from the socket; always take hold of the plug itself. @@@@ · Only wash fabrics which are designed to be machine washed.*

*Follow the instructions on each garment label. · Do not overload the appliance. Follow the instructions in the instruction book. · Make sure that all pockets are empty. @@ · Do not machine wash garments saturated with petroleum, methylated spirits, trichlorethylene, etc. If such fluids have been used to remove stains prior to washing, wait until they have completely evaporated from the fabric before placing garments in the appliance. · Place small items such as socks, belts, etc. in a cloth bag or pillowcase to prevent them getting trapped between the drum and the tub. · Use only the recommended quantities of fabric softener. An excessive amount could damage the laundry.*

*4 Child safety · Children are often not aware of how dangerous electrical appliances can be. When the machine is working, children should be carefully supervised and not be allowed to play with the appliance. · The packaging components (e.g. plastic film, polystyrene) can be dangerous to children - danger of suffocation! Keep them out of children's reach. · Keep all detergents in a safe place out of children's reach. · Make sure that children or pets do not climb into the drum. To avoid this the machine incorporates a special feature. To activate this device, rotate the button (without pressing it) inside the door clockwise until the groove is horizontal. If necessary use a coin.*

*P1131 To disable this device and restore the possibility of closing the door, rotate the button anti-clockwise until the groove is vertical. · When the appliance is to be scrapped, cut off the electrical supply cable and destroy the plug with the remaining cable. Disable the door catch in order to prevent children from becoming trapped inside while playing. Disposal Packaging materials The materials marked with the symbol recyclable. >PE<=polyethylene >PS<=polystyrene >PP<=polypropylene This means that they can be recycled by disposing of them properly in appropriate collection containers. are The symbol on the product or on its packaging indicates that this product may not be treated as household waste. Instead it shall be handed over to the applicable collection point for the recycling of electrical and electronic equipment. By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling of this product. For more detailed information about recycling of this product, please contact your local city office, your household waste disposal service or the shop where you purchased the product. Machine Use authorised disposal sites for your old appliance.*

*Help to keep your country tidy! Tips for environmental protection To save water, energy and to help protect the environment, we recommend that you follow these tips: · Normally soiled laundry may be washed without prewashing in order to save detergent, water and time (the environment is protected too!). · The machine works more economically if it is fully loaded. Do not overload! · With adequate pre-treatment, stains and limited soiling can be removed; the laundry can then be washed at a lower temperature. · Measure out detergent according to the water hardness, the degree of soiling and the quantity of laundry being washed. 5 ENGLISH Technical specifications DIMENSIONS Height Width Depth Cotton Synthetics Delicates Woollens 85 cm 60 cm 54 cm 5 kg 2 kg 2 kg 1 kg 750 rpm max. (F 750) 850 rpm max. (F 850) 220-230 V/50 Hz 2200 W 10 A 0,05 MPa 0,8 MPa MAXIMUM LOAD SPIN SPEED POWER SUPPLY VOLTAGE/FREQUENCY TOTAL POWER ABSORBED MINIMUM FUSE PROTECTION WATER PRESSURE Minimum Maximum This appliance complies with the following EEC Directives: 73/23/EEC of 19/02/73 relating to low voltage 89/336/EEC of 03/05/89 relating to electromagnetic compatibility. 6 Installation Unpacking All transit bolts and packing must be removed before using the appliance. You are advised to keep all transit devices so that they can be refitted if the machine ever has to be transported again. 1.*

*Using a spanner, unscrew and remove the two rear bottom screws. Slide out the two plastic pins. 6. Set the machine upright and remove the remaining rear screw. Slide out the relevant pin. 7. Plug all the holes with the plugs which you will find in the envelope containing the instruction booklet.*



[You're reading an excerpt. Click here to read official ZANUSSI F850 user guide](http://yourpdfguides.com/dref/955752)

<http://yourpdfguides.com/dref/955752>



· The programme selector dial is not positioned correctly and the ON/OFF button has not been depressed. · The machine does not fill: · The water tap is closed. · The inlet hose is squashed or kinked. · The filter in the inlet hose is blocked. · The door is not properly closed. · The machine fills then empties immediately: · The machine does not empty and/or does not spin: · There is water on the floor: · The end of the drain hose is too low.

Refer to relevant paragraph in "water drainage" section. · The drain hose is squashed or kinked. · The RINSE HOLD option has been selected. · The drain filter is clogged. · Too much detergent or unsuitable detergent (creates too much foam) has been used. · Check whether there are any leaks from one of the inlet hose fittings. It is not always easy to see this as the water runs down the hose; check to see if it is damp. · The drain hose is damaged. · The drain pump has not been properly screwed on after cleaning. @@ · Stubborn stains have not been treated prior to washing.

· The correct temperature was not selected. @@ · The support feet have not been adjusted. · The laundry is not evenly distributed in the drum. · Maybe there is very little laundry in the drum. · The programme is still running.

· The door lock has not been released. · There is water in the drum. @@ Performance is nevertheless excellent. @@ The laundry is redistributed by reverse rotation of the drum. This may happen several times before the unbalance disappears and normal spinning can resume.

If, after few minutes, the laundry is still not evenly distributed in the drum, the machine will spin at a lower speed or will not spin. If at the end of the programme the laundry is not spun enough, redistribute the load manually and select the spin programme. Water is not visible in the machine. The machine, which is the result of modern technology, runs in a very economical way with low water consumption. Performance is nevertheless excellent. The machine makes an unusual noise. The machine is fitted with a commutator motor which improves machine performance. P1035UK P1034UK If you are unable to identify or solve the problem, contact our service centre. Before telephoning, make a note of the model, serial number and purchase date of your machine: the Service Centre will require this information. Mod.

.....  
Prod. No. ...

.....  
... P0042 BD Ser. No. ....

.... 21 ENGLISH Mo Pro d. ....  
d. No ....

.....  
.. ..... Ser. No .

..... From the Electrolux Group.

The world's No. 1 choice. The Electrolux Group is the world's largest producer of powered appliances for kitchen, cleaning and outdoor use. More than 55 million Electrolux Group products (such as refrigerators, cookers, washing machines, vacuum cleaners, chain saws and lawn mowers) are sold each year to a value of approx. USD 14 billion in more than 150 countries around the world.

MADE IN ITALY .



[You're reading an excerpt. Click here to read official ZANUSSI F850 user guide](http://yourpdfguides.com/dref/955752)  
<http://yourpdfguides.com/dref/955752>