



Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for ZANUSSI FA1035E. You'll find the answers to all your questions on the ZANUSSI FA1035E in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual ZANUSSI FA1035E
User guide ZANUSSI FA1035E
Operating instructions ZANUSSI FA1035E
Instructions for use ZANUSSI FA1035E
Instruction manual ZANUSSI FA1035E

ZANUSSI

LAVADORA
WASHING MACHINE

FA1035E



35 292 858 0

MANUAL DE USO
USER MANUAL



[You're reading an excerpt. Click here to read official ZANUSSI FA1035E user guide](http://yourpdfguides.com/dref/644263)
<http://yourpdfguides.com/dref/644263>

Manual abstract:

Our contribution to the protection of the environment: we use recycled paper. 26 Contents Warnings Disposal 28-29 29 Maintenance Bodywork Detergent dispenser drawer Cleaning of the drainage area Water inlet filter Emergency emptying out Frost precautions 45 45 45 45 46 46 46 Tips for environmental protection 29 Technical specifications Installation Unpacking Hydraulic connection Levelling Electrical connection 30 31-32 31 31 32 32 Something not working? 47-49 Your new washing machine Description of the appliance Detergent dispenser drawer 33 33 33 Use Control panel Controls Washing hints

Sorting the laundry Temperatures Before loading the laundry Maximum loads Laundry weights Removing stains Detergents and additives Quantity of detergent to be used International wash code symbols Operating sequence Washing programmes 34 34 34-36 37 37 37 37 37 37 38 38 39 40-41 42-44 27

ENGLISH Warnings The following warnings are provided in the interests of overall safety. You must read them carefully before installing or using the appliance. Installation · All internal packing must be removed before using the appliance. Serious damage may be caused to the machine or adjacent furniture if the protective transit devices are not removed or are not completely removed. Refer to the relevant paragraph in the instruction book. · Any electrical work required to install this appliance must be carried out by a qualified electrician. · Any plumbing work required to install this appliance must be carried out by a qualified plumber. · After having installed the machine, check that it is not standing on its electrical supply cable. · If the appliance is placed on a carpeted floor, ensure that air can circulate freely between the feet and the floor.

· The power supply cable only can be replaced by a person of the Technical Service. · Leave the porthole door slightly ajar when the appliance is not in use. This preserves the door seal and prevents the formation of musty smells. · Always check that water has emptied out before opening the door. If not, drain the water following the instructions in the instruction book.

· Always unplug the appliance and shut the water tap after use. General safety · Repairs to the machine must be carried out only by qualified personnel. Repairs carried out by inexperienced persons could cause serious danger. Contact your local Service Centre. · Never pull the power supply cable to remove the plug from the socket; always take hold of the plug itself.

· During high temperature wash programmes the door glass may get hot. Do not touch it! Use · This appliance is designed for domestic use. It must not be used for purposes other than those for which it was designed. · Only wash fabrics which are designed to be machine washed. Follow the instructions on each garment label. · Do not overload the appliance. Follow the instructions in the instruction book. · Make sure that all pockets are empty. Objects such as coins, safety pins, pins and screws can cause extensive damage. · Do not machine wash garments saturated with petroleum, methylated spirits, trichlorethylene, etc.

If such fluids have been used to remove stains prior to washing, wait until they have completely evaporated from the fabric before placing garments in the appliance. · Place small items such as socks, belts, etc. in a cloth bag or pillowcase to prevent them getting trapped between the drum and the tub. · Use only the recommended quantities of fabric softener. An excessive amount could damage the laundry. 28 Child safety · Children are often not aware of how dangerous electrical appliances can be. When the machine is working, children should be carefully supervised and not be allowed to play with the appliance.

The packaging components (e.g. plastic film, polystyrene) can be dangerous to children - danger of suffocation! Keep them out of children's reach. · Keep all detergents in a safe place out of children's reach. · Make sure that children or pets do not climb into the drum. Disposal Packaging materials The materials marked with the symbol recyclable. >PE<=polyethylene >PS<=polystyrene >PP<=polypropylene This means that they can be recycled by disposing of them properly in appropriate collection containers. are Machine Use authorised disposal sites for your old appliance.

Help to keep your country tidy! Tips for environmental protection To save water, energy and to help protect the environment, we recommend that you follow these tips: · Normally soiled laundry may be washed without prewashing in order to save detergent, water and time (the environment is protected too!). · The machine works more economically if it is fully loaded. · With adequate pre-treatment, stains and limited soiling can be removed; the laundry can then be washed at a lower temperature. · Measure out detergent according to the water hardness, the degree of soiling and the quantity of laundry being washed. 29

ENGLISH · When the appliance is to be scrapped, cut off the electrical supply cable and destroy the plug with the remaining cable.

Disable the door catch in order to prevent children from becoming trapped inside while playing. Installation instructions It is dangerous to alter the specifications or attempt to modify this product in any way. Care must be taken to ensure that the appliance does not stand on the electrical supply cable. Any electrical work required to install this appliance should be carried out by a qualified electrician or competent person. Any plumbing work required to install this appliance should be carried out by a qualified plumber or competent person. The power supply cable only can be replaced by a person of our Service Force Centre. Technical specifications DIMENSIONS Height Width Depth Cotton, linen Synthetics Delicates Woollens 85 cm 60 cm 60 cm 4,5 kg 2 kg 2 kg 1 kg 1000 rpm máx. 230 V/50 Hz 2100 W 10 A 50 kPa 800 kPa MAXIMUM RECOMMEND LOAD SPIN SPEED POWER SUPPLY VOLTAGE/FREQUENCY TOTAL POWER ABSORBED MINIMUM FUSE PROTECTION WATER PRESSURE Minimum Maximum This appliance complies with the following EEC Directives: 73/23/EEC of 19/02/73 relating to low voltage 89/336/EEC of 03/05/89 relating to electromagnetic compatibility. 30 Installation Transit security bars Before starting the machine up, the transport security bars must be removed as follows: You are advised to keep all the transport security bars. In case the appliance has to be transported again.

1. Unscrew and remove the three rear screws by means of a key. Hydraulic connection There should be a COLD WATER tap near the washing machine with a screwing on connection pipe of 3/4 gas for the water supply, a sink, a wash basin or a drainage system in the wall.



[You're reading an excerpt. Click here to read official ZANUSSI](#)

[FA1035E user guide](#)

<http://yourpdfguides.com/dref/644263>

Previously check if: -- it is not a hot water tap. -- the running water is clean. If not, run off a reasonable amount of water to flush out any debris that may have collected in the pipes. Have the permanent drainage system in the wall checked by a plumber. P0287 2. Lean the appliance back on the rear and fit one of the polystyrene angles between the appliance and the floor. Make sure the hoses are not squashed.

A AL013 P0018 1. Place the enclosed rubber joint, delivered in a plastic bag together with the appliance (A), at the very end of the inlet hose and carefully screw the pipe to the tap taking care not to damage the screwdriver and fix the nut well on to the end in order to avoid leaking. 2. If necessary turn the hose adequately by unscrewing the nut at the rear of the appliance. Now tighten the nut anew to avoid leaks.

(Open the tap and assure that it does not leak and close it again.) 1 2 3. Carefully remove the plastic bags on the left and the right, pulling them to the centre of the appliance P0021 AL009 P0001 P0002 4. Place the machine in an upright position and remove the three plastic bolts. 5.

Plug the 3 holes with the plastic plugs which you can find in the envelope containing the instruction booklet. 31 3. Place the discharging hose in a washbasin or sink with the aid of the bent piece delivered separately. The bent piece has to be entered into the tube's mouth in order to assure the P0022 support.

Aforesaid piece allows the hose to be fixed to the wall by means of an opening on the upper part and that way the hose does not move and its falling is avoided. ENGLISH 1,5 m. Max. IMPORTANT: The distance from the floor to the highest part of the hose should be between 60 to 90 cm. (It is advised to be between 60 and 70 cm). The hose must not be bent nor twisted to avoid clogging.

Should a prolongation of the discharging hose be unavoidable this must never surpass 1.5 m and must be of the same diameter as the original hose. Make sure the hoses are not too tense. Electrical connections Before plugging the appliance make sure that: 1°. the mains of your installation is the same as on the rating plate of your appliance (the plate is stuck to the rear of the appliance). 2°. The meter, the fuses, the wiring and the socket outlet can support the max. power absorbed stated on the rating plate. 3°. The socket base and the plug must fit in adequately without any reducing interposition, multiple outlets or adapters.

If necessary replace the socket outlet by an adequate one. The applicable rules for electrical security require an adequate earthing. The plug of the appliance is provided with such a device. Make sure your socket outlet is provided with an adequate earthing too. The manufacturer declines any liability in case of accidents or incidents should these safety measures not be observed.

The power supply cable only can be replaced by a person of our Service Force Centre. Levelling Level the appliance by loosening or tightening the feet. Once in the right position fix the feet by pushing the nuts (A) (see graphic P0254) against the base of the case. Accurate levelling will prevent vibration, noise and displacement of the appliance during operation. Some vibration is inevitable, especially if placed on a wooden floor.

Wooden floors are particularly susceptible to vibrations. If possible always place the appliance on a solid floor. P0254 32 90 cm. Max. 60 cm. Min. Your new washing machine This new machine meets all modern requirements for effective treatment of laundry with low water, energy and detergent consumption. ·

The balance control device reduces the risk of instability in machine movement and it guarantees a quieter operation. Description of the appliance 1 Detergent dispenser drawer 2 Programme chart 3 Control panel 4 Door handle 5 Drainage area door 6 Adjustable feet Detergent dispenser drawer Prewash Main wash Fabric softener, starch R0001 3D 33 ENGLISH Use Control panel 1. Detergent dispenser drawer Programme option buttons Depending on the programme, different option buttons can be combined.

When these buttons are pressed, the corresponding lights come on. When they are pressed again, the lights go off. If an incompatible option with the selected programme has been chosen, the corresponding light flashes for about 2 seconds. The option buttons: 8H/4H INICIO RETARDADO; PRELAVADO;

LAVADO RÁPIDO and SUPER ACLARADO must be selected after the required programme has been chosen, by turning the programme selector (see section 9) and before starting the machine, by pressing INICIO / PAUSA button. RETARDADO" option or to change the selected delay, proceed as follows: 1. Turn the dial programme selector to position "O". 2. Start the normal process to select a programme again. · If you need to stop the mach of operating problems: · 4 flashes: door open. · 2 flashes: problem with water draining.

· 1 flash: problem with water supply. For more information see paragraph "Something not working?" at the end of this booklet. 35 ENGLISH 9. Programme selector dial The selector dial can be turned either clockwise or counter-clockwise. Use this selector dial to select the required programme.

At the end of each programme the selector dial must be turned to position "O", to switch off the machine. ATTENTION! If the programme selector dial is turned to another position (programme) when the machine is working, the lights of the programme progress display start to flash. The machine will not perform the new selected programme, but it will continue running on the same cycle. REMEMBER! In the event a wrong programme has been selected and the machine is already working, proceed as follows: 1. Turn the programme selector dial to position "O".

2. Select the new required programme. · If the machine has not already gone through the rinse cycle, when you decide to change the running programme, in the new programme the water and the detergent from the previous cycle will be reused, making it an energy-saving tool. On the other hand, if it is already in the rinse phase; detergent, bleach,... must be re-measured. 3. Press INICIO / PAUSA button, to start the new cycle. 36 Washing hints Sorting the laundry Follow the wash code symbols on each garment label and the manufacturer's washing instructions.

Sort the laundry as follows: whites, coloureds, synthetics, delicates, woollens. Laundry weights The following weights are indicative: bathrobe napkin quilt cover sheet pillow case tablecloth towelling towel tea cloth night dress ladies' briefs man's work shirt man's shirt man's pyjamas blouse men's underpants 1200 g 100 g 500 g 200 g 250 g 200 g 100 g 200 g 100 g 600 g 200 g 500 g 100 g 100 g 700 g Temperatures 90° 60° for normally soiled white cottons and linen (e.g. tea cloths, towels, tablecloths, sheets).



[You're reading an excerpt. Click here to read official ZANUSSI](#)

[FA1035E user guide](#)

<http://yourpdfguides.com/dref/644263>

..) for normally soiled, colour fast garments (e.g. shirts, night dresses, pyjamas..

..) in linen, cotton or synthetic fibres and for lightly soiled white cotton (e.g. underwear).

(cold) for delicate items (e.g. net curtains), mixed 30°-40° laundry including synthetic fibres and woollens. Before loading the laundry Never wash whites and coloureds together. Whites may lose their "whiteness" in the wash.

New coloured items may run in the first wash; they should therefore be washed separately the first time. Make sure that no metal objects are left in the laundry (e.g. hair clips, safety pins, pins). Button up pillowcases, close zip fasteners, hooks and poppers. Tie any belts or long tapes. Remove difficult stains before washing. Rub particularly soiled areas with a special detergent or detergent paste. Treat curtains with special care. Remove hooks or tie them up in a bag or net.

Removing stains Stubborn stains may not be removed by just water and detergent. It is therefore advisable to treat them prior to washing. Blood: treat fresh stains with cold water. For dried stains, soak overnight in water with a special detergent then rub in the soap and water.

@@@Remove any residual marks from white fabrics with bleach. @@Treat any residual marks with bleach.

@@@The detergent and any additives must be placed in the appropriate compartments of the dispenser drawer before starting the wash programme. If using concentrated powder or liquid detergents, a programme without prewash must be selected. The washing machine incorporates a recirculation system which allows an optimal use of the concentrated detergent. Pour liquid detergent into the dispenser drawer compartment marked just before starting the programme.

Any fabric softener or starching additives must be poured into the compartment marked before starting the wash programme. Follow the product manufacturer's recommendations on quantities to use and do not exceed the «MAX» mark in the detergent dispenser drawer. Degrees of water hardness Degrees Level Characteristic German °dH French °T.H. 1 2 3 4 soft medium hard very hard 0- 7 8-14 15-21 0-15 16-25 26-37 more than more than 21 37 38

International wash code symbols These symbols appear on fabric labels, in order to help you choose the best way to treat your laundry.

Energetic wash Max. wash temperature 95°C Delicate wash Max. wash temperature 60°C Max. wash temperature 40°C Max. wash temperature 30°C 60 40 30 Hand wash Do not wash at all Bleaching Bleach in cold water Do not bleach Ironing Hot iron max 200°C Warm iron max 150°C Lukewarm iron max 110°C Do not iron Dry cleaning Dry cleaning in all solvents Dry cleaning in perchlorethylene, petrol, pure alcohol, R 111 & R 113 Dry cleaning in petrol, pure alcohol and R 113 Do not dry clean high temperature low temperature Drying Flat On the line On clothes hanger Tumble dry Do not tumble dry 39 ENGLISH 95 60 40 30 Operating sequence Before washing your first load of laundry, we recommend that you run a cotton cycle at 60° C, with the machine empty, in order to remove any manufacturing residue from the drum and tub.

Pour half of the normal amount of detergent into the main wash compartment and start up the machine. 1. Place the laundry in the drum Open the door by pulling the handle outwards. Place the laundry in the drum, one item at a time, shaking them out as much as possible. Close the door. 4. Select the required programme Turn the programme selector to the required programme. P0004 2. Measure the detergent Pull out the dispenser drawer until it stops. Measure the required amount of detergent, pour it into the main wash compartment and into the compartment marked (if PRE-WASH option has been chosen).

5. Select the spin speed or no spin / rinse hold options Turn the spin selector to the required position. R0070 3. Measure the fabric softener If required, pour fabric softener into the compartment marked (the amount used must not exceed the "MAX" mark in the drawer). Close the drawer gently. 6. Select the required option push button/s R0071 40 7. OPTIONAL! Select, if required, "8H/4H INICIO RETARDADO" option button Push "8H/4H INICIO RETARDADO" button as many times as necessary until the corresponding light to the required delay (8 H, 4 H) comes on. 10. Interrupting a programme Depress INICIO / PAUSA button to interrupt a running programme, the corresponding light will begin flashing.

Press this button again to re-start the programme. 11. Opening the door after the programme has started Firstly, stop the machine by pressing INICIO / PAUSA button. After about one or two minutes the door can be opened. If the door does not open, this means that the temperature of the water is too high, that the water level exceed the lower limit of the door (which could cause overflowing) or that the drum is spinning.

If the door cannot be opened but you need to open it, switch the machine off by turning the selector dial to "O". After approximately one or two minutes the door can be opened. (PAY ATTENTION TO THE WATER LEVEL AND TEMPERATURE!) 8. Start the machine Before starting the machine check that: · the appliance is plugged in. · the water supply tap is turned on.

· the drain hose is correctly and securely positioned. · the door and the detergent dispenser drawer are closed. To start the selected programme, push INICIO / PAUSA button; the corresponding light will stop flashing and will remain lit until the end of the programme. 12. At the end of the programme The machine stops automatically. Release of the lock is indicated when FIN light comes on. Turn the programme selector dial to position "O" to switch the machine off. Remove the laundry from the drum and carefully check that the drum is empty. If you do not intend to put in another wash, turn off the water tap. Leave the door open to prevent from forming mildew and unpleasant smells.

ATTENTION! If the RINSE HOLD option has been selected, the last rinse water does not drain. To drain the water, carry out the following steps: 1. Turn the programme selector dial to "O". If "8H/4H INICIO RETARDADO" option has been chosen, the machine will begin the countdown. 9. Modification of a running washing programme Once the programme has started, it only can be modified by turning the programme selector dial to "O" and afterwards the new programme can be chosen. The washing water remains in the tub, provided that the machine does not reach the rinse phase, since, in this case, the machine drains it automatically. Start the new programme by pressing INICIO / PAUSA button. 41 2. Select DRAIN or SPIN programme.

If programme (SPIN) has been selected: Use the spin speed selector dial to choose the required speed.



[You're reading an excerpt. Click here to read official ZANUSSI](http://yourpdfguides.com/dref/644263)

[FA1035E user guide](http://yourpdfguides.com/dref/644263)

<http://yourpdfguides.com/dref/644263>

If the dial is kept in the same position as at the beginning, in other words RINSE HOLD (no-wrinkle) position, the machine will spin at 400 r.p.m. 3. Press INICIO / PAUSA button ENGLISH Programme table Washing programmes for cotton and linen Programme selector dial position Washing programme Stains and type of fabric Description Possible option Load 90 ALGODÓN BLANCOS For heavily soiled cotton items. Wash at 90° C 3 rinses Spin Prelavado Inicio retardado Super aclarado Rinse hold (*) Lavado rápido Prelavado Inicio retardado Super aclarado Rinse hold (*) Prelavado Inicio retardado Super aclarado Rinse hold (*) Lavado rápido Prelavado Inicio retardado Super aclarado Rinse hold (*) Lavado rápido Prelavado Inicio retardado Super aclarado Rinse hold (*) Lavado rápido 4,5 kg 60E ALGODÓN AHORRO ENERGÍA (**) White cotton, for example moderately soiled work garments, sheets, household linen, underwear, towels. Wash at 60° C 3 rinses Spin 4,5 kg Fast coloured cotton or linen Wash at 40° C COLORES fabrics, moderately soiled, shirts, 3 rinses ALGODÓN RESISTENTES blouses, underwear. Spin 40 4,5 kg 30 ALGODÓN CUIDA LOS COLORES Non fast coloured cotton or linen Wash at 30° C fabrics, moderately soiled, shirts, 3 rinses blouses, underwear. Spin 4,5 kg ALGODÓN ALGODÓN EN FRÍO For slightly soiled cotton fabrics. Cold wash 3 rinses Spin 4,5 kg O PARADA To cancel the running wash programme and to switch the machine off. -- (*) When this option is selected, the last rinse water does not drain to avoid wrinkling in the fabrics. To drain the water select SPIN or DRAIN programme. (**) In compliance with EC directive 92/75, the consumption figures indicated on the energy label refer to the 60° C wash programme for cotton (programme E60) with a wash load of 4,5 Kg. 42 Programme table Washing programmes for synthetics, mixed fabrics, delicates, wool Programme selector dial position 40 SINTÉTICOS PLANCHADO FÁCIL Special programme for synthetic fabrics, which makes ironing easier. Wash at 40° C 4 rinses Spin impulse Prelavado Inicio retardado Super aclarado Rinse hold (*) Lavado rápido Prelavado Inicio retardado Super aclarado Rinse hold (*) Lavado rápido Prelavado Inicio retardado Super aclarado Rinse hold (*) Lavado rápido 2 kg Synthetic or mixed fabrics, CARGA MIXTA underwear, coloured garments, SINTÉTICOS perma-press shirts, blouses. 30 Wash at 30° C 3 rinses Short spin 2 kg SINTÉTICOS SINTÉTICO EN FRÍO Slightly soiled delicate synthetic fabrics. Cold wash 3 rinses Short spin 2 kg 30 DELICADOS LAVADO A MANO Especially delicate fabrics. Wash at 30° C 3 rinses Short spin Inicio retardado Rinse hold (*) 2 kg DELICADOS DELICADOS EN FRÍO Delicate fabrics, such as curtains. Cold wash 3 rinses Short spin Prelavado Inicio retardado Super aclarado Rinse hold (*) Lavado rápido 2 kg -30 LANA LANA Use this wash cycle to wash Woolmark garments according to the instructions on the garments label and following the instructions booklet provided by the manufacturer of this machine (M9604).

To cancel the running wash programme and to switch the machine off. Cold wash or wash at 30° C (depending on the selected position) 3 rinses Short spin Inicio retardado Rinse hold (*) 1 kg O PARADA -- (*) When this option is selected, the last rinse water does not drain to avoid wrinkling in the fabrics. To drain the water select SPIN or DRAIN programme. 43 ENGLISH Washing programme Stains and type of fabric Description Possible option Load Programme table Special washing programmes Programme selector dial position Washing programme Stains and type of fabric Description Possible option Load ACLARADOS With this programme it is possible to rinse and spin garments which have been washed by hand. The machine performs 3 rinses, and it finishes with a short spin. 3 rinses Short spin Inicio retardado Super aclarado Rinse hold (*) 4,5 kg This programme can be used to perform a short spin: for garments washed by hand, for example: to wring them out, before hanging CENTRIFUGADO them up. This programme can be used to drain and spin, too, when RINSE HOLD option has been selected. Short spin 4,5 kg DESCARGA To drain the water from the last rinse in programmes with RINSE HOLD option selected. Water drain 4,5 kg O PARADA To cancel the running wash programme and to switch the machine off. -- (*) When this option is selected, the last rinse water does not drain to avoid wrinkling in the fabrics.

To drain the water select SPIN or DRAIN programme. 44 Maintenance 1. Bodywork Clean the outside of the machine with warm water and a neutral, non-abrasive household detergent. Rinse with clean water and dry with a soft cloth. Important: do not use methylated spirits, solvents or similar products to clean the bodywork.

3. Cleaning of the drainage area The drainage area must be cleaned if the pump has been blocked with objects such as buttons, safety pins, coins, etc. , or if lint has built up because clothes that generate lint have been washed at high temperatures. Pull out the plug from the power socket. If necessary, wait until the water has cooled down.

Open the drainage area door. Place a bowl to collect the water. Release the emergency emptying hose, place it in the bowl and remove its cap, when the bowl is full put the cap back on the emergency emptying hose. 2. Detergent dispenser drawer After a while, detergents and fabric softeners leave deposits in the drawer. Clean the drawer from time to time by rinsing it under a running tap. To remove the drawer from the machine, press the button in the rear left-hand corner. To facilitate cleaning, the top part of the additive compartments can be removed. · Empty the bowl. Repeat the procedure until you have completely emptied the washing machine.

P1114 R0072 C0073 P1115 Detergent can also accumulate inside the drawer recess: clean it with an old toothbrush. Refit the drawer after cleaning. · To continue, unscrew the lid of the diaphragm by turning it counter clockwise and pull it out. · Always keep a rag nearby to dry up spillage of water when removing the cover. · Remove the objects such as buttons, coins and the lint that has been accumulated in the area of the pump impeller by rotating it. · Screw the lid of the diaphragm clockwise, be sure it is completely tighten. · Replace the emergency emptying hose in its initial position and close the drainage area door. P0038 P1116 P1117 45 ENGLISH 4. The water inlet hose filter If it takes longer to fill up the washing machine it is time to check the water inlet hose filter it may be clogged.



[You're reading an excerpt. Click here to read official ZANUSSI](#)

[FA1035E user guide](#)

<http://yourpdfguides.com/dref/644263>

Turn off the water tap.

Unscrew the fixing nut of the inlet hose. Remove the filter from the electrovalve and clean it with a hard bristle brush and replace it. Screw on the nut thoroughly. 6. Frost precautions If the machine is installed in a place where the temperature could drop below 0°C, proceed as follows: · disconnect the appliance; · close the water tap; · if necessary, wait until the water has cooled down; · open the drainage area door; · place a bowl to collect the water that will flow out; · release the emergency emptying hose, place it in the bowl and remove its cap; · when the water stops flowing out, put the cap back on the emergency emptying hose, replace the emergency emptying hose in its initial position and close the drainage area door.

By doing this, any water remaining in the machine is removed, avoiding the formation of ice and, consequently, breakage of the affected parts. When you use the machine again, make sure that the ambient temperature is above 0°C. P0090 P0021 5. Emergency emptying out If the water is not discharged (outlet pump is blocked, filter or drain hose are clogged), proceed as follows to empty out the machine: · pull out the plug from the power socket; · close the water tap; · if necessary, wait until the water has cooled down; · open the drainage area door; · place a bowl to collect the water; · release the emergency emptying hose, place it in the bowl and remove its cap, when the bowl is full put the cap back on the emergency emptying hose; · empty the bowl, repeat the procedure until you have completely emptied the washing machine; · replace the emergency emptying hose in its initial position and close the drainage area door. 46 Something not working? Certain problems are due to lack of simple maintenance or oversights, which can be solved easily without calling technical service. Before contacting your local Service Force Centre, please check the following possible problems listed below. During machine operation it is possible that FIN light flashes to indicate that something is not working correctly. · 4 flashes = door open. · 1 flash = there is no water filling. @@@@The plug is not properly inserted in the power socket. There is no power in the socket. The main fuse or the fuse in the plug has blown. @@The water tap is off. The filter in the inlet hose is blocked. The inlet hose may be squashed or kinked.

@@· The end of the drain hose is submerged in water. · There is no air circulation in the installation, between the machine drain hose and the one in the house. · The drain hose may be squashed or kinked. RINSE HOLDoption has been selected. · The drain pump may be blocked. · The drain hose extension is not correct. Follow the - The machine does not drain and / or does not spin: instructions to connect it to the drain. · The drainage system pipes are blocked. ·

The laundry load is off balance: redistribute the · garments in the drum to allow the machine to spin. option has been selected.

- There is water on the floor: · There is too much detergent or an inappropriate detergent has been used (it makes too much foam). · Check whether there are any leaks from one of the inlet hose fittings. It is not always easy to see this as the water runs down the hose; check to see if it is damp. · The drain hose may be damaged or is not securely positioned to prevent leaks. · The detergent dispenser drawer is clogged.

· The drainage system pipes are blocked. 47 ENGLISH · 2 flashes = the water is not drained. Problems - Unsatisfactory washing results: Possible cause · Little detergent or an inappropriate one has been used. An insufficient amount of detergent leaves the laundry looking grey. · Stubborn stains have not been treated prior to washing.

· The correct wash programme has not been selected. · Too much laundry has been placed in the drum. · The transit bolts and packaging have not been removed. · The machine is in contact with the wall or furniture. · The machine is not level and stable (check diagonally). · The laundry is not well distributed in the drum. · There may not be enough laundry in the drum. · The programme is still running. · The door lock has not released yet. · Water in the tub: if there is water in the tub, the door RINSE HOLD option cannot be opened (selected).

· The electronic off balance detection device has interrupted the spin because the laundry is not evenly distributed in the drum. The laundry is redistributed by reverse rotation of the drum. This may happen several times before the off balance disappears and normal spinning can resume. If, after 10 minutes, the laundry is still not evenly distributed in the drum, the machine will not spin. In this case, redistribute the load manually and re-select the spin programme. · The machine is fitted with a type of motor which makes an unusual noise compared to other traditional motors. This new motor ensures a smoother starting and an even distribution of the laundry in the drum when the machine is spinning. At the same time it increases the appliance stability. · Appliances using modern technology are energy efficient. They use very little water without affecting washing results.

- The machine vibrates when spinning: - The door does not open: - Spinning starts late or the machine does not spin: - The machine makes an unusual noise: - No water is visible in the drum: 48 If you are unable to identify or solve the problem, contact our service centre. Before telephoning, make a note of the model, serial number and purchase date of your machine: the Service Centre will require this information. Mod. ..

.....
... Prod. No.

..... Ser. No. ..

.....
.. Mod. ..
..... Prod. No.

.....
. P0042 Ser. No. ..

.. Water is not visible in the machine. The machine, which is the result of modern technology, runs in a very economical way with low water consumption. Performance is nevertheless excellent. The machine makes an unusual noise. The machine is fitted with a commutator motor which improves machine performance. P1035UK P1034UK 49 ENGLISH EHPOESL/Z - 07/2003 .



[You're reading an excerpt. Click here to read official ZANUSSI](#)

[FA1035E user guide](#)

<http://yourpdfguides.com/dref/644263>