



Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for ZANUSSI FA523. You'll find the answers to all your questions on the ZANUSSI FA523 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual ZANUSSI FA523
User guide ZANUSSI FA523
Operating instructions ZANUSSI FA523
Instructions for use ZANUSSI FA523
Instruction manual ZANUSSI FA523

ZANUSSI

WASHING MACHINE
СТИРАЛЬНАЯ МАШИНА

FA 523



35 292.716.0

USER MANUAL
РУКОВОДСТВО ПО ЭКСПЛУАТАЦИИ



[You're reading an excerpt. Click here to read official ZANUSSI FA523 user guide](http://yourpdfguides.com/dref/644623)
<http://yourpdfguides.com/dref/644623>

Manual abstract:

The symbols you will see on some paragraphs of this booklet have the following meaning: The warning triangle and/or the key words (Warning!, Caution!) emphasize information that is particularly important for your safety or correct functioning of the appliance. The information marked with this symbol provides additional instructions and practical tips on the use of the appliance. Tips and information about economical and ecological use of the machine are marked with this symbol. Our contribution to the protection of the environment: we use recycled paper.

2 Contents Warnings Disposal 4-5 5 Maintenance Bodywork Detergent dispenser drawer Cleaning of the drainage area Water inlet filter Frost precautions Emergency emptying out 18 18 18 18 19 19 19 Tips for environmental protection 5 Technical specifications Installation Unpacking Hydraulic connection Levelling Electrical connection 6 7-8 7 7 8 8 Something not working? 20-21 Your new washing machine Description of the appliance Detergent dispenser drawer 9 9 9 Use Control panel Controls Washing hints Sorting the laundry Temperatures Before loading the laundry Maximum loads Laundry weights Removing stains Detergents and additives International wash code symbols Operating sequence Washing programmes 10 10 10 11 11 11 11 11 11 12 13 14-15 16-17 3 ENGLISH Warnings The following warnings are provided in the interests of overall safety. You must read them carefully before installing or using the appliance. Installation · All internal packing must be removed before using the appliance. Serious damage may be caused to the machine or adjacent furniture if the protective transit devices are not removed or are not completely removed. Refer to the relevant paragraph in the instruction book. · Any electrical work required to install this appliance must be carried out by a qualified electrician.

· Any plumbing work required to install this appliance must be carried out by a qualified plumber. · After having installed the machine, check that it is not standing on its electrical supply cable. · If the appliance is placed on a carpeted floor, ensure that air can circulate freely between the feet and the floor. · Leave the porthole door slightly ajar when the appliance is not in use. This preserves the door seal and prevents the formation of musty smells. · Always check that water has emptied out before opening the door. If not, drain the water following the instructions in the instruction book. · Always unplug the appliance and shut the water tap after use. General safety · Repairs to the machine must be carried out only by qualified personnel. Repairs carried out by inexperienced persons could cause serious danger.

Contact your local Service Centre. · Never pull the power supply cable to remove the plug from the socket; always take hold of the plug itself. · During high temperature wash programmes the door glass may get hot. Do not touch it! Use · This appliance is designed for domestic use. It must not be used for purposes other than those for which it was designed. · Only wash fabrics which are designed to be machine washed. Follow the instructions on each garment label. · Do not overload the appliance. Follow the instructions in the instruction book. · Make sure that all pockets are empty.

Objects such as coins, safety pins, pins and screws can cause extensive damage. · Do not machine wash garments saturated with petroleum, methylated spirits, trichlorethylene, etc. If such fluids have been used to remove stains prior to washing, wait until they have completely evaporated from the fabric before placing garments in the appliance. · Place small items such as socks, belts, etc. in a cloth bag or pillowcase to prevent them getting trapped between the drum and the tub. · Use only the recommended quantities of fabric softener. An excessive amount could damage the laundry. 4 Child safety · Children are often not aware of how dangerous electrical appliances can be. When the machine is working, children should be carefully supervised and not be allowed to play with the appliance. · The packaging components (e.

g. plastic film, polystyrene) can be dangerous to children - danger of suffocation! Keep them out of children's reach. · Keep all detergents in a safe place out of children's reach. · Make sure that children or pets do not climb into the drum. · When the appliance is to be scrapped, cut off the electrical supply cable and destroy the plug with the remaining cable.

Disable the door catch in order to prevent children from becoming trapped inside while playing. Disposal Packaging materials The materials marked with the symbol recyclable. >PE<=polyethylene >PS<=polystyrene >PP<=polypropylene This means that they can be recycled by disposing of them properly in appropriate collection containers. are Machine Use authorised disposal sites for your old appliance. Help to keep your country tidy! Tips for environmental protection To save water, energy and to help protect the environment, we recommend that you follow these tips: · Normally soiled laundry may be washed without prewashing in order to save detergent, water and time (the environment is protected too!).

· The machine works more economically if it is fully loaded. · With adequate pre-treatment, stains and limited soiling can be removed; the laundry can then be washed at a lower temperature. · Measure out detergent according to the water hardness, the degree of soiling and the quantity of laundry being washed. 5 ENGLISH Technical specifications DIMENSIONS Height Width Depth Cotton Synthetics Delicates Woollens 85 cm 60 cm 60 cm 4,5 kg 2 kg 2 kg 1 kg 500 rpm max. MAXIMUM LOAD SPIN SPEED POWER SUPPLY VOLTAGE/FREQUENCY TOTAL POWER ABSORBED MINIMUM FUSE PROTECTION WATER PRESSURE Minimum Maximum 220-230 V/50 Hz 2100 W 10 A 5 N/cm² 80 N/cm² This appliance complies with the following EEC Directives: 73/23/EEC of 19/02/73 relating to low voltage 89/336/EEC of 03/05/89 relating to electromagnetic compatibility. 6 Installation Transit security bars Before starting the machine up, the transport security bars must be removed as follows: You are advised to keep all the transport security bars in case the appliance has to be transported again. 1. Unscrew and remove the three rear screws by means of a key. Hydraulic connection There should be a COLD WATER tap near the washing machine with a screwing on connection pipe of 3/4" gas for the water supply, a sink, a wash basin or a drainage system in the wall.

Previously check if: -- it is not a hot water tap.

-- the running water is clean. If not, run off a reasonable amount of water to flush out any debris that may have collected in the pipes. Have the permanent drainage system in the wall checked by a plumber.



[You're reading an excerpt. Click here to read official ZANUSSI](http://yourpdfguides.com/dref/644623)

[FA523 user guide](http://yourpdfguides.com/dref/644623)

<http://yourpdfguides.com/dref/644623>

The mains on light goes out. If you have selected a programme which ends with the water of the last rinse left in the tub, drain the water before opening the door. Select programme "P" (drain) or "G" (spin). Wait one or two minutes before opening the door to give the electric locking mechanism time to release it. Remove the laundry. Turn the drum by hand to make sure it is completely empty, so as to avoid any forgotten items being damaged in a subsequent wash (e.g. shrinking) or their colour running into a load of whites.

Release any buttons which have been pressed. Turn the water tap off and unplug the machine. Leave the door ajar to air the machine. 15 ENGLISH Programme table Washing programmes for cotton and linen Load: 4,5 kg Programme Temp. Fabrics Additional functions DESCRIPTION A 60°-90° WHITES WITH PREWASH, for example work garments, sheets, household linen, underwear, towels Prewash Wash at 60°-90°C 4 rinses Spin Wash at 60°-90°C 4 rinses Spin Wash at 40°-60°C 4 rinses Spin Wash at 30°-40°C 4 rinses Spin 4 rinses Spin B 60°-90° WHITES WITHOUT PREWASH, for example household linen, sheets, shirts, underwear FAST COLOUREDS, for example shirts, blouses, terry cloths, underwear NON FAST COLOUREDS slightly soiled laundry B 40°-60° C 30°-40° D Rinses COLD This programme can be used for rinsing hand washed garments F Softeners COLD For hand washed items to be softened Load additif 1 rinse Spin Spin G Long spin Separate spin for cotton and linen In compliance with EC directive 92/75, the consumption figures indicated on the energy label refer to the 60°C wash programme for cotton (programme "B") with a wash load of 4.

5 kg. 16 Programme table Washing programmes for synthetics, mixed fabrics, delicates Load: 2 kg, wool 1 kg and wool Programme Temp. Fabrics Additional functions DESCRIPTION H 30°-60° SYNTHETICS WITH PREWASH, for example underwear, coloured items, shirts, blouses (*) Prewash at 30°C Wash at 30°-60°C 3 rinses Water drain Wash at 30°-60°C 3 rinses Water drain Wash at 30°-40°C 3 rinses Water drain Wash at 30°-40°C 3 rinses Water drain 3 rinses Water drain J 30°-60° SYNTHETICS WITHOUT PREWASH, for example shirts, blouses, mixed fabrics DELICATES slightly soiled laundry (*) K 30°-40° (*) (*) L 30°-40° WOOL M Rinses COLD This programme can be used for rinsing hand washed garments (*) N Softeners P Drain For hand washed items to be softened (*) Load additif 1 rinse Water drain Drain water drum stands still For emptying out the water (*) When this button is pressed, the last rinse water of these programmes is not emptied out, so as to avoid creasing if the laundry is not removed from the machine immediately after washing. To drain the water select programme "G" (spin) or "P" (drain). 17 ENGLISH Maintenance 1.

Bodywork Clean the outside of the machine with warm water and a neutral, non-abrasive household detergent. Rinse with clean water and dry with a soft cloth. Important: do not use methylated spirits, solvents or similar products to clean the bodywork. 3. Cleaning of the drainage area The drainage area must be cleaned if the pump has been blocked with objects such as buttons, safety pins, coins, etc. , or if lint has built up because clothes that generate lint have been washed at high temperatures. Pull out the plug from the power socket. If necessary, wait until the water has cooled down. Open the drainage area door. Place a bowl to collect the water.

Release the emergency emptying hose, place it in the bowl and remove its cap, when the bowl is full put the cap back on the emergency emptying hose. 2. Detergent dispenser drawer After a while, detergents and fabric softeners leave deposits in the drawer. Clean the drawer from time to time by rinsing it under a running tap. To remove the drawer from the machine, press the button in the rear left-hand corner. To facilitate cleaning, the top part of the additive compartments can be removed. . Empty the bowl. @@@@ @@@@ . Replace the emergency emptying hose in its initial position and close the drainage area door. P0038 P1116 P1117 18 4. The water inlet hose filter If it takes longer to fill up the washing machine it is time to check the water inlet hose filter it may be clogged.

Turn off the water tap. Unscrew the fixing nut of the inlet hose. Remove the filter from the electrovalve and clean it with a hard bristle brush and replace it. Screw on the nut thoroughly. 6.

Frost precautions If the machine is installed in a place where the temperature could drop below 0°C, proceed as follows: . disconnect the appliance; . close the water tap; . if necessary, wait until the water has cooled down; . open the drainage area door; . place a bowl to collect the water that will flow out; . release the emergency emptying hose, place it in the bowl and remove its cap; . when the water stops flowing out, put the cap back on the emergency emptying hose, replace the emergency emptying hose in its initial position and close the drainage area door. By doing this, any water remaining in the machine is removed, avoiding the formation of ice and, consequently, breakage of the affected parts. When you use the machine again, make sure that the ambient temperature is above 0°C. P0090 P0021 5. Emergency emptying out If the water is not discharged (outlet pump is blocked, filter or drain hose are clogged), proceed as follows to empty out the machine: . pull out the plug from the power socket; . close the water tap; . if necessary, wait until the water has cooled down; . open the drainage area door; . place a bowl to collect the water; . release the emergency emptying hose, place it in the bowl and remove its cap, when the bowl is full put the cap back on the emergency emptying hose; . empty the bowl, repeat the procedure until you have completely emptied the washing machine; . replace the emergency emptying hose in its initial position and close the drainage area door.

19 ENGLISH Something not working? Problems which you can resolve yourself. Problem . The machine does not start up: Possible cause . The door is not firmly closed. . The machine is not plugged in or there is no power at the socket. . The main fuse has blown. . The programme selector is not positioned correctly or the programme selector knob has not been pulled out. . The machine does not fill: . The water tap is closed. . The inlet hose is squashed or kinked. . The filter in the inlet hose is blocked.



[You're reading an excerpt. Click here to read official ZANUSSI FA523 user guide](http://yourpdfguides.com/dref/644623)
<http://yourpdfguides.com/dref/644623>

· The door is not properly closed. · The machine fills then empties immediately: · The machine does not empty and/or does not spin: · The end of the drain hose is too low.

Refer to relevant paragraph in "water drainage" section. · The drain hose is squashed or kinked. · The option · The option has been selected. has been selected. · The laundry is not evenly distributed in the drum. · The drainage area is blocked. Clean it. · There is water on the floor: · Too much detergent or unsuitable detergent (creates too much foam) has been used. · Check whether there are any leaks from one of the inlet hose fittings. It is not always easy to see this as the water runs down the hose; check to see if it is damp.

· The drain hose is damaged. · Check that the diaphragm lid is correctly screwed into place. · Unsatisfactory washing results: · Too little detergent or unsuitable detergent has been used. · Stubborn stains have not been treated prior to washing. · The correct temperature was not selected. · Excessive laundry load. · The machine vibrates or is noisy: · The transit bolts and packing have not been removed. · The support feet have not been adjusted. · The laundry is not evenly distributed in the drum. · Maybe there is very little laundry in the drum. · The programme is still running. · The door lock has not been released. · There is water in the drum. · The door will not open: 20 Mod.

.... Prod. No.

.....

.. P0042 Ser. No. .

..... Water is not visible in the machine. The machine, which is the result of modern technology, runs in a very economical way with low water consumption.

Performance is nevertheless excellent. P1035UK 21 ENGLISH If you are unable to identify or solve the problem, contact our service centre. Before telephoning, make a note of the model, serial number and purchase date of your machine: the Service Centre will require this information. Mod.

.... Prod.

No.

..... Ser. No. .

..... .



[You're reading an excerpt. Click here to read official ZANUSSI FA523 user guide](http://yourpdfguides.com/dref/644623)
<http://yourpdfguides.com/dref/644623>