



# Your PDF Guides


You can read the recommendations in the user guide, the technical guide or the installation guide for ZANUSSI FA826. You'll find the answers to all your questions on the ZANUSSI FA826 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual ZANUSSI FA826  
User guide ZANUSSI FA826  
Operating instructions ZANUSSI FA826  
Instructions for use ZANUSSI FA826  
Instruction manual ZANUSSI FA826



## ZANUSSI

LAVADORA  
WASHING MACHINE  
FA 821 - FA 822 - FA 826  
FA 868 - FA 874

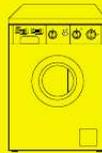

35 292 702/1

MANUAL DE USO  
USER MANUAL



[You're reading an excerpt. Click here to read official ZANUSSI FA826 user guide](http://yourpdfguides.com/dref/644917)  
<http://yourpdfguides.com/dref/644917>

### Manual abstract:

The symbols you will see on some paragraphs of this booklet have the following meaning: The warning triangle and/or the key words (Warning!, Caution!) emphasize information that is particularly important for your safety or correct functioning of the appliance. The information marked with this symbol provides additional instructions and practical tips on the use of the appliance. Tips and information about economical and ecological use of the machine are marked with this symbol. Our contribution to the protection of the environment: we use recycled paper. 22 Contents Warnings Disposal 24-25 25 Maintenance Bodywork Detergent dispenser drawer Cleaning of the drainage area Water inlet filter Frost precautions Emergency emptying out 38 38 38 38 39 39 39 Tips for environmental protection 25 Technical specifications Installation Unpacking Hydraulic connection Levelling Electrical connection 26 27-28 27 27 28 28 Something not working? 40-41 Your new washing machine Description of the appliance Detergent dispenser drawer 29 29 29 Use Control panel Controls Washing hints Sorting the laundry Temperatures Before loading the laundry Maximum loads Laundry weights Removing stains Detergents and additives International wash code symbols Operating sequence Washing programmes 30 30 30 31 31 31 31 31 31 31 32 33 34-35 36-37 23 ENGLISH Warnings The following warnings are provided in the interests of overall safety. You must read them carefully before installing or using the appliance. Installation · All internal packing must be removed before using the appliance. Serious damage may be caused to the machine or adjacent furniture if the protective transit devices are not removed or are not completely removed. Refer to the relevant paragraph in the instruction book. · Any electrical work required to install this appliance must be carried out by a qualified electrician.

· Any plumbing work required to install this appliance must be carried out by a qualified plumber. · After having installed the machine, check that it is not standing on its electrical supply cable. · If the appliance is placed on a carpeted floor, ensure that air can circulate freely between the feet and the floor. · Leave the porthole door slightly ajar when the appliance is not in use. This preserves the door seal and prevents the formation of musty smells. · Always check that water has emptied out before opening the door. If not, drain the water following the instructions in the instruction book. · Always unplug the appliance and shut the water tap after use. General safety · Repairs to the machine must be carried out only by qualified personnel. Repairs carried out by inexperienced persons could cause serious danger.

Contact your local Service Centre. · Never pull the power supply cable to remove the plug from the socket; always take hold of the plug itself. · During high temperature wash programmes the door glass may get hot. Do not touch it! Use · This appliance is designed for domestic use. It must not be used for purposes other than those for which it was designed. · Only wash fabrics which are designed to be machine washed. Follow the instructions on each garment label. · Do not overload the appliance. Follow the instructions in the instruction book. · Make sure that all pockets are empty.

Objects such as coins, safety pins, pins and screws can cause extensive damage. · Do not machine wash garments saturated with petroleum, methylated spirits, trichlorethylene, etc. If such fluids have been used to remove stains prior to washing, wait until they have completely evaporated from the fabric before placing garments in the appliance. · Place small items such as socks, belts, etc. in a cloth bag or pillowcase to prevent them getting trapped between the drum and the tub. · Use only the recommended quantities of fabric softener. An excessive amount could damage the laundry. 24 Child safety · Children are often not aware of how dangerous electrical appliances can be. When the machine is working, children should be carefully supervised and not be allowed to play with the appliance. · The packaging components (e.

g. plastic film, polystyrene) can be dangerous to children - danger of suffocation! Keep them out of children's reach. · Keep all detergents in a safe place out of children's reach. · Make sure that children or pets do not climb into the drum. Disposal Packaging materials The materials marked with the symbol

recyclable. >PE<=polyethylene >PS<=polystyrene >PP<=polypropylene This means that they can be recycled by disposing of them properly in appropriate collection containers. are Machine Use authorised disposal sites for your old appliance. Help to keep your country tidy! Tips for environmental protection To save water, energy and to help protect the environment, we recommend that you follow these tips: · Normally soiled laundry may be washed without prewashing in order to save detergent, water and time (the environment is protected too!). · The machine works more economically if it is fully loaded. · With adequate pre-treatment, stains and limited soiling can be removed; the laundry can then be washed at a lower temperature.

· Measure out detergent according to the water hardness, the degree of soiling and the quantity of laundry being washed. 25 ENGLISH · When the appliance is to be scrapped, cut off the electrical supply cable and destroy the plug with the remaining cable. Disable the door catch in order to prevent children from becoming trapped inside while playing. Technical specifications DIMENSIONS Height Width Depth Cotton Synthetics Delicates Woollens 85 cm 60 cm 60 cm 4,5 kg 2 kg 2 kg 1 kg 800 rpm max. MAXIMUM LOAD SPIN SPEED POWER SUPPLY VOLTAGE/FREQUENCY TOTAL POWER ABSORBED MINIMUM FUSE PROTECTION WATER PRESSURE Minimum Maximum 220-230 V/50 Hz 2000 W 10 A 5 N/cm<sup>2</sup> 80 N/cm<sup>2</sup> This appliance complies with the following EEC Directives: 73/23/EEC of 19/02/73 relating to low voltage 89/336/EEC of 03/05/89 relating to electromagnetic compatibility. 26 Installation Transit security bars Before starting the machine up, the transport security bars must be removed as follows: You are advised to keep all the transport security bars in case the appliance has to be transported again. 1. Unscrew and remove the three rear screws by means of a key. Hydraulic connection There should be a COLD WATER tap near the washing machine with a screwing on connection pipe of 3/4 gas for the water supply, a sink, a wash basin or a drainage system in the wall. Previously check if: -- it is not a hot water tap.

-- the running water is clean. If not, run off a reasonable amount of water to flush out any debris that may have collected in the pipes. Have the permanent drainage system in the wall checked by a plumber.



[You're reading an excerpt. Click here to read official ZANUSSI](http://yourpdfguides.com/dref/644917)

[FA826 user guide](http://yourpdfguides.com/dref/644917)

<http://yourpdfguides.com/dref/644917>

P0287 2. Lean the appliance back on the rear and fit one of the polystyrene angles between the appliance and the floor. Make sure the hoses are not squashed. A AL013 P0018 A) Place the enclosed rubber joint, delivered in a plastic bag together with the appliance (A) Fig.6), at the very end of the inlet hose and carefully screw the pipe to the tap taking care not to damage the screwdrive and fix the nut well on to the end in order to avoid leaking. B) If necessary turn the hose adequately by unscrewing the nut at the rear of the appliance. C) Now tighten the nut anew to avoid leaks. (Open the tap and assure that it does not leak and close it again.) D) Place the discharging hose in a washbasin or sink with the aid of the bent piece delivered separately. The bent piece has to be entered into the tube's mouth in order to assure the support. Aforesaid piece allows the hose to be fixed to the wall by means of an opening on the upper part and that way the hose does not move and its falling is avoided. 1 2 3.

Carefully remove the plastic bags on the right and the left, pulling them to the centre of the appliance P0021 AL009 P0022 P0001 P0002 4. Place the machine in an upright position and remove the three plastic bolts. 5. Plug the 3 holes with the plastic plugs which you can find in the envelope containing the instruction booklet. 27 ENGLISH 1,5 m.

Max. IMPORTANT: The distance from the floor to the highest part of the hose should be between 60 to 90 cm. (It is advised to be between 60 and 70 cm). The hose must not be bent nor twisted to avoid clogging. Should a prolongation of the discharging hose be unavoidable this must never surpass 1.5 m and must be of the same diameter as the original hose. Make sure the hoses are not too tense. Electrical connections Before plugging the appliance make sure that: 1°. the mains of your installation is the same as on the rating plate of your appliance (the plate is stuck to the rear of the appliance). 2°.

The meter, the fuses, the wiring and the socket outlet can support the max. power absorbed stated on the rating plate. 3°. The socket base and the plug must fit in adequately without any reducing interposition, multiple outlets or adapters. If necessary replace the socket outlet by an adequate one. The applicable rules for electrical security require an adequate earthing. The plug of the appliance is provided with such a device. Make sure your socket outlet is provided with an adequate earthing too. The manufacturer declines any liability in case of accidents or incidents should these safety measures not be observed. Levelling

Level the appliance by loosening or tightening the feet.

Once in the right position fix the feet by pushing the nuts against the base of the case. Accurate levelling will prevent vibration, noise and displacement of the appliance during operation. Some vibration is inevitable, especially if placed on a wooden floor. Wooden floors are particularly susceptible to vibrations. For advice, consult a builder.

@@Max. 60 cm. @@@@Programme chart 2 3 4 5 6 6. Temperature selector This control allows you to select the temperature of the washing cycle in accordance with the kind of stains: treat with bleach, rinse well (whites and fast coloureds only). @@@@Remove any residual marks from white fabrics with bleach.

@@Treat any residual marks with bleach. @@@@Although biodegradable, detergents contain substances which, in large quantities, can upset the delicate balance of nature. The choice of detergent will depend on the type of fabric (delicates, woollens, cottons, etc.), the colour, washing temperature and degree of soiling. All commonly available washing machine detergents may be used in this appliance: powder detergents for all types of fabric, powder detergents for delicate fabrics (60°C max) and woollens, liquid detergents, preferably for low temperature wash programmes (60°C max) for all types of fabric, or special for woollens only. The detergent and any additives must be placed in the appropriate compartments of the dispenser drawer before starting the wash programme. If using concentrated powder or liquid detergents, a programme without prewash must be selected. The washing machine incorporates a recirculation system which allows an optimal use of the concentrated detergent. Pour liquid detergent into the dispenser drawer compartment marked just before starting the programme. Any fabric softener or starching additives must be poured into the compartment marked before starting the wash programme.

The bleaching agent (chlorine) can be used only for white or fast coloured cotton and linen items. Pour it into the compartment marked . Follow the product manufacturer's recommendations on quantities to use and do not exceed the «MAX» mark in the detergent dispenser drawer. Degrees of water hardness Degrees Level Characteristic German °dH French °T.H. 1 2 3 4 soft medium hard very hard 0- 7 8-14 15-21 0-15 16-25 26-37 more than more than 21 37 32 International wash code symbols These symbols appear on fabric labels, in order to help you choose the best way to treat your laundry. Energetic wash Max. wash temperature 95°C Delicate wash Max. wash temperature 60°C Max. wash temperature 40°C Max.

wash temperature 30°C 60 40 40 30 Hand wash Do not wash at all Bleaching Bleach in cold water Do not bleach Ironing Hot iron max 200°C Warm iron max 150°C Lukewarm iron max 110°C Do not iron Dry cleaning Dry cleaning in all solvents Dry cleaning in perchlorethylene, petrol, pure alcohol, R 111 & R 113 Dry cleaning in petrol, pure alcohol and R 113 Do not dry clean high temperature low temperature Drying Flat On the line On clothes hanger Tumble dry Do not tumble dry 33 ENGLISH 95 60 40 30 4. Select the temperature Operating sequence Before washing your first load of laundry, we recommend that you run a cotton cycle at 60°C, with the machine empty, in order to remove any manufacturing residue from the drum and tub. Pour half a measure of detergent into the main wash compartment and start up the machine. Turn the dial to the required setting. 80 l.

Place the laundry in the drum Open the door. Place the laundry in the drum, one item at a time, shaking them out as much as possible. Close the door.

R0032S 5. Select the option push button/s and the spin speed.

6. Select the programme and start the machine Turn the programme selector dial clockwise to the required programme. Before pulling the On/off programme selector check if: · The door is properly closed. · The appliance is plugged in. · The water supply tap is turned on. · The diaphragm lid is correctly screwed into place. · The drain hose is adequately positioned. Pull the program dial up to you till it clicks.



[You're reading an excerpt. Click here to read official ZANUSSI](#)

[FA826 user guide](#)

<http://yourpdfguides.com/dref/644917>

The pilot light comes on and the program will begin. P0004 2.

Measure out the detergent Pull out the dispenser drawer until it stops. Measure out the amount of detergent recommended by the manufacturer in a graduated cup and pour it into the main wash compartment . If you wish to carry out the prewash, pour detergent into the appropriate compartment marked . B B 3. Measure out the additives If required, pour fabric softener into the compartment marked , and bleach into the compartment marked without exceeding the «MAX» mark. R0033 R0033 B R0055 R0052 34 7. At the end of the programme The machine stops automatically. The mains on light goes out. If you have selected a programme which ends with the water of the last rinse left in the tub, drain the water before opening the door. Select programme "P" (drain) or "G" (spin).

Wait one or two minutes before opening the door to give the electric locking mechanism time to release it. Remove the laundry. Turn the drum by hand to make sure it is completely empty, so as to avoid any forgotten items being damaged in a subsequent wash (e.g. shrinking) or their colour running into a load of whites.

Release any buttons which have been pressed. Turn the water tap off and unplug the machine. Leave the door ajar to air the machine. 35 ENGLISH Programme table Washing programmes for cotton and linen Load: 4,5 kg Programme Temp. Fabrics Additional functions DESCRIPTION A 60°-90° WHITES WITH PREWASH, for example work garments, sheets, household linen, underwear, towels ECO Prewash Wash at 60°-90°C 4 rinses Spin Wash at 60°-90°C 4 rinses Spin Wash at 40°-60°C 4 rinses Spin Wash at 30°-40°C 4 rinses Spin 4 rinses Spin B 60°-90° WHITES WITHOUT PREWASH, for example household linen, sheets, shirts, underwear FAST COLOURED, for example shirts, blouses, terry cloths, underwear NON FAST COLOURED slightly soiled laundry ECO B 40°-60° ECO C 30°-40° ECO D Rinses COLD This programme can be used for rinsing hand washed garments ECO F Softeners COLD For hand washed items to be softened Load additif 1 rinse Spin Spin G Long spin Separate spin for cotton and linen In compliance with EC directive 92/75, the consumption figures indicated on the energy label refer to the 60°C wash programme for cotton (programme "B") with a wash load of 4.

5 kg. 36 Programme table Washing programmes for synthetics, mixed fabrics, delicates Load: 2 kg, wool 1 kg and wool H 30°-60° SYNTHETICS WITH PREWASH, for example underwear, coloured items, shirts, blouses (\*) Prewash at 30°C Wash at 30°-60°C 3 rinses Water drain Wash at 30°-60°C 3 rinses Water drain Wash at 30°-40°C 3 rinses Water drain Wash at 30°-40°C 3 rinses Water drain 3 rinses Water drain J 30°-60° SYNTHETICS WITHOUT PREWASH, for example shirts, blouses, mixed fabrics EXPRESS slightly soiled laundry (\*) K 30°-40° (\*) (\*) L 30°-40° WOOL M Rinses COLD This programme can be used for rinsing hand washed garments (\*) N Softeners P Drain For hand washed items to be softened (\*) Load additif 1 rinse Water drain Drain water drum stands still For emptying out the water (\*) When this button is pressed, the last rinse water of these programmes is not emptied out, so as to avoid creasing if the laundry is not removed from the machine immediately after washing. To drain the water select programme "G" (spin) or "P" (drain). 37 ENGLISH Programme Temp. Fabrics Addi-tional functions DESCRIPTION Maintenance 1. Bodywork Clean the outside of the machine with warm water and a neutral, non-abrasive household detergent. Rinse with clean water and dry with a soft cloth. Important: do not use methylated spirits, solvents or similar products to clean the bodywork. 3. Cleaning of the drainage area The drainage area must be cleaned if the pump has been blocked with objects such as buttons, safety pins, coins, etc.

, or if lint has built up because clothes that generate lint have been washed at high temperatures. . . . . Pull out the plug from the power socket. If necessary, wait until the water has cooled down. Open the drainage area door. Place a bowl to collect the water. Release the emergency emptying hose, place it in the bowl and remove its cap, when the bowl is full put the cap back on the emergency emptying hose. 2. Detergent dispenser drawer After a while, detergents and fabric softeners leave deposits in the drawer. Clean the drawer from time to time by rinsing it under a running tap. To remove the drawer from the machine, press the button in the rear left-hand corner.

To facilitate cleaning, the top part of the additive compartments can be removed. · Empty the bowl. @@@@ · Replace the emergency emptying hose in its initial position and close the drainage area door. P0038 P1116 P1117 38 4. The water inlet hose filter If it takes longer to fill up the washing machine it is time to check the water inlet hose filter it may be clogged.

Turn off the water tap. Unscrew the fixing nut of the inlet hose. Remove the filter from the electrovalve and clean it with a hard bristle brush and replace it. Screw on the nut thoroughly. 6.

Frost precautions If the machine is installed in a place where the temperature could drop below 0°C, proceed as follows: · disconnect the appliance; · close the water tap; · if necessary, wait until the water has cooled down; · open the drainage area door; · place a bowl to collect the water that will flow out; · release the emergency emptying hose, place it in the bowl and remove its cap; · when the water stops flowing out, put the cap back on the emergency emptying hose, replace the emergency emptying hose in its initial position and close the drainage area door. By doing this, any water remaining in the machine is removed, avoiding the formation of ice and, consequently, breakage of the affected parts. When you use the machine again, make sure that the ambient temperature is above 0°C. P0090 P0021 5. Emergency emptying out If the water is not discharged (outlet pump is blocked, filter or drain hose are clogged), proceed as follows to empty out the machine: · pull out the plug from the power socket; · close the water tap; · if necessary, wait until the water has cooled down; · open the drainage area door; · place a bowl to collect the water; · release the emergency emptying hose, place it in the bowl and remove its cap, when the bowl is full put the cap back on the emergency emptying hose; · empty the bowl, repeat the procedure until you have completely emptied the washing machine; · replace the emergency emptying hose in its initial position and close the drainage area door.



[You're reading an excerpt. Click here to read official ZANUSSI FA826 user guide](http://yourpdfguides.com/dref/644917)  
<http://yourpdfguides.com/dref/644917>

39 ENGLISH Something not working? Problems which you can resolve yourself. Problem · The machine does not start up: Possible cause · The door is not firmly closed. · The machine is not plugged in or there is no power at the socket. · The main fuse has blown. · The programme selector is not positioned correctly or the programme selector knob has not been pulled out.

· The machine does not fill: · The water tap is closed. · The inlet hose is squashed or kinked. · The filter in the inlet hose is blocked. · The door is not properly closed. · The machine fills then empties immediately: · The machine does not empty and/or does not spin: · The end of the drain hose is too low. Refer to relevant paragraph in "water drainage" section. · The drain hose is squashed or kinked. · The option has been selected. · The laundry is not evenly distributed in the drum. · The drainage area is blocked.

Clean it. · The spin speed selector is positioned at 0. · There is water on the floor: · Too much detergent or unsuitable detergent (creates too much foam) has been used. · Check whether there are any leaks from one of the inlet hose fittings. It is not always easy to see this as the water runs down the hose; check to see if it is damp.

· The drain hose is damaged. · Check that the diaphragm lid is correctly screwed into place. · Unsatisfactory washing results: · Too little detergent or unsuitable detergent has been used. · Stubborn stains have not been treated prior to washing. · The correct temperature was not selected. · Excessive laundry load. · The machine vibrates or is noisy: · The transit bolts and packing have not been removed. · The support feet have not been adjusted. · The laundry is not evenly distributed in the drum. · Maybe there is very little laundry in the drum. · The programme is still running. · The door lock has not been released. · There is water in the drum. · The door will not open: 40 If you are unable to identify or solve the problem, contact our service centre. Before telephoning, make a note of the model, serial number and purchase date of your machine: the Service Centre will require this information.

Mod. ....

. Prod. No. ..

.....

.... Ser. No. ....

..... Mod. ....

.....

. Prod. No. ..

..... P0042 Ser.

No. ....

Water is not visible in the machine. The machine, which is the result of modern technology, runs in a very economical way with low water consumption. Performance is nevertheless excellent. The machine makes an unusual noise. The machine is fitted with a commutator motor which improves machine performance.

P1035UK P1034UK 41 ENGLISH EHPOESLZ - 06/2001 .



[You're reading an excerpt. Click here to read official ZANUSSI](#)

[FA826 user guide](#)

<http://yourpdfguides.com/dref/644917>