



Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for ZANUSSI FE 1205. You'll find the answers to all your questions on the ZANUSSI FE 1205 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual ZANUSSI FE 1205
User guide ZANUSSI FE 1205
Operating instructions ZANUSSI FE 1205
Instructions for use ZANUSSI FE 1205
Instruction manual ZANUSSI FE 1205

ZANUSSI

WASHING MACHINE
AUTOMATICKÁ PRAČKA
AUTOMATICKÁ PRAČKA
PRALNI STROJ
FE 1205



INSTRUCTION BOOKLET
NÁVOD K OBSLUZE
NÁVOD NA OBSLUHU
NAVODILA ZA UPORABO

GB
CZ
SK
SL



[You're reading an excerpt. Click here to read official ZANUSSI FE 1205 user guide](http://yourpdfguides.com/dref/1312327)

<http://yourpdfguides.com/dref/1312327>

Manual abstract:

Our contribution to the protection of the environment: we use environmentally friendly paper. 2 132990110-gb 17-11-2003 9:42 Pagina 3 Warnings The following warnings are provided in the interests of overall safety. You must read them carefully before installing or using the appliance. Installation · All internal packing must be removed before using the appliance. Serious damage may be caused to the machine or adjacent furniture if the protective transit devices are not removed or are not completely removed. Refer to the relevant paragraph in the instruction book. · Any electrical work required to install this appliance must be carried out by a qualified electrician. @@@@An excessive amount could damage the laundry. @@This preserves the door seal and prevents the formation of musty smells. · Always check that water has emptied out before opening the door.

If not, drain the water following the instructions in the instruction book. · Always unplug the appliance and shut the water tap after use. General safety · Repairs to the machine must be carried out only by qualified personnel. Repairs carried out by inexperienced persons could cause serious danger. Contact your local Service Centre.

· Never pull the power supply cable to remove the plug from the socket; always take hold of the plug itself. · During high temperature wash programmes the door glass may get hot. Do not touch it! Use · This appliance is designed for domestic use. It must not be used for purposes other than those for which it was designed. · Only wash fabrics which are designed to be machine washed.

Follow the instructions on each garment label. · Do not overload the appliance. Follow the instructions in the instruction book. · Make sure that all pockets are empty. Objects such as coins, safety pins, pins and screws can cause extensive damage. · Do not machine wash garments saturated with petroleum, methylated spirits, trichlorethylene, etc. If such fluids have been used to remove stains prior to washing, wait until they have completely evaporated from the fabric before placing garments in the appliance. · Place small items such as socks, belts, etc. in a cloth bag or pillowcase to prevent them getting trapped between the drum and the tub. Child safety · Children are often not aware of how dangerous electrical appliances can be.

When the machine is working, children should be carefully supervised and not be allowed to play with the appliance. · The packaging components (e.g. plastic film, polystyrene) can be dangerous to children - danger of suffocation! Keep them out of children's reach. · Keep all detergents in a safe place out of children's reach. · Make sure that children or pets do not climb into the drum. · When the appliance is to be scrapped, cut off the electrical supply cable and destroy the plug with the remaining cable. Disable the door catch in order to prevent children from becoming trapped inside while playing. 3 ENGLISH 132990110-gb 17-11-2003 9:42 Pagina 4 Disposal Packaging materials The materials marked with the symbol recyclable. >PE<=polyethylene >PS<=polystyrene >PP<=polypropylene This means that they can be recycled by disposing of them properly in appropriate collection containers. are Machine Use authorised disposal sites for your old appliance. Help to keep your country tidy! Tips for environmental protection To save water, energy and to help protect the environment, we recommend that you follow these tips: · Normally soiled laundry may be washed without prewashing in order to save detergent, water and time (the environment is protected too!). · The machine works more economically if it is fully loaded. · With adequate pre-treatment, stains and limited soiling can be removed; the laundry can then be washed at a lower temperature. · Measure out detergent according to the water hardness, the degree of soiling and the quantity of laundry being washed.

Technical specifications DIMENSIONS Height Width Depth Cotton Synthetics Delicates Woollens 85 cm 60 cm 59 cm 5 kg 2.5 kg 2.5 kg 1200 rpm max. 220-230 V/50 Hz 2200 W 10 A 500 kPa 800 kPa MAXIMUM LOAD SPIN SPEED POWER SUPPLY VOLTAGE/FREQUENCY TOTAL POWER ABSORBED MINIMUM FUSE PROTECTION WATER PRESSURE Minimum Maximum This appliance complies with the following EEC Directives: 73/23/EEC of 19/02/73 relating to low voltage 89/336/EEC of 03/05/89 relating to electromagnetic compatibility. 4 132990110-gb 17-11-2003 9:42 Pagina 5 Installation Unpacking All transit bolts and packing must be removed before using the appliance.

You are advised to keep all transit devices so that they can be refitted if the machine ever has to be transported again. 1. Using a spanner, unscrew and remove the two rear bottom screws. Slide out the two plastic pins. P0002 7. Plug all the holes with the plugs which you will find in the envelope containing the instruction booklet. Positioning Install the machine on a flat hard floor. Make sure that air circulation around the machine is not impeded by carpets, rugs etc. Check that the machine does not touch the wall or other kitchen units. Carefully level by screwing the adjustable feet in or out.

Never place cardboard, wood or similar materials under the machine to compensate for any unevenness in the floor. P0001 2. Lay the machine on its back, taking care not to squash the hoses. This can be avoided by placing one of the corner packing pieces between the machine and the floor. 3. Remove the polystyrene block from the bottom of the machine and release the two plastic bags. P1051 Water inlet 4. Very carefully slide out the left polythene bag, removing it towards the right and then downwards. 5. Very carefully slide out the right polythene bag, removing it towards the left and then upwards. Connect the water inlet hose to a tap with a 3/4" thread. Do not use already employed hoses for water connection. P1088 Important! 6. Set the machine upright and remove the remaining rear screw. Slide out the relevant pin.

Before connecting up the machine to new pipework or to pipework that has not been used for some time, run off a reasonable amount of water to flush out any debris that may have collected in the pipes. 5 ENGLISH 132990110-gb 17-11-2003 9:42 Pagina 6 The other end of the inlet hose which connects to the machine can be turned in any direction. Simply loosen the fitting, rotate the hose and retighten the fitting, making sure there are no water leaks The drain hose must not be kinked. P1118 P0021 The inlet hose must not be lengthened. If it is too short and you do not wish to move the tap, you will have to purchase a new, longer hose specially designed for this type of use.

For a correct functioning of the machine the drain hose must remain hooked on the proper support piece situated on the top part of the back side of the appliance.



[You're reading an excerpt. Click here to read official ZANUSSI FE 1205 user guide](http://yourpdfguides.com/dref/1312327)

<http://yourpdfguides.com/dref/1312327>

Electrical connection This machine is designed to operate on a 220-230 V, single-phase, 50 Hz supply. Check that your domestic electrical installation can take the maximum load required (2.2 kW), also taking into account any other appliances in use. Connect the machine to an earthed socket. The manufacturer declines any responsibility for damage or injury through failure to comply with the above safety precaution. Should the appliance power supply cable need to be replaced, this should be carried out by our Service Centre. Please ensure that when the appliance is installed the power supply cable is easily accessible.

Water drainage The end of the drain hose can be positioned in three ways: Hooked over the edge of a sink using the plastic hose guide supplied with the machine. In this case, make sure the end cannot come unhooked when the machine is emptying.

This could be done by tying it to the tap with a piece of string or attaching it to the wall. P0022 In a sink drain pipe branch. This branch must be above the trap so that the bend is at least 60 cm above the ground. Directly into a drain pipe at a height of not less than 60 cm and not more than 90 cm. The end of the drain hose must always be ventilated, i.e. the inside diameter of the drain pipe must be larger than the outside diameter of the drain hose. 6 132990110-gb 17-11-2003 9:42 Pagina 7 Your new washing machine This new machine meets all modern requirements for effective treatment of laundry with low water, energy and detergent consumption. · The automatic cooling of the washing water from 95° to 60°C before draining will prevent old drain pipes from being deformed. · The special wool programme with its new delicate wash system treats your woollens with extreme care.

· The unbalance detection device prevents vibration during spinning. · The ECO valve allows total use of detergent and reduces water consumption so saving energy. · The possibility of selecting the temperature, spin speed and all the options offered by this washing machine gives you truly "customised" washing. ·

The DELAY START option allows you to delay starting of the wash programme to any time of day, so allowing you for instance to make use of overnight economy electricity tariffs. · The programme progress display shows the programme steps selected and the programme phase which is running. Description of the appliance 1 Detergent dispenser drawer and programme chart 2 Control panel 3 Door handle 4 Drain pump 5 Adjustable feet Detergent dispenser drawer Prewash Main wash Fabric softener, starch C0063 7 ENGLISH 132990110-gb 17-11-2003 9:42 Pagina 8 Use Control panel 1 ON/OFF button Press this button to switch the washing machine on. @@@@After this time the wash cycle will automatically start. This function is not available for wool and handwash cycle. @@@@The light above the button will stop flashing and remain lit. If you have selected a delay time by means of button 10, the countdown will begin and will be shown press the START/PAUSE button again.

· If the machine is switched off: - depress ON/OFF button to switch it on; - select the type of fabric by means of button FABRIC: - select the special programme as previously described. 11 Programme phase indicator lights When you select a programme, the lights relevant to the phases that form the programme light up. After you have started the programme, only the light relevant to the phase that is currently being carried out will remain lit. 11 ENGLISH 132990110-gb 17-11-2003 9:42 Pagina 12 Washing hints Sorting the laundry Follow the wash code symbols on each garment label and the manufacturer's washing instructions. @@@@underwear). (cold)for delicate items (e.g. @@Whites may lose their "whiteness" in the wash. @@Make sure that no metal objects are left in the laundry (e.g.

hair clips, safety pins, pins). Button up pillowcases, close zip fasteners, hooks and poppers. Tie any belts or long tapes. Remove persistent stains before washing. @@Treat curtains with special care. @@It is therefore advisable to treat them prior to washing. Blood: treat fresh stains with cold water.

@@@@Remove any residual marks from white fabrics with bleach. @@Treat any residual marks with bleach. @@@@ do not use acetone on artificial silk.

Quantity of detergent to be used The type and quantity of detergent will depend on the type of fabric, load size, degree of soiling and hardness of the water used. Water hardness is classified in so-called "degrees" of hardness. Information on hardness of the water in your area can be obtained from the relevant water supply company, or from your local authority. Follow the product manufacturers' instructions on quantities to use. Use less detergent if: you are washing a small load, the laundry is lightly soiled, large amounts of foam form during washing.

Detergents and additives Good washing results also depend on the choice of detergent and use of the correct quantities to avoid waste and protect the environment. Although biodegradable, detergents contain substances which, in large quantities, can upset the delicate balance of nature. The choice of detergent will depend on the type of fabric (delicates, woollens, cottons, etc.), the colour, washing temperature and degree of soiling. All commonly available washing machine detergents may be used in this appliance: powder detergents for all types of fabric, powder detergents for delicate fabrics (60°C max) and woollens, liquid detergents, preferably for low temperature wash programmes (60°C max) for all types of fabric, or special for woollens only.

The detergent and any additives must be placed in the appropriate compartments of the dispenser drawer before starting the wash programme. If using concentrated powder or liquid detergents, a programme without prewash must be selected. The washing machine incorporates a recirculation system which allows an optimal use of the concentrated detergent. Pour liquid detergent into the dispenser drawer compartment marked just before starting the programme. Any fabric softener or starching additives must be poured into the compartment marked before starting the wash programme. Follow the product manufacturer's recommendations on quantities to use and do not exceed the «MAX» mark in the detergent dispenser drawer. 13 ENGLISH 132990110-gb 17-11-2003 9:42 Pagina 14 International wash code symbols These symbols appear on fabric labels, in order to help you choose the best way to treat your laundry. Energetic wash 95 Max. wash temperature 95°C Delicate wash 60 Max. wash temperature 60°C 40 Max.

wash temperature 40°C 30 Max. wash temperature 30°C Hand wash 60 40 40 30 Do not wash at all Bleaching Bleach in cold water Do not bleach Ironing Hot iron max 200°C Warm iron max 150°C Lukewarm iron max 110°C Do not iron A Dry cleaning Dry cleaning in all solvents P Dry cleaning in perchlorethylene, petrol, pure alcohol, R 111 & R 113 F Dry cleaning in petrol, pure alcohol and R 113 Do not dry clean high temperature low temperature Drying Flat On the line On clothes hanger Tumble dry Do not tumble dry 14 132990110-gb 17-11-2003 9:42 Pagina 15 Operating sequence Before the first wash we recommend that you pour 2 litres of water into the main wash compartment of the detergent drawer in order to activate the ECO valve.



[You're reading an excerpt. Click here to read official ZANUSSI FE](http://yourpdfguides.com/dref/1312327)

[1205 user guide](http://yourpdfguides.com/dref/1312327)

<http://yourpdfguides.com/dref/1312327>

Then run a cotton cycle at 60°C, with the machine empty, in order to remove any manufacturing residue from the drum and tub. Pour half a measure of detergent into the main wash compartment and start up the machine. 4. Switch the machine on Press the ON/OFF button to switch the machine on. The display will show three blinking dashes or a blinking zero. The light above the button will light up. 1. Place the laundry in the drum Open the door. Place the laundry in the drum, one item at a time, shaking them out as much as possible. Close the door. 5. Select the desired programme/fabric Press the FABRIC button repeatedly, in order to select the desired programme/fabric. The relevant light will light up.

The lights relevant to the phases that form the programme will light up. The display will show the duration of the selected programme, calculated on the basis of the maximum load for each type of fabric. The START/PAUSE button light will start flashing. P0004 2. @@@@The relevant light will light up.

9. @@@@Select the spin speed (RINSE HOLD) option or 10. Start the programme Press the START/PAUSE button. @@@@The relevant light will light up. If you select the RINSE HOLD option, the machine will stop at the end of the programme with the water still in the tub. 8. Select the desired options Depress the relevant buttons to select the required options. 11. How to change a programme during its cycle Before you make any change, you must pause the washing machine by pressing the START/PAUSE button. It is possible to change any phase before the programme carries it out.

Changing the type of fabric or temperature is possible, obviously, only during the washing phase. If it is necessary to drain the water in order to change the programme in progress, proceed as follows: · PAUSE the machine by pressing the START/PAUSE button; · press the SKIP/RESET button repeatedly, until only the DRAIN light remains lit; · press the START/PAUSE button again. When the water has been drained, the display shows a blinking zero. You may now select a new programme and press the START/PAUSE button to start it. 16 132990110.gb 17-11-2003 9:42 Pagina 17 12. How to cancel a programme during its cycle To cancel a programme that is being carried out, first pause the washing machine by pressing the START/PAUSE button, then press the SKIP/RESET button repeatedly, until the display shows three blinking dashes. Note: when you switch the machine on, if you must erase the previously performed programme, it is also sufficient to press the FABRIC button and select a new programme. Press the ON/OFF button to switch the machine off. The relevant light will go out. Remove the laundry from the washing machine.

Check whether the drum is completely empty, by rotating it with your hand. The purpose of this is to prevent any items of laundry from remaining accidentally in the drum, where they might get damaged in a subsequent wash (e.g. by shrinking) or bleed colour into another load of laundry. We advise you to close the water supply tap and disconnect the plug from the socket.

Leave the door ajar in order to air the washing machine. 13. How to open the door during the cycle of a programme You can open the door, after having set the washing machine to PAUSE, provided the following conditions exist: · the washing machine is not in the heating phase beyond 40°C; · the level of the water is not high; · the drum is not turning. If these requirements are met, when you pause the washing machine, the door can be opened. Should it not be possible to open the door, and should it be absolutely necessary to do so, switch the machine off by pressing the ON/OFF button.

After approximately 3 minutes, you can open the door. Pay attention to the level and temperature of the water in the washing machine! When you close the door and press the ON/OFF button again, the washing machine will resume the programme from the point where it had been interrupted. 14. End of programme At the end of the programme, the washing machine stops automatically, gives an audible signal, and displays a blinking zero. If you had selected the RINSE HOLD option, the START/PAUSE button light goes off, the pilot light remains lit to indicate that the water must be drained. The display shows a flashing zero. When the programme has been completed, a blinking zero appears on the display and the audible signal is given. Press the SKIP/RESET button repeatedly to erase the programme that has just been carried out. If you omit to do this, the next time you switch the washing machine on, the blinking zero will appear on the display and you will hear the audible signal. 17 ENGLISH 132990110.gb 17-11-2003 9:42 Pagina 18 Washing programmes Type of laundry and symbols on labels 60 95 Max load 5 kg Programme/ temperature Cottons 60°-95°C Description of Available options programme Main wash at 60°-95°C 3 rinses Long spin Consumption* Energy kWh 2.

0 Water litres 53 Time h/min. 2.55 White cotton: e.g. sheets, tablecloths, household linen 60 40 30 ** Coloured cotton: e.g. shirts, blouses, underwear, towels, household linen 5 kg Cottons Main wash at 60°-40°-30°C 60°-40°-30°C 3 rinses Long spin 1.2 49 2.00 60 40 30 2.5 kg Synthetic fabrics and blends: e.g. shirts, blouses, underwear 40 Synthetics Main wash at 60°-40°-30°C 60°-40°-30° or cold wash 3 rinses Short spin 0.9 54 1.29 30 2.5 kg Delicate fabrics: e.g. acrylic fabrics, viscose, polyester, synthetic blends 40 Delicates 40°-30°C or Main wash at 40°-30°C or cold wash 3 rinses Short spin 0.5 55 1.00 30 2 kg Wool Wool 40°-30°C or Main wash at 40°-30°C or cold wash 3 rinses Short spin Main wash at 40°-30°C or cold wash 3 rinses Short spin 0.35 55 55 2 kg Hand wash 40°-30°C or 0.

35 55 56 * The consumption data shown on this chart is to be considered purely indicative, as it may vary depending on the quantity and type of laundry, on the inlet water temperature and on the ambient temperature. It refers to the highest temperature for each wash programme. For cotton items it refers to a wash load of 5 kg. ** In compliance with EC directive 92/75 the consumption figures indicated on the Energy label refer to this programme at 60°C with a load of 5 kg of cotton items. 18 132990110.gb 17-11-2003 9:42 Pagina 19 Maintenance Bodywork Clean the outside of the machine with soap and water only. Rinse with clean water and dry with a soft cloth. Important: do not use methylated spirits, solvents or similar products to clean the bodywork. Detergent can also accumulate inside the drawer recess: clean it with an old toothbrush. Refit the drawer after cleaning. Door seal Check from time to time the door seal and eliminate eventual possible objects that could be trapped in the fold.



[You're reading an excerpt. Click here to read official ZANUSSI FE](http://yourpdfguides.com/dref/1312327)

[1205 user guide](http://yourpdfguides.com/dref/1312327)

<http://yourpdfguides.com/dref/1312327>

P0038 Drain pump The pump should be inspected if · the machine does not empty and/or spin · the machine makes an unusual noise during draining due to objects such as safety pins, coins etc. blocking the pump. P1050 Proceed as follows: · Disconnect the appliance. · If necessary wait until the water has cooled down. · Open the pump door. Detergent dispenser drawer After a while, detergents and fabric softeners leave deposits in the drawer. Clean the drawer from time to time by rinsing it under a running tap. @@@@ Always keep a rag nearby to dry up spillage of water when removing the pump. C0068 P1086 19 ENGLISH 132990110-gb 17-11-2003 9:42 Pagina 20 · Remove any objects from the pump impeller by rotating it. Emergency emptying out If the water is not discharged, proceed as follows to empty out the machine: · pull out the plug from the power socket; · close the water tap; · if necessary, wait until the water has cooled down; · open the pump door; · place a bowl on the floor and place the end of the emergency emptying hose into the bowl.

Remove its cap. The water should drain by gravity into the bowl. When the bowl is full, put the cap back on the hose. Empty the bowl. Repeat the procedure until water stops flowing out; · clean the pump if necessary as previously described; · replace the emergency emptying hose in its seat after having plugged it; · screw the pump cover again and close the door.

· Put the cap back on the emergency emptying hose and place the latter back in its seat. Frost precautions · Screw the pump cover fully in. · Close the pump door. If the machine is installed in a place where the temperature could drop below 0°C, proceed as follows: · Remove the plug from the socket. · Close the water tap and unscrew the water inlet hose from the tap.

@ · Turn the programme selector dial to O. · Switch the machine OFF by depressing button . @@@@ Turn off the water tap. Unscrew the hose from the tap. Clean the filter with a stiff brush. Screw the hose back onto the tap. Important! Every time you drain the water through the emergency emptying hose you must pour 2 litres of water into the main wash compartment of the detergent drawer and then run the drain programme. This will activate the ECO VALVE device avoiding that part of the detergent remains unused at next washing. 20 132990110-gb 17-11-2003 9:42 Pagina 21 Something not working?

Problems which you can resolve yourself. During machine operation it is possible that one of the following alarm codes appears on the display: - E10: problem with the water supply - E20: problem with water draining - E40: door open At the same time the buzzer sounds.

Once the problem has been eliminated, press the START/PAUSE button all checks, the problem persists, contact your local Service Centre. to restart the programme. If after Problem · The machine does not start up: Possible cause · The door is not firmly closed. (E40) · The machine is not plugged in or there is no power at the socket. · The main fuse has blown. · The START/PAUSE button has not been depressed. · The DELAY START option has been selected. . . .

The water tap is closed. (E10) The inlet hose is squashed or kinked. (E10) The filter in the inlet hose is blocked.

(E10) The door is not properly closed. (E40) · The machine does not fill: · The machine fills then empties immediately: · The machine does not empty and/or does not spin: · There is water on the floor: · The end of the drain hose is too low. Refer to relevant paragraph in "water drainage" section. · The drain hose is squashed or kinked. (E20) · The option has been selected.

· The drain filter is clogged. (E20) · Too much detergent or unsuitable detergent (creates too much foam) has been used. · Check whether there are any leaks from one of the inlet hose fittings. It is not always easy to see this as the water runs down the hose; check to see if it is damp. · The drain hose is damaged.

· Too little detergent or unsuitable detergent has been used. · Stubborn stains have not been treated prior to washing. · The correct temperature was not selected. · Excessive laundry load. · The transit bolts and packing have not been removed. · The support feet have not been adjusted. · The laundry is not evenly distributed in the drum. · Maybe there is very little laundry in the drum. · Unsatisfactory washing results: · The machine vibrates or is noisy: 21 ENGLISH 132990110-gb 17-11-2003 9:42 Pagina 22 Problem · The door will not open: . . . Possible cause The programme is still running. The door lock has not yet released.

The water level is above the bottom edge of the door. The machine is heating the water. · Spinning starts late or the laundry is not spun enough: · The electronic unbalance detection device has cut in because the laundry is not evenly distributed in the drum. The laundry is redistributed by reverse rotation of the drum. This may happen several times before the unbalance disappears and normal spinning can resume. If, after 6 minutes, the laundry is still not evenly distributed in the drum, the machine will spin at a lower speed or will not spin. If at the end of the programme the laundry is not spun enough, redistribute the load manually and select the spin programme. · The machine, which is the result of modern technology, runs in a very economical way with low water consumption. Performance is nevertheless excellent. · The machine is fitted with a commutator motor which improves machine performance.

· Water is not visible in the machine: · The machine makes an unusual noise: If you are unable to identify or solve the problem, contact our service centre. Before telephoning, make a note of the model, serial number and purchase date of your machine: the Service Centre will require this information. P0042 22 132990110-slo 17-11-2003 12:34 Pagina 88 From the Electrolux Group. The world's No. 1 choice.

The Electrolux Group is the world's largest producer of powered appliances for kitchen, cleaning and outdoor use. More than 55 million Electrolux Group products (such as refrigerators, cookers, washing machines, vacuum cleaners, chain saws and lawn mowers) are sold each year to a value of approx. 14 billion USD in more than 150 countries around the world. .



[You're reading an excerpt. Click here to read official ZANUSSI FE](http://yourpdfguides.com/dref/1312327)

[1205 user guide](http://yourpdfguides.com/dref/1312327)

<http://yourpdfguides.com/dref/1312327>