



Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for ZANUSSI T845V. You'll find the answers to all your questions on the ZANUSSI T845V in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual ZANUSSI T845V
User guide ZANUSSI T845V
Operating instructions ZANUSSI T845V
Instructions for use ZANUSSI T845V
Instruction manual ZANUSSI T845V

INSTRUCTIONS BOOK

WASHING
MACHINE

T 845 V

ZANUSSI

1. TECHNICAL CHARACTERISTICS

DIMENSIONS	Height Width Depth	850 mm 397 mm 600 mm
VOLTAGE / FREQUENCY TOTAL POWER		230 V / 50 Hz 2300 W
WATER PRESSURE Connection to the water network	Minimum Maximum	0,05 MPa (0,5 bar) 0,8 MPa (8 bars) Type 20x27

CE This washing machine complies with CEE directive 89-336 about the limitation of radioelectric disturbances and directive CEE 73-23 for electrical safety.

2. WARNINGS

Keep this user's manual with your washing machine. If you sell your washing machine or give it away, make sure that it is accompanied by its user's manual. The new user can then be informed of how the washing machine operates and read relevant warnings. These warnings have been written for your safety and for the safety of others. Please read these comments carefully before installing and using your washing machine. Thank you for your attention.

- When you receive your washing machine, unpack it or have it unpacked immediately. Check its general appearance. Make any reserves in writing on the delivery form and keep a copy.
- Your washing machine was designed for use by adults. Make sure that children do not touch it or use it as a toy.
- Do not modify or attempt to modify the characteristics of this washing machine. This could be dangerous for you.
- Your washing machine is intended for normal domestic use. Do not use it for commercial or industrial purposes or for any purpose other than that for which it was designed: to wash, to rinse and to spin.
- Unplug the power supply plug and close the water supply tap every time after using your washing machine.
- Only wash articles that can resist machine washing. Refer to the instructions on the label for each article.
- Do not wash underwear with bones, or any material without hems, or torn materials in your washing machine.
- Remember to remove all coins, safety pins, buttons, screws, etc., before each wash. They can cause serious damage if they are left in your washing.
- Do not put articles in your washing machine if you have used a solvent, alcohol, trichloroethylene, etc., to remove stains from them. If you must use these stain removers, wait until the product has evaporated before putting the articles in the drum.
- Collect all small articles such as socks, belts, etc., in a small cloth bag or pillow case.
- Use the quantity of detergent indicated in the «proportioning of detergent» section.
- Always unplug the washing machine before cleaning it and doing any maintenance.
- This washing machine is heavy. Take care when moving it.
- You must remove the packing on the washing machine before use. Failure to remove all transport protection devices can cause damage to the washing machine or nearby furniture. The washing machine must be unplugged while packing is being removed.
- Do not allow any one other than a qualified plumber to make the hydraulic connections necessary to install your washing machine.
- The washing machine must be plugged in to a power outlet with a conform earth.
- Call a qualified electrician if the electrical installation in your residence is such that you have to modify it before you can connect your washing machine.
- Please read the instructions in the «electrical connections» chapter carefully before connecting your washing machine.
- After installing your washing machine, make sure that it is not standing on its electrical power supply cable.
- When your machine is installed on a carpeted floor, make sure that the carpet does not close off the ventilation openings near the bottom of the machine.
- The power supply cable may be only replaced by the After Sales Service.
- Your manufacturer cannot be held responsible for any damage resulting from a nonconform installation.

148 5343 00 - 09/03

1



[You're reading an excerpt. Click here to read official ZANUSSI T845V user guide](http://yourpdfguides.com/dref/664749)
<http://yourpdfguides.com/dref/664749>

Program Washing type Load Possible options Washing temperature °C Liters Approximate consumptions * kWh Duration A B Cotton + prewash Cotton**
 Quick wash 5 kg 2,5 kg Half load Rinse plus 60 - 90 30 - 90 30 - 40 75 57 40 60 0 2,20 1,80 0,40 0,20 0,05 145-155 125-135 60-70 45-55 5-15 C D Rinsings 5
 kg Spinning Half load Rinse plus - H J Synthetics + prewash Synthetics Quick wash 40 - 60 40 - 60 30 - 40 2,5 kg 30 - 40 cold - 40 5 kg - 50 40 40 45 42 36 0
 0 0,90 0,60 0,40 0,50 0,40 0,10 0,02 0,01 90-100 75-85 60-70 50-60 45-55 20-30 5-15 0-10 K L M N P Delicates Wool Rinsings Short spinning Draining *
 Data provided for guidance and subject to change depending on usage conditions. **Reference program for tests according to standard IEC 456 (60°C
 Cotton program) : 57 l / 0,95 kWh / 130 min 5 6.

WASHING GUIDE 6.1. Sorting and preparing your washing · Sort the washing by type and care symbol (see chapter 5.4: International symbols for care of
 textiles): normal wash for strong washing that can resist energetic wash and spin; delicate wash for delicate washing that should be treated more carefully.

For mixed loads composed of articles of different types of fibers, choose a program and temperature suitable for the most fragile fiber.

Wash white washing and color washing separately. Otherwise, the white washing may be colored or look gray. New clothes very often have too much color.

Preferably wash new clothes separately for the first time. Respect "wash separately" and "wash several times separately" care instructions. Empty pockets
 and spread out the washing. Take off all loose buttons, pins and hooks and eyes. Close zip fasteners, tie knots in laces and straps. Turn clothes made of
 several layers of textiles (sleeping bags, anoraks, etc.), colored hosiery and wool and textiles with add-on decorations, inside out.

Wash small delicate items (socks, tights, bras, etc) in a washing net. Treat curtains with special care. Remove curtain hooks and put net curtains in a net bag
 or a sachet. gents in tablets or doses must be put into the wash compartment of the detergents dispenser in your washing machine. The quantity of detergent to
 be used depends on the amount of washing to be washed, the hardness of the water and how dirty the washing is. If the water is soft, you can reduce the doses
 slightly. Increase the doses slighorrectly connected, the electrical installation is not working, the lid of your washing machine and the drum flaps are not
 correctly closed, you did not control the program start correctly, there is a power failure, the water supply is closed off, the water tap is closed, the water inlet
 is blocked. the drain siphon is attached too low (see installation section). The washing machine fills up but empties again immediately: The washing machine
 will not spin or will not drain: ······the drain pipe is blocked or kinked, the drain filter is blocked, the «Drain» program or the «Rinse hold»
 option is selected, the height of the drain siphon is wrong. excess detergent has made too much foam that overflowed, the detergent is not suitable for machine
 washing, the drain siphon is not hooked on properly, the drain filter was not put back into place, the water inlet pipe is leaking.

@@@If any work is necessary after you have made all your checks, your washing machine dealer is the first person authorized to take action.

Otherwise, you can always call Consumers Help that will inform you of the address of an After Sales Service. When you call the After Sales Service, mention
 the model and product number of your washing machine, and its serial number. This information is given on the inside of the filter door and on the name plate
 at the back of the washing machine. 8 If any work is done on your washing machine, insist that your After Sales Service uses manufacturer certified spare
 parts.



[You're reading an excerpt. Click here to read official ZANUSSI
 T845V user guide
 http://yourpdfguides.com/dref/664749](http://yourpdfguides.com/dref/664749)