



Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for ZANUSSI TC7102W. You'll find the answers to all your questions on the ZANUSSI TC7102W in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual ZANUSSI TC7102W
User guide ZANUSSI TC7102W
Operating instructions ZANUSSI TC7102W
Instructions for use ZANUSSI TC7102W
Instruction manual ZANUSSI TC7102W

ZANUSSI

TUMBLE DRYER
TC 7102 W
TC 7102 S



⚠ Unpacking: see page 14

125993251

INSTRUCTION BOOKLET

GB



[You're reading an excerpt. Click here to read official ZANUSSI TC7102W user guide](http://yourpdfguides.com/dref/648539)
<http://yourpdfguides.com/dref/648539>

Manual abstract:

START 800 / 900 1000 / 1200 650 kg 6 kg 2.5 95' - 115' 85' - 105' 45' - 60' 40' - 55' 120' - 140' 60' - 75' 95' - 115' 55' - 70' kg 2.5 kg 1 65' - 75' 30' - 40' 6 AUTOREVERSE XTRACAPACITY DRYING TIME Unpacking: see page 14 125993251 INSTRUCTION BOOKLET GB Important Safety Information It is most important that this instruction book should be retained with the appliance for future reference. Should the appliance be sold or transferred to another owner, or should you move house and leave the appliance, always ensure that the book is supplied with the appliance in order that the new owner can get to know the functioning of the appliance and the relevant warnings. These warnings have been provided in the interest of safety. You MUST read them carefully before installing or using the appliance. Installation · This appliance is heavy. Care should be taken when moving it. It is dangerous to alter the specifications or attempt to modify this product in any way. Any electrical work required to install this appliance should be carried out by a qualified electrician or competent person.

Care must be taken to ensure that the appliance does not stand on the electrical supply cable. If the machine is situated on a carpeted floor, please adjust the feet in order to allow air to circulate freely. If the tumble dryer is placed on top of a washing machine, it is compulsory to use the stacking kit (optional accessory). Use · Do not overload the appliance (see programme chart). · Clothes which are dripping wet should not be · placed in the dryer.

As some bulky items such as duvets and eiderdowns should be dried in large commercial machines because of their bulk, check with the manufacturer of the item if it is suitable for drying in a domestic machine, even if the dry weight of the item is within the limit advised. @@@@As these substance are volatile, they could cause an explosion. Tumble dry only items washed with water. @@Items containing rubber foam or materials similar to rubber foam. not being used.

This will allow the seal to be preserved. Clean fluff filters after using tumble dryer. @@ · Children should not be allowed to tamper with the controls or play with the product. Pets and children have been known to climb into tumble dryers. Please check your drum before use. Keep all packaging well away for children. · Leave the door slightly ajar when the appliance is · Do not allow fluff to accumulate around the dryer. · Under no circumstances should you attempt to repair the machine yourself. Repairs carried out by inexperienced persons may cause injury or serious malfunctioning. Contact your local Zanussi Service Centre.

Always insist on genuine Zanussi spare parts. 2 Contents For the User Important Safety Information 2 2 2 2 4 4 5 5 5 5 5 5 6 7 8 9 9 9 9 10 10 11 11 12 For the Installer Installation Instructions Technical Specifications 13 13 14 14 14 14 14-15 · Installation · Child Safety · Use Your New Tumble Dryer Description of the Appliance The Control Panel · Unpacking · Positioning · Stacking kit (optional accessory) · Door reversal · Electrical connection · Programme Chart · Mains-on Light · Low Temperature Button · Start Button · Water Full Indicator Light · Time Selector Dial/On-Off Switch Programme Chart Operating Sequence Hints & Tips on Drying Maintenance and Cleaning · External cleaning · Cleaning the door · Cleaning fluff filters · Cleaning the condenser unit · Emptying the water reservoir · Cleaning the air intake grille Something Not Working Customer Care Guarantee Conditions Guide to use the Instruction Book The following symbols will be found in the text to guide you throughout the instructions: Safety instructions Hints and tips Environmental information 3 Your New Tumble Dryer This tumble dryer will give your wash that soft, relaxed feel whatever the weather. Extremely high quality standards both during development and manufacturing guarantee a long service life for your appliance. Maximum economy in the operation of your dryer is achieved through very frugal electricity consumption and short drying times. Energy saving tips To save energy we recommend that you follow these hints: · Try to load the maximum capacity of the machine as small loads are uneconomical. · Always load well spun laundry. The higher the spin speed, the lower the electricity consumption and the shorter the drying times. · Do not over-dry laundry, this avoids creasing and saves energy. · Clean the filters regularly to avoid excessive drying times and high electricity consumption. · Ventilate the room well.

The room temperature should not exceed +35°C during drying. In the interest of the environment · Materials marked with the symbol · · are recyclable. Check with your local Council or Environmental Health Office to see if there are facilities in your area for re-cycling this appliance. When the appliance is to be scrapped, cut off the power supply cable and make the door closing device unusable to prevent young children from being trapped inside. Help to keep your country tidy - use authorised disposal sites for your old appliance.

· How do we help to protect the environment? We use recycled paper! Description of the Appliance 1 2 3 4 5 6 7 8 Worktop Programme chart Control panel Fluff filters Rating Plate Condenser unit Water reservoir Adjustable feet 1 3 W TC 7102 R SER DRYE CONDEN AL DU E UR AT ER MP TE LOW TEMP. START 6 ITY DRYING TIME SYNTHET STORE ICS DRY XTRACAPAC COTTON IRON DRY Spun at rpm STORE DRY 1000 / 1200 kg 6 kg 2.5 800 85' - 105' 55' 95' - 115' 40' 45' - 60' / 900 1000 / 1200 120' - 140' 75' 60' - 800 / 900 95' - 115' 55' - 70' kg E RS VE RE TO AU kg 2.5 1 Spun at rpm 65' - 75' 30' - 40' 650 2 4 5 4 8 67 4 The Control Panel CONDENSER DRYER DUAL TEMPERATURE TC 7102 W COTTON IRON DRY Spun at SYNTHETICS STORE DRY 800 / 900 1000 / 1200 STORE DRY Spun at LOW TEMP. START 800 / 900 1000 / 1200 650 kg 6 kg 2. 5 95' - 115' 85' - 105' 45' - 60' 40' - 55' 120' - 140' 60' - 75' 95' - 115' 55' - 70' kg 2.5 kg 1 65' - 75' 30' - 40' 6 AUTOREVERSE XTRACAPACITY DRYING TIME 1 2 3 4 5 6 1 Programme Chart This will help you to select the correct time for drying.



[You're reading an excerpt. Click here to read official ZANUSSI TC7102W user guide](http://yourpdfguides.com/dref/648539)
<http://yourpdfguides.com/dref/648539>

5 Water Full Indicator Light This light illuminates when the reservoir is full or improperly fitted. 2 Mains-On Light This lights up when the machine starts operating and goes out when the selector dial is on position "0" and when you open the door of the appliance or the small door covering the condenser and the water reservoir. 6 Time Selector Dial / On Off Switch The selector dial incorporates two drying cycles, one of up to 150 minutes at a high temperature for cotton and linen, and one of up to 100 minutes at a low temperature for synthetic fabrics. To set the machine to the selected time, turn the dial clockwise until the time you want coincides exactly with the pointer. NEVER attempt to turn the dial in an anticlockwise direction. When selecting the drying time you should remember that it includes a 10 minute cooling phase (position on the dial). This phase should not be shortened, stopped or avoided, as this could cause skin burns or damages to the laundry. 3 Low Temperature Button Press this button to reduce the temperature when drying particularly delicate cotton or linen items.

In this case you should select a longer drying time. 4 Start button Press this button to start the dryer after having selected the programme. If the door of the appliance is opened while the programme is running, this button must be pressed again after closing the door in order to restart the programme from the point at which it was interrupted. 5 Programme Chart Cottons Selector dial up to 150 minutes (high temperature section) Drying time in minutes for laundry spun at 800/900 rpm Cotton Towelling Shirts Sheets Hand towels Tablecloths Table napkins 6 kg Store dry (wardrobe dry) 2.5 kg Iron dry (not completely dry; suitable for ironing) 6 kg 2.5 kg 60 - 75 95 - 115 45 - 60 120 - 140 1000/1200 rpm 95 - 115 55 - 70 85 - 105 40 - 55 Type of laundry Degree of drying Amount of laundry Synthetics Selector dial up to 100 minutes (low temperature section) Drying time in minutes for laundry spun at a minimum speed of 650 rpm 65 - 75 30 - 40 Type of laundry Synthetics or mixed fabrics which do not require ironing. Degree of drying Amount of laundry 2.5 kg Store dry 1 kg Attention! Please follow the instructions on labels when drying mixed fabrics. Drying times are given as a guide only and vary according to the size of the load, the type of laundry, the degree of spinning prior to drying. Start by selecting a short drying time.

If necessary, perform an additional drying cycle afterwards. Experience will soon enable you to estimate the drying time needed for your usual laundry loads. It is advisable to take note of them. Size of load It is not necessary to weigh the laundry, if these instructions are followed: · Cottons, linen: full drum, but not overloaded. · Synthetics: half drum.

For a mixed load (cotton and synthetics, for example) select the drying time suitable for the most delicate fabrics and then increase it by approx 10 mins. 6 Operating Sequence Before using your tumble dryer for the first time, we recommend you place a few damp cloths inside the appliance and dry for 20 minutes. There may be dust inside a brand new tumble dryer. After each use · Clean the filters (see page 9). · Empty the water reservoir (see page 10). Important! If the drying programme has to be stopped before it reaches the end, we recommend that you turn the Time Selector Dial to position (cooling) and wait until the end of this phase before removing the laundry. This will avoid a build-up of heat inside the appliance. Modifying the programme To change a programme which is running, turn the Time Selector Dial clockwise to the required position. Drying 1. Connect the appliance. 2. Open the door. P1149 P1108 3. Load the items one at a time, shaking them out loosely. 4.

Close the door. Please check the laundry does not get caught between the door and filter. 5. Select the drying time by turning the Time Selector Dial clockwise. 6. If required, press the Low Temperature Button . 7. Press the Start Button : the machine starts operating. The mains-ON light comes on. The drum turns alternately in both directions during drying.

All drying programmes end with a 10 minute cooling phase (position on selector dial). The machine stops automatically at the end of this phase. The mains-on light goes out. 8. Immediately remove the laundry.

7 Hints & Tips on Drying Before placing articles of laundry in your tumble dryer, check the care labels to ensure they are recommended for tumble drying. Care Labels you may find on your laundry may be tumble dried normal drying (high temperature) delicate drying (low temperature) do not tumble dry Do not overload the appliance. Here is a list of the approximate weight of some common laundry items. Sheet 700 to 1000 g Pillowcase 100 to 200 g Tablecloth 400 to 500 g Table Napkin 50 to 100 g Kitchen Towel 70 to 120 g Linen Hand Towel 100 to 150 g Hand Towel 150 to 250 g 1159 P1155 9 Clean it with a brush and rinse it under the shower if necessary. The reservoir must be re-inserted correctly.

After inserting the reservoir the programme will continue after about 20 seconds. Handy tip: The condensed water may be used in a steam iron or to top up a battery, etc. In this case it must be filtered (e.g. @@@@Important! @@Re-fit the condenser, turn the red stops upwards and close the door.

@@@@@@@@@· The plug is not properly inserted in the power socket. · There is no current at the socket. · The main fuse or the fuse in the plug has blown. · The selector dial is not set correctly. @@@@· The filters and/or the condenser are clogged up.

· The water reservoir is full. · The room temperature is too high. @@· The low temperature function has been selected. · There is too much laundry inside the appliance. @@@@@@@@@@Your name, address and post code 2. Your telephone number 3. Clear and concise details of fault 4. @@5.

@@@@@@@@@This guarantee is in addition to your statutory and other legal rights. Home visits are made between 8. 30am and 5.30pm Monday to Friday. Visits may be available outside these hours in which case a premium will be charged. European guarantee If you should move to another country within Europe then your guarantee moves with you to your new home subject to the following qualifications: · The guarantee starts from the date you first purchased your product. · The guarantee is for the same period and to the same extent for labour and parts as exists in the new country of use for this brand or range of products.

· The guarantee relates to you and cannot be transferred to another user. · Your new home is within the European Community (EC) or European Free Trade Area. · The product is installed and used in accordance with our instructions and is only used domestically, i.e. a normal household.

· The product is installed taking into account regulations in your new country.



[You're reading an excerpt. Click here to read official ZANUSSI](http://yourpdfguides.com/dref/648539)

[TC7102W user guide](http://yourpdfguides.com/dref/648539)

<http://yourpdfguides.com/dref/648539>

Before you move please contact your nearest Customer Care Centre, listed below, to give them details of your new home. They will then ensure that the local Service Organisation is aware of your move and able to look after you and your appliances. France Senlis +33 (0)344 62 20 13 Germany Nurnberg +49 (0)800 234 7378 Italy Pordenone +39 (0)800 11 75 11 Sweden Stockholm +46 (0)20 78 77 50 UK Slough +44 (0)1753 219898 Exclusions This guarantee does not cover: · Damage or calls resulting from transportation, improper use or neglect, the replacement of any light bulbs or removable parts of glass or plastic. · Costs incurred for calls to put right an appliance which is improperly installed or calls to appliances outside the United Kingdom. · Appliances found to be in use within a commercial environment, plus those which are subject to rental agreements. · Products of Zanussi manufacture which are NOT marketed by Zanussi. 12 Installation Instructions It is dangerous to alter the specifications or attempt to modify this product in any way. Care must be taken to ensure that the appliance does not stand on the electrical supply cable. Any electrical work required to install this appliance should be carried out by a qualified electrician or competent person.

Technical Specifications DIMENSIONS Height Width Depth 85 cm (33.5") 60 cm (23.6") 58 cm (22.8") 230-240 V/50 Hz 2450 W (13A) Cotton, linen Synthetics 6 kg (13.2 lbs) 2.5 kg (5.5 lbs) 108 l Cotton, linen Cotton, linen Synthetics 4.37 kWh (6 kg store dry) 3.6 kWh (6 kg iron dry) 1.4 kWh (2,5 kg store dry) POWER SUPPLY VOLTAGE TOTAL POWER ADSORBED MAXIMUM RECOMMENDED LOAD DRUM VOLUME CONSUMPTIONS This appliance complies with the following E.

E.C. Directives: - 73/23 EEC of 19.2.73 (Low Voltage Directive) and subsequent modifications; - 89/336 EEC of 3.5.89 (Electromagnetic Compatibility Directive) and subsequent modifications. 13 Unpacking Warning ! Slide out the polythene bag containing the polystyrene block before using the appliance. Stacking kit (optional accessory) It should be possible to stack your new dryer on top of a front loading washing machine with a worktop depth of between 48 and 60 cm. The instructions are supplied with the kit.

Please contact your Local Service Force Centre for further advice. P1148 P1106 Should the appliance be moved, it must be transported vertically. Door reversal To make it easier to load or unload the laundry the door can be reversed. This operation must be carried out by qualified personnel. Please contact the nearest Zanussi Service Force Centre. Positioning It is recommended that, for your convenience, the machine is positioned close to your washing machine. The tumble dryer must be installed in a clean place, where dirt does not build up. Air must be able to circulate freely all round the appliance. Do not obstruct the front ventilation grille or the air intake grilles at the back of the machine. To keep vibration and noise to a minimum when the dryer is in use, it should be placed on a firm, level surface.

Once in its permanent operating position, check that the dryer is absolutely level with the aid of a spirit level. If it is not, raise or lower the feet until it is. The feet must never be removed. Do not restrict the floor clearance through deeppile carpets, strips of wood or similar. This might cause heat build-up which would interfere with the operation of the appliance. Important The hot air emitted by the tumble dryer can reach temperatures of up to 60°C. The appliance must therefore not be installed on floors which are not resistant to high temperatures. When operating the tumble dryer, the room temperature must not be lower than +5°C and higher than +35°C, as it may affect the performance of the appliance. Electrical connection Any electrical work required to install this appliance should be carried out by a qualified electrician or competent person. WARNING: THIS APPLIANCE MUST BE EARTHED.

The manufacturer declines any liability should this safety measure not be observed. Should the appliance power supply cable need to be replaced, this should be carried out by our Service Centre. Before switching on, make sure the electricity supply voltage is the same as that indicated on the appliance's rating plate. (See picture on page 4). The appliance is supplied with a 13amp plug fitted.

In the event of having to change the fuse in the plug supplied, a 13amp ASTA approved (BS 1363/A) fuse must be used. 14 Should the plug need to be replaced for any reason, proceed as described below. The wires in the mains lead are coloured in accordance with the following code: Green and Yellow - Earth Blue - Neutral Brown - Live GREEN & YELLOW E 13 A N L BROWN BLUE P1041 CORD CLAMP The wire coloured green and yellow must be connected to the terminal marked with the letter «E» or by the earth symbol or coloured green and yellow. @@@@ Ensure that the cut off plug is disposed of safely.

Permanent connection In the case of permanent connection it is necessary that you install a double pole switch between the appliance and the electricity supply (mains), with a minimum gap of 3mm between the switch contacts and of a type suitable for the required load in compliance with the current electrical regulations.

The switch must not break the yellow and green earth cable at any point. 15 From the Electrolux Group. The world's No. 1 choice. The Electrolux Group is the world's largest producer of powered appliances for kitchen, cleaning and outdoor use. More than 55 million Electrolux Group products (such as refrigerators, cookers, washing machines, vacuum cleaners, chain saws and lawn mowers) are sold each year to a value of approx. USD 14 billion in more than 150 countries around the world. © Electrolux plc 2002 .



[You're reading an excerpt. Click here to read official ZANUSSI](#)

[TC7102W user guide](#)

<http://yourpdfguides.com/dref/648539>