



# Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for ZANUSSI TCE7224. You'll find the answers to all your questions on the ZANUSSI TCE7224 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual ZANUSSI TCE7224  
User guide ZANUSSI TCE7224  
Operating instructions ZANUSSI TCE7224  
Instructions for use ZANUSSI TCE7224  
Instruction manual ZANUSSI TCE7224

## ZANUSSI

TUMBLE DRYER  
SECADORA  
SECADOR  
TCE 7224



GB ⚠ Unpacking: see page 5  
E ⚠ Desembalaje: ver página 17  
P ⚠ Desembalagem: ver página 29

125992320

INSTRUCTION BOOKLET  
INSTRUCCIONES PARA EL USO  
INSTRUÇÕES DE UTILISAÇÃO

GB  
E  
P



[You're reading an excerpt. Click here to read official ZANUSSI TCE7224 user guide](http://yourpdfguides.com/dref/651305)  
<http://yourpdfguides.com/dref/651305>

**Manual abstract:**

We recommend that you keep this instruction booklet for future reference and pass it on to any future owners. Transport damages After unpacking the machine please check it is not damaged. If in doubt, do not start it but contact your local Service Centre. The symbols you will see on some paragraphs of this booklet have the following meaning: The warning triangle emphasize information that is particularly important for your safety or correct functioning of the appliance. The information marked with this symbol provides additional instructions and practical tips on the use of the appliance. Tips and information about economical and ecological use of the machine are marked with this symbol. Our contribution to the protection of the environment: we use recycled paper. Contents Important safety information ...

.....  
.....  
.....3 Disposal .

.....  
.....  
.....  
.....  
.....  
.....  
.....

.3 Tips for environmental protection .....  
...4 Technical specifications..

.....  
.....  
.....

4 Description of the appliance .....

.....

.....4 Installation ...

.....  
.....  
.....  
.....  
.....  
.....

.....5 Unpacking .....

.....  
.....  
.....  
.....  
.....  
.....

.....5 Positioning .....

.....  
.....  
.....  
.....  
.....  
.....

.....5 Electrical connection .....

.....  
.....  
.....

.....  
.....  
...5 Stacking kit.  
.....

.....  
.....  
.....  
.....

.....  
.....  
...5 Door reversal .  
.....

.....  
.....  
.....  
.....

.....  
.....  
5 Use .....  
.....

.....  
.....  
.....  
.....

.....  
.....  
.....  
.....

.....6 The control panel ...

.....  
.....  
.....  
.....

.....  
...6-7 Programme chart ..

.....  
.....  
.....  
.....

.....  
.....  
.....  
.....

...8 Operating sequence.....

.....  
.....  
.....  
.....

.....  
.....  
...9 Useful hints .  
.....

.....  
.....  
.....  
.....

.....  
.....  
.....  
.....

10 Maintenance and Cleaning .....

.....

.....11 External cleaning .

.....

.....

.....

.....

.....

.....

.....11 Cleaning the door...

.....

.....

.....

.....

.....

.....

11 Cleaning the filters .....

.....

.....

.....

.....

.....

.11 Cleaning the condenser unit .....

.....

.....

.....

.11 Emptying the water reservoir .....

.....

.....

.....

.12 Cleaning the air intake grille.....

.....

.....

.....

...12 Cleaning the drum .....

.....

.....

.....

.....

.....

....12 Something not working? .

.....

.....

.....

..13 2 Important safety information These warnings have been provided in the interest of safety. You MUST read them carefully before installing or using the appliance. Installation Any electrical work required to install this appliance should be carried out by a qualified electrician or competent person. Care must be taken to ensure that the appliance does not stand on the electrical supply cable. If the machine is situated on a carpeted floor, please adjust the feet in order to allow air to circulate freely. General safety It is dangerous to alter the specifications or attempt to modify this product in any way. Under no circumstances should you attempt to repair the machine yourself. @@ Contact your local Service Centre. @@@@ Always unplug the appliance after use. Clothes which are dripping wet should not be placed in the dryer. @@@As these substances are volatile, they could cause an explosion. Tumble dry only items washed with water. Please make sure that no gas lighters have accidentally been left in pockets of garments to be loaded into appliance.

Do not dry canvas shoes or sports shoes, as they could get stuck between the door and the drum, thus blocking this latter. Leave the door slightly ajar when the appliance is not being used. This will allow the seal to be preserved. Clean fluff filters after using the tumble dryer. To prevent fire risks, do not use the appliance if the fluff filters are damaged or without filters. Do not allow fluff to accumulate around the dryer. Children are often not aware of how dangerous electrical appliances can be. When the machine is working, children should be carefully supervised and not be allowed to play with the appliance. The

packaging components (e.g.

plastic film, polystyrene) can be dangerous to children - danger of suffocation! Keep them out of children's reach. Make sure that children or pets do not climb into the drum. When the appliance is to be scrapped, cut off the electrical supply cable and destroy the plug with the remaining cable. Disable the door catch in order to prevent children from becoming trapped inside while playing. Disposal Packaging materials The materials marked with the symbol

recyclable.

are This means that they can be recycled by disposing of them properly in appropriate collection containers. Machine Use authorised disposal sites for your old appliance. Help to keep your country tidy! 3 ENGLISH Tips for environmental protection To save energy and to help protect the environment, we recommend that you follow these hints: Try to load the maximum capacity of the machine as small loads are uneconomical. Always load well spun laundry.

The higher the spin speed, the lower the electricity consumption and the shorter the drying times.

Do not over-dry laundry, this avoids creasing and saves energy. Select the drying programme according to the type of laundry and the required degree of dryness. To utilize the maximum load, laundry which is to be dried ready to put away (store dry) can be dried together with items to be ironed. To do this, select the programme for iron-dry, remove the iron-dry items at the end of the programme and then finishdry the rest of the load. Clean the filters regularly to avoid excessive drying times and high electricity consumption. Ventilate the room well. The room temperature should not exceed +35C during drying.

Technical specifications DIMENSIONS: Height Width Depth 85 cm 60 cm 58 cm 220/230 V/50 Hz 2200 W 10 A Cotton, linen Synthetics Cotton, linen Cotton, linen Synthetics 6 kg 2.5 kg 3.64 kWh (5 kg store dry) 3 kWh (5 kg iron dry) 1.

4 kWh (2.5 kg store dry) ELECTRICAL CONNECTION: MAX. POWER ABSORBED: MIN. FUSE RATING: MAX. DRYING CAPACITY: CONSUMPTION: This appliance complies with the following E.E.C. Directives: - 73/23 EEC of 19.2.73 (Low Voltage Directive) and subsequent modifications; - 89/336 EEC of

3.

5.89 (Electromagnetic Compatibility Directive) and subsequent modifications. Description of the appliance TCE 7224 A B 0 L 30 60 90 1 3 D C K E R SER DRYE CONDENSER RO CT ELE OR NS SE A B C D E F G H J K L E RS VE RE TO AU 1 Control panel 2 Water reservoir 3 Fluff filters 4 Rating Plate 5 Consenser Unit 6 Adjustable feet 4 2 3 6 5 4 J H G F Installation Warning! Unpacking Slide out the polythene bag with the polystyrene stuffing before using the appliance. Electrical connection This machine is designed to operate on a 220-230 V, single-phase, 50 Hz supply. Check that your domestic electrical

installation can take the maximum load required (2.

2 kW), also taking into account any other appliances in use. Connect the machine to an earthed socket, in accordance with current wiring regulations. The manufacturer declines any responsibility for damage or injury through failure to comply with the above safety precaution. Should the appliance power supply cable need to be replaced, this must be carried out by our Service Centre. P1106 Important! Should the appliance be moved, it must be transported vertically. The power supply cable must be accessible after installing the machine. Positioning It is recommended that, for your convenience, the machine is positioned close to your washing machine. The tumble dryer must be installed in a clean place, where dirt does not build up. Air must be able to circulate freely all round the appliance. Do not obstruct the front ventilation grille or the air intake grilles at the back of the machine. To keep vibration and noise to a minimum when the dryer is in use, it should be placed on a firm, level surface.



[You're reading an excerpt. Click here to read official ZANUSSI](#)

[TCE7224 user guide](#)

<http://yourpdfguides.com/dref/651305>

@@If it is not, raise or lower the feet until it is. The feet must never be removed. @@@@This operation must be carried out by qualified personnel. @@@@The corresponding pilot light comes on.

This option can also be used for time controlled drying. The dryer heats at 1400 W instead of 2000 W. @@@The corresponding light illuminates. This light indicates that the appliance is in the cooling phase. @@If light or is flashing, this means that the Start button needs to be pressed again for the programme to resume. "End of programme" light This light flashes at the end of the cooling phase and during the anti-creasing phase programme or time. 7. @@8. @@The drum turns alternately in both directions during drying. @@You may remove the laundry after this phase.

9. @@@@Lights and flash alternately. @@Lights and flash and the mains-ON light stays on. 9 ENGLISH Useful hints Try to load to the maximum capacity of the machine as small loads are uneconomical. For information, here is a list of the average weights of some common laundry items.  
Sheet Tablecloth Kitchen towel Table napkin Towelling hand towel Bathrobe Man's shirt Pillowcase Man's pyjamas Ladies' nightdress 700 - 1000 g 400 - 500 g 70 - 120 g 50 - 100 g 150 - 250 g 1000 - 1500 g 200 - 300 g 100 - 200 g 400 - 500 g 200 - 250 g Avoid drying dark clothes with light coloured fluffy items such as towels as they could attract the fluff. The laundry must be thoroughly spun before tumble drying. Easy-care items, too, e.g. shirts, should be briefly pre-spun before drying (depending on crease resistance approx. 30 seconds or using the special brief spin programme of your washing machine). Knitted textiles (knitted underwear) may shrink a little during drying. Please do not overdry items of this type. It is advisable to allow for shrinkage when choosing the size of new purchases. You can also put starched items into your dryer. However, to achieve the desired starched effect, choose the programme "iron dry". To remove any starch residues, wipe out the internal drum after drying with a moist cloth and then rub it dry. To avoid a static charge when drying is completed, use either a fabric softener when you are washing the laundry or a fabric conditioner specifically for tumble dryers. Remove the laundry when the dryer has finished drying. If individual items are still damp after drying, set a brief post-drying time, but at least 30 minutes.

This will be necessary particularly for multilayered items (e.g. collars, pockets, etc.). Never tumble dry the following: Particularly delicate items such as net curtains, woollen, silk, fabrics with metal trim, nylon tights, bulky materials such as anoraks, blankets, eiderdowns, sleeping bags, feather quilts and any items containing rubber foam or materials similar to rubber foam. Always follow the instructions on garment labels: may be tumble dried normal drying (high temperature) delicate drying (low temperature) do not tumble dry Close pillowcases and covers with fasteners to prevent small laundry items getting tangled inside them. Close press studs, zips and hooks and tie belts and apron strings. Sort laundry according to type and degree of drying required. Do not over-dry laundry, this avoids creasing and saves energy. 10 Maintenance and Cleaning You must disconnect the appliance from the electricity supply, before you can carry out any cleaning or maintenance work.

If necessary the filters can be cleaned with warm water using a brush. In this case remove the filter in the door opening as per picture (it can be positioned with the tooth facing to the left or to the right). 800 / 900 1000 / 1200 External cleaning kg 5 kg 2,5 70' - 90' 35' - 50' 65' - 85' 30' - 45' 80' - 100' 70' 55' - 800 / 900 1000 / 1200 75' - 95' 50' - 65' kg 2,5 kg 1 50' - 60' 30' - 35' 650 E RS VE RE TO AU Use only soap and water and then dry thoroughly. Important: do not use methylated spirit, diluents or similar products. Cleaning the door Clean periodically the interior part of the door to remove any fluff from the seals around the filter.

Accurate cleaning ensures correct drying. kg 5 kg 2,5 P1152 Do not use the appliance without filters. 70' - 90' 35' - 50' 800 / 900 1200 1000 / 65' - 85' 30' - 45' 80' - 100' 70' 55' - 800 / 900 1000 / 1200 kg 2,5 kg 1 75' - 95' 50' - 65' 50' - 60' 30' - 35' 650 E RS VE RE TO AU Cleaning the condenser unit Clean the air condenser periodically, 3 or 4 times a year depending on how frequently the dryer is used. The condenser is situated at the lower part of the cabinet behind a small door. To open the door, push the catch as per picture.

P1150 Cleaning the filters Your dryer will only function well if the filters are clean. The filters collect all the fluff which accumulates during drying and they must therefore be cleaned at the end of each programme, before removing the laundry, with a damp cloth. 800 / 900 1000 / 1200 P1153 kg 5 kg 2,5 70' - 90' 35' - 50' 65' - 85' 30' - 45' 80' - 100' 70' 55' - 800 / 900 1000 / 1200 75' - 95' 50' - 65' kg 1 kg 2,5 50' - 60' 30' - 35' 650 E RS VE RE TO AU To pull out the condenser, first turn the two red stops downwards and then remove the condenser unit holding it at the handle. P1110 P1151 The filter in the inner door must be removed for cleaning. Do not be alarmed by the amount of fluff. It is not due to excessive wear caused by the dryer. All fabric loses fluff when drying but it goes un-noticed in the air. In a tumble dryer it simply collects in the filter. P1154 P1155 Clean it with a brush and rinse it under the shower if necessary. P0639 11 ENGLISH Also clean the outside, removing all fluff.

Clean the rubber seal round the condenser cabinet and in the inner part of the small door with a damp cloth. Re-fit the condenser, turn the red stops upwards and close the door. Important! Do not use pointed objects or utensils to clean the spaces between the plates, as this could damage the condenser and make it permeable. Cleaning the air intake grille Using a vacuum cleaner remove the fluff from the air intake grille at the back of the appliance. Do not use this appliance if the condenser has not been fitted. P1162 Cleaning the drum Emptying the water reservoir Water extracted from the laundry condenses inside the machine and is collected in a reservoir. The reservoir must be emptied after each drying cycle to ensure efficient operation when the machine is next used. @@The buzzer will sound for 1 minute. The reservoir can be emptied even in the middle of a programme.



[You're reading an excerpt. Click here to read official ZANUSSI TCE7224 user guide](http://yourpdfguides.com/dref/651305)  
<http://yourpdfguides.com/dref/651305>

@@@@@Handy tip: The condensed water may be used in a steam iron or to top up a battery, etc.

In this case it must be filtered (e.g. through a coffee filter). 12 Something not working? ENGLISH Before contacting your local Service Centre, please make the following checks: Problem The dryer does not work: Possible cause The door(s) is(have) open. The plug is not fitted into the wall socket.

There is no electricity supply from the wall socket. The selector dial is not set correctly. The water reservoir is full or not correctly inserted. The start button has not been depressed. The filters are clogged.

The dryer does not dry properly: The condenser is clogged. The water reservoir is full. The selected cycle is not suitable for the laundry. Insufficient drying time. The laundry has not been spun properly. The low temperature function has been selected. Excessive laundry load. The dryer is not correctly installed. If, after the above checks, there is still a fault, call your local Service Centre. Please make sure you give the model and serial number of the appliance.

This information can be found on the rating plate (see picture on page 4 ). 13 .



[You're reading an excerpt. Click here to read official ZANUSSI](#)

[TCE7224 user guide](#)

<http://yourpdfguides.com/dref/651305>