



# Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for ZANUSSI TL 522 C. You'll find the answers to all your questions on the ZANUSSI TL 522 C in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual ZANUSSI TL 522 C  
User guide ZANUSSI TL 522 C  
Operating instructions ZANUSSI TL 522 C  
Instructions for use ZANUSSI TL 522 C  
Instruction manual ZANUSSI TL 522 C

## INSTRUCTION BOOK - HASZNÁLATI KÉZIKÖNYV - NÁVODOVÁ PŘÍRUČKA

WASHING MACHINE  
MOSÓGÉP  
PRAČKA  
TL 522 C

ZANUSSI

### TECHNICAL INFORMATION

DIMENSIONS	Height with panel	895 mm
	Height without panel	850 mm
	width depth	397 mm 600 mm
POWER SUPPLY VOLTAGE / FREQUENCY		230 V / 50 Hz
TOTAL POWER ABSORBED		2300 W (10 A)
HEATER RATING		1950 W
WATER PRESSURE	minimum	5 N/cm <sup>2</sup> (0.5 kg/cm <sup>2</sup> )
	maximum	80 N/cm <sup>2</sup> (8 kg/cm <sup>2</sup> )
MAXIMUM LOAD	cotton	5 kg
	synthetics	2,5 kg
	wool	1 kg
SPINNING SPEED		500 rpm

This appliance complies with the following EC Directive:  
- 72/23/EEC of 19.02.1973 - Low Voltage Directive  
- 89/336/EEC of 03.05.1989 (including Amendment Directive 92/31/EEC) - EMV Directive

### SAFETY INSTRUCTIONS

You must read the whole of this instruction book before you use the appliance. Follow the advice carefully. Keep the book for future reference. If you sell or give away the appliance, make sure that the book is passed to the new owner. The following warnings are provided in the interest of overall safety. You must read them before the appliance is installed or used.

**Use**

- This appliance is designed to be used by adults. Children should not be allowed to touch the controls or play with the product.
- It is dangerous to modify the specifications of this appliance in any way.
- Always unplug the appliance and turn off the water after use.
- Only wash fabrics with an end-designed to be machine washed. If in doubt, follow the instructions you find on the label of the item itself.
- Place small metal rings or edged plastic rings in a net or bag.
- Make sure that all pockets are empty. Hard, sharp objects such as coins, safety pins, nails, screws or stones, can cause extensive damage.
- Do not machine wash fabrics which are saturated with petroleum products. If volatile cleaning fluids have been used, make sure that they are thoroughly removed from the fabrics before they are placed in the appliance.
- Small and delicate objects (e.g. baby socks, stockings) can be easily washed inside a small pillowcase with a zip fastener or in larger socks.
- Use only the recommended quantities of fabric conditioner.
- Before cleaning, care and maintenance, ensure that the machine is switched off.

**Installation**

- Any electrical work required to install this appliance should be carried out by a qualified electrician or competent person.
- Any plumbing work required to install this appliance should be carried out by a qualified plumber or competent person.
- Make sure that the appliance does not stand on its electrical supply cable.

**Safety**

- This appliance is heavy. Care should be taken when moving it.
- All packaging and transit bolts must be removed before the appliance is used. Serious damage may occur if this is not done.
- If your washing machine is in a room subject to temperatures below freezing, the water must be removed from the machine should the danger of freezing be expected.
- Lid: your washing machine is equipped with a safety, avoiding the switching of the appliance when the flaps of the lid are opened; the closure of the lid is so impossible. An electronic safety prohibits the opening of the lid when the washing machine works and 2 minutes after the end of the programme.
- Washing motor: in case of mechanical overloading, overvoltage, arithmic safety protects automatically the motor.
- Heating: the heating can only begin when the water quantity necessary for the washing is in the tub. This safety is useful when there is a water break-up or if you forget to open the water inlet hose.
- When disposing of the machine in a proper manner, destroy the door locks and cut off the power supply cord.

**Environmental Information**

All materials marked by the symbol  $\Delta$  are biodegradable. They can be disposed of without danger or burn in rubbish incinerators. In order to save water and energy savings and to act in an environmentally conscious manner, we advise to follow the below instructions:

- Use only the programmes with prewash for very soiled laundry.
- Use only the programmes with prewash for very soiled laundry.
- Savings on detergent and for the environment may also be achieved with medium to hard water you add sufficient detergent for soft water and then add separately a softener. This releases water of a certain amount of chemicals.



You're reading an excerpt. [Click here to read official ZANUSSI TL 522 C user guide](http://yourpdfguides.com/dref/1180883)  
<http://yourpdfguides.com/dref/1180883>

**Manual abstract:**

02.1973 - Low Voltage Directive - 89/336/EEC of 03.05.1989 (including Amendment Directive 92/31/EEC) - EMV Directive. SAFETY INSTRUCTIONS You must read the whole of this instruction book before you use the appliance. Follow the advice carefully. Keep the book for future reference. If you sell or give away the appliance, make sure that the book is passed to the new owner. The following warnings are provided in the interest of overall safety. You must read them before the appliance is installed or used.

This appliance is heavy. Care should be taken when moving it. All packaging and transit bolts must be removed before the appliance is used. Serious damage may occur if this is not done. If your washing machine is in a room subject to temperatures below freezing, the water must be removed from the machine should the danger of freezing be expected.

Use This appliance is designed to be used by adults. Children should not be allowed to touch the controls or play with the product. It is dangerous to modify the specifications of this appliance in any way. Always unplug the appliance and turn off the water after use. Only wash fabrics with are designed to be machine washed.

If in doubt, follow the instructions you find on the label of the item itself. Place small metal rings or edged plastic rings in a net or bag. Make sure that all pockets are empty. Hard, sharp objects such as coins, safety pins, nails, screws or stones can cause extensive damage. Do not machine wash fabrics which are saturated with petroleum products. @@Small and delicate objects (e.g. @@Use only the recommended quantities of fabric conditioner. @@@@Washing motor : in case of mechanic overloading, overvoltage, a thermic safety protects automatically the motor. Heating : the heating can only begin when the water quantity necessary for the washing is in the tub.

This safety is useful when there is a water break-up or if you forget to open the water inlet hose. @@@@Take care to do not overload the drum. - Use only the programmes with prewash for very soiled laundry. - Savings on detergent and for the environment may also be achieved if with medium to hard water you add sufficient detergent for soft water and then add separately a softener. This relieves our waters of a certain amount of chemicals. Installation Any electrical work required to install this appliance should be carried out by a qualified electrician or competent person. Any plumbing work required to install this appliance should be carried out by a qualified plumber or competent person. Make sure that the appliance does not stand on its electrical supply cable. -1- INSTALLATION BE CAREFUL : The parts protecting the inner components of the machine during transit are red. They must all be removed before using your machine for the first time.

In order to avoid possible damage to the appliance, it is indispensable to take away the polystyrene basis, the two red loosened spacers at the back of the appliance and the polystyrene wedge (follow the instructions of the unpacking sheet). Close imperatively the 2 holes left by the 2 spacers with the plugs provided with the appliance ; do not forget to put on the central cover. Installation The floor must be clean and dry, free from floor polish and other greasy substances, so that the machine does not slide about. Do not use any grease as lubrication. @@@@These openings ensure a good ventilation of your appliance.

@@@@@2) The meter, the fuses, the supply line and the wall socket are suitable to carry the maximum load required by the machine (2,3 kW). Very important : The washing machine is provided with a feeding wire with earth connection: it must be connected to a plug like that is provided with a good earth connection. The replacing of the power cord must only be realized by the After Sales Service. The manufacturer declines any responsibility where the previous recommendations are not followed. Levelling Water connection Connect the water inlet hose to a cold water tap with a 3/4" gas threaded orifice, after having inserted the rubber sealing washer into the hose collar.

If the water connection is made onto new pipes B or onto pipes which have not been used for a long time, it is advisable to run off a certain amount of water before connecting the machine. Place the curved end of the outlet hose into a drain pipe having a height between 70 and 100 cm from floor level or secure it to a sink or bath tub. Make sure that the drain hose is firmly secured so that it will not slip out or fall down from its position. The water should drain freely and, consequently, the drain hose should not be choked or placed in such a way as to obstruct the normal water flow. If an extension hose is required, remember that it might cause a malfunction in the drain pump, particularly if the extension has a length in excess of 1 meter or if the diameter of the extension is smaller than the diameter of the original drain hose. Carefully level the machine adjusting the levelling feet located at the front of the base and then tighten the lock nuts at the top of the feet. -2- USE OF YOUR APPLIANCE The control panel Never turn the programme selector when the appliance is working. TL 522 C 67 8 9 4 10 3 11 2 1 12 5 50 40 30 60 70 °C 80 90 1 2 " " 3 Detergent dispenser Symbols ( ) Washing powder or liquid detergent for programmes with pre-wash (1). ( ) Washing powder or liquid detergent for the main wash (2) ( ) Bleach compartment (3) ( ) Liquid additives (fabric softener and conditioner.

.) (4). @@Turn the programme selector clockwise to select the chosen programme. @@@@A 4. @@Do not exceed the MAX level. 5. Press the half load pushbutton " required. 6. @@@@Starting of the programme 2. @@Do not exceed the MAX level. @@@@The synthetic programmes end by a rinse hold " ". @@Depress the on/off pushbutton " " before doing your choice. After each wash, depress the on/off pushbutton. Press off the pushbutton if necessary ; unplug the machine from the wall socket ; turn off the water tap. 3.

Add the bleach agent You may use a bleach agent in all the washing programmes. However, make sure that the fabric withstands the treatment. Bleach is automatically washed down into the drum. @@Make sure tamable or toxic substances. @@Knitwear and woollens should be dried flat away from direct sunlight.

@@@@@Powder detergents. @@@@"Concentrated" powder detergents Pour the concentrated powder detergent into the main wash ( ) compartment. Avoid selecting programmes including prewash when concentrated detergents are used. Liquid detergents Using the new automatic dispenser for liquid detergents, it is possible to use a liquid detergent for main wash phases. Liquid detergents can be used instead of powder detergents particularly for lightly soiled laundry and for medium or low temperature washing programmes, while it is better to use a powder detergent for high temperature washing programmes.



[You're reading an excerpt. Click here to read official ZANUSSI TL](#)

[522 C user guide](#)

<http://yourpdfguides.com/dref/1180883>

*Liquid additives Any liquid additives for softening the laundry must be poured into the compartment of the detergent dispenser drawer before starting the programme. The addition of water softener is particularly useful when drying the clothes in a tumble dryer after washing to avoid a static charge. Bleach You may use a bleach agent in all the washing programmes. However, make sure that the fabric withstands the treatment. Bleach is automatically washed down into the drum.*

*@@@wash Max. wash Max. wash Max. @@200°C Warm iron max. 150°C Lukewarm iron max. 110°C Do not iron : spinning for cotton programmes ( : synthetics programmes ) DRY CLEANING Dry cleaning Dry cleaning in perchlorethylene petrol, Dry cleaning in petrol, pure Do not dry clean : rinse hold : draining : wool symbol hightemp. lowtemp. DRYING Flat On the line On clothes hanger Do not tumble Tumble dry dry -6- CLEANING AND MAINTENANCE Make sure that the machine is unplugged and the water tap turned off before undertaking any kind of maintenance. Bodywork The outside of the machine can be cleaned with warm water and a neutral non-abrasive household detergent. Wipe with clean water and dry after cleaning. Important : do not use methylated spirit, diluents or similar products. It is advisable, from time to time, to carry out a complete cycle without a washing load, adding a decalcifying product. fig.1 fig.2 The detergent dispenser The detergent dispenser is very easy to remove. Just turn the two screws 1/4 of a turn and slide the box towards the top (fig.1 and fig.2). Clean the detergent dispenser under running water with a brush or a piece of rag (fig.3). Reposition the detergent dispenser into the lid and refix the two screws (fig.4 and fig.5). fig.4 fig.5 fig.3 The drain filter The machine has got a mecanic filter located on the front part to collect lint and small objects (toothpins, coins, pins, etc) inadvertently left in the clothes. It is essential that this filter is cleaned regularly. Frequency of cleaning depends on the type of articles washed (cleaning should be more frequent if the articles have no hem and tend to fray). .*



[You're reading an excerpt. Click here to read official ZANUSSI TL 522 C user guide](http://yourpdfguides.com/dref/1180883)  
<http://yourpdfguides.com/dref/1180883>