



 
Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for ZANUSSI W1002. You'll find the answers to all your questions on the ZANUSSI W1002 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual ZANUSSI W1002
User guide ZANUSSI W1002
Operating instructions ZANUSSI W1002
Instructions for use ZANUSSI W1002
Instruction manual ZANUSSI W1002

ZANUSSI

WASHER-DRYER
PRALKO SUSZARKA
PRAČKA SE SUŠIČKOU
PRAČKA SO SUŠIČKOU
MOSÓ- SZÁRÍTÓGÉP
W 1002



INSTRUCTION BOOKLET
INSTRUKCJA OBSŁUGI
NÁVOD K OBSLUZE
NÁVOD NA OBSLUHU
HASZNÁLATI ÚTMUTATÓ

132999610

GB

PL

CZ

SK

H



[You're reading an excerpt. Click here to read official ZANUSSI W1002 user guide](http://yourpdfguides.com/dref/665876)
<http://yourpdfguides.com/dref/665876>

Manual abstract:

Our contribution to the protection of the environment: we use environmentally friendly paper. 2 Contents Warnings Disposal 4-5 5 International wash code symbols Operating sequence Washing only Drying only Automatic washing and drying Washing programmes Drying programmes 14 15-17 15-16 17 17 18-19 20 Tips for environmental protection 5 Technical specifications Installation Unpacking Positioning Water inlet Water drainage Electrical connection 6 7 7 7 7 8 8 Maintenance Bodywork Detergent dispenser drawer Drain filter Water inlet filter Emergency emptying out Frost precautions 21 21 21 21 21 22 22 Description of the appliance Detergent dispenser drawer 9 9 Something not working? 23-24 Use Control panel Controls Washing hints Sorting the laundry Temperatures Before loading the laundry Maximum loads Laundry weights Removing stains Detergents and additives Drying hints Load Garments not suitable for drying Drying symbols on garment labels Duration of the drying cycle Fibre residue Additional drying 10 10 10 11 11 11 11 11 11 12 13 13 13 13 13 3 ENGLISH Warnings The following warnings are provided in the interests of overall safety. You must read them carefully before installing or using the appliance. Installation · All internal packing must be removed before using the appliance. Serious damage may be caused to the machine or adjacent furniture if the protective transit devices are not removed or are not completely removed. Refer to the relevant paragraph in the instruction book. · Any electrical work required to install this appliance must be carried out by a qualified electrician. · Any plumbing work required to install this appliance must be carried out by a qualified plumber. · After having installed the machine, check that it is not standing on its electrical supply cable. · If the appliance is placed on a carpeted floor, ensure that air can circulate freely between the feet and the floor. · Use only the recommended quantities of fabric softener. An excessive amount could damage the laundry. · Leave the porthole door slightly ajar when the appliance is not in use. This preserves the door seal and prevents the formation of musty smells. · Always check that water has emptied out before opening the door. · If not, drain the water following the instructions in the instruction book. · Always unplug the appliance and shut the water tap after use. General safety · Repairs to the machine must be carried out only by qualified personnel. Repairs carried out by inexperienced persons could cause serious danger. Contact your local Service Centre. · Never pull the power supply cable to remove the plug from the socket; always take hold of the plug itself. @@@@ Follow the instructions on each garment label. · Do not overload the appliance. Follow the instructions in the instruction book. · Make sure that all pockets are empty. Objects such as coins, safety pins, pins and screws can cause extensive damage. · Do not machine wash garments saturated with petroleum, methylated spirits, trichlorethylene, etc. If such fluids have been used to remove stains prior to washing, wait until they have completely evaporated from the fabric before placing garments in the appliance. · Place small items such as socks, belts, etc. in a cloth bag or pillowcase to prevent them getting trapped between the drum and the tub. · If you use a liquid detergent with a dispenser which has to be placed directly in the drum, remember to remove this dispenser before drying. 4 Child safety · Children are often not aware of how dangerous electrical appliances can be. When the machine is working, children should be carefully supervised and not be allowed to play with the appliance. · The packaging components (e.g. plastic film, polystyrene) can be dangerous to children - danger of suffocation! Keep them out of children's reach. · Keep all detergents in a safe place out of children's reach. · Make sure that children or pets do not climb into the drum. · When the appliance is to be scrapped, cut off the electrical supply cable and destroy the plug with the remaining cable. Disable the door catch in order to prevent children from becoming trapped inside while playing. Disposal Packaging materials The materials marked with the symbol recyclable. >PE<=polyethylene >PS<=polystyrene >PP<=polypropylene This means that they can be recycled by disposing of them properly in appropriate collection containers. are Machine Use authorised disposal sites for your old appliance. Help to keep your country tidy! Tips for environmental protection To save water, energy and to help protect the environment, we recommend that you follow these tips: · Normally soiled laundry may be washed without prewashing in order to save detergent, water and time (the environment is protected too!). · The machine works more economically if it is fully loaded (for both washing and drying cycles). · The machine will consume less energy if the laundry is adequately spun before being dried. · With adequate pre-treatment, stains and limited soiling can be removed; the laundry can then be washed at a lower temperature. @@@@1. @@@@ Carefully level by screwing the adjustable feet in or out. @@@@3. @@@@The inlet hose must not be lengthened. If it is too short and you do not wish to move the tap, you will have to purchase a new, longer hose specially designed for this type of use. P1068 P1066 4. Set the machine upright and remove the two remaining bolts from the back. 5. Pull out the three plastic spacers from the holes into which the bolts were fitted. 6. Plug the open holes with the plugs which are supplied with the instruction booklet. P0256 P0020 7 ENGLISH Water drainage The end of the drain hose can be positioned in three ways: Hooked over the edge of a sink using the plastic hose guide supplied with the machine. In this case, make sure the end cannot come unhooked when the machine is emptying. This could be done by tying it to the tap with a piece of string or attaching it to the wall. Electrical connection This machine is designed to operate on a 220-230 V, single-phase, 50 Hz supply. Check that your domestic electrical installation can take the maximum load required (2.2 kW), also taking into account any other appliances in use. Connect the machine to an earthed socket. The manufacturer declines any responsibility for damage or injury through failure to comply with the above safety precaution. Should the appliance power supply cable need to be replaced, this should be carried out by our Service Centre. The power supply cable must be easily accessible after installing the machine. P0022 In a sink drain pipe branch. This branch must be above the trap so that the bend is at least 60 cm above the ground.



[You're reading an excerpt. Click here to read official ZANUSSI W1002 user guide](http://yourpdfguides.com/dref/665876)
<http://yourpdfguides.com/dref/665876>

Directly into a drain pipe at a height of not less than 60 cm and not more than 90 cm. The end of the drain hose must always be ventilated, i.e. the inside diameter of the drain pipe must be larger than the outside diameter of the drain hose. The drain hose must not be kinked.

Run it along the floor; only the part near the drainage point must be raised. P0023 8 Description of the appliance 1 Detergent dispenser drawer 2 Programme chart 3 Control panel 4 Drain filter 5 Adjustable feet Detergent dispenser drawer Prewash Main wash Fabric softener, starch C0063 9 ENGLISH Use Control panel 1 Programme guide 2 Drying time selector dial Graduated up to 120 mins for cottons (black section) and synthetics (grey section), this dial allows you to select the desired drying time according to the type and quantity of laundry and the required degree of dryness. Turn the dial clockwise only.

Cooling phase To allow the laundry to cool down, a cooling phase starts automatically 10 minutes before the end of drying and this phase must in no circumstances be reduced or interrupted. 5 On/Off button By depressing this button the machine starts operating.

When depressed again, the machine stops. 6 Spin speed reduction button By depressing this button the spin speed is reduced from 1000 to 650 rpm on programmes for cotton and linen and from 850 to 650 rpm on programme J (short spin for synthetics, delicates and wool). 7 Temperature selector dial Turn this dial clockwise or anti-clockwise to select the required temperature. Position means that the machine will wash with cold water. 3 Drying indicator light This light illuminates when the machine is drying. 8 Programme selector dial 4 Mains-on light This light illuminates when the machine starts working and goes out when the ON/OFF button is released. Turn the dial clockwise to select the required wash and drying programme. @@Sort the laundry as follows: whites, coloureds, synthetics, delicates, woollens. Laundry weights The following weights are indicative: bathrobe napkin quilt cover sheet pillow case tablecloth towelquantities to avoid waste and protect the environment. @@@@max.

@@The usual drying times are indicated in the programme chart. @@@@Warning! @@wash temperature 95°C Delicate wash 60 Max. wash temperature 60°C 40 Max. wash temperature 40°C 30 Max. @@@@Depress button if required 5. @@Place the laundry in the drum Open the door. Place the laundry in the drum, one item at a time, shaking them out as much as possible. Close the door. M0045 6. Select the required programme Turn the programme selector dial clockwise to the desired position.

B P0004 2. Measure out the detergent Pull out the dispenser drawer until it stops. @@@@At the end of the programme The machine stops automatically. If you have selected a proMax. @@@@To empty out the water, select programme J or P.

@@Important! @@@@Bodywork Clean the outside of the machine with warm water and a detergent used to handwash dishes. Rinse with clean water and dry with a soft cloth. Important: do not use methylated spirits, solvents or similar products to clean the bodywork. 3. Drain filter The drain filter collects threads and small objects inadvertently left in the laundry.

Check regularly that the filter is clean. Open the filter door. Place a container under the filter and unscrew it. 2. Detergent dispenser drawer After a while, detergents and fabric softeners leave deposits in the drawer. Clean the drawer from time to time by rinsing it under a running tap. To remove the drawer from the machine, press the button in the rear left-hand corner. To facilitate cleaning, the top part of the additive compartments can be removed. P0011 P0132 Pull out the filter. Clean the filter under a running tap, then refit it, screwing it fully in.

C0066 C0067 Detergent can also accumulate inside the drawer recess: clean it with an old toothbrush. Refit the drawer after cleaning. P0133 P0040 4.

@@Turn off the water tap. Unscrew the hose from the tap. @@@@Place the end of the drain hose and that of the inlet hose in a bowl placed on the floor. · Select programme "P" (draining) and run it until the machine stops. · Switch the machine OFF by depressing button · Screw the water inlet hose back on and put the drain hose back in its place. By doing this, any water remaining in the machine is removed, avoiding the formation of ice and, consequently, breakage of the affected parts. When you use the machine again, make sure that the ambient temperature is above 0°C.

· 22 Something not working? Problems which you can resolve yourself. Problem · The machine does not start up: Possible cause · The door is not firmly closed. · The machine is not plugged in or there is no power at the socket. · The main fuse has blown.

· The programme selector dial is not positioned correctly. · The ON/OFF button has not been depressed. · · · The water tap is closed. The inlet hose is squashed or kinked. The filter in the inlet hose is blocked.

@@Refer to relevant paragraph in "water drainage" section. · The drain hose is squashed or kinked. · A programme which ends with water in tub has been selected. · The drain filter is clogged. @@@@The drain hose is damaged. · Too little detergent or unsuitable detergent has been used. · Stubborn stains have not been treated prior to washing. · The correct temperature was not selected. · Excessive laundry load. · The transit bolts and packing have not been removed.

· The support feet have not been adjusted. · The laundry is not evenly distributed in the drum. · Maybe there is very little laundry in the drum. · The programme is still running. · The door lock has not been released. · There is water in the drum. · Unsatisfactory washing results: · The machine vibrates or is noisy: · The door will not open: 23 ENGLISH Problem · Spinning starts late or the laundry is not spun enough: Possible cause · The electronic unbalance detection device has cut in because the laundry is not evenly distributed in the drum. The laundry is redistributed by reverse rotation of the drum. This may happen several times before the unbalance disappears and normal spinning can resume. If, after 20 minutes, the laundry is still not evenly distributed in the drum, the machine will not spin.

If at the end of the programme the laundry is not spun enough, redistribute the load manually and select the spin programme. · The water tap is closed. · The drain filter is clogged. · The drying time has not been selected. · An appropriate drying time has not been chosen.

· There is too much laundry inside the appliance. · The machine will not dry or the laundry is not dry enough Water is not visible in the machine.



[You're reading an excerpt. Click here to read official ZANUSSI](http://yourpdfguides.com/dref/665876)

[W1002 user guide](http://yourpdfguides.com/dref/665876)

<http://yourpdfguides.com/dref/665876>

The machine, which is the result of modern technology, runs in a very economical way with low water consumption. Performance is nevertheless excellent.

The machine makes an unusual noise.

The machine is fitted with a commutator motor which improves machine performance. P1035UK P1034UK If you are unable to identify or solve the problem, contact our service centre. Before telephoning, make a note of the model, serial number and purchase date of your machine: the Service Centre will require this information. P0042 24 .



[You're reading an excerpt. Click here to read official ZANUSSI](#)

[W1002 user guide](#)

<http://yourpdfguides.com/dref/665876>