




# Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for ZANUSSI W905. You'll find the answers to all your questions on the ZANUSSI W905 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual ZANUSSI W905  
User guide ZANUSSI W905  
Operating instructions ZANUSSI W905  
Instructions for use ZANUSSI W905  
Instruction manual ZANUSSI W905

**ZANUSSI**  
Electrolux

WASHER-DRYER  
洗衣乾衣機  
W 905

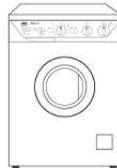

INSTRUCTION BOOKLET  
說明手冊

GB  
CN

132963540



[You're reading an excerpt. Click here to read official ZANUSSI W905 user guide](http://yourpdfguides.com/dref/957720)  
<http://yourpdfguides.com/dref/957720>

**Manual abstract:**

Our contribution to the protection of the environment: we use environmentally friendly paper. 2 Contents Warnings Disposal 4-5 5 International wash code symbols Operating sequence Washing only Drying only Automatic washing and drying Washing programmes Drying programmes 14 15-17 15-16 17 17 18-19 20 Tips for environmental protection 5 Technical specifications Installation Unpacking Positioning Water inlet Water drainage Electrical connection 6 7 7 7 7 8 8 Maintenance Bodywork Detergent dispenser drawer Drain filter Water inlet filter Emergency emptying out Frost precautions 21 21 21 21 21 22 22 Description of the appliance Detergent dispenser drawer 9 9 Something not working? 23-24 Use Control panel Controls Washing hints Sorting the laundry Temperatures Before loading the laundry Maximum loads Laundry weights Removing stains Detergents and additives Drying hints Load Garments not suitable for drying Drying symbols on garment labels Duration of the drying cycle Fibre residue Additional drying 10 10 10 11 11 11 11 11 11 12 13 13 13 13 13 13 3 Warnings The following warnings are provided in the interests of overall safety. You must read them carefully before installing or using the appliance. Installation · All internal packing must be removed before using the appliance. Serious damage may be caused to the machine or adjacent furniture if the protective transit devices are not removed or are not completely removed. Refer to the relevant paragraph in the instruction book. · Any electrical work required to install this appliance must be carried out by a qualified electrician. @@@@An excessive amount could damage the laundry. @@This preserves the door seal and prevents the formation of musty smells. · Always check that water has emptied out before opening the door. If not, drain the water following the instructions in the instruction book. · Always unplug the appliance and shut the water tap after use. General safety · Repairs to the machine must be carried out only by qualified personnel. Repairs carried out by inexperienced persons could cause serious danger. Contact your local Service Centre. · Never pull the power supply cable to remove the plug from the socket; always take hold of the plug itself. · During high temperature wash programmes and during the drying cycle the door glass may get hot. Do not touch it! Use · This appliance is designed for domestic use. It must not be used for purposes other than those for which it was designed. · Only wash and dry fabrics which are designed to be machine washed and dried. Follow the instructions on each garment label. · Do not overload the appliance. Follow the instructions in the instruction book. · Make sure that all pockets are empty. Objects such as coins, safety pins, pins and screws can cause extensive damage. · Do not machine wash garments saturated with petroleum, methylated spirits, trichlorethylene, etc. If such fluids have been used to remove stains prior to washing, wait until they have completely evaporated from the fabric before placing garments in the appliance. · Place small items such as socks, belts, etc. in a cloth bag or pillowcase to prevent them getting trapped between the drum and the tub. · If you use a liquid detergent with a dispenser which has to be placed directly in the drum, remember to remove this dispenser before drying.

4 Child safety · Children are often not aware of how dangerous electrical appliances can be. When the machine is working, children should be carefully supervised and not be allowed to play with the appliance. · The packaging components (e.g. plastic film, polystyrene) can be dangerous to children - danger of suffocation! Keep them out of children's reach. · Keep all detergents in a safe place out of children's reach. · Make sure that children or pets do not climb into the drum. · When the appliance is to be scrapped, cut off the electrical supply cable and destroy the plug with the remaining cable. Disable the door catch in order to prevent children from becoming trapped inside while playing. Disposal Packaging materials The materials marked with the symbol recyclable. >PE<=polyethylene >PS<=polystyrene >PP<=polypropylene This means that they can be recycled by disposing of them properly in appropriate collection containers. are The symbol on the product or on its packaging indicates that this product may not be treated as household waste. Instead it shall be handed over to the applicable collection point for the recycling of electrical and electronic equipment. By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling of this product. For more detailed information about recycling of this product, please contact your local city office, your household waste disposal service or the shop where you purchased the product.

Machine Use authorised disposal sites for your old appliance. Help to keep your country tidy! Tips for environmental protection To save water, energy and to help protect the environment, we recommend that you follow these tips: · Normally soiled laundry may be washed without prewashing in order to save detergent, water and time (the environment is protected too!). · The machine works more economically if it is fully loaded (for both washing and drying cycles). · The machine will consume less energy if the laundry is adequately spun before being dried. · With adequate pre-treatment, stains and limited soiling can be removed; the laundry can then be washed at a lower temperature.

· Measure out detergent according to the water hardness, the degree of soiling and the quantity of laundry being washed. 5 Technical specifications DIMENSIONS Height Width Depth 85 cm 60 cm 58 cm WASHING 5 kg 2 kg 2 kg 1 kg 900 rpm max. 220-230 V/50 Hz 2200 W 10 A 0.05 MPa 0.8 MPa DRYING 2.5 kg 1.5 kg - MAXIMUM LOAD Cotton Synthetics Delicates Woollens SPIN SPEED POWER SUPPLY VOLTAGE/FREQUENCY TOTAL POWER ABSORBED MINIMUM FUSE PROTECTION WATER PRESSURE Minimum Maximum This appliance complies with the following EEC Directives: 73/23/EEC of 19/02/73 relating to low voltage 89/336/EEC of 03/05/89 relating to electromagnetic compatibility. 6 Installation Unpacking All transit bolts and packing must be removed before using the appliance. You are advised to keep all transit devices so that they can be refitted if the machine ever has to be transported again. 1.

Using a spanner, unscrew and remove the two rear bottom screws. Slide out the two plastic pins. 6. Set the machine upright and remove the remaining rear screw. Slide out the relevant pin. 7. Plug all the holes with the plugs which you will find in the envelope containing the instruction booklet.



[You're reading an excerpt. Click here to read official ZANUSSI W905](http://yourpdfguides.com/dref/957720)

[user guide](http://yourpdfguides.com/dref/957720)

<http://yourpdfguides.com/dref/957720>

P1128 P0002 Positioning P1129 P0001 2. Lay the machine on its back, taking care not to squash the hoses. This can be avoided by placing one of the corner packing pieces between the machine and the floor.

3. Remove the polystyrene block(s) from the bottom of the machine. Unscrew and remove the four feet. Release the two plastic bags. 4. Very carefully slide out the left polythene bag, removing it towards the right and then downwards. 1 2 3 Install the machine on a flat hard floor. Make sure that air circulation around the machine is not impeded by carpets, rugs etc. @@Carefully level by screwing the adjustable feet in or out. @@@@The inlet hose must not be lengthened.

@@@@@WARNING: THIS APPLIANCE MUST BE EARTHED. @@The appliance is supplied with a 13amp plug fitted. @@@@The wires in the mains lead are coloured in accordance with the following code: Green and Yellow Blue Brown GREEN & YELLOW E 13 A P0022 In a sink drain pipe branch. This branch must be above the trap so that the bend is at least 60 cm above the ground. Directly into a drain pipe at a height of not less than 60 cm and not more than 90 cm. The end of the drain hose must always be ventilated, i.e. the inside diameter of the drain pipe must be larger than the outside diameter of the drain hose. The drain hose must not be kinked. Run it along the floor; only the part near the drainage point must be raised.

- Earth - Neutral - Live N L BROWN BLUE P1041 CORD CLAMP The wire coloured green and yellow must be connected to the terminal marked with the letter «E» or by the earth symbol or coloured green and yellow. The wire coloured blue must be connected to the terminal «N» or coloured black. P0023 The wire coloured brown must be connected to the terminal marked «L» or coloured red. Upon completion there must be no cut, or stray strands of wire present and the cord clamp must be secure over the outer sheath. WARNING: A cut off plug inserted into a 13 amp socket is a serious safety (shock) hazard. Ensure that the cut off plug is disposed of safely. 8 Description of the appliance 1 Detergent dispenser drawer 2 Programme chart 3 Control panel TURBODRY DRYING TEMPERATURE PROGRAMME 1 3 W 905 MADE IN ITALY 4 Door handle 5 Drain filter 6 Adjustable feet G SYNTHETICS 60°C - 90°C A WHITE COTTONS WITH PREW. 60°C - 90°C H SHORT CYCLE B WHITE COTTONS A COLOURED COTTONS WITH PREW. 30°C - 60°C J SHORT SPIN K SYNTHETICS DRY 30°C - 60°C B COLOURED COTTONS C RINSES L WOOL M DELICATES D SPIN N DELICATE RINSE F COTTONS DRY P DRAIN 30°C - 60°C - 30°C DRY ON/OFF QUICK WASH - 40°C 30°C - 40°C 2 4 5 6 Detergent dispenser drawer Prewash Main wash Fabric softener, starch C0063 9 Use Control pan Dried grease stains: moisten with turpentine, lay the garment on a soft surface and dab the stain with the fingertips and a cotton cloth. Rust: oxalic acid dissolved in hot water or a rust removing product used cold.

Be careful with rust stains which are not recent since the cellulose structure will already have been damaged and the fabric tends to hole. Mould stains: treat with bleach, rinse well (whites and fast coloureds only). Grass: soap lightly and treat with bleach (whites and fast coloureds only). Ball point pen and glue: moisten with acetone (\*), lay the garment on a soft cloth and dab the stain. Lipstick: moisten with acetone as above, then treat stains with methylated spirits. Remove any residual marks from white fabrics with bleach. Red wine: soak in w water before opening the door by selecting programme P (drain) or J (drain and short spin). The door is controlled by a safety device which releases 2 minutes after the end of the programme. Switch the machine off by pressing the ON/OFF button. The mains-on light goes out.

Remove the laundry from the drum and carefully check that the drum is empty so as to avoid any forgotten items being damaged in a subsequent wash (e.g. shrinking) or their colour running into a load of whites. If you do not intend to carry out another wash, close the water tap. Leave the door open to prevent the formation of mildew and unpleasant smells. 16 Drying only Warning! @@@@1. Load the laundry 2. @@3. @@4. Press the ON/OFF button to start the programme.

5. @@6. @@@@1. Load the laundry. 2. Add detergent and additive. Do not use dosing device/ball when carrying out a NON-STOP programme. @@3. Select the wash programme. 4.

Select the drying time. 5. Start the programme by depressing the ON/OFF button. 6. @@7.

@@@@@COLOURED COTTON WITH PREW. Coloured cotton or linen fabrics, shirts, underwear, towels, blouses. Delicate or fast coloured cotton or linen fabrics, shirts, underwear, towels. Separate rinse cycle for hand washed cotton and linen items. Wash at 60°-90 °C 3 rinses Long spin QUICK WASH 5 kg Prewash at 40 °C Wash at 30°-60 °C 3 rinses Long spin Wash at 30°-60 °C 3 rinses Long spin QUICK WASH 5 kg COLOURED COTTON (without prewash) QUICK WASH 5 kg RINSES 4 rinses Long spin 5 kg SPIN Separate long spin for cotton and linen items D Long spin 5 kg Important! - Programme B begins with a short drain, then the programme selector dial advances automatically to the water filling position.

- We suggest you not to switch the appliance off and on during its operation. This would modify the memorised programme in progress with unsatisfactory washing results. 18 Washing Programmes Programmes for synthetics, mixed fabrics, delicates and wool Wash programme Degree of soil and type of laundry Synthetics or mixed fabrics, underwear, coloured items, shirts, blouses. Slightly soiled synthetic or mixed fabrics, shirts, blouses, underwear. Separate spin for hand washed delicate items. Specially tested programme for wool garments bearing the "Pure new wool, nonshrink, machine washable" label. Programme/ Temperature Description Possible option Max. load G 30°-60° H -30° J SYNTHETICS Wash at 30°-60° C 3 rinses Stop with water left in tub Wash at -30°C 3 rinses Stop with water left in tub Draining of water and short spin QUICK WASH 2 kg SHORT CYCLE 2 kg SHORT SPIN 2 kg WOOL L -40° M 30°-40° N Wash at -40°C 3 rinses Stop with water left in tub 1 kg DELICATES Delicate fabrics, for example curtains. This programme can be used for rinsing hand washed garments. For emptying out the last rinse water of these programmes.

Wash at 30°-40°C 3 rinses Stop with water left in tub 3 delicate rinses, with fabric softener, if required Stop with water left in tub 2 kg DELICATE RINSES 2 kg DRAIN P Draining of water - At the end of these programmes, the last rinse water is not emptied out, so as to avoid creasing of the fabrics. To empty out the water, select programme J (short spin) or P (drain).



[You're reading an excerpt. Click here to read official ZANUSSI W905 user guide](http://yourpdfguides.com/dref/957720)

<http://yourpdfguides.com/dref/957720>

*Important: When the automatic NON-STOP washing plus drying programme is used, the water is emptied out automatically and there is a short spin at 850 rpm before drying starts. Important! · The programme G for synthetics and the programme L for wool begin with a short drain, then the programme selector dial advances automatically to the water filling position. · We suggest you not to switch the appliance off and on during its operation. This would modify the memorised programme in progress with unsatisfactory washing results. 19 Drying Programmes Timed drying Degree of drying Type of fabric Max. load Spin speed Drying time mins Cotton and linen (towels, T-shirts, bathrobes) Store dry Suitable for items to put away without ironing Programme F Synthetic and mixed fabrics (jumpers, blouses, underwear, household linen) Programme K 2.5 kg 900 Yellow section 95 Yellow section 65 Black section 95 Black section 65 Yellow section 75 Yellow section 50 1 kg 900 1.5 kg 850 1,0 kg 850 Iron dry Suitable for ironing Cotton and linen (sheets, tablecloths, shirts, etc.) Programme F 2.5 kg 900 1 kg 900 20 Maintenance 1. @@ Rinse with clean water and dry with a soft cloth. @@@@ Check regularly that the filter is clean.*

*Open the filter door.*

*Place a container under the filter and unscrew it. 2. @@ Clean the drawer from time to time by rinsing it under a running tap. To remove the drawer from the machine, press the button in the rear left-hand corner. To facilitate cleaning, the top part of the additive compartments can be removed.*

*P0011 P0132 Pull out the filter. Clean the filter under a running tap, then refit it, screwing it fully in. C0066 C0067 Detergent can also accumulate inside the drawer recess: clean it with an old toothbrush. Refit the drawer after cleaning. P0133 P0040 4. Water inlet filter If you notice that the machine is taking longer to fill, check that the filter in the water inlet hose is not blocked. Turn off the water tap. Unscrew the hose from the tap. @@@@ @@@@ · Select programme P (draining) and run it until the machine stops. · Switch the machine OFF by depressing ON/OFF button.*

*· Screw the water inlet hose back on and put the drain hose back in its place. By doing this, any water remaining in the machine is removed, avoiding the formation of ice and, consequently, breakage of the affected parts. When you use the machine again, make sure that the ambient temperature is above 0°C. 22 Something not working? Problems which you can resolve yourself. Problem · The machine does not start up: Possible cause · The door is not firmly closed. · The machine is not plugged in or there is no power at the socket. · The main fuse or the fuse in the plug has blown. · The programme selector dial is not positioned correctly. · The ON/OFF button has not been depressed. · · · · The water tap is closed.*

*The inlet hose is squashed or kinked. The filter in the inlet hose is blocked. The door is not properly closed. · The machine does not fill: · The machine fills then empties immediately: · The machine does not empty and/or does not spin: · There is water on the floor: · The end of the drain hose is too low. Refer to relevant paragraph in "water drainage" section.*

*· The drain hose is squashed or kinked. · A programme which ends with water in tub has been selected. · The drain filter is clogged. · Too much detergent or unsuitable detergent (creates too much foam) has been used. · Check whether there are any leaks from one of the inlet hose fittings.*

*It is not always easy to see this as the water runs down the hose; check to see if it is damp. · The drain hose is damaged. · Too little detergent or unsuitable detergent has been used. · Stubborn stains have not been treated prior to washing. · The correct temperature was not selected. · Excessive laundry load. · The transit bolts and packing have not been removed. · The support feet have not been adjusted. · The laundry is not evenly distributed in the drum. · Maybe there is very little laundry in the drum.*

*· The programme is still running. · The door lock has not been released. · There is water in the drum. · Unsatisfactory washing results: · The machine vibrates or is noisy: · The door will not open: 23 Problem · Spinning starts late or the laundry is not spun enough: Possible cause · The electronic unbalance detection device has cut in because the laundry is not evenly distributed in the drum. The laundry is redistributed by reverse rotation of the drum. This may happen several times before the unbalance disappears and normal spinning can resume. If, after 20 minutes, the laundry is still not evenly distributed in the drum, the machine will not spin. If at the end of the programme the laundry is not spun enough, redistribute the load manually and select the spin programme. · The water tap is closed. · The drain filter is clogged.*

*· The drying time has not been selected. · An appropriate drying time has not been chosen. · There is too much laundry inside the appliance. · The machine will not dry or the laundry is not dry enough Water is not visible in the machine. The machine, which is the result of modern technology, runs in a very economical way with low water consumption.*

*Performance is nevertheless excellent. The machine makes an unusual noise. The machine is fitted with a commutator motor which improves machine performance. P1035UK P1034UK If you are unable to identify or solve the problem, contact our service centre. Before telephoning, make a note of the model, serial number and purchase date of your machine: the Service Centre will require this information.*

*Mod. ....*

*· Prod. No. ....*

*.... Ser.*

*No. ....*

*..... Mod. ....*

*..... Prod. No. ..*

*.....*

*.... P0042 Ser.*

*No. ....*

*24 From the Electrolux Group. The world's No. 1 choice. The Electrolux Group is the world's largest producer of powered appliances for kitchen, cleaning and outdoor use. More than 55 million Electrolux Group products (such as refrigerators, cookers, washing machines, vacuum cleaners, chain saws and lawn mowers) are sold each year to a value of approx. USD 14 billion in more than 150 countries around the world. MADE IN ITALY .*



[You're reading an excerpt. Click here to read official ZANUSSI W905](http://yourpdfguides.com/dref/957720)

[user guide](http://yourpdfguides.com/dref/957720)

<http://yourpdfguides.com/dref/957720>