



Your PDF Guides

 
You can read the recommendations in the user guide, the technical guide or the installation guide for ZANUSSI WDS872C. You'll find the answers to all your questions on the ZANUSSI WDS872C in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual ZANUSSI WDS872C
User guide ZANUSSI WDS872C
Operating instructions ZANUSSI WDS872C
Instructions for use ZANUSSI WDS872C
Instruction manual ZANUSSI WDS872C



ZANUSSI

WASHER-DRYER
LAVANTE-SECHANTE
LAVADORA-SECADORA
СТИРАЛЬНО-СУШИЛЬНАЯ МАШИНА
WDS 872C



INSTRUCTION BOOKLET
NOTICE D'UTILISATION
MANUAL DE USO
РУКОВОДСТВО ПО ЭКСПЛУАТАЦИИ

124975320



[You're reading an excerpt. Click here to read official ZANUSSI WDS872C user guide](http://yourpdfguides.com/dref/662983)
<http://yourpdfguides.com/dref/662983>

Manual abstract:

>PE<= polyethylene >PS<= polystyrene >PP<= polypropylene s Hints on how to save energy By following these hints you will obtain economical washing without damaging the environment: s Whenever possible, wash the maximum load for the selected programme, without overloading the drum. s Use a programme with prewash only for very soiled laundry. s Measure out detergent according to the water hardness, the degree of soiling and the quantity of laundry being washed. Machine scrapping When the appliance is to be scrapped, cut off the power supply cable and make the door closing device unusable to prevent young children from being trapped inside. Use authorised disposal sites for your old appliance. The symbols you will see on some paragraphs of this booklet have the following meaning: Important information concerning the safety in the use of your machine. Disregarding this information might lead to damages. i Information for correct use of your machine and to obtain the best performance. Important information concerning environment protection. Our contribution to the protection of the environment: we use recycled paper.

2 CONTENTS Warnings Description of the appliance s s 4 5 5 5 5 6 6 6 7 7 7 8 8 8 9 10 10 10 10 10 11 11 12-13 14-15 16 Maintenance s s s s 17 17 17 17 18 18 18 19-20 Detergent dispenser drawer Programme card Technical specifications Installation s s s s Bodywork Detergent dispenser drawer Drain filter Water inlet filter Emergency emptying out Frost precautions Something not working? Transit devices Positioning Water inlet Water drainage Electrical connection Use s s s s s s Control panel Controls Programme selection Washing and drying hints Sorting the laundry Temperatures Before loading the laundry Maximum loads Removing stains Detergents and additives Drying Operating sequence Washing and drying programmes International wash code symbols 3 ENGLISH WARNINGS It is important that this instruction book be kept with the appliance for future reference. If you sell or give the appliance away, make sure that the book is passed to the new owners so that they can familiarise themselves with its operation and relevant warnings. The following warnings are provided in the interests of overall safety. You must read them carefully before installing or using the appliance. General warnings s s s s s s When unpacking the appliance, check that it is not damaged.

If in doubt, do not use it and contact the Service Centre. This appliance is designed to be used by adults. Children must not be allowed to touch the controls or play with the product. During high temperature washing and drying cycles the glass door becomes very hot. Do not touch it.

Pets sometimes climb into washing machines. Check the drum before each use. s s s Installation s s s s All internal packing must be removed before using the appliance. Serious damage may be caused to the machine or adjacent furniture if the protective transit devices are not removed or are not completely removed. Refer to the relevant paragraph in the instruction book. Any electrical work required to install this appliance must be carried out by a qualified electrician. Any plumbing work required to install this appliance must be carried out by a qualified plumber. @@@@ Follow the instructions in the instruction book. Make sure that all pockets are empty. @@@@ If such fluids have been used to remove stains prior to washing, wait until they have completely evaporated from the fabric before placing garments in the appliance.

Place small items such as socks, belts, etc. in a cloth bag or pillowcase to prevent them getting trapped between the drum and the tub. Use only the recommended quantities of fabric softener. An excessive amount could damage the laundry. Leave the porthole door slightly ajar when the appliance is not in use. This preserves the door seal and prevents the formation of musty smells. Always check that water has emptied out before opening the door. If not, drain the water following the instructions in the instruction book. Always unplug the appliance and shut the water tap after use. Service/repair s Use s s s This appliance is designed for domestic use.

It must not be used for purposes other than those for which it was designed. Only wash and dry fabrics which are designed to be machine washed and dried. Follow the instructions on each garment label. If you use a liquid detergent with a dispenser which has to be placed directly in the drum, remember to remove this dispenser before drying. s In the event of a fault, do not attempt to repair the appliance yourself.

Repairs carried out by inexperienced persons may cause damage. If repairs are needed, contact an authorised service centre and ask for genuine spare parts.

4 DESCRIPTION OF THE APPLIANCE 01 Detergent dispenser drawer 02 Programme card 03 Temperature selector dial 04 Half load button 05 Spin suppression button 06 Drying pilot light 07 Drying time selector dial 08 Operating pilot light 09 Programme selector dial 10 Door handle 11 Filter 12 Adjustable feet 1 3 4 5 6 7 8 9 2 10 11 12 Detergent dispenser drawer Prewash Main wash Fabric softener Programme card There is a programme card in symbols on the detergent dispenser drawer. P0260 TECHNICAL SPECIFICATIONS DIMENSIONS Height Width Depth Cotton Synthetics Delicates Woollens 85 cm 60 cm 58 cm WASHING 5.0 kg 2.

0 kg 2.0 kg 1.0 kg DRYING 2.50 kg 1.50 kg - MAXIMUM LOAD SPIN SPEED POWER SUPPLY VOLTAGE/FREQUENCY TOTAL POWER ABSORBED MINIMUM FUSE PROTECTION WATER PRESSURE Minimum Maximum 850 rpm max. 220-230 V/50 Hz 2250 W 10 A 5 N/cm² 80 N/cm² This appliance complies with the following EEC Directives: 73/23/EEC of 19/02/73 relating to low voltage 89/336/EEC of 03/05/89 relating to electromagnetic compatibility 5 ENGLISH INSTALLATION Unpacking All transit bolts and packing must be removed before using the appliance. You are advised to keep all transit devices so that they can be refitted if the machine ever has to be transported again. 1. @@@@ @3. @@@@5.

@@6. @@@@ @ Carefully level by screwing the adjustable feet in or out. @@ The other end of the inlet hose which connects to the machine can be turned in any direction. Simply loosen the fitting, rotate the hose and retighten the fitting, making sure there are no water leaks. The inlet hose must not be lengthened. If it is too short and you do not wish to move the tap, you will have to purchase a new, longer hose specially designed for this type of use. A P0003 P0021 Water drainage The end of the drain hose can be positioned in three ways: Hooked over the edge of a sink using the plastic hose guide supplied with the machine. In this case, make sure the end cannot come unhooked when the machine is emptying. This could be done by tying it to the tap with a piece of string or attaching it to the wall. In a sink drain pipe branch.



[You're reading an excerpt. Click here to read official ZANUSSI WDS872C user guide](http://yourpdfguides.com/dref/662983)
<http://yourpdfguides.com/dref/662983>

This branch must be above the trap so that the bend is at least 60 cm above the ground. Directly into a drain pipe at a height of not less than 60 cm and not more than 90 cm. The end of the drain hose must always be ventilated, i.e. the inside diameter of the drain pipe must be larger than the outside diameter of the drain hose.

The drain hose must not be kinked. Run it along the floor; only the part near the drainage point must be raised. P0022 P0023 Electrical connection This machine is designed to operate on a 220/230 V, single-phase, 50 Hz supply. Check that your domestic electrical installation can take the maximum load required (2.2 kW), also taking into account any other appliances in use.

Turn the dial clockwise only. To be used for delicate cotton items. Select the temperature and the wash programme. Press button and/or if desired. The maximum fabric first with acetone (*), then with acetic acid; treat any residual marks on white fabrics with bleach and then rinse thoroughly. The washing machine incorporates a recirculation system which allows an optimal use of the concentrated detergent. Pour liquid detergent into the dispenser drawer compartment marked just before starting the programme. Any fabric softener or starching additives must be poured into the compartment marked before starting the wash programme. Degrees of water hardness Degrees Level Characteristic German °dH French °T.H.

1 2 3 4 soft medium hard very hard 0,0-15 00-07 16-25 08-14 26-37 15-21 more than 21 more than 37 Drying s All laundry to be dried must be thoroughly spun. The higher the spin speed, the lower the power consumption and the shorter the drying time. Scrupulously follow the instructions on each garment label, making sure that it is suitable for tumble-drying. Do not tumble dry the following: wool, silk, synthetic curtains; articles with a plasticised finish, nylon tights or stockings, sleeping bags, quilts, articles made of foam rubber or containing materials similar to foam rubber, fabrics with metal inserts; fabrics which tend to fray. s s Important: during the drying cycle, the water tap must be left open and the drain hose must be correctly positioned. 11 ENGLISH i Operating sequence Automatic washing and drying (non-stop programme) This option is only possible for cottons and synthetics. Place the laundry in the drum Open the door. Close the door. P0004 2. Select option, if desired.

95 5. At the end of the programme The machine stops automatically. Wait one or two minutes before opening the door to give the electric locking mechanism time to release it. Depress the protergent. Rinse with clean water and dry with a soft cloth.

Important: do not use methylated spirits, solvents or similar products to clean the bodywork. 2. Detergent dispenser drawer After a while, detergents and fabric softeners leave deposits in the drawer. Clean the drawer from time to time by rinsing it under a running tap. Refit the drawer after cleaning.

P0224 P0225 P0038 3. Check regularly that the filter is clean. Open the filter door. Place a container under the filter and unscrew it. P0011 P0132 Pull out the filter. Clean the filter under a running tap, then refit it, screwing it fully in. P0133 P0040 17 ENGLISH 4. Water inlet filter If you notice that the machine is taking longer to fill, check that the filter in the water inlet hose is not blocked. Turn off the water tap. Unscrew the hose from the tap and remove the filter.

Clean it with a stiff brush. Refit the filter and screw the hose back onto the tap. P0041 5. Emergency emptying out If the water is not discharged (outlet pump is blocked, filter or outlet hose are clogged), proceed as follows to empty out the machine: s pull out the plug from the power socket; s close the water tap; s if necessary, wait until the water has cooled down; s place a bowl on the floor; s put the outlet hose end into the bowl and let the water come out. Should it not be possible to have access to the outlet hose because, for example, the appliance is built in the kitchen furniture, slightly loosen the outlet filter after placing a bowl on the floor, to let the water come out slowly. At the end screw the filter again. 6. Frost precautions If the machine is installed in a place where the temperature could drop below 0°C, proceed as follows: s Close the water tap and unscrew the water inlet hose from the tap. s Place the end of the outlet hose and that of the inlet hose in a bowl placed on the floor. s Select programme S and run it until the machine stops.

s Remove the plug from the socket. Check that the machine is plugged in and that there is power at the socket. Check that the main fuse or the fuse in the plug has not blown. Check that the programme selector dial is positioned correctly and pulled out. Check that the water tap is open. Check that water is coming out of the tap. Check that the inlet hose is not squashed or kinked. Check that the filter in the inlet hose is not blocked. Check that the door is closed. The end of the drain hose is too low.

Refer to relevant paragraph in "water drainage" section. Check that the drain hose is not squashed or kinked. A programme which stops with water in drum or the spin suppression option has been selected. The drain filter is blocked. Clean it. Too much detergent or unsuitable detergent (creates too much foam) has been used. Check whether there are any leaks from one of the inlet hose fittings. It is not always easy to see this as the water runs down the hose; check to see if it is damp. Check that the drain hose is not damaged. Too little detergent or unsuitable detergent has been used.

Stubborn stains have not been treated prior to washing. The correct temperature was not selected. Excessive laundry load. Check that all the transit bolts and packing have been removed. Check that the machine is not resting against anything. Check that the support feet are resting firmly on the ground. Check that the laundry is evenly distributed in the drum. Maybe there is very little laundry in the drum. 19 The machine fills then empties immediately: The machine does not empty and/or does not spin: s s s s There is water on the floor: s s s Unsatisfactory washing results: s s s s The machine vibrates or is noisy: s s s s s The door will not open: s s s The programme is still running. The door lock has not been released.

There is water in the drum. The drying time has not been selected. The tap is closed. The drain filter is blocked. A suitable drying time has not been selected. The drum is overloaded. The spin suppression option has been selected in the NON-STOP programme washing + drying. s The machine does not dry or does not dry properly: s s s s If you are unable to identify or solve the problem, contact our service centre.



[You're reading an excerpt. Click here to read official ZANUSSI](http://yourpdfguides.com/dref/662983)

[WDS872C user guide](http://yourpdfguides.com/dref/662983)

<http://yourpdfguides.com/dref/662983>

Before telephoning, make a note of the model, serial number and purchase date of your machine: the Service Centre will require this information. Mod.

.....

Ser. Mod.

.. Prod. No. .

.....

..... P0042 Ser. No. ...

..... 20 .



[You're reading an excerpt. Click here to read official ZANUSSI](#)

[WDS872C user guide](#)

<http://yourpdfguides.com/dref/662983>