




Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for ZANUSSI WIJ1075. You'll find the answers to all your questions on the ZANUSSI WIJ1075 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual ZANUSSI WIJ1075
User guide ZANUSSI WIJ1075
Operating instructions ZANUSSI WIJ1075
Instructions for use ZANUSSI WIJ1075
Instruction manual ZANUSSI WIJ1075

ZANUSSI

LAVASCIUGA
LAVADORA-SECADORA
MAQUINA DE LAVAR E SECAR
WASHER-DRYER
WIJ 1075

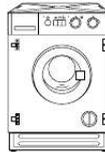

LIBRETTO ISTRUZIONI
MANUAL DE USO
MANUAL DE UTILIZAÇÃO
INSTRUCTION BOOKLET

112200660



[You're reading an excerpt. Click here to read official ZANUSSI WIJ1075 user guide](http://yourpdfguides.com/dref/656613)
<http://yourpdfguides.com/dref/656613>

Manual abstract:

Environment protection I I I The special wool programme with its new delicate wash system treats your woollen with extreme gentleness. The automatic cooling of the washing water from 95 to 60C before draining will prevent old drain pipes from being deformed. The two drying programmes will give your wash that soft, relaxed feel whatever the weather. Packaging recycling Materials marked with the symbol are recyclable. To enable them to be recycled, they must be placed in the appropriate collection areas (or containers). Check with your local authorities. >PE<= polyethylene >PS<= polystyrene >PP<= polypropylene I Hints on how to save energy By following these hints you will obtain economical washing without damaging the environment: I Whenever possible, wash the maximum load for the selected programme, without overloading the drum. I Use a programme with prewash only for very soiled laundry. Machine scrapping When the appliance is to be scrapped, cut off the power supply cable and make the door closing device inoperative to avoid it becoming a death trap for a child. For correct disposal of the machine, contact your local authority department which provides for collection of urban solid refuse. The symbols you will see on some paragraphs of this booklet have the following meaning: Important information concerning the safety in the use of your machine. Disregarding this information might lead to damages. Information for correct use of your machine and to obtain the best performance. Important information concerning environment protection. Our contribution to the protection of the environment: we use recycled paper.

70 CONTENTS Warnings Description of the appliance I 72 73 73 73 74 74 75 75 76 76-77 78 78 78 79 80 80 80 80 80 81 81 82-83 84-85 86 Maintenance I I I I 87 87 87 87 88 88 88 89-90 Detergent dispenser drawer Technical specifications Installation I I I I I I I I Bodywork Detergent dispenser drawer Drain filter Water inlet filter Emergency emptying out Frost precautions Transit devices Positioning Water inlet Water drainage Electrical connection Building-in Something not working? I I I I I I I I Control panel Controls Programme selection Washing and drying hints Sorting the laundry Temperatures Before loading the laundry Maximum loads Removing stains Detergents and additives Drying Operating sequence Washing and drying programmes International wash code symbols 71 ENGLISH Use WARNINGS It is important that this instruction book be kept with the appliance for future reference. If you sell or give the appliance away, make sure that the book is passed to the new owners so that they can familiarise themselves with its operation and relevant warnings. The following warnings are provided in the interests of overall safety. You must read them carefully before installing or using the appliance. General warnings I I I I I When unpacking the appliance, check that it is not damaged. If in doubt, do not use it and contact the Service Centre. This appliance is designed to be used by adults. Children must not be allowed to touch the controls or play with the product. During high temperature washing and drying cycles the glass door becomes very hot. Do not touch it. Pets sometimes climb into washing machines. Check the drum before each use. I I I Installation I I I I I All internal packing must be removed before using the appliance. Serious damage may be caused to the machine or adjacent furniture if the protective transit devices are not removed or are not completely removed. Refer to the relevant paragraph in the instruction book.

Any electrical work required to install this appliance must be carried out by a qualified electrician. Any plumbing work required to install this appliance must be carried out by a qualified plumber. After having installed the machine, check that it is not standing on its electrical supply cable. If the appliance is placed on a carpeted floor, ensure that air can circulate freely between the adjustable feet and the floor. I I I I Do not overload the appliance. Follow the instructions in the instruction book. Make sure that all pockets are empty. Objects such as coins, safety pins, pins and screws can cause extensive damage. Do not machine wash garments saturated with petroleum, methylated spirits, trichlorethylene, etc. If such fluids have been used to remove stains prior to washing, wait until they have completely evaporated from the fabric before placing garments in the appliance.

Place small items such as socks, belts, etc. in a cloth bag or pillowcase to prevent them getting trapped between the drum and the tub. Use only the recommended quantities of fabric softener. An excessive amount could damage the laundry. Leave the porthole door slightly ajar when the appliance is not in use.

This preserves the door seal and prevents the formation of musty smells. Always check that water has emptied out before opening the door. If not, drain the water following the instructions in the instruction book. Always unplug the appliance and shut the water tap after use. Service/repair I Use I I I This appliance is designed for domestic use.

It must not be used for purposes other than those for which it was designed. Only wash and dry fabrics which are designed to be machine washed and dried. Follow the instructions on each garment label. If you use a liquid detergent with a dispenser which has to be placed directly in the drum, remember to remove this dispenser before drying. I In the event of a fault, do not attempt to repair the appliance yourself. Repairs carried out by inexperienced persons may cause damage. If repairs are needed, contact an authorised service centre and ask for genuine spare parts. 72 DESCRIPTION OF THE APPLIANCE 1 Detergent dispenser drawer 2 Programme card 3 Drying pilot light 4 Drying time selector dial 5 Option buttons 6 On/Off button 7 Operating pilot light 8 Temperature selector dial 9 Programme selector dial 10 Door handle 11 Filter 12 Adjustable feet 1 3 4 5 6 7 8 9 2 10 11 12 Prewash Main wash Fabric softener Cl Bleach

The programme card in English is supplied with the instruction booklet and can be inserted in the detergent dispenser drawer. P0238 TECHNICAL SPECIFICATIONS DIMENSIONS Height Width Depth Cotton Synthetics Delicate fabrics Woollens 82 cm 60 cm 54 cm WASHING 4.5 kg 2 kg 2 kg 1 kg DRYING 2.

25 kg 1.5 kg - MAXIMUM LOAD SPIN SPEED POWER SUPPLY VOLTAGE/FREQUENCY TOTAL POWER ABSORBED MINIMUM FUSE PROTECTION WATER PRESSURE Minimum Maximum 1000 rpm max. 220-230 V/50 Hz 2200 W 10 A 5 N/cm² 80 N/cm² This appliance complies with the following EEC Directives: 73/23/EEC of 19/02/73 relating to low voltage 89/336/EEC of 03/05/89 relating to electromagnetic compatibility 73 ENGLISH Detergent dispenser drawer and programme card INSTALLATION Transit devices All transit bolts and packing must be removed before using the appliance.



[You're reading an excerpt. Click here to read official ZANUSSI WIJ1075 user guide](http://yourpdfguides.com/dref/656613)
<http://yourpdfguides.com/dref/656613>

You are advised to keep all transit devices so that they can be refitted if the machine ever has to be transported again. 1. Using a spanner, unscrew and remove the rear right-hand bolt. 2. Lay the machine on its back, taking care not to squash the hoses. This can be avoided by placing one of the corner packing pieces between the machine and the floor. P0255 3.

Remove the polystyrene base and take off the bottom panel by unscrewing the central screw. 4. Carefully remove the right-hand bag. P0457 P0015 5. Carefully slide out the other bags.

6. Re-fit the bottom panel using the 4 screws supplied with the door hinges (in the plastic bag) and the previously removed screw. P0016 P0453 7. Set the machine upright and remove the two remaining bolts from the back. 8.

Pull out the three plastic pegs from the holes into which the bolts were fitted. 9. Plug all the holes with the plugs which you will find in the plastic bag containing the instruction booklet. P0256 P0020 74 Positioning Install the machine on a flat hard floor. Make sure that air circulation around the machine is not impeded by carpets, rugs etc. Check that the machine does not touch the wall or other kitchen units. Carefully level by screwing the adjustable feet in or out. Never place cardboard, wood or similar materials under the machine to compensate for any unevenness in the floor. P1051 Water inlet Connect the water inlet hose to a tap with a 3/4" thread. The other end of the inlet hose which connects to the machine can be turned in any direction.

Simply loosen the fitting, rotate the hose and retighten the fitting, making sure there are no water leaks. The inlet hose must not be lengthened. If it is too short and you do not wish to move the tap, you will have to purchase a new, longer hose specially designed for this type of use. P1088 P0021 Water drainage The end of the drain hose can be positioned in three ways: Hooked over the edge of a sink using the plastic hose guide supplied with the machine. In this case, make sure the end cannot come unhooked when the machine is emptying. This could be done by tying it to the tap with a piece of string or attaching it to the wall. In a sink drain pipe branch. This branch must be above the trap so that the bend is at least 60 cm above the ground. Directly into a drain pipe at a height of not less than 60 cm and not more than 90 cm. The end of the drain hose must always be ventilated, i.

e. the inside diameter of the drain pipe must be larger than the outside diameter of the drain hose. The drain hose must not be kinked. Run it along the floor; only the part near the drainage point must be raised. P0022 P0023 75 ENGLISH Electrical connection Before connecting the machine check that the mains voltage corresponds to the voltage given in the technical specifications.

Check that your domestic electrical installation can take the maximum load required, also taking into account any other appliances in use. Connect the machine to an earthed socket, in accordance with current wiring regulations. The manufacturer declines any responsibility for damage or injury through failure to comply with the above safety precaution. Should the appliance power supply cable need to be replaced, this should be carried out by our Service Centre. Important! When the appliance is installed the power supply cable must be easily accessible.

Building-in This appliance has been designed to be built into the kitchen furniture. The recess should have the dimensions shown in picture A. 515 176,5 596 600 600 min. 820 min 818 416 120 54 8 90 0 49 1 195 165 160 P0965 A Preparation and assembly of the door The machine is originally pre-arranged for the assembly of a door opening from right to left. In this case it is sufficient to screw in the hinges (1) and the counter-magnet (6) provided with the appliance, at the right level (Fig. B). 6 4 1 1 2 7 5 3 23 P0982 B 76 a) Door The dimensions of the door should be: - width 595-598 mm - thickness 16-22 mm The height (C-Fig. C) depends on the height of the adjacent furniture's base. b) Hinges To mount the hinges it is necessary to drill two holes (dia. 35 mm, depth 14 mm) on the inner side of the door.

The distance between the holes must be 416 mm. The distance (B) from upper edge of the door to the centre of the hole depends on the adjacent furniture's dimensions. The required dimensions are given in the picture C. The hinges will be fixed to the door by means of screws for wood (2-Fig. B). P0026 598 35 mm - Depth 14 mm 416 595- B 22+1 16 -22 C ,5 c) Mounting the door Fix the hinges to the machine by means of the M5x8 screws (3-Fig. B). The hinges can be adjusted to compensate for possible uneven thickness of the indicative: bathrobe napkin quilt cover sheet pillow case tablecloth towelling towel tea cloth night dress ladies' briefs man's work shirt man's shirt man's pyjamas blouse men's underpants 1200 g 100 g 700 g 500 g 200 g 250 g 200 g 100 g 200 g 100 g 600 g 200 g 500 g 100 g 100 g Temperatures 90 for normally soiled white cottons and linen (e.g. tea cloths, towels, tablecloths, sheets.

...) for normally soiled, colour fast garments (e.g. shirts, night dresses, pyjamas.

...) in linen, cotton or synthetic fibres and for lightly soiled white cotton (e.g.

underwear). for delicate items (e.g. net curtains), mixed laundry including synthetic fibres and woollens bearing the label pure new wool, machine washable, non-shrink. 60 (cold) 30-40 Removing stains Stubborn stains may not be removed by just water and detergent. It is therefore advisable to treat them prior to washing. Blood: treat fresh stains with cold water. @@@@Whites may lose their "whiteness" in the wash. @@Make sure that no metal objects are left in the laundry (e.g.

hair clips, safety pins, pins). Button up pillowcases, close zip fasteners, hooks and poppers. Tie any belts or long tapes. Remove persistent stains before washing. @@Treat curtains with special care. @@@@Treat any residual marks with bleach. @@@@Although biodegradable, detergents contain substances which, in large quantities, can upset the delicate balance of nature. The choice of detergent will depend on the type of fabric (delicates, woollens, cottons, etc.), the colour, washing temperature and degree of soiling. All commonly available washing machine detergents may be used in this appliance: powder detergents for all types of fabric, powder detergents for delicate fabrics (60C max) and woollens, liquid detergents, preferably for low temperature wash programmes (60C max) for all types of fabric, or special for woollens only.

The detergent and any additives must be placed in the appropriate compartments of the dispenser drawer before starting the wash programme. If using concentrated powder or liquid detergents, a programme without prewash must be selected. The washing machine incorporates a recirculation system which allows an optimal use of the concentrated detergent.



[You're reading an excerpt. Click here to read official ZANUSSI](#)

[WIJ1075 user guide](#)

<http://yourpdfguides.com/dref/656613>

Pour liquid detergent into the dispenser drawer compartment marked just before starting the programme. Any fabric softener or starching additives must be poured into the compartment marked before starting the wash programme.

The bleaching agent (chlorine) can be used only for white or fast coloured cotton and linen items. Pour it into the compartment marked. Degrees of water hardness Degrees Level Characteristic German dH French T.H. 1 2 3 4 soft medium hard very hard 0-15 0- 7 16-25 8-14 26-37 15-21 more than 21 more than 37

Drying I All laundry to be dried must be thoroughly spun. The higher the spin speed, the lower the power consumption and the shorter the drying time. Scrupulously follow the instructions on each garment label, making sure that it is suitable for tumble-drying. Do not tumble dry the following: wool, silk, synthetic curtains; articles with a plasticised finish, nylon tights or stockings, sleeping bags, quilts, articles made of foam rubber or containing materials similar to foam rubber, fabrics with metal inserts; fabrics which tend to fray. I I Important: during the drying cycle, the water tap must be left open and the drain hose must be correctly positioned. 81 ENGLISH Operating sequence Automatic washing and drying (non-stop programme) This option is only possible for cottons and synthetics. Maximum load: cotton, linen 2.25 kg synthetics 1.5 kg Before washing your first load of laundry, we recommend that you run a cotton cycle at 60C, with the machine empty, in order to remove any manufacturing residue from the drum and tub. Pour half a measure of detergent into the main wash compartment and start up the machine. 1.

Place the laundry in the drum Open the door. Place the laundry in the drum, one item at a time, shaking them out as much as possible. Close the door. P0004

2. Measure out the detergent Pull out the dispenser drawer until it stops. Measure out the amount of detergent recommended by the manufacturer in a graduated cup and pour it into the main wash compartment. If you wish to carry out the prewash, pour detergent into the appropriate compartment marked. CI P0164

3. Measure out the additives If required, pour fabric softener into the compartment marked, and bleach into the compartment marked without exceeding the MAX mark. CI P0163

4. Select the temperature Turn the dial to the required setting. 90 5. Select the required option Depress button and/or if required. P0455 82 6. Select the drying time Turn the selector dial clockwise to the required time setting (blue or green sector).

90 120 M0031S 7. Select the programme and start the machine Turn the programme selector dial clockwise to the required programme and press the On/Off button: the operating pilot light comes on and the machine starts to operate. A P0429 P0471 8. At the end of the programme The machine stops automatically.

Depress the On/Off button again to switch the machine off.

The operating pilot light goes out. Remove the laundry. Turn the drum by hand to make sure it is completely empty, so as to avoid any forgotten items being damaged in a subsequent wash (e.g. shrinking) or their colour running into a load of whites. Release any buttons which have been pressed. Turn the water tap off and unplug the machine. Leave the door ajar to air the machine. 83 ENGLISH Energetic programmes for cotton and linen Maximum load: washing 4.5 kg washing+drying 2.

25 kg Washing Progr. Temp. Type of laundry Cycle description Prewash at 40C Wash at 60-90C 3 rinses Long spin Wash at 60-90C 3 rinses Long spin Prewash at 40C Wash at 30-60C 3 rinses Long spin Wash at 30-60C 3 rinses Long spin 3 rinses with additives Long spin Possible option A B A B C D 60-90

Whites with prewash heavy soiled 60-90 Whites without prewash normally soiled 30-60 Coloureds with prewash heavy soiled 30-60 Coloureds without prewash normally soiled Rinses Spin Drain and long spin The temperatures indicated are the optimum temperatures for each programme and depend on the type of laundry and degree of soiling. The programme B at 60C is the reference programme for the Energy label according to the EEC Directive 92/75.

Drying: maximum load 2.25 kg Drying time selector 0-120 min, blue sector. Programme Type of laundry Degree of drying Quantity 2.25 kg 1.5 kg 1 kg 2.25 kg 1.

5 kg 1 kg Time 90-100 70-80 50-60 60-70 50-60 40-50 Store dry F Cotton and linen spun at 1000 rpm Iron dry 84 Delicate programmes for synthetics, mixed fibres, delicates, and woollens Maximum load: washing 2 kg (woollens 1 kg) washing+drying (synthetics) 1.5 kg At the end of these programmes, the last rinse water is not emptied out, so as to avoid creasing of the fabrics. To empty out the water, select programme N or M. Important: When the automatic NON-STOP washing plus drying programme is used, the water is emptied out automatically and there is a short spin at 900 rpm before drying starts. Washing Progr.

Temp. Type of laundry Synthetics without prewash normally soiled Woollens Delicate fabrics, silk Rinses Cycle description Wash at 40-60C 3 rinses Stop with water in drum Wash at 30-40C 3 rinses Stop with water in drum Possible option G J K L M N 40-60 30-40 30-40 3 rinses with additive Stop with water in drum Drain and short spin Empty out water Short spin Drain The temperatures indicated are the optimum temperatures for each programme and depend on the type of laundry and degree of soiling. Drying: maximum load 1.5 kg Drying time selector 0-120 min, green sector. Programme Type of laundry Synthetics, spun at 900 rpm Degree of drying Quantity 1.

5 kg 1 kg 0.5 kg Time 100-110 60-70 40-50 H Store dry 85 ENGLISH Wash at 30-40C 3 rinses Stop with water in drum International wash code symbols These symbols appear on fabric labels, in order to help you choose the best way to treat your laundry. Energetic wash 95 Max. wash temperature 95C Delicate wash 60 Max. wash temperature 60C 40 Max. wash temperature 40C 30 Max. wash temperature 30C 60 40 40 30 Hand wash Do not wash at all Bleaching Bleach in cold water Do not bleach Ironing Hot iron max 200C Warm iron max 150C Lukewarm iron max 110C Do not iron Dry cleaning Dry cleaning in all solvents Dry cleaning in perchlorethylene, petrol, pure alcohol, R 111 & R 113 Dry cleaning in petrol, pure alcohol and R 113 Do not dry clean high temperature low temperature Drying Flat On the line On clothes hanger Tumble dry Do not tumble dry 86 MAINTENANCE I. Bodywork Clean the outside of the machine with warm water and a neutral, non-abrasive household detergent. Rinse with clean water and dry with a soft cloth. Important: do not use methylated spirits, solvents or similar products to clean the bodywork.

2. Detergent dispenser drawer After a while, detergents and fabric softeners leave deposits in the drawer.



[You're reading an excerpt. Click here to read official ZANUSSI](#)

[WIJ1075 user guide](#)

<http://yourpdfguides.com/dref/656613>

Clean the drawer from time to time by rinsing it under a running tap. To remove the drawer from the machine, press the button in the rear lefthand corner. To facilitate cleaning, the top part of the additive compartments can be removed. Detergent can also accumulate inside the drawer recess: clean it with an old toothbrush. Refit the drawer after cleaning. CI P0166 P0165 P0038 3. Drain filter The drain filter collects threads and small objects inadvertently left in the laundry. Check regularly that the filter is clean.

Place a container under the filter and unscrew it. P0037 P0039 Pull out the filter. Clean the filter under a running tap, then refit it, screwing it fully in. P0040 87 ENGLISH 4. Water inlet filter If you notice that the machine is taking longer to fill, check that the filter in the water inlet hose is not blocked.

Turn off the water tap. Unscrew the hose from the tap. Clean the filter with a stiff brush. Screw the hose back onto the tap. P1090 5.

Emergency emptying out If the water is not discharged (outlet pump is blocked, filter or outlet hose are clogged), proceed as follows to empty out the machine: I pull out the plug from the power socket; I close the water tap; I if necessary, wait until the water has cooled down; I place a bowl on the floor; I put the outlet hose end into the bowl and let the water come out. Should it not be possible to have access to the outlet hose because, for example, the appliance is built in the kitchen furniture, slightly loosen the outlet filter after placing a bowl on the floor, to let the water come out slowly. At the end screw the filter again. 6. @@@@I Select programme Q and run it until the machine stops. I Remove the plug from the socket. @@@@When you use the machine again, make sure that the ambient temperature is above 0C. 88 SOMETHING NOT WORKING? Problems which you can resolve yourself Problem I Possible cause I I The machine does not start up: I I I The machine does not fill: I I I I I Check that the door is firmly closed. Check that the machine is plugged in and that there is power at the socket. Check that the main fuse has not blown.

Check that the programme selector dial is positioned correctly and the ON/OFF button depressed. Check that the water tap is open. Check that water is coming out of the tap. Check that the inlet hose is not squashed or kinked. Check that the filter in the inlet hose is not blocked. Check that the door is closed. I The machine does not empty and/or does not spin: I I I I There is water on the floor: I I I I Check that the drain hose is not squashed or kinked. A programme which stops with water in drum has been selected. Check that the laundry is evenly distributed in the drum. Too much detergent or unsuitable detergent (creates too much foam) has been used.

Check whether there are any leaks from one of the inlet hose fittings. It is not always easy to see this as the water runs down the hose; check to see if it is damp. Check that the drain hose is not damaged. Too little detergent or unsuitable detergent has been used. Stubborn stains have not been treated prior to washing.

The correct temperature was not selected. Excessive laundry load. Check that all the transit bolts and packing have been removed. Check that the machine is not resting against anything. Check that the support feet are resting firmly on the ground.

Check that the laundry is evenly distributed in the drum. Maybe there is very little laundry in the drum. 89 Unsatisfactory washing results: I I I I I The machine vibrates or is noisy: I I I I I ENGLISH The machine fills then empties immediately: I The end of the drain hose is too low. Refer to relevant paragraph in "water drainage" section. I The door will not open: I I I The programme is still running. The door lock has not been released. A programme which stops with water in drum has been selected. The electronic unbalance detection device has cut in because the laundry is not evenly distributed in the drum. The laundry is redistributed by reverse rotation of the drum. This may happen several times before the unbalance disappears and normal spinning can resume.

If, after 10 minutes, the laundry is still not evenly distributed in the drum, the machine will not spin. In this case, redistribute the load manually and reselect the spin programme. The machine is fitted with a commutator motor which makes an unusual noise compared with other traditional machines. This motor enables a softer start to the spin and controls the increase in spin speed better. In this way, machine performance is improved. The machine, which is the result of modern technology, runs in a very economical way with low water consumption. Performance is nevertheless excellent. The drying time has not been selected. The tap is closed. The drain filter is blocked.

A suitable drying time in the correct sector has not been selected. The drum is overloaded. I Spinning starts late or the machine does not spin: I I The machine makes an unusual noise: I I Water is not visible in the machine: The machine does not dry: I I I I I I If you are unable to identify or solve the problem, contact our service centre. Before telephoning, make a note of the model, serial number and purchase date of your machine: the Service Centre will require this information. Mod.

.....
..... Prod. No. ...

..... Ser. No.

.....
.... Mod.

.....
Prod. No.
... P0042 Ser. No.

.... 90 From the Electrolux Group. The world's No. 1 choice. The Electrolux Group is the world's largest producer of powered appliances for kitchen, cleaning and outdoor use. More than 55 million Electrolux Group products (such as refrigerators, cookers, washing machines, vacuum cleaners, chain saws and lawn mowers) are sold each year to a value of approx. USD 14 billion in more than 150 countries around the world.



[You're reading an excerpt. Click here to read official ZANUSSI](#)

[WIJ1075 user guide](#)

<http://yourpdfguides.com/dref/656613>