




Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for ZANUSSI ZDC46130W. You'll find the answers to all your questions on the ZANUSSI ZDC46130W in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual ZANUSSI ZDC46130W
User guide ZANUSSI ZDC46130W
Operating instructions ZANUSSI ZDC46130W
Instructions for use ZANUSSI ZDC46130W
Instruction manual ZANUSSI ZDC46130W

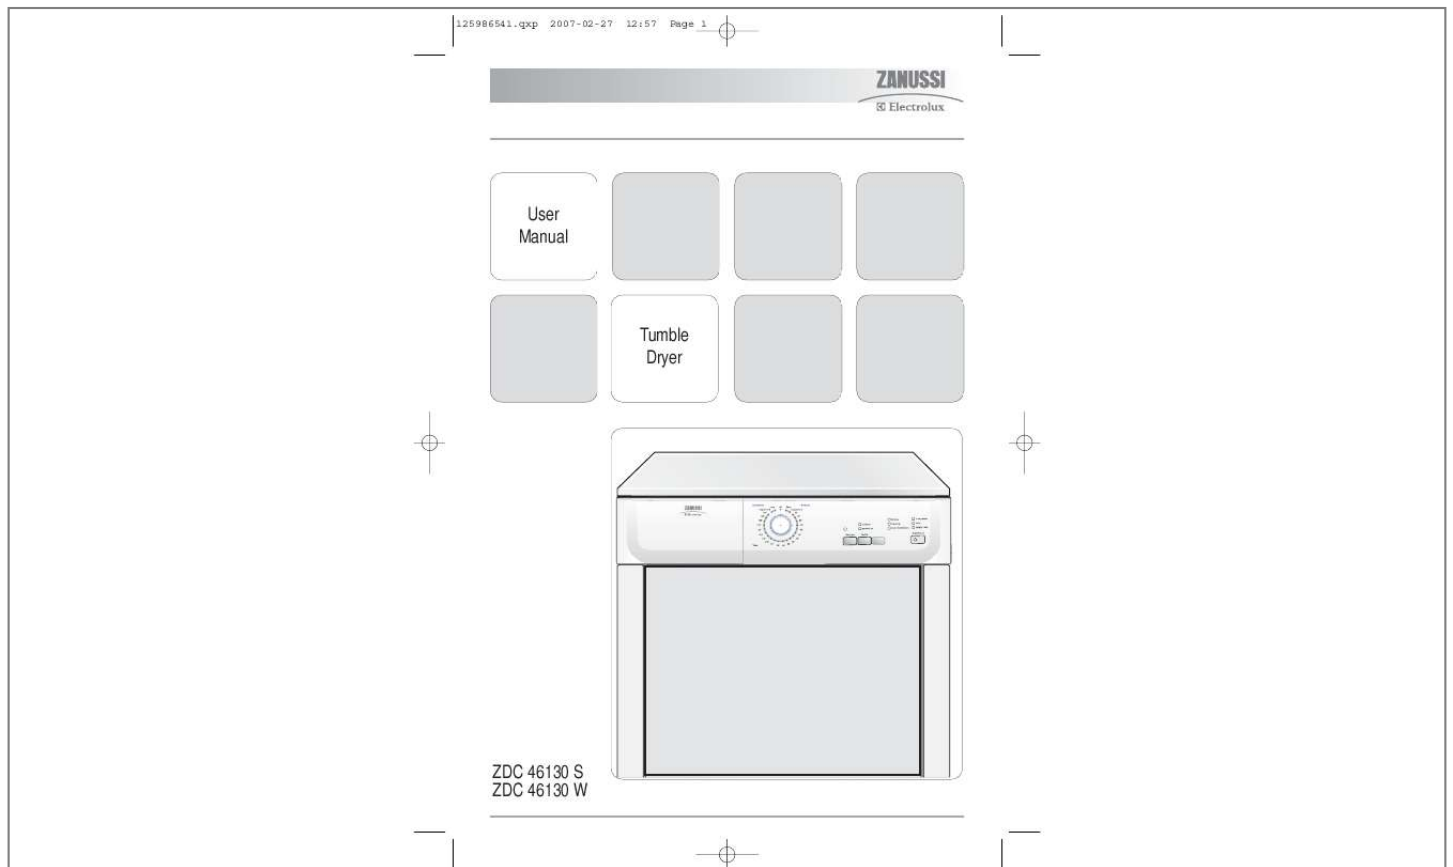

[You're reading an excerpt. Click here to read official ZANUSSI ZDC46130W user guide](http://yourpdfguides.com/dref/954973)
<http://yourpdfguides.com/dref/954973>

Manual abstract:

@@@ Good luck! The symbols you will see on some paragraphs of this booklet have the following meaning: The warning triangle emphasize information that is particularly important for your safety or correct functioning of the appliance. The information marked with this symbol provides additional instructions and practical tips on the use of the appliance. Tips and information about economical and ecological use of the machine are marked with this symbol.

Contents Important safety information

. . . 3 Description of the appliance

.

. . . 5 Controls panel and their functions 5-6 Drying programmes

.

. . . . 7 Before the first use

.

.

. 8 Drying hints.

.

.

. . . 8-9 Operating sequence

. 10-12 Care and cleaning

.

.

13-15 Something not working.

. 16-17 Technical data

.

.

. 18 Consumption values

. 18 Installation

.

.

. 19 2 Electrical connection

.

. . . . 20 Environment concerns

.

. 21 Guarantee Conditions

.

. . 22 Service & Spare Parts

.

. 23 125986541.qxp 2007-02-27 12:57 Page 3 Important safety information In the interest of your safety and to ensure the correct use, before installing and first using the appliance, read this user manual carefully, including its hints and warnings. @@@vents (petrol, methylated spirits, dry cleaning fluid and the like). As these substance are volatile, they could cause an explosion.

Only tumble dry items washed with water. @@@. Please make sure that no gas lighters or matches have accidentally been left in pockets of garments to be loaded into appliance Installation · This appliance is heavy. Care should be taken when moving it. · When unpacking the appliance, check that it is not damaged. If in doubt, do not use it and contact the Service Centre. · All packing and transit bolts must be removed before use. Serious damage can occur to the product and to property if this is not adhered to. See relevant section in the user manual. · The final part of a tumble dryer cycle occurs without heat (cool down cycle) to ensure that the items are left at a temperature that ensures that items will not be damaged. · Any electrical work required to install this appliance should be carried out by a qualified 3 General safety · It is dangerous to alter the specifications or attempt to modify this product in any way. · Make sure that small pets do not climb into the drum. To avoid this, please check into the drum before using. · Any objects such as coins, safety pins, nails, screws, stones or any other hard, sharp material can cause extensive damage and must not be placed inside the machine. · As some bulky items such as duvets and eiderdowns should be dried in large commercial machines because of their bulk, check with the manufacturer of the item if it is suitable for drying in a domestic machine, even if the dry weight of the item is within the limit advised. · In order to avoid danger of fires caused by excessive drying, do not use appliance to dry the following items: Cushions, quilts and the like (these items accumulate heat).

Items containing rubber foam or materials similar to rubber foam. · Always unplug the appliance after use, clean and maintenance. · Under no circumstances should you attempt to repair the machine yourself. Repairs carried out by inexperienced persons may cause injury or serious malfunctioning. Contact your local Service Centre.

Always insist on genuine spare parts. · Danger of explosion: Never tumble dry items that have been in contact with inflammable sol- 125986541.qxp 2007-02-27 12:57 Page 4 electrician or competent person. · Care must be taken to ensure that the appliance does not stand on the electrical supply cable. · If the machine is situated on a carpeted floor, please adjust the feet in order to allow air to circulate freely · After having installed the appliance, check that it is not pressing or standing on its electrical supply cable, inlet hose and drain hose. · If the tumble dryer is placed on top of a washing machine, it is compulsory to use the stacking kit (optional accessory). Use · This appliance is designed for domestic use. It must not be used for purposes other than those for which it was designed. · Only wash fabrics which are designed to be machine dried. Follow the instructions on each garment label.

· Fabric softeners, or similar products, should be used as specified by the fabric softener instructions. · Do not overload the appliance. See the relevant section in the user manual. · Clothes which are dripping wet should not be placed in the dryer. · Garments which have been in contact with volatile petroleum products should not be machine dried. If volatile cleaning fluids are used, care should be taken to ensure that the fluid is removed from the garment before placing in the machine. · Never pull the power supply cable to remove the plug from the socket; always take hold of the plug itself. · Never use the tumble dryer if the power supply cable, the control panel, the working surface or the base are damaged so that the inside of the tumble dryer is accessible. 4
WARNING: Never stop a tumble dry before the end of the drying cycle unless all items are quickly removed and spread out so that the heat is dissipated.

Child safety · This machine is not intended for use by young children or infirm persons without supervision.

· Young children should be supervised to ensure that they do not play with the appliance. · The packaging components (e.g. plastic film, polystyrene) can be dangerous to children - danger of suffocation! Keep them out of children's reach · Keep all detergents in a safe place out of children's reach. · Make sure that children or pets do not climb into the drum.

125986541.qxp 2007-02-27 12:57 Page 5 Description of the appliance 1 Control panel 2 Fluff filters 3 Rating Plate 4 Condenser Unit 5 Water reservoir 6 Adjustable feet 1 2 3 5 6 4 Controls panel and their functions 1 2 3 4 5 1 PROGRAMME TIME SELECTOR DIAL Allows you to select electronically controlled or time controlled drying. Turn the dial to the required programme or time. 5 125986541.qxp 2007-02-27 12:57 Page 6 2 DELICATE button 1. Select programme. 2. Press the DELICATE button. The relevant light will light up. 3. Press the START/PAUSE button. The relevant light will stop flashing. DELICATE is only suitable for use with loads of up to 3kg! When the programme has finished the pilot lights End is on. 1. Select programme.

and press the TEXTILE button. · You can select 2 different options: - Cotton Cycle: to be used for cotton, where as in the programmes - Synthetics to be used for synthetic or delicate items.



[You're reading an excerpt. Click here to read official ZANUSSI ZDC46130W user guide](#)
<http://yourpdfguides.com/dref/954973>

3. Press the START/PAUSE button. The relevant light will stop flashing. · "Drying" light · "Cooling" light · "End/Anticrease" light · "Filter" light · "Empty Tank" light · "Condenser" light 1. Select programme. 2. Press the START/PAUSE button. The relevant light will stop flashing.
3 TEXTILE button 4 INDICATOR LIGHTS 5 START/PAUSE button 6 125986541.qxp 2007-02-27 12:57 Page 7 Drying programmes Programme Max load kg
6 Type of laundry Cottons Options Textile -Cotton Description of programme Drying thick or multi-layered textiles, e.g. terry towelling items
Thorough drying of fabrics of even thicknesses, e.g.
terry towelling items, knitted items, towels. Extra Cupboard 6 Cottons Extra 3 Synthetics Thorough drying of thick or multilayered Textile -Synthetics fabrics,
e.g. pullovers, bedding, table linen. Cupboard 3 Synthetics For thin fabrics which are not ironed, e.
g. Textile easy care shirts, table linen, baby clothes, -Synthetics socks, lingerie with bones or wires. Time 1 Synthetics Textile -Synthetics -Cotton -Delicate If
the TIME programme has been selected, programme duration time of 30 minutes up to 150 minutes can be set by intervals of 5 minutes or 10 minutes. Drying
thick or multi-layered textiles, e.g. terry towelling items. 7 125986541.qxp 2007-02-27 12:57 Page 8 Before the first use Ensure that the electrical connections
comply with the installation instructions. · Remove the polystyrene block and any material from the drum. · Before using your tumble dryer for the first time,
we recommend that you place a few damp cloths inside the appliance and dry for 30 minutes.

@@@Close press studs, zips and hooks and tie belts and apron strings. @@@@The laundry must be thoroughly spun before tumble drying. Easy-care items, too, e.g. @@@@Please do not overdry items of this type. @@You can also put starched items into your dryer. @@@@To avoid a static charge when drying is completed, use either a fabric softener when you are washing the laundry or a fabric conditioner specifically for tumble dryers. Remove the laundry when the dryer has finished drying. If individual items are still damp after drying, 125986541.qxp 2007-02-27 12:57 Page 9 set a brief post-drying time, but at least 30 minutes.

This will be necessary particularly for multilayered items (e.g. collars, pockets, etc.). Make sure that no metal objects are left in the laundry (e.g. hair clips, safety pins, pins). Button up pillowcases, close zip fasteners, hooks and poppers. Tie any belts or long tapes. To avoid laundry becoming tangled: close zips, button up duvet covers and tie loose tlight indicates that the appliance is in the cooling phase. At the end of drying, there is a 10 minute cooling phase to cool the laundry. "End of programme" light This light is on at the end of the cooling phase, during the anti-creasing phase and at the end of the programme. "Filter cleaning" light This light illuminates at the end of the programme to remind you that the filters must be cleaned. "Water reservoir full" light This light comes on at the end of the programme to remind you that the water reservoir must be emptied out. If this light illuminates during a programme this means that drum or drum ribs. of water at installation site differs from standard setting of machine. Fine strainer not in place and/or large mesh filter not locked in place. Conductance Loading door does not close. Install fine strainer and/or snap large mesh filter into place. 16 125986541.

qxp 2007-02-27 12:57 Page 17 Malfunction When pressing a button, the corresponding button flashes several times. Drying cycle ends shortly after programme starts. END light illuminated. Programme inactive, Condenser light illuminated. Possible cause Washing protection. After the start of the programme, the option can no longer be set. Not enough washing loaded or washing loaded is too dry for selected programme. Solution Turn the programme knob to OFF. Set the programme again Select time programme or higher drying level (e.g.

EXTRA DRY instead of CUPBOARD). Empty condensate tank, then start programme with START/PAUSE button. Clean lint filter Clean heat exchanger. Condensate tank is full. Lint filter clogged. Drying cycle lasts an unusually long time. Note: After around 5 hours the drying cycle ends automatically (see „Drying cycle complete“) Heat exchanger clogged with lint. DELICATE button pressed and load volume too big. Load volume too big. Laundry insufficiently predrained.

DELICATE is only suitable for use with loads of up to 3 kg! Reduce load volume. Laundry must be adequately pre-drained. If you are unable to identify or solve the problem, contact your local Service Centre. Before telephoning, make a note of the model, serial number and purchase date of your machine: the Service Centre will require this information. Important: If you call out an engineer to a fault listed below, or to repair a fault caused by incorrect use or installation, a charge will be made even if the appliance is under guarantee. 1206 17 125986541.qxp 2007-02-27 12:57 Page 18 Technical data Dimensions Width Height Depth Electrical connection Voltage Overall power - Fuse Depth with loading door open Maximum Load Cotton Synthetics Use 60 cm 85 cm 58 cm Information on the electrical connection is given on the rating plate on the inner edge of the appliance door 109 cm 6 3 Domestic + 5°C + 35°C kg kg Consumption values Consumption values Programme Cottons Cupboard1) Cottons Cupboard1) Synthetics Cupboard2) Max Cottons load: 2) Max Synthetics load: 1) Programme duration (in minutes) 115 105 50 6 kg 3 kg Energy consumption (in kWh) 3.7 3.1 1.35 Revolutions per minute 1000 1400 1200 The consumption values have been established under standard conditions.

They may deviate when the machine is operated in domestic circumstances. 18 125986541.qxp 2007-02-27 12:57 Page 19 Installation It is dangerous to alter the specifications or attempt to modify this product in any way. Care must be taken to ensure that the appliance does not stand on the electrical supply cable. Any electrical work required to install this appliance should be carried out by a qualified electrician or competent person. Important: The appliance must not be built-in.. Unpacking Slide out the polythene bag with the polystyrene stuffing before using the appliance Pull off adhesive strips from inside machine on top of drum. Positioning It is recommended that, for your convenience, the machine is positioned close to your washing machine. @@Air must be able to circulate freely all round the appliance.



[You're reading an excerpt. Click here to read official ZANUSSI](http://yourpdfguides.com/dref/954973)

[ZDC46130W user guide](http://yourpdfguides.com/dref/954973)

<http://yourpdfguides.com/dref/954973>

@@@If it is not, raise or lower the feet until it is. The feet must never be removed. @@@@The appliance must not be installed behind a lockable door, a sliding door a door with a hinge on the opposite side to that of the appliance. 125986541.qxp 2007-02-27 12:58 Page 20 Read carefully the instructions supplied with the kit.

Door reversal To make it easier to load or unload the laundry the door can be reversed. Reversing the door is not possible if after this operation the appliance result installed behind a door with a hinge on the opposite side to that of the appliance. Important: This operation must be carried out by qualified personnel.

Please contact the nearest Service Centre. Important: Should the appliance power supply cable need to be replaced, this must be carried out by our Service Center. Before switching on, make sure the electricity supply voltage is the same as that indicated on the appliance's rating plate. The appliance is supplied with a 13amp plug fitted. In the event of having to change the fuse in the plug supplied, a 13amp ASTA approved (BS1362) fuse must be used. Should the plug need to be replaced for any reason, proceed as described below. The wires in the mains lead are coloured in accordance with the following code: Green and Yellow - Earth Blue - Neutral Brown - Live GREEN & YELLOW E 13 A N L BROWN BLUE Electrical connection Any electrical work required to install this appliance should be carried out by a qualified electrician or competent person. WARNING: THIS APPLIANCE MUST BE EARTHED. The manufacturer declines any liability should this safety measure not be observed. 20 P1041 CORD CLAMP Important: The plug must be accessible after the appliance has been installed. 125986541.

qxp 2007-02-27 12:58 Page 21 Environment concerns Packaging materials The materials marked with the symbol are recyclable. >PE=<polyethylene >PS=<polystyrene >PP=<polypropylene This means that they can be recycled by disposing of them properly in appropriate collection containers. Old machine Use authorised disposal sites for your old appliance. Help to keep your country tidy! The symbol on the product or on its packaging indicates that this product may not be treated as household waste. Instead it should be taken to the appropriate collection point for the recycling of electrical and electronic equipment. By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling of this product. For more detailed information about recycling of this product, please contact your local council, your household waste disposal service or the shop where you purchased the product. Ecological hints To save energy and to help protect the environment, we recommend that you follow these hints: · Try to load the maximum capacity of the machine as small loads are uneconomical. ·

Always load well spun laundry. The higher the spin speed, the lower the electricity consumption and the shorter the drying times.

@@@Ventilate the room well. The room temperature should not exceed +35°C during drying. 21 125986541.qxp 2007-02-27 12:58 Page 22 Guarantee Conditions Guarantee/Customer Service Standard guarantee conditions We, Zanussi Electrolux, undertake that if, within 12 months of the date of the purchase, this Zanussi-Electrolux appliance or any part thereof is proved to be defective by reason only of faulty workmanship or materials, we will, at our option repair or replace the same FREE OF ANY CHARGE for labour, materials or carriage on condition that: · The appliance has been correctly installed and used only on the electricity supply stated on the rating plate. · The appliance has been used for normal domestic purposes only, and in accordance with the manufacturer's instructions.

· The appliance has not been serviced, maintained, repaired, taken apart or tampered with, by any person not authorised by us. · All service work under this guarantee must be undertaken by a Service Force Centre. @@@@Appliances found to be in use within a commercial environment, plus those which are · subject to rental agreements. Products of Zanussi Electrolux manufacture which are NOT marketed by Zanussi Electrolux. Service and Spare Parts In the event of your appliance requiring service, or if you wish to purchase spare parts, please contact your local Service Force Centre by telephoning: 0870 5 929929 Your telephone call will be automatically routed to the Service Force Centre covering your post code area.

For the address of your local Service Force Centre and further information about Service Force, please visit the website at www.serviceforce.co.uk. Before calling out an engineer, please ensure you have read the details under the heading "Something Not Working". When you contact the Service Force Centre you will need to give the following details: 1. Your name, address and post code. 2. Your telephone number. 3.

Clear and concise details of fault. 4. The model and serial number of the appliance (found on the rating plate). 5. The purchase date. Please note that a valid purchase receipt or guarantee documentation is required for inguarantee service calls. Customer Care For general enquiries concerning your Electrolux appliance or for further information · · 22 125986541.qxp 2007-02-27 12:58 Page 23 on Electrolux products, please contact our Customer Care Department by letter or telephone at the address below or visit our website at www.zanussi.co.

uk Customer Care Department Major Appliances Addington Way Luton Bedfordshire LU4 9QQ Tel 08705 727727(*) (*)calls to this number may be recorded for training purposes. · · European guarantee This appliance is guaranteed by Electrolux, in each of the countries listed in the following page, for the period specified in the appliance guarantee or otherwise by law. If you move from one of these countries to another of these countries the appliance guarantee will move with you subject to the following qualifications: · · The appliance guarantee starts from the date you first purchased the appliance which will be evidenced by production of a valid purchase document issued by seller of the appliance. The appliance guarantee is for the same period and to the same extent for labour and parts as exists in your country of residence for this particular model or range of appliances. The appliance guarantee is personal to the original purchaser of the appliance and cannot be transferred to another user.

The appliance is installed and used in accordance with instructions issued by Electrolux and is only used within the home, i.e. is not used for commercial purposes. The appliance is installed in accordance with all relevant regulations in force within your new country of residence.



[You're reading an excerpt. Click here to read official ZANUSSI ZDC46130W user guide](#)
<http://yourpdfguides.com/dref/954973>

The provisions of this European Guarantee do not affect any of the rights granted to you by law.

www.electrolux.com Albania Belgique/België/ Belgien Česká republika +35 5 4 261 450 +32 2 363 04 44 +420 2 61 12 61 12 +45 70 11 74 00 +49 180 32 26 622 +37 2 66 50 030 +34 902 11 63 88 www.electrolux.fr +44 8705 929 929 +30 23 10 56 19 70 Rr. Pjeter Bogdani Nr. 7 Tirane Bergensesteenweg 719, 1502 Lembeek Budjovická 3, Praha 4, 140 21 Danmark Deutschland Eesti España France Great Britain Hellas Sjællandsgade 2, 7000 Fredericia Muggenhofer Str. 135, 90429 Nürnberg Mustamäe tee 24, 10621 Tallinn Carretera M-300, Km. 29,900 Alcalá de Henares Madrid Addington Way, Luton, Bedfordshire LU4 9QQ 4 Linnou Str., 54627 Thessaloniki 23 125986541.

qxp 2007-02-27 12:58 Page 24 Hrvatska +385 1 63 23 338 +353 1 40 90 753 +39 (0) 434 558500 +37 17 84 59 34 +370 5 2780609 +35 2 42 43 13 01 +36 1 252 1773 +31 17 24 68 300 +47 81 5 30 222 +43 18 66 400 +48 22 43 47 300 +35 12 14 40 39 39 +40 21 451 20 30 Slavonska avenija 3, 10000 Zagreb Long Mile Road Dublin 12 C.so Lino Zanussi, 26 - 33080 Porcia (PN) Ireland Italia Latvija Lietuva Luxembourg Magyarország Nederland Norge Kr. Barona iela 130/2, LV-1012, Ozo 10A, LT 08200 Vilnius Rue de Bitbourg, 7, L-1273 H 1142 Budapest XIV, Erzsébet királyné útja 87 Vennootsweg 1, 2404 CG - Alphen aan den Rijn Risløkkvn. 2 , 0508 Oslo Herziggasse 9, 1230 Wien ul. Kolejowa 5/7, Warsaw Quinta da Fonte - Edificio Gonçalves Zarco - Q 35 2774 - 518 Paço de Arcos Str. Garii Progresului 2, S4, 040671 RO Industriestrasse 10, CH-5506 Electrolux Ljubljana d.o.o. Gerbiceva 98, 1000 Ljubljana Electrolux Slovakia s.r.

o., Electrolux Domáce spotrebice SK, Seberúniho 1, 821 03 Bratislava Österreich Polska Portugal Romania Schweiz-Suisse- Svizzera +41 62 88 99 111 S Slovenija Slovensko +38 61 24 25 731 +421 2 43 33 43 22 Suomi Sverige Türkiye 24 www.electrolux.fi +46 (0)771 76 76 76 +90 21 22 93 10 25 +7 095 937 7837 Electrolux Service, S:t Göransgatan 143,S-105 45 Stockholm Tarlabay caddesi no : 35 Taksim İstanbul 129090 , 16, ,, , 125986541.qxp 2007-02-27 12:58 Page 25 www.

electrtolux.com www.zanussi-electrolux.co.uk 125 986 541 - 00 - 26022007 - rev.

3.0 Subiect to change without notice .



[You're reading an excerpt. Click here to read official ZANUSSI](#)

[ZDC46130W user guide](#)

<http://yourpdfguides.com/dref/954973>