




# Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for ZANUSSI ZDC47100W. You'll find the answers to all your questions on the ZANUSSI ZDC47100W in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual ZANUSSI ZDC47100W  
User guide ZANUSSI ZDC47100W  
Operating instructions ZANUSSI ZDC47100W  
Instructions for use ZANUSSI ZDC47100W  
Instruction manual ZANUSSI ZDC47100W



---

User Manual			
	Tumble Dryer		



ZDC 47100 W



[You're reading an excerpt. Click here to read official ZANUSSI ZDC47100W user guide](http://yourpdfguides.com/dref/954974)  
<http://yourpdfguides.com/dref/954974>

### Manual abstract:

@@@ Good luck! The symbols you will see on some paragraphs of this booklet have the following meaning: The warning triangle emphasize information that is particularly important for your safety or correct functioning of the appliance. The information marked with this symbol provides additional instructions and practical tips on the use of the appliance. Tips and information about economical and ecological use of the machine are marked with this symbol.

Contents Important safety information . . . . 3 Controls panel and their functions 5 Description of the appliance . . .

. 6 Drying programmes . . . .

. . . . .

. . 6 Before the first drying cycle. . . . . 8 Drying hints . . .

. . . . .

. . 8-9 Operating sequence . . .

. . . . 10-12 Care and cleaning .

. . . . . 13-15 Something not working. . .

. . 16-17 Technical data . . . . .

. . . . .

. 18 Consumption values . . . .

. . . . . 18 Environment concerns. . . . .

. . . 19 2 Installation . . . . .

. . . . .

. . . . .

20 Electrical connection . . . . . 21 Guarantee Conditions .

. . . . . 22 Service & Spare Parts . . .

. . . . .

23 Important safety information In the interest of your safety and to ensure the correct use, before installing and first using the appliance, read this user manual carefully, including its hints and warnings. @@@@ Make sure that small pets do not climb into the drum. To avoid this, please check into the drum before using. · Any objects such as coins, safety pins, nails, screws, stones or any other hard, sharp material can cause extensive damage and must not be placed into the machine. · In order to avoid danger of fires caused by excessive drying, do not use appliance to dry the following items: Cushions, quilts and the like (these items accumulate heat).

· Items such as foam rubber (latex foam), shower caps, waterproof textiles, rubber backed articles and clothes or pillows fitted with foam rubber pads should not be dried in the tumble dryer. · Always unplug the appliance after use, clean and maintenance. · Under no circumstances should you attempt to repair the machine yourself. Repairs carried out by inexperienced persons may cause injury or serious malfunctioning. Contact your local Service Centre. Always insist on genuine spare parts. · Items that have been soiled with substances such as cooking oil acetone, petrol, kerosene, spot removers, turpentine, waxes and wax removers should be washed in hot water with an extra amount of detergent before being dried in the tumble dryer. · Danger of explosion: Never tumble dry items that have been in contact with inflammable solvents (petrol, methylated spirits, dry cleaning fluid and the like). As these substance are volatile, they could cause an explosion. Only tumble dry items washed with water.

· Risk of fire: items that have been spotted or soaked with vegetable or cooking oil constitute a fire hazard and should not be placed in the tumble dryer. · If you have washed your laundry with stain remover you must execute an extra rinse cycle before loading your tumble dryer. · Please make sure that no gas lighters or matches have accidentally been left in pockets of garments to be loaded into appliance **WARNING!** Never stop a tumble dry before the end of the drying cycle unless all items are quickly removed and spread out so that the heat is dissipated. **RISK OF FIRE!** 3 Installation · This appliance is heavy. Care should be taken when moving it. · When unpacking the appliance, check that it is not damaged. If in doubt, do not use it and contact the Service Centre. · All packing and transit bolts must be removed before use. Serious damage can occur to the product and to property if this is not adhered to. See relevant section in the user manual.

· The final part of a tumble dryer cycle occurs without heat ( cool down cycle ) to ensure that the items are left at a temperature that ensures that items will not be damaged. · Any electrical work required to install this appliance should be carried out by a qualified electrician or competent person. · Care must be taken to ensure that the appliance does not stand on the electrical supply cable. · If the machine is situated on a carpeted floor, please adjust the feet in order to allow air to circulate freely. · After having installed the appliance, check that it is not pressing or standing on its electrical supply cable.

· If the tumble dryer is placed on top of a washing machine, it is compulsory touse the stacking kit (optional accessory). Use · This appliance is designed for domestic use. It must not be used for purposes other than those for which it was designed. · Only wash fabrics which are designed to be machine dried. Follow the instructions on each garment label.

· Do not dry unwashed items in the tumble dryer. · Do not overload the appliance. See the relevant section in the user manual. · Clothes which are dripping wet should not be placed in the dryer. · Garments which have been in contact with volatile petroleum products should not be machine dried. If volatile cleaning fluids are used, care should be taken to ensure that the fluid is removed from the garment before placing in the machine. · Never pull the power supply cable to remove the plug from the socket; always take hold of the plug itself. · Never use the tumble dryer if the power supply cable, the control panel, the working surface or the base are damaged so that the inside of the tumble dryer is accessible. · Fabric softeners, or similar products should be used as specified by the fabric softener instructions. Child safety · This machine is not intended for use by young children or infirm persons without supervision.

· Children should be supervised to ensure that they do not play with the appliance. · The packaging components (e.g. plastic film, polystyrene) can be dangerous to children - danger of suffocation! Keep them out of children's reach. · Keep all detergents in a safe place out of children's reach. · Make sure that children or pets do not climb into the drum. 4 Controls panel and their functions 1 1 PROGRAMME TIME SELECTOR DIAL 2 3 4 5 Allows you to select electronically controlled or time controlled drying. Turn the dial to the required programme or time. 1. Select programme.

2. Press the DELICATE button. The relevant light will light up. 3. Press the START/PAUSE button.

The relevant light will stop flashing. DELICATE is only suitable for use with loads of up to 3kg! When the programme has finished the pilot lights End is on.

1. Select programme, and press the TEXTILE button.

You can select 2 different options: - Cotton Cycle: to be used for cotton, where as in the programmes - Synthetics to be used for synthetic or delicate items. 3. Press the START/PAUSE button. The relevant light will stop flashing. 2 DELICATE button 3 TEXTILE button 4 · "Drying" light · "Cooling" light INDICATOR LIGHTS · "End/Anticrease" light · "Filter" light · "Empty Tank" light · "Condenser" light 1.



[You're reading an excerpt. Click here to read official ZANUSSI](#)

[ZDC47100W user guide](#)

<http://yourpdfguides.com/dref/954974>

Select programme. 2. Press the START/PAUSE button. The relevant light will stop flashing. 5 START/PAUSE button 5 Description of the appliance 1 Control panel 2 Fluff filters 3 Rating Plate 4 Condenser Unit 5 Water reservoir 6 Adjustable feet 1 2 3 5 6 4 Drying programmes Programme Extra Cupboard Max load Type of kg laundry 7 Cottons Options Textile -Cotton Textile -Cotton Textile -Synthetics Textile -Synthetics Description of programme Drying thick or multi-layered textiles, e.

g. terry towelling items Thorough drying of fabrics of even thicknesses, e.g. terry towelling items, knitted items, towels. Thorough drying of thick or multilayered fabrics, e.g. pullovers, bedding, table linen. For thin fabrics which are not ironed, e.g. easy care shirts, table linen, baby clothes, socks, lingerie with bones or wires.

7 Cottons Extra 3 Synthetics Cupboard 3 Synthetics 6 Drying programmes Programme Max load kg 3 Type of laundry Synthetics Options Textile -Synthetics -Cotton Delicate Description of programme If the TIME programme has been selected, programme duration time of 30 minutes up to 140 minutes can be set by intervals of 10 minutes. Drying thick or multi-layered textiles, e.g. terry towelling items. Wool care is special programme for briefly treating woollens with warm air after they have been dried naturally, worn or stored for long periods.

Wool fibres are aligned and the wool becomes soft and snugly. Special programme with anti-crease mechanism for easy care textiles such shirts and blouses; for minimum ironing effort. The result depends on the type and quality of textiles. (The loading volume corresponds to approx. 5 to 7 shirts.)

) Recommendation: Place textiles in the dryer straight after spinning. @@@@ Close press studs, zips and hooks and tie belts and apron strings. @@@@ The laundry must be thoroughly spun before tumble drying. · Easy-care items, too, e.g. @@@@ Please do not overdry items of this type. It is advisable to allow for shrinkage when choosing the size of new purchases. · You can also put starched items into your dryer. However, to achieve the desired starched effect, choose the programme "iron dry". To remove any starch residues, wipe out the internal drum after drying with a moist cloth and then rub it dry.

· To avoid a static charge when drying is completed, use either a fabric softener when you are washing the laundry or a fabric conditioner specifically for tumble dryers. · Remove the laundry when the dryer has finished dried. This button must be depressed also after a power failure and after having reinserted the water reservoir, if it has been emptied in the middle of a programme after lighting up of light Empty Tank. In both cases the light of the Start/Pause button flashes to remind you that the start button needs to be pressed again. 10. Indicator lights These lights indicate the following functions: "Drying" light

This light indicates that the appliance is in the drying phase. "Cooling" light This light indicates that the appliance is in the cooling phase. · Close loading door. · Have you pressed the START/PAUSE button? button again. Drying results unsatisfactory. · Select a different programme · Wrong programme selected. the next time you dry. · Lint filter clogged. · Clean lint filter. · Heat exchanger clogged with lint. · Clean heat exchanger. lint.

· Observe recommended loading volumes. · Ventilation slots in base area · Uncover ventilation slots in covered up. · Residue on inside surface of drum or drum ribs. · Conductance of water at installation site differs from standard setting of machine.

base area. · Clean inside surface of drum and drum ribs · Re-programme standard setting for degree of drying. · Fine strainer not in place Loading door does not and/or large mesh filter not close. locked in place. 16 · Install fine strainer and/or snap large mesh filter into place. Malfunction When pressing a button, the corresponding button flashes several times. Possible cause · Washing protection. After the start of the programme, the option can no longer be set.

Solution · Turn the programme knob to OFF. Set the programme again · Select time programme or higher drying level (e.

g. EXTRA DRY instead of CUPBOARD). Drying cycle ends · Not enough washing shortly after programme loaded starts. END or washing loaded is too light illuminated. dry for selected programme. Programme inactive, Condenser light illuminated. · Condensate tank is full. · Empty condensate tank, then start programme with START/PAUSE button. Drying cycle lasts an unusually long time. Note: After around 5 hours the drying cycle ends automatically (see „Drying cycle complete") · Lint filter clogged.

· Heat exchanger clogged with lint. · DELICATE button pressed and load volume too big. · Load volume too big. · Laundry insufficiently predrained. · Clean lint filter · Clean heat exchanger.

· DELICATE is only suitable for use with loads of up to 3 kg! · Reduce load volume. · Laundry must be adequately pre-drained. If you are unable to identify or solve the problem, contact your local Service Centre. Before telephoning, make a note of the model, serial number and purchase date of your machine: the Service Centre will require this information. Important: If you call out an engineer to a fault listed below, or to repair a fault caused by incorrect use or installation, a charge will be made even if the appliance is under guarantee.

1206 17 Technical data Dimensions Width Height Depth Electrical connection Voltage Overall power - Fuse 60 cm 85 cm 58 cm Information on the electrical connection is given on the rating plate on the inner edge of the appliance door Depth with loading door open Maximum Load Cotton Synthetics Use 109 cm 7

3 Domestic + 5°C + 35°C kg kg This appliance conforms with the following EU Directives: 73/23/EEC dated 19.02.1973 Low Voltage Directive 89/336/EEC dated 03.05.1989 EMC Directive inclusive of Amending Directive 92/31/EEC 93/68/EEC dated 22.07.1993 CE Marking Directive Consumption values Consumption values Programme Cottons Cupboard1) Cottons Iron1) Synthetics Cupboard2) Programme duration (in minutes) 130 100 48 Energy consumption (in kWh) 4,4 3,41 1.36 Revolutions per minute 1000 1000 1200 1) 2) Max Cottons load: Max Synthetics load: 7 kg 3 kg The consumption values

have been established under standard conditions. They may deviate when the machine is operated in domestic circumstances. 18 Environment concerns Packaging materials The materials marked with the symbol are recyclable.

>PE=<polyethylene >PS=<polystyrene >PP=<polypropylene This means that they can be recycled by disposing of them properly in appropriate collection containers.



[You're reading an excerpt. Click here to read official ZANUSSI](http://yourpdfguides.com/dref/954974)

[ZDC47100W user guide](http://yourpdfguides.com/dref/954974)

<http://yourpdfguides.com/dref/954974>

Old machine Use authorised disposal sites for your old appliance. Help to keep your country tidy! @@@@ · Always load well spun laundry. @@@@ · Ventilate the room well. @@Care must be taken to ensure that the appliance does not stand on the electrical supply cable. Any electrical work required to install this appliance should be carried out by a qualified electrician or competent person. Positioning It is recommended that, for your convenience, the machine is positioned close to your washing machine. The tumble dryer must be installed in a clean place, where dirt does not build up. Air must be able to circulate freely all round the appliance. Do not obstruct the front ventilation grille or the air intake grilles at the back of the machine. To keep vibration and noise to a minimum when the dryer is in use, it should be placed on a firm, level surface. Once in its permanent operating position, check that the dryer is absolutely level with the aid of a spirit level. If it is not, raise or lower the feet until it is. The feet must never be removed. Do not restrict the floor clearance through deeppile carpets, strips of wood or similar.

This might cause heat build-up which would interfere with the operation of the appliance. Important: The hot air emitted by the tumble dryer can reach temperatures of up to 60°C. The appliance must therefore not be installed on floors which are not resistant to high temperatures. When operating the tumble dryer, the room temperature must not be lower than +5°C and higher than +35°C, as it may affect the performance of the appliance. Stacking kit A special stacking kit is available through your dealer, to enable the mounting of the dryer on top of a front loading washing machine with cover's Important: The appliance must not built-in.

· Unpacking Slide out the polythene bag with the polystyrene stuffing before using the appliance Pull off adhesive strips from inside machine on top of drum. Should the appliance be moved, it must be transported vertically. The appliance must not be installed behind a lockable door, a sliding door a door with a hinge on the opposite side to that of the appliance. 20 depth between 48 and 60 cm. Read carefully the instructions supplied with the kit. Door reversal To make it easier to load or unload the laundry the door can be reversed. @@Important: This operation must be carried out by qualified personnel. @@@@The appliance is supplied with a 13amp plug fitted. @@Should the plug need to be replaced for any reason, proceed as described below.

The wires in the mains lead are coloured in accordance with the following code: Green and Yellow - Earth Blue - Neutral Brown - Live GREEN & YELLOW E 13 A N L Electrical connection P1041 BROWN BLUE CORD CLAMP Any electrical work required to install this appliance should be carried out by a qualified electrician or competent person. WARNING: THIS APPLIANCE MUST BE EARTHED. The manufacturer declines any liability should this safety measure not be observed. Important: The plug must be accessible after the appliance has been installed. Important: The manufacturer declines any responsibility for damage or injury through failure to comply with the above safety precautions. 21 Guarantee Conditions Standard guarantee conditions We, Zanussi-Electrolux, undertake that if within 12 months of the date of the purchase this Zanussi- Electrolux appliance or any part thereof is proved to be defective by reason only of faulty workmanship or materials, we will, at our option repair or replace the same FREE OF CHARGE for labour, materials or carriage on condition that: · The appliance has been correctly installed and used only on the electricity supply stated on the rating plate.

@@@Exclusions · Damage or calls resulting from transportation, improper use or neglect, the replacement of any light bulbs or removable parts of glass or plastic. · Costs incurred for calls to put right an appliance which is improperly installed or calls to appliances outside the United Kingdom. 22 · Appliances found to be in use within a commercial environment, plus those which are subject to rental agreements. · Products of Electrolux manufacturer that are not marketed by Electrolux Service and Spare Parts In the event of your appliance requiring service, or if you wish to purchase spare parts, please contact your local Service Force Centre by telephoning 0870 5 929 929 Your telephone call will be automatically routed to the Service Force Centre covering your postcode area.

For the address of your local Service Force Centre and further information about Service Force, please visit the website at [www.serviceforce.co.uk](http://www.serviceforce.co.uk) Before calling out an engineer, please ensure you have read the details under the heading "Something not working" When you contact the Service Force Centre you will need to give the following details: 1. Your name, address and postcode.

2. Your telephone number. 3. Clear concise details of the fault. 4.

The model and Serial number of the appliance (found on the rating plate). 5. The purchase date. Please note a valid purchase receipt or guarantee documentation is required for in guarantee service calls. Customer Care For general enquiries concerning your Electrolux appliance, or for further information on Electrolux products please contact our Customer Care Department by letter or telephone at the address below or visit our website at [www.electrolux.co.uk](http://www.electrolux.co.uk) Customer Care Department Electrolux Major Appliances Addington Way Luton Bedfordshire, LU4 9QQ Tel: 08705 727 727 (\*) (\*)

Calls may be recorded for training purposes. 23 European guarantee This appliance is guaranteed by Electrolux, in each of the countries listed in the following page, for the period specified in the appliance guarantee or otherwise by law. If you move from one of these countries to another of these countries the appliance guarantee will move with you subject to the following qualifications: · The appliance guarantee starts from the date you first purchased the appliance which will be evidenced by production of a valid purchase document issued by seller of the appliance.

· The appliance guarantee is for the same period and to the same extent for labour and parts as exists in your country of residence for this particular model or range of appliances. · The appliance guarantee is personal to the original purchaser of the appliance and cannot be transferred to another user. · The appliance is installed and used in accordance with instructions issued by Electrolux and is only used within the home, i.e. is not used for commercial purposes. · The appliance is installed in accordance with all relevant regulations in force within your new country of residence. The provisions of this European Guarantee do not affect any of the rights granted to you by law. [www.electrolux.com](http://www.electrolux.com) Albania Belgique/België/ Belgien Česká republika Danmark Deutschland Eesti España France Great Britain +35 5 4 261 450 +32 2 363 04 44 +420 2 61 12 61 12 +45 70 11 74 00 +49 180 32 26 622 +37 2 66 50 030 +34 902 11 63 88 [www](http://www).



[You're reading an excerpt. Click here to read official ZANUSSI ZDC47100W user guide](http://yourpdfguides.com/dref/954974)  
<http://yourpdfguides.com/dref/954974>

*electrolux.fr +44 8705 929 929 Rr. Pjeter Bogdani Nr. 7 Tirane Bergensesteenweg 719, 1502 Lembeek Budijovická 3, Praha 4, 140 21 Sjællandsgade 2, 7000 Fredericia Muggenhofer Str. 135, 90429 Nürnberg Mustamäe tee 24, 10621 Tallinn Carretera M-300, Km.*

*29,900 Alcalá de Henares Madrid Addington Way, Luton, Bedfordshire LU4 9QQ 24 Hellas Hrvatska Ireland Italia Latvija Lietuva Luxembourg Magyarország Nederland Norge Polska Portugal +30 23 10 56 19 70 +385 1 63 23 338 +353 1 40 90 753 +39 (0) 434 558500 +37 17 84 59 34 +370 5 2780609 +35 2 42 43 13 01 +36 1 252 1773 +31 17 24 68 300 +47 81 5 30 222 +48 22 43 47 300 +35 12 14 40 39 39 4 Limnou Str., 54627 Thessaloniki Slavonska avenija 3, 10000 Zagreb Long Mile Road Dublin 12 C.so Lino Zanussi, 26 33080 Porcia (PN) Kr. Barona iela 130/2, LV1012, Riga Ozo 10A, LT 08200 Vilnius Rue de Bitbourg, 7, L-1273 Hamm H 1142 Budapest XIV, Erzsébet királyné útja 87 Vennootweg 1, 2404 CG Alphen aan den Rijn Risløkkvn. 2, 0508 Oslo ul.*

*Kolejowa 5/7, Warsaw Quinta da Fonte - Edificio Gonçalves Zarco - Q 35 2774 - 518 Paço de Arcos Kr. Barona iela 130/2, LV1012, Riga Industriestrasse 10, CH-5506 Mägenwil Romania +37 17 84 59 34 Schweiz/Suisse/ Svizzera +41 62 88 99 111 Slovenija Slovensko +38 61 24 25 731 +421 2 43 33 43 22 Electrolux Ljubljana d.o.o. Gerbiceva 98, 1000 Ljubljana Electrolux Slovakia s.r .o., ElectroluxDomácespotrebiceSK, Seberíniho 1, 821 03 Bratislava Suomi Sverige www.electrolux.fi +46 (0)771 76 76 76 Electrolux Service, S:t Göransgatan 143,S-105 45 Stockholm Tarlabahý caddesi no : 35 Taksim Istanbul 129090 , 16, ,, , 25 Türkiye +90 21 22 93 10 25 +7 095 937 7837 www.*

*electrtolux.com 136905610-02-19052008 .*



[You're reading an excerpt. Click here to read official ZANUSSI](#)

[ZDC47100W user guide](#)

<http://yourpdfguides.com/dref/954974>