





Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for ZANUSSI ZDC67550W. You'll find the answers to all your questions on the ZANUSSI ZDC67550W in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual ZANUSSI ZDC67550W
User guide ZANUSSI ZDC67550W
Operating instructions ZANUSSI ZDC67550W
Instructions for use ZANUSSI ZDC67550W
Instruction manual ZANUSSI ZDC67550W



| | | | |
|-------------|--------------|--|--|
| User Manual | | | |
| | Tumble Dryer | | |



ZDC 67550W



[You're reading an excerpt. Click here to read official ZANUSSI ZDC67550W user guide](http://yourpdfguides.com/dref/955053)
<http://yourpdfguides.com/dref/955053>

Manual abstract:

Save these instructions and make sure that they remain with the appliance if it is moved or sold, so that everyone using it through its life will be properly informed on appliance use and safety. General safety It is dangerous to alter the specifications or attempt to modify this product in any way. This appliance is not intended for use by persons (including children) with reduced physical, sensory or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Make sure that small pets do not climb into the drum. To avoid this, please check into the drum before using. @@@@ Always unplug the appliance after use, clean and maintenance. @@@@ Contact your local Service Centre. Always insist on genuine spare parts. Items that have been soiled with substances such as cooking oil acetone, petrol, kerosene, spot removers, turpentine, waxes and wax removers should be washed in hot water with an extra amount of detergent before being dried in the tumble dryer. Danger of explosion: Never tumble dry items that have been in contact with inflammable solvents (petrol, methylated spirits, dry cleaning fluid and the like). As these substance are volatile, they could cause an explosion. Only tumble dry items washed with water. Risk of fire: items that have been spotted or soaked with vegetable or cooking oil constitute a fire hazard and should not be placed in the tumble dryer. Warning: Never stop a tumble dry before the end of the drying cycle unless all items are quickly removed and spread out so that the heat is dissipated. If you have washed your laundry with stain remover you must execute an extra rinse cycle before loading your tumble dryer.

Please make sure that no gas lighters or matches have accidentally been left in pockets of garments to be loaded into appliance GB 125986532.qxp 2007-03-29 10:43 Page 6 6 electrolux safety information Installation This appliance is heavy. Care should be taken when moving it. When unpacking the appliance, check that it is not damaged. If in doubt, do not use it and contact the Service Centre.

All transit packaging must be removed before use. Serious damage can occur to the product and to property if this is not adhered to. See relevant section in the user manual. The final part of a tumble dryer cycle occurs without heat (cool down cycle) to ensure that the items are left at a temperature that ensures that items will not be damaged. Any electrical work required to install this appliance should be carried out by a qualified electrician or competent person. Care must be taken to ensure that the appliance does not stand on the electrical supply cable. If the machine is situated on a carpeted floor, please adjust the feet in order to allow air to circulate freely under the appliance After having installed the appliance, check that it is not pressing or standing on its electrical supply cable. If the tumble dryer is placed on top of a washing machine, it is compulsory to use the stacking kit (optional accessory). tumble dryer. Fabric softeners, or similar products, should be used as specified by the fabric softener instructions.

Do not overload the appliance. See the relevant section in the user manual. Clothes which are dripping wet should not be placed in the dryer. Garments which have been in contact with volatile petroleum products should not be machine dried. If volatile cleaning fluids are used, care should be taken to ensure that the fluid is removed from the garment before placing in the machine. Never pull the power supply cable to remove the plug from the socket; always take hold of the plug itself. Never use the tumble dryer if the power supply cable, the control panel, the working surface or the base are damaged so that the inside of the tumble dryer is accessible. Use This appliance is designed for domestic use. It must not be used for purposes other than those for which it was designed. Only wash fabrics which are designed to be machine dried.

Follow the instructions on each garment label. Do not dry unwashed items in the Child safety This machine is not intended for use by young children or infirm persons without supervision. Children should be supervised to ensure that they do not play with the appliance. The packaging components (e.g. plastic film, polystyrene) can be dangerous to children - danger of suffocation! Keep them out of children's reach Keep all detergents in a safe place out of children's reach. Make sure that children or pets do not climb into the drum. 125987350.qxp 2007-01-09 15:02 Page 7 product description/Control panel electrolux 7 Product description GB 1 2 3 4 5 6 Control panel Fluff filters Rating Plate Condenser unit Water reservoir Adjustable feet Control panel 1 2 3 4 5 Programme selector dial Delicate button Dryness button Buzzer button Indicator lights 6 7 Start/Pause button Delay Start button 125987350.qxp 2007-01-09 15:02 Page 8 8 electrolux use Use First Use Ensure that the electrical connections comply with the installation instructions.

Remove the polystyrene block and any material from the drum. Before using your tumble dryer for the first time, we recommend that you to place a few damp cloths inside the appliance and dry for 30 minutes. There may be dust inside a brand new tumble dryer. 1 1 1 Select the required programme Turn the programme selector dial to the required programme. The light Start/Pause starts to flash. Special Cooling Off Extra Cottons Strong Cupboard Jeans Easy Iron Mixed Damp Iron 30' Extra Iron Cupboard Synthetics Daily Use Load the laundry Time 60' Connect the appliance. Open the door (see picture). The selector dial is divided into following sections: · Cottons · Synthetics · Time · Special Electronically controlled drying (automatic) Allows you to select electronically controlled or time controlled drying. The appliance runs these programmes with the help of probes which detect the degree of dampness of the laundry. Simply select the programme according to the type of laundry and degree of drying required.

The selector dial can be turned either clockwise or anticlockwise. The lights Drying, Place the laundry in the drum, one item at a time, shaking them out as much as possible. Close the door. Please check the laundry does not get caught between the door and filter. 125987350.qxp 2007-01-09 15:02 Page 9 use electrolux 9 Cooling and End/Antcrease come on. At the end of the programme the selector dial must be turned to position Off, to switch the machine off.

Attention! If you turn the programme selector dial to another programme when the machine is working, the lights of the programme progress display start to flash. The machine will not perform the new selected programme. Press the Dryness button as many times as necessary until the small light at the level of residual dampness required is illuminated.



[You're reading an excerpt. Click here to read official ZANUSSI](http://yourpdfguides.com/dref/955053)

[ZDC67550W user guide](http://yourpdfguides.com/dref/955053)

<http://yourpdfguides.com/dref/955053>

GB Dryness Programme Option buttons Depending on the programme, different functions can be combined. These must be selected after choosing the desired programme and before depressing the Start/Pause button. When these buttons are pressed, the corresponding pilot lights come on. When they are pressed again, the pilot lights go out. Pressing this button allows drying to be performed at a lower temperature, for delicate items.

When the programme has finished the pilot lights End is on. Select the Buzzer When the drying cycle has finished, an intermittent audible signal will sound. Select Delicate The corresponding pilot light comes on. This option can also be used for time controlled drying. DELICATE is only suitable for use with loads of up to 3kg! When the programme has finished the pilot lights End is on.

By depressing button Buzzer the acoustic signal is switched off in the following cases: · when selecting the programme · when depressing the buttons · when the programme selector dial is turned to another position during the programme or when you depress an option button during the cycle · at the end of the programme. The corresponding light comes on Select the Start/Pause Start/Pause Select the Dryness Press the Dryness button repeatedly, to select the desired option. The relevant light will illuminate. Laundry becomes dryer from MIN to MAX. 125987350.qxp 2007-01-09 15:02 Page 10 10 electrolux use Press this button to start the dryer after having selected the programme and the options. The relevant light will stop flashing. If the programme selector dial is turned to another position, when the machine is running, the buzzer will sound and the programme phase indicator lights will flash. The drum turns alternately in both directions during drying. All drying programmes end with a 10 minute cooling phase (light Cooling is on).

You may remove the laundry after this phase. @@The machine begins the countdown, which is shown by the pilot lights. @@@@Close press studs, zips and hooks and tie belts and apron strings. @@@@· The laundry must be thoroughly spun before tumble drying. · Easy-care items, too, e.g. @@@@Tie any belts or long tapes. @@of aprons). drying (depending on crease resistance approx. 30 seconds or using the special brief spin programme of your washing machine).

Knitted textiles (knitted underwear) may shrink a little during drying. Please do not overdry items of this type. It is advisable to allow for shrinkage when choosing the size of new purchases. You can also put starched items into your dryer. However, to achieve the desired starched effect, choose the programme "iron dry".

To remove any starch residues, wipe out the internal drum after drying with a moist cloth and then rub it dry. To avoid a static charge when drying is completed, use either a fabric softener when you are washing the laundry or a fabric conditioner specifically for tumble dryers. Remove the laundry when the dryer has finished drying. If individual items are still damp after drying, set a brief possible dryer it simply collects in the filter. @@When this occurs, clean the filters with warm water using a brush.

@@@To open the door, push the catch as per picture. @@Also clean the outside, removing all fluff. @@@@In this case it must be filtered (e.g. through a coffee filter). @@@@The reservoir must be re-inserted correctly. If this is not done the Empty Tank pilot light Empty Tank comes on during the next drying cycle and the programme stops, leaving the laundry damp. The buzzer will sound for 1 minute. After emptying and inserting the reservoir the START-button has to be depressed again to allow the programme to continue. 125987350.

qxp 2007-01-09 15:02 Page 20 20 electrolux something not working Something not working Certain problems are due to lack of simple maintenance or oversights, which can be solved easily without calling out an engineer. Before contacting your local Service Centre, please carry out the checks listed below. During machine operation it is possible that the red Start/Pause pilot light flashes to indicate that the machine is not working. Once the problem has been eliminated, press the Start/Pause button to restart the programme. If after all checks, the problem persists, contact your local Service Centre. Malfunction q Possible cause Mains plug is not plugged in or fuse is not working correctly. Loading door is open. Have you pressed the START/ PAUSE button? Wrong programme selected. q Solution Plug in at mains socket. Check fuse in fuse box (domestic installation).

Close loading door. Press the START/PAUSE button again. Select a different programme the next time you dry (see "Overview of programmes" section). Clean lint filter. Clean heat exchanger.

Observe recommended loading volumes. Dryer does not work. q q q q q Lint filter clogged. Heat exchanger clogged with lint. Incorrect volume of laundry. q q q Drying results unsatisfactory. q q q Ventilation slots in base area covered up. q Uncover ventilation slots in base area. Clean inside surface of drum and drum ribs Re-programme standard setting for degree of drying qResidue on inside surface of drum or drum ribs. of water at installation site differs from q qConductance q Loading door does not close. q Fine strainer not in place and/or large mesh filter not locked in place. q Install fine strainer and/or snap large mesh filter into place. 125987350.qxp 2007-01-09 15:02 Page 21 something not working electrolux 21 Malfunction When pressing a button, the corresponding button flashes several times. q Possible cause Washing protection.

After the start of the programme, the option can no longer be set. Solution Turn the programme knob to OFF. Set the programme again GB q Programme inactive, Empty Tank light illuminated.: q q Condensation tank is full. Empty condensation tank, then start programme with START/PAUSE button. q Drying cycle ends shortly after programme starts. END light illuminated. Not enough washing loaded or washing loaded is too dry for selected programme. q Select time programme or higher drying level (e.g.

EXTRA DRY instead of CUPBOARD). q Lint filter clogged. q Clean lint filter Clean heat exchanger. DELICATE is only suitable for use with loads of up to 3 kg! Reduce load volume. @@@@DELICATE button pressed and load volume too big.

Load volume too big. @@@@If it is not, raise or lower the feet until it is. The feet must never be removed. @@@@The tumble dryer must be installed in a clean place, where dirt does not build up. Air must be able to circulate freely all round the appliance.

Do not obstruct the front ventilation grille or the air intake grilles at the back of the machine. To keep vibration and noise to a The hot air emitted by the tumble dryer can reach temperatures of up to 60°C.



[You're reading an excerpt. Click here to read official ZANUSSI ZDC67550W user guide](http://yourpdfguides.com/dref/955053)
<http://yourpdfguides.com/dref/955053>

The appliance must therefore not be installed on floors which are not resistant to high temperatures. When operating the tumble dryer, the room temperature must not be lower than +5°C and higher than +35°C, as it may affect the performance of the appliance. Stacking kit A special stacking kit is available through your dealer, to enable the mounting of the dryer on top of a front loading washing machine with cover's depth between 48 and 60 cm. Read carefully the instructions supplied with the kit. 125987350.qxp 2007-01-09 15:02 Page 26 26 electrolux installation Door reversal To make it easier to load or unload the laundry the door can be reversed. Electrical connection Any electrical work required to install this appliance should be carried out by a qualified electrician or competent person. Reversing the door is not possible if after this operation the appliance result installed behind a door with a hinge on the opposite side to that of the appliance.

This operation must be carried out by qualified personnel. Please contact the nearest Service Centre. **WARNING: THIS APPLIANCE MUST BE EARTHED.** The manufacturer declines any liability should this safety measure not be observed. Before switching on, make sure the electricity supply voltage is the same as that indicated on the appliance's rating plate. The appliance is supplied with a 13amp plug fitted. In the event of having to change the fuse in the plug supplied, a 13amp ASTA approved (BS1362) fuse must be used. Should the plug need to be replaced for any reason, proceed as described below. The wires in the mains lead are coloured in accordance with the following code: Green and Yellow - Earth Blue - Neutral Brown - Live GREEN & YELLOW E 13 A L N BROWN BLUE P1041 CORD CLAMP 125987350.qxp 2007-01-09 15:02 Page 27 environment concerns electrolux 27 Environment concerns Ecological hints GB Packaging materials The materials marked with the symbol are recyclable.

>PE<=polyethylene >PS<=polystyrene >PP<=polypropylene This means that they can be recycled by disposing of them properly in appropriate collection containers. To save energy and to help protect the environment, we recommend that you follow these hints: · Try to load the maximum capacity of the machine as small loads are uneconomical. · Always load well spun laundry. The higher the spin speed, the lower the electricity consumption and the shorter the drying times. @@Select the drying programme according to the type of laundry and the required degree of dryness.

· To utilize the maximum load, laundry which is to be dried ready to put away (store dry) can be dried together with items to be ironed. To do this, select the programme for iron-dry, remove the iron-dry items at the end of the programme and then finish-dry the rest of the load. · Clean the filters regularly to avoid excessive drying times and high electricity consumption. · Ventilate the room well. @@Help to keep your country tidy! @@@@For more detailed information about recycling of this product, please contact your local council your household waste disposal service or the shop where you purchased the product.

125987340.qxp 2007-03-16 11:42 Page 30 28 electrolux guarantee/customer service Guarantee Conditions Guarantee/ Customer Service Standard guarantee conditions We, Zanussi Electrolux, undertake that if, within 12 months of the date of the purchase, this Zanussi-Electrolux appliance or any part thereof is proved to be defective by reason only of faulty workmanship or materials, we will, at our option repair or replace the same FREE OF ANY CHARGE for labour, materials or carriage on condition that: · The appliance has been correctly installed and used only on the electricity supply stated on the rating plate. · The appliance has been used for normal domestic purposes only, and in accordance with the manufacturer's instructions. · The appliance has not been serviced, maintained, repaired, taken apart or tampered with, by any person not authorised by us. · All service work under this guarantee must be undertaken by a Service Force Centre. @@@@Appliances found to be in use within a commercial environment, plus those which are · subject to rental agreements. Products of Zanussi Electrolux manufacture which are NOT marketed by Zanussi Electrolux. Service and Spare Parts In the event of your appliance requiring service, or if you wish to purchase spare parts, please contact your local Service Force Centre by telephoning: 0870 5 929929 Your telephone call will be automatically routed to the Service Force Centre covering your post code area. For the address of your local Service Force Centre and further information about Service Force, please visit the website at www.serviceforce.co.uk.

Before calling out an engineer, please ensure you have read the details under the heading "Something Not Working". When you contact the Service Force Centre you will need to give the following details: 1. Your name, address and post code. 2. Your telephone number. 3. Clear and concise details of fault.

4. The model and serial number of the appliance (found on the rating plate). 5. The purchase date. Please note that a valid purchase receipt or guarantee documentation is required for inguarantee service calls. Customer Care For general enquiries concerning your Electrolux appliance or for further information · · 125987340.

qxp 2007-03-16 11:42 Page 31 guarantee/customer service electrolux 29 on Electrolux products, please contact our Customer Care Department by letter or telephone at the address below or visit our website at www.zanussi.co.uk Customer Care Department Major Appliances Addington Way Luton Bedfordshire LU4 9QQ Tel 08705 727727(*) (*)calls to this number may be recorded for training purposes. · · · European guarantee This appliance is guaranteed by

Electrolux, in each of the countries listed in the following page, for the period specified in the appliance guarantee or otherwise by law. If you move from one of these countries to another of these countries the appliance guarantee will move with you subject to the following qualifications: · · The appliance guarantee starts from the date you first purchased the appliance which will be evidenced by production of a valid purchase document issued by seller of the appliance. The appliance guarantee is for the same period and to the same extent for labour and parts as exists in your country of residence for this particular model or range of appliances. The appliance guarantee is personal to the original purchaser of the appliance and cannot be transferred to another user. The appliance is installed and used in accordance with instructions issued by Electrolux and is only used within the home, i.e. is not used for commercial purposes.



[You're reading an excerpt. Click here to read official ZANUSSI ZDC67550W user guide](#)
<http://yourpdfguides.com/dref/955053>

The appliance is installed in accordance with all relevant regulations in force within your new country of residence. GB The provisions of this European Guarantee do not affect any of the rights granted to you by law. www.electrolux.

com Albania Belgique/België/ Belgien Česká republika +35 5 4 261 450 +32 2 363 04 44 +420 2 61 12 61 12 +45 70 11 74 00 +49 180 32 26 622 +37 2 66 50 030 +34 902 11 63 88 www.electrolux.fr +44 8705 929 929 +30 23 10 56 19 70 Rr. Pjeter Bogdani Nr. 7 Tirane Bergensesteenweg 719, 1502 Lembeek Budjovická 3, Praha 4, 140 21 Danmark Deutschland Eesti España France Great Britain Hellas Sjællandsgade 2, 7000 Fredericia Muggenhofer Str. 135, 90429 Nürnberg Mustamäe tee 24, 10621 Tallinn Carretera M-300, Km. 29,900 Alcalá de Henares Madrid Addington Way, Luton, Bedfordshire LU4 9QQ 4 Linnou Str., 54627 Thessaloniki 125987340.qxp 2007-03-16 11:42 Page 32 30 electrolux guarantee/customer service Hrvatska +385 1 63 23 338 +353 1 40 90 753 +39 (0) 434 558500 +37 17 84 59 34 +370 5 2780609 +35 2 42 43 13 01 +36 1 252 1773 +31 17 24 68 300 +47 81 5 30 222 +43 18 66 400 +48 22 43 47 300 +35 12 14 40 39 39 Slavonska avenija 3, 10000 Zagreb Long Mile Road Dublin 12 C.so Lino Zanussi, 26 - 33080 Porcia (PN) Ireland Italia

Latvija Lietuva Luxembourg Magyarország Nederland Norge Kr.

Barona iela 130/2, LV-1012, Riga Ozo 10A, LT 08200 Vilnius Rue de Bitbourg, 7, L-1273 Hamm H 1142 Budapest XIV, Erzsébet királyné útja 87 Vennootsweg 1, 2404 CG - Alphen aan den Rijn Risløkkvn. 2, 0508 Oslo Herzigasse 9, 1230 Wien ul. Kolejowa 5/7, Warsaw Quinta da Fonte - Edifício Gonçalves Zarco - Q 35 2774 - 518 Paço de Arcos Str. Garii Progresului 2, S4, 040671 RO Industriestrasse 10, CH-5506 Mägenwil Electrolux Ljubljana d.o.o. Gerbiceva 98, 1000 Ljubljana Electrolux Slovakia s.r.o., Electrolux Domáce spotrebice SK, Seberíniho 1, 821 03 Bratislava Österreich Polska Portugal Romania +40 21 451 20 30 Schweiz-Suisse- Svizzera +41 62 88 99 111 S Slovenija Slovensko +38 61 24 25 731 +421 2 43 33 43 22 Suomi Sverige Türkiye

www.

electrolux.fi +46 (0)771 76 76 76 +90 21 22 93 10 25 +7 095 937 7837 Electrolux Service, S:t Göransgatan 143,S-105 45 Stockholm Tarlabay caddesi no : 35 Taksim İstanbul 129090, 16, ,,", 125987353 -00- 18042008.



[You're reading an excerpt. Click here to read official ZANUSSI ZDC67550W user guide](http://yourpdfguides.com/dref/955053)
<http://yourpdfguides.com/dref/955053>