




# Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for ZANUSSI ZFT710FW. You'll find the answers to all your questions on the ZANUSSI ZFT710FW in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

**User manual ZANUSSI ZFT710FW**  
**User guide ZANUSSI ZFT710FW**  
**Operating instructions ZANUSSI ZFT710FW**  
**Instructions for use ZANUSSI ZFT710FW**  
**Instruction manual ZANUSSI ZFT710FW**

**ZANUSSI**

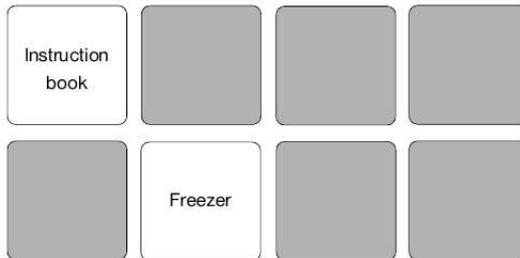

ZFT 710FW



[You're reading an excerpt. Click here to read official ZANUSSI ZFT710FW user guide](http://yourpdfguides.com/dref/957477)  
<http://yourpdfguides.com/dref/957477>

**Manual abstract:**

Check the appliance for transport damage. Under no circumstances should a damaged appliance be installed. In the event of damage please contact your retailer. This appliance is designed for domestic use only. Installation This appliance is heavy. Care should be taken when moving it. It is dangerous to alter the specifications or attempt to modify this product in any way. Ensure that the appliance does not stand on the electrical supply cable. If the supply cable is damaged, it must be replaced by a cable available from your local Service Force Centre. Make sure that the power plug has not been squashed or damaged during transit.

- A damaged power plug may overheat and cause a fire. As you unpack the appliance, check carefully for any signs of transit damage. Do not place heavy articles or the fridge/freezer itself on the power cord. - There is a risk of a short circuit and fire. Do not remove the power cord by pulling on its lead, particularly when the fridge/freezer is being pulled out of its niche.

- Damage to the cord may cause a short-circuit, fire and/or electric shock. - If the power cord is damaged, it must be replaced by a certified service agent or qualified service personnel. If the power plug socket is loose, do not insert the power plug. - There is a risk of electric shock or fire. Any electrical work required to install this appliance should be carried out by a qualified electrician or competent person.

Parts which heat up should not be exposed. Whenever possible, the back of the appliance should be close to a wall, but leaving the required distance for ventilation, as stated in the installation instructions. This appliance is not intended for use by persons (including children) with reduced physical sensory or mental capabilities, or lack of experience and knowledge specifically for the storage of edible foodstuffs. It is not intended for commercial or industrial use. Containers with flammable gases or liquids can leak at low temperatures. Do not store any containers with flammable materials, such as spray cans, fire extinguisher refill cartridges etc. in the freezer. Frozen food should not be refrozen once it has thawed out. Do not place carbonated or fizzy drinks in the freezer. Ice lollies can cause 'frost/freezer burns' if consumed straight from the freezer.

Bottles and cans must not be placed in the freezer they can burst when the contents freeze. Manufacturers' recommended storage times should be adhered to. Refer to relevant instructions. Maintenance and Cleaning Before cleaning, always switch off the appliance and disconnect from the electrical supply. When unplugging always pull the plug from the mains socket, do not pull on the cable. Contact your local Service Force Centre.

Safety precautions for isobutane Warning The refrigerant isobutane (R 600a) is contained within the refrigerant circuit of the appliance, a natural gas with a high level of environmental compatibility, which is nevertheless flammable. Keep ventilation openings, in the appliance enclosure or in the built-in structure, clear of obstruction. Do not use mechanical devices or other means to accelerate the defrosting process, other than those recommended by the manufacturer. Do not damage the refrigerant circuit.

Do not use electrical appliances inside the food storage compartments of the appliance. The Appliance and the Environment This appliance does not contain gases which could damage the ozone layer. Avoid damaging the cooling unit. The packaging used on this appliance marked with the symbol is recyclable.

Keep this instruction book for future reference and ensure it is passed on to any new owner.

4 Contents Instructions for the User Guide to use the instruction book Important Safety Information Instructions for the User General Information Description and main parts Switches and indicators Basket Storage Operation and use Installation Adjusting the temperature Using the Appliance Freezing Freezing and storage of frozen foods Thawing To Make Ice Cubes Hints and Tips Energy Saving Advice In the Event of a Power Failure Maintenance and Cleaning Internal cleaning External cleaning Long-term absence Automatic defrosting No-Frost technology Something Not Working 2 3 6 6 7 7 7 7 7 8 8 8 8 8 9 9 9 9 9 10 Instructions for the Installer Technical Specifications Installing the Appliance Transportation, Unpacking Location Waste handling Ventilation Requirements Door Reversal Electrical Connection 11 11 11 11 12 12 13 5 INS TR UCTIONS F OR THE USER General information This appliance is designed for the freezing and storage of frozen food in a domestic home. To ensure correct operation, the appliance should be located where the ambient temperature is between 16-32 °C. Description and main parts 1. 2. 3.

4. 5. 6. Storing compartment Freezing compartment Rating plate Switches and indicators Adjustable feet Door sealing gasket 7. 8. 9. 10. 11. Ventilation grid Condenser Airflow direction Evaporator tray Compressor 6 Switches and indicators higher temperature, you should set a position of lower number. Please allow 24 hours for the freezer temperature to stabilize between two adjustments.

Alarm (red) indicator The temperature alarm indicator (E) will light up when the internal temperature of the freezer increases to a level (above -12°C) where the long-term conservation of the foods in not ensured. Please note that, when switching on the freezer for the first time, the alarm indicator will blink until the internal temperature has reached a level required for the safe conservation of frozen food. Temperature problem: Under normal operating conditions, the internal temperature of the freezer will ensure the long-term conservation of the stored food. When such temperature rises above a certain level (-12°C), it will trigger an acoustic and light alarm. The green indicator will light up and the red indicator will blink. The yellow indicator (C) will light up. Rotate the thermostat in the desired position. Place the foods to be frozen in the lower part of the appliance. Important Do not put carbonated liquids in the freezer. Do not open the lid.

>>. Disconnect the product from the mains. Automatic defrosting This product is designed to avoid the formation of ice in the freezer. Accordingly, there is no need for manual defrosting. The product will automatically perform any defrosting once it becomes necessary.

9 Something Not Working If the appliance is not working correctly, please carry out the following checks before contacting your local Zanussi Service Force Centre. Problem No power to the appliance Possible Cause No power at the socket. There is a power cut. The fuse has blown. Thermostat control is set at „0".

The temperature in the appliance is too high Solution Check there is power at the socket.



[You're reading an excerpt. Click here to read official ZANUSSI ZFT710FW user guide](http://yourpdfguides.com/dref/957477)  
<http://yourpdfguides.com/dref/957477>

Check there is not a power cut by checking the household lights. Check the fuse has not blown. Check the thermostat setting. The appliance is located in an unsuitable Check the ambient temperature is within position. in the appliances operating limits of 16 °C to 32 °C. The thermostat control is set too low. Check that the thermostat control knob is turned to the correct setting relative to ambient conditions. Set the thermostat control knob to a lower position. Check the door has not been left open.

Check nothing is preventing the door from closing. Check the door gasket is intact and clean. @@Call the service personnel. @@The door has been left open. Something is obstructing the door. The door gasket is dirty. The appliance is noisy. Green indicator flashing. The appliance is not level. @@Please note that it will be necessary to provide proof of purchase for any in-guarantee service calls.

Power or operation failure: In case of power failure during the storage of frozen foods, make sure not to open the freezer door. Once the power failure is over, the yellow indicator (3) of the quick freeze function will light up and then, 5 hours after restart, it will automatically go out. If a short power failure occurs (max. 13 hours) and the product is full, the stored foods will not deteriorate. Otherwise you must use the stored food as soon as possible (if the temperature of the frozen foods rises, their storability will be shorter).

Check stability of product support (all four feet should stand on floor). If you fail to remedy a problem, please contact the nearest Service Force Centre. Operation failure When the electronic system fails to detect the ACTUAL temperature, the alarm indicator will start to flash. The product will continue to operate with the use of a reserve system until the problem is eliminated by the local Service Force agent. 10 Instructions for the Installer Technical Specifications Model Gross capacity (l) Net capacity (l) Width (mm) Height (mm) Depth (mm) Energy consumption (kWh/day) (kWh/year) Energy class, according to EU Standards Freezing capacity (kg/24h) Rising time (h) Rated current (A) Weight (kg) ZFT 710 FW 100 80 595 850 635 0. 575 210 A 9 13 0,6 40 The appliance should therefore: not be installed next to radiators, cookers or other sources of heat only be installed at a location where the ambient temperature corresponds to the climate classification - 96/09/03 (Energy Efficiency Directive) and its subsequent amendments The wire coloured green and yellow must be connected to the terminal marked with the letter "E" or by the earth symbol or coloured green and yellow. The wire coloured blue must be connected to the terminal "N" or coloured black. The wire coloured brown must be connected to the terminal marked "L" or coloured red. Upon completion there must be no cut, or stray strands of wire present and the cord clamp must be secure over the outer sheath. 13 14 15 www.electrolux.com www.zanussi.co.uk 200382217-00-01082008 933 014 627 .



[You're reading an excerpt. Click here to read official ZANUSSI ZFT710FW user guide](http://yourpdfguides.com/dref/957477)  
<http://yourpdfguides.com/dref/957477>