




Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for ZANUSSI ZKI1105. You'll find the answers to all your questions on the ZANUSSI ZKI1105 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual ZANUSSI ZKI1105
User guide ZANUSSI ZKI1105
Operating instructions ZANUSSI ZKI1105
Instructions for use ZANUSSI ZKI1105
Instruction manual ZANUSSI ZKI1105

ZANUSSI

WASHER-DRYER
LAVADORA-SECADORA
MÁQUINA DE LAVAR E
SECAR ROUPA
ZKI 1105

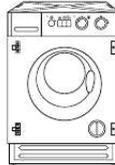

12298-8320

USER MANUAL
MANUAL DE USO
MANUAL DE UTILIZAÇÃO



[You're reading an excerpt. Click here to read official ZANUSSI ZKI1105 user guide](http://yourpdfguides.com/dref/655212)
<http://yourpdfguides.com/dref/655212>

Manual abstract:

@@@Tips and information about economical and ecological use of the machine are marked with this symbol. Our contribution to the protection of the environment: we use environmentally friendly paper. Contents Warnings Disposal Tips for environmental protection Technical specifications Installation Unpacking Positioning Water inlet Water drainage Electrical connection Building in 3-4 4 4 5 6 6 6-7 7 7 8 Laundry weights Removing stains Detergents and additives Drying hints Load Garments not suitable for drying Drying symbols on garment labels Duration of the drying cycle Fibre residue Additional drying International wash code symbols Operating sequence Washing only Drying only Automatic washing and drying Washing programmes Drying programmes 11 11-12 12 13 13 13 13 13 13 14 15-16 15-16 16 16 17-18 19 Your new washer dryer Description of the appliance Detergent dispenser drawer 9 9 9 Use Control panel Controls Washing hints Sorting the laundry Temperatures Before loading the laundry Maximum loads 10 10 10 11 11 11 11 11 2 Maintenance Bodywork Detergent dispenser drawer Drain filter Water inlet filter Emergency emptying out Frost precautions 20 20 20 20 20 21 21 Something not working? 22-23 Warnings The following warnings are provided in the interests of overall safety. You must read them carefully before installing or using the appliance. Installation All internal packing must be removed before using the appliance. Serious damage may be caused to the machine or adjacent furniture if the protective transit devices are not removed or are not completely removed. Refer to the relevant paragraph in the instruction book. Any electrical work required to install this appliance must be carried out by a qualified electrician. Any plumbing work required to install this appliance must be carried out by a qualified plumber. After having installed the machine, check that it is not standing on its electrical supply cable.

If the appliance is placed on a carpeted floor, ensure that air can circulate freely between the feet and the floor. Use only the recommended quantities of fabric softener. An excessive amount could damage the laundry. Leave the porthole door slightly ajar when the appliance is not in use. This preserves the door seal and prevents the formation of musty smells. Always check that water has emptied out before opening the door. If not, drain the water following the instructions in the instruction book. Always unplug the appliance and shut the water tap after use. General safety Repairs to the machine must be carried out only by qualified personnel. Repairs carried out by inexperienced persons could cause serious danger.

Contact your local Service Centre. Never pull the power supply cable to remove the plug from the socket; always take hold of the plug itself. During high temperature wash programmes and during the drying cycle the door glass may get hot. Do not touch it! Use This appliance is designed for domestic use. It must not be used for purposes other than those for which it was designed. Only wash and dry fabrics which are designed to be machine washed and dried. Follow the instructions on each garment label. Do not overload the appliance. Follow the instructions in the instruction book. Make sure that all pockets are empty.

Objects such as coins, safety pins, pins and screws can cause extensive damage. Do not machine wash garments saturated with petroleum, methylated spirits, trichlorethylene, etc. If such fluids have been used to remove stains prior to washing, wait until they have completely evaporated from the fabric before placing garments in the appliance. Place small items such as socks, belts, etc. in a cloth bag or pillowcase to prevent them getting trapped between the drum and the tub. If you use a liquid detergent with a dispenser which has to be placed directly in the drum, remember to remove this dispenser before drying. Child safety Children are often not aware of how dangerous electrical appliances can be. When the machine is working, children should be carefully supervised and not be allowed to play with the appliance. The packaging components (e.g.

plastic film, polystyrene) can be dangerous to children - danger of suffocation! Keep them out of children's reach. Keep all detergents in a safe place out of children's reach. Make sure that children or pets do not climb into the drum. To avoid this the machine incorporates a special feature. To activate this device, rotate the button (without pressing it) inside the door clockwise until the groove is horizontal.

If necessary use a coin. 3 ENGLISH To disable this device and restore the possibility of closing the door, rotate the button anti-clockwise until the groove is vertical. When the appliance is to be scrapped, cut off the electrical supply cable and destroy the plug with the remaining cable. Disable the door catch in order to prevent children from becoming trapped inside while playing. P1131 Disposal Packaging materials The materials marked with the symbol recyclable.

>PE<=polyethylene >PS<=polystyrene >PP<=polypropylene This means that they can be recycled by disposing of them properly in appropriate collection containers. are The symbol on the product or on its packaging indicates that this product may not be treated as household waste. Instead it shall be handed over to the applicable collection point for the recycling of electrical and electronic equipment. By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling of this product. For more detailed information about recycling of this product, please contact your local city office, your household waste disposal service or the shop where you purchased the product. Machine Use authorised disposal sites for your old appliance. Help to keep your country tidy! Tips for environmental protection To save water, energy and to help protect the environment, we recommend that you follow these tips: Normally soiled laundry may be washed without prewashing in order to save detergent, water and time (the environment is protected too!). The machine works more economically if it is fully loaded (for both washing and drying cycles). The machine will consume less energy if the laundry is adequately spun before being dried. With adequate pre-treatment, stains and limited soiling can be removed; the laundry can then be washed at a lower temperature.

Measure out detergent according to the water hardness, the degree of soiling and the quantity of laundry being washed. 4 Technical specifications DIMENSIONS Height Width Depth Cotton Synthetics Delicates Woollens 82 cm 60 cm 54 cm WASHING 5 kg 2 kg 2 kg 1 kg DRYING 2.5 kg 1.5 kg - MAXIMUM LOAD SPIN SPEED POWER SUPPLY VOLTAGE/FREQUENCY TOTAL POWER ABSORBED MINIMUM FUSE PROTECTION WATER PRESSURE Minimum Maximum 1000 rpm max.



[You're reading an excerpt. Click here to read official ZANUSSI ZKI1105 user guide](http://yourpdfguides.com/dref/655212)
<http://yourpdfguides.com/dref/655212>

220-230 V/50 Hz 2200 W 10 A 0,05 MPa 0,8 MPa This appliance complies with the following EEC Directives: 73/23/EEC of 19/02/73 relating to low voltage 89/336/EEC of 03/05/89 relating to electromagnetic compatibility. 5 ENGLISH Installation Unpacking All transit bolts and packing must be removed before using the appliance. You are advised to keep all transit devices so that they can be refitted if the machine ever has to be transported again. 1. Using a spanner, unscrew and remove the rear right-hand bolt and lay the machine on its back, taking care not to squash the hoses. This can be avoided by placing one of the corner packing pieces between the machine and the floor.

6. Set the machine upright and remove the two remaining bolts from the back. 7. Pull out the three plastic spacers from the holes into which the bolts were fitted. 8.

Plug the open holes with the plugs supplied with the Instruction Booklet. P0256 P0020 Positioning Install the machine on a flat hard floor. Make sure that air circulation around the machine is not impeded by carpets, rugs etc. Check that the machine does not touch the wall or other kitchen units. Carefully level by screwing the adjustable feet in or out.

Never place cardboard, wood or similar materials under the machine to compensate for any unevenness in the floor. P0255 2. Remove the polystyrene base and take off the bottom panel by unscrewing the central screw. 3. Carefully remove the right-hand bag. P0457 P0015 P1051 4. Carefully slide out the other bags. 5. Re-fit the bottom panel using the 4 screws supplied with the door hinges (in the plastic bag) and the previously removed screw. Water inlet Connect the water inlet hose supplied with the machine to a tap with a 3/4" thread .

Do not use already employed inlet hoses. P0016 P0453 P1088 6 The other end of the inlet hose which connects to the machine can be turned in any direction. Simply loosen the fitting, rotate the hose and retighten the fitting, making sure there are no water leaks. Directly into a drain pipe at a height of not less than 60 cm and not more than 90 cm. The end of the drain hose must always be ventilated, i.e. the inside diameter of the drain pipe must be larger than the outside diameter of the drain hose. The drain hose must not be kinked. Run it along the floor; only the part near the drainage point must be raised. P0021 The inlet hose must not be lengthened.

If it is too short and you do not wish to move the tap, you will have to purchase a new, longer hose specially designed for this type of use. P0023 Important! Before connecting up the machine to new pipework or to pipework that has not been used for some time, run off a reasonable amount of water to flush out any debris that may have collected in the pipes. Electrical connection This machine is designed to operate on a 220-230 V, single-phase, 50 Hz supply. Check that your domestic electrical installation can take the maximum load required (2.2 kW), also taking into account any other appliances in use.

Connect the machine to an earthed socket. The manufacturer declines any responsibility for damage or injury through failure to comply with the above safety precaution. Should the appliance power supply cable need to be replaced, this must be carried out by our Service Centre. Important! When the appliance is installed the power supply cable must be easily accessible. Water drainage The end of the drain hose can be positioned in three ways: Hooked over the edge of a sink using the plastic hose guide supplied with the machine.

In this case, make sure the end cannot come unhooked when the machine is emptying. This could be done by tying it to the tap with a piece of string or attaching it to the wall. P0022 In a sink drain pipe branch. This branch must be above the trap so that the bend is at least 60 cm above the ground. 7 ENGLISH Building-in This appliance has been designed to be built into the kitchen furniture. The recess should have the dimensions shown in picture A. 600 35 mm - Depth 14 mm 416 59 8 5-59 B 22+1 16 -22 515 176,5 596 600 820 min 818 416 120 1 54 8 90 0 49 P0026 195 160 c) Mounting the door A Fix the hinges to the machine by means of the M5x8 screws (3-Fig. B). The hinges can be adjusted to compensate for possible uneven thickness of the door. To align the door perfectly it is necessary to loosen the screw (3-Fig.

B), adjust the door and tighten the screw again. P0965 Preparation and assembly of the door The machine is originally pre-arranged for the assembly of a door opening from right to left. In this case it is sufficient to screw in the hinges (1) and the counter-magnet (6) provided with the appliance, at the right level (Fig. B). 165 d) Counter-magnet (6) The appliance is pre-arranged for a magnetic closure of the door. To enable for cotton and G for synthetics the washing time will be reduced. 10 Washing hints Sorting the laundry Follow the wash code symbols on each garment label and the manufacturer's washing instructions. Sort the laundry as follows: whites, coloureds, synthetics, delicates, woollens. Delicate fabrics and woollens: drum no more than one third full. Washing a maximum load makes the most efficient use of water and energy.

For heavily soiled laundry, reduce the load size. Temperatures 90 60 for normally soiled white cottons and linen (e.g. tea cloths, towels, tablecloths, sheets..) for normally soiled, colour fast garments (e.g. shirts, night dresses, pyjamas..

..) in linen, cotton or synthetic fibres and for lightly soiled white cotton (e.g. underwear). Laundry weights The following weights are indicative: bathrobe napkin quilt cover sheet pillow case tablecloth towelling towel tea cloth night dress ladies' briefs man's work shirt man's shirt man's pyjamas blouse men's underpants 1200 g 100 g 700 g 500 g 200 g 250 g 200 g 100 g 200 g 100 g 600 g 200 g 500 g 100 g 100 g 30-40 laundry including synthetic fibres and (cold)for delicate items (e.g. net curtains), mixed woollens bearing the label pure new wool, machine washable, non-shrink. The wool wash cycle of this machine has been approved by Woolmark for the washing of machine washable Woolmark products provided that the garments are washed according to the instructions on the garment label and those issued by the manufacturer of this washing machine. M9604.

Before loading the laundry Never wash whites and coloureds together. Whites may lose their "whiteness" in the wash. @@Make sure that no metal objects are left in the laundry (e.g. hair clips, safety pins, pins). Button up pillowcases, close zip fasteners, hooks and poppers. Tie any belts or long tapes. Remove persistent stains before washing. @@Treat curtains with special care. @@It is therefore advisable to treat them prior to washing.

Blood: treat fresh stains with cold water. @@@@@@Remove any residual marks from white fabrics with bleach.



[You're reading an excerpt. Click here to read official ZANUSSI](#)

[ZKI1105 user guide](#)

<http://yourpdfguides.com/dref/655212>

@@Treat any residual marks with bleach. @@@@The choice of detergent will depend on the type of fabric (delicates, woollens, cottons, etc.), the colour, washing temperature and degree of soiling.

All commonly available washing machine detergents may be used in this appliance: powder detergents for delicate fabrics (60C max) and woollens, liquid detergents, preferably for low temperature wash programmes (60C max) for all types of fabric, or special for woollens only. The detergent and any additives must be placed in the appropriate compartments of the dispenser drawer before starting the wash programme. If using concentrated powder or liquid detergents, a programme without prewash must be selected. The washing machine incorporates a recirculation system which allows an optimal use of the concentrated detergent. Pour liquid detergent into the dispenser drawer compartment marked just before starting the programme.

Degrees of water hardness Degrees Level Characteristic German dH French T.H. 1 2 3 4 soft medium hard very hard 0- 7 8-14 15-21 0-15 16-25 26-37 more than more than 21 37 12
Drying hints As a dryer, the machine works on the condensation principle. Therefore, the water tap must be open and the drain hose must drain water into a sink or into the drain pipe, even during the drying cycle. Duration of the drying cycle The drying time can vary according to the final spin speed; the required degree of drying (store dry or iron dry); the type of laundry; the size of load. The usual drying times are indicated in the programme chart. As you become more familiar with the appliance, you will discover the drying times that best suit your needs according to the various type of fabric. It is a good idea to make a note of these times. Load Sort of laundry Linen and cottons Synthetics Warning: Loads of washed laundry exceeding these values must be divided before being dried, otherwise poor results will be obtained. max.

load (dry weight) 2.5 kg 1.5 kg Fibre residue After drying fluffy fabrics, such as new towels, it is advisable to perform the rinse programme C to be sure that any residue that may remain in the tub is completely removed and does not stick to garments dried afterwards. After each drying cycle the filter should be checked and cleaned. Garments not suitable for drying Particularly delicate items such as synthetic curtains, woollen and silk, garments with metal inserts, nylon stockings, bulky garments such as anoraks, bedcovers, quilts, sleeping bags and duvets must not be machine dried. Garments padded with foam-rubber or materials similar to foam-rubber must not be machine dried; they represent a fire hazard. Also, fabrics containing residues of setting lotions or hair sprays, nail solvents or similar solutions must not be machine dried in order to avoid the formation of harmful vapours. Additional drying Should the laundry still be too wet at the end of the programme, set another short drying cycle. Warning! To prevent the formation of creases or shrinking of fabrics, avoid excessive drying. Drying symbols on garment labels Always look at the garment label to check whether garments can be machine dried.

The following symbols refer to drying: Machine drying is usually possible Normal drying (normal temperature) Gentle drying (reduced temperature) Do not machine dry 13 ENGLISH International wash code symbols These symbols appear on fabric labels, in order to help you choose the best way to treat your laundry. Energetic wash 95 Max. wash temperature 95C Delicate wash 60 Max. wash temperature 60C 40 Max. wash temperature 40C 30 Max. wash temperature 30C 60 40 40 30 Hand wash Do not wash at all Bleaching Bleach in cold water Do not bleach Ironing Hot iron max 200C Warm iron max 150C Lukewarm iron max 110C Do not iron Dry cleaning Dry cleaning in all solvents Dry cleaning in perchlorethylene, petrol, pure alcohol, R 111 & R 113 Dry cleaning in petrol, pure alcohol and R 113 Do not dry clean high temperature low temperature Drying Flat On the line On clothes hanger Tumble dry Do not tumble dry 14 Operating sequence Washing only Before washing your first load of laundry, we recommend that you run a cotton cycle at 90C, with the machine empty, in order to remove any manufacturing residue from the drum and tub. Pour half a measure of detergent into the main wash compartment and start up the machine. 4. Select the temperature Turn the dial to the required setting. 90 l.

Place the laundry in the drum Open the door. Place the laundry in the drum, one item at a time, shaking them out as much as possible. Close the door. P0455 5. Select the required option Depress button and/or if required. P0004 2. Measure out the detergent Pull out the dispenser drawer until it stops. Measure out the amount of detergent recommended by the manufacturer in a graduated cup and pour it into the main wash compartment. If you wish to carry out the prewash, pour detergent into the appropriate compartment marked. 6.

Select the required programme Turn the programme selector dial clockwise to the desired position. A 3. Measure out the additive If required, pour fabric softener into the compartment marked and the bleaching agent into the compartment marked, without exceeding the MAX mark. P0429 7. Start the machine Depress the ON/OFF button: the mains-on light will illuminate and the machine starts operating. CI P0164 P0163 P0471 15 ENGLISH CI 8. At the end of the programme The machine stops automatically. If you have selected a programme which ends with the water of the last rinse in the tub, drain the water before opening the door by selecting programme N (drain) or H (drain and short spin). The door is controlled by a safety device which releases 2 minutes after the end of the programme. Switch the machine off by pressing the ON/OFF button.

The mains-on light goes out. Remove the laundry from the drum and carefully check that the drum is empty so as to avoid any forgotten items being damaged in a subsequent wash (e.g. shrinking) or their colour running into a load of whites. If you do not intend to carry out another wash, close the water tap. Leave the door open to prevent the formation of mildew and unpleasant smells. Drying only Warning! Do not exceed the maximum laundry loads: - 2.5 kg for linen and cottons - 1.5 kg for synthetics. The water tap must be open and the drain hose must be positioned in the sink or connected to the drain pipe.

1. Load the laundry 2. Select the drying programme F (for cotton) or J (for synthetics). 3. Select the drying time in the blue or green section of the selector, according to the fabrics (cotton or synthetics) to dry. 4. Press the ON/OFF button programme. to start the 5. At the end of the cycle press the ON/OFF button again to switch the appliance off. 6.



[You're reading an excerpt. Click here to read official ZANUSSI](http://yourpdfguides.com/dref/655212)

[ZKI1105 user guide](http://yourpdfguides.com/dref/655212)

<http://yourpdfguides.com/dref/655212>

Remove the laundry. Automatic washing and drying (NON-STOP programme) Warning! For NON-STOP programmes, it is also essential not to exceed the maximum load sizes of 2.5 kg for cotton and 1.5 kg for synthetics. 1. Load the laundry. 2. Add detergent and additives. Do not use dosing device/ball when carrying out a NON-STOP programme. The plastic material with which it is made cannot withstand the high temperature in the drum during drying.

3. Select the wash programme. Select the option if required. If possible, do not select the spin speed reduction option to avoid too long drying times so saving energy. 4.

Select the drying time. 5. Start the programme by depressing the ON/OFF button. 6. At the end of the programme press the ON/OFF button again to switch the machine off.

7. Remove the laundry. 16 Programme table Washing programmes for cotton and linen Load: 5 kg Consumptions* Energy kWh 2.5 Water lt 80 Duration min. 170 Programme Temp. Fabrics Additional function A 60-90 WHITES WITH PREWASH, for example work garments, sheets, household linen, underwear, towels B 60-90 WHITES WITHOUT PREWASH, for example household linen, sheets, shirts, underwear COLOURED WITH PREWASH, for example shirts, blouses, household linen, sheets COLOURED WITHOUT PREWASH, for example shirts, blouses, terry cloths, underwear This programme can be used for rinsing hand washed garments Separate spin for cotton and linen 2.2 64 145 A 30-60 1.5 77 165 B 30-60 1.15 60 140 C Rinses D Long spin COLD 0.1 64 50 - 12 In compliance with EC directive 92/75, the consumption figures indicated on the energy label refer to the 60C wash programme for cotton (programme "B") with a wash load of 5 kg.

* The consumption data shown on this chart is to be considered purely indicative, as it may vary depending on the quantity and type of laundry, on the inlet water temperature and on the ambient temperature. It refers to the highest temperature for each wash programme. Important! Programme B begins with a short drain, then the programme selector dial advances automatically to the water filling position. We suggest you not to switch the appliance off and on during its operation. This would modify the memorised programme in progress with unsatisfactory washing results. 17 ENGLISH Programme table Washing programmes for synthetics, mixed fabrics, delicates and wool Load: 2 kg, wool 1 kg Consumptions* Energy kWh 0.8 Water lt 47 Duration min. 80 Programme Temp. Fabrics Additional function G 40-60 SYNTHETICS WITHOUT PREWASH, for example underwear, coloured items, shirts, blouses Separate spin for synthetics, delicates and wool H Short spin K 30-40 - - 6 WOOL Special programme for garments bearing the "Pure new wool, nonshrink, machine washable" label DELICATES, for example curtains This programme can be used for rinsing hand washed garments For emptying out the last rinse water of these programmes. 0.

40 45 55 L M Rinses N Drain 30-40 COLD 0.55 0.02 54 33 55 15 - - 1 * The consumption data shown on this chart is to be considered purely indicative, as it may vary depending on the quantity and type of laundry, on the inlet water temperature and on the ambient temperature. It refers to a wash load of 2 kg for synthetics and delicates and 1 kg of wool. At the end of these programmes, the last rinse water is not emptied out, so as to avoid creasing of the fabrics. To empty out the water, select programme H or N. Important! When the automatic NON-STOP washing plus drying programme is used, the water is emptied out automatically and there is a short spin at 850 rpm before drying starts. Important! Programme G for synthetics and K for wool begin with a short drain, then the programme selector dial advances automatically to the water filling position. We suggest you not to switch the appliance off and on during its operation. This would modify the memorised programme in progress with unsatisfactory washing results.

18 Drying Programmes Degree of drying Type of fabric Max. load Spin speed Drying time mins Cotton and linen (towels, T-shirts, bathrobes) Store dry Suitable for items to put away without ironing Programme F 2.5 kg 1.5 kg 1 kg 1000 rpm 1000 rpm 1000 rpm 100 - 110 (blue sector) 60 - 70 (blue sector) 50 - 60 (blue sector) 100 - 110 (green sector) 70 - 80 (green sector) 70 - 80 (blue sector) 40 - 50 (blue sector) 30 - 40 (blue sector) Synthetic and mixed fabrics (jumpers, blouses, underwear, household linen) Programme J 1.5 kg 850 rpm 1 kg 850 rpm Iron dry Suitable for ironing Cotton and linen (sheets, tablecloths, shirts, etc.) Programme F 2.5 kg 1.5 kg 1 kg 1000 rpm 1000 rpm 1000 rpm 19 ENGLISH Maintenance 1. Bodywork Clean the outside of the machine with warm water and a detergent used to handwash dishes. Rinse with clean water and dry with a soft cloth.

Important: do not use methylated spirits, solvents or similar products to clean the bodywork. 3. Drain filter The drain filter collects threads and small objects inadvertently left in the laundry. Check regularly that the filter is clean. Place a container under the filter and unscrew it. 2. Detergent dispenser drawer After a while, detergents and fabric softeners leave deposits in the drawer. Clean the drawer from time to time by rinsing it under a running tap. To remove the drawer from the machine, press the button in the rear left-hand corner. To facilitate cleaning, the top part of the additive compartments can be removed.

P0037 P0039 Pull out the filter. @@Refit the drawer after cleaning. 4. @@Turn off the water tap. Unscrew the hose from the tap. Clean the filter with a stiff brush. Screw the hose back onto the tap. P0038 P1090 20 5. @@@@ Place the end of the drain hose and that of the inlet hose in a bowl placed on the floor. Select programme N (draining) and run it until the machine stops.

Switch the machine OFF by depressing button Screw the water inlet hose back on and put the drain hose back in its place. By doing this, any water remaining in the machine is removed, avoiding the formation of ice and, consequently, breakage of the affected parts. When you use the machine again, make sure that the ambient temperature is above 0C. . 21 ENGLISH Something not working? Problems which you can resolve yourself. Problem The machine does not start up: Possible cause The door is not firmly closed. The machine is not plugged in or there is no power at the socket. The main fuse has blown. The programme selector dial is not positioned correctly. The ON/OFF button has not been depressed.

The water tap is closed. The inlet hose is squashed or kinked. The filter in the inlet hose is blocked. The door is not properly closed. The machine does not fill: The machine fills then empties immediately: The machine does not empty and/or does not spin: There is water on the floor: The end of the drain hose is too low.



[You're reading an excerpt. Click here to read official ZANUSSI](http://yourpdfguides.com/dref/655212)

[ZKI1105 user guide](http://yourpdfguides.com/dref/655212)

<http://yourpdfguides.com/dref/655212>

Refer to relevant paragraph in "water drainage" section. The drain hose is squashed or kinked. A programme which ends with water in tub has been selected.

The drain filter is clogged. Too much detergent or unsuitable detergent (creates too much foam) has been used.

Check whether there are any leaks from one of the inlet hose fittings. It is not always easy to see this as the water runs down the hose; check to see if it is damp. The drain hose is damaged. Too little detergent or unsuitable detergent has been used. Stubborn stains have not been treated prior to washing.

The correct temperature was not selected. Excessive laundry load. The transit bolts and packing have not been removed. The support feet have not been adjusted. The laundry is not evenly distributed in the drum.

Maybe there is very little laundry in the drum. The programme is still running. The door lock has not been released. There is water in the drum.

Unsatisfactory washing results: The machine vibrates or is noisy: The door will not open: 22 Problem Spinning starts late or the laundry is not spun enough:

Possible cause The electronic unbalance detection device has cut in because the laundry is not evenly distributed in the drum. The laundry is redistributed by reverse rotation of the drum. This may happen several times before the unbalance disappears and normal spinning can resume. If, after 20 minutes, the laundry is still not evenly distributed in the drum, the machine will not spin. If at the end of the programme the laundry is not spun enough, redistribute the load manually and select the spin programme. The water tap is closed.

The drain filter is clogged. The drying time has not been selected. An appropriate drying time or sector has not been chosen. There is too much laundry inside the appliance. The machine will not dry or the laundry is not dry enough Water is not visible in the machine. The machine, which is the result of modern technology, runs in a very economical way with low water consumption. Performance is nevertheless excellent. The machine makes an unusual noise. The machine is fitted with a commutator motor which improves machine performance. P1035UK P1034UK If you are unable to identify or solve the problem, contact our service centre.

Before telephoning, make a note of the model, serial number and purchase date of your machine: the Service Centre will require this information. Mod. ...

.....

.. Prod. No.

..... P0042 BD Ser. No. ...

.....

. 23 ENGLISH Mo Pro d. ...

.. d. No

.....

Ser. No. ...

.....

. From the Electrolux Group. The world's No. 1 choice. The Electrolux Group is the world's largest producer of powered appliances for kitchen, cleaning and outdoor use. More than 55 million Electrolux Group products (such as refrigerators, cookers, washing machines, vacuum cleaners, chain saws and lawn mowers) are sold each year to a value of approx. USD 14 billion in more than 150 countries around the world. .



[You're reading an excerpt. Click here to read official ZANUSSI](#)

[ZKI1105 user guide](#)

<http://yourpdfguides.com/dref/655212>