



# Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for ZANUSSI ZKI245. You'll find the answers to all your questions on the ZANUSSI ZKI245 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

**User manual ZANUSSI ZKI245**  
**User guide ZANUSSI ZKI245**  
**Operating instructions ZANUSSI ZKI245**  
**Instructions for use ZANUSSI ZKI245**  
**Instruction manual ZANUSSI ZKI245**



---

User Manual			
	Washer-dryer		



ZKI 245



[You're reading an excerpt. Click here to read official ZANUSSI ZKI245 user guide](http://yourpdfguides.com/dref/956083)  
<http://yourpdfguides.com/dref/956083>

### Manual abstract:

To avoid unnecessary mistakes and accidents, it is important to ensure that all people using the appliance are thoroughly familiar with its operation and safety features. Save these instructions and make sure that they remain with the appliance if it is moved or sold, so that everyone using it through its life will be properly informed on appliance use and safety. Always unplug the appliance and turn off the water supply after use, cleaning and maintenance. Under no circumstances should you attempt to repair the machine yourself. @@Contact your local Service Centre. @@During high temperature wash programmes the door glass may get hot. Do not touch it! Make sure that small pets do not climb into the drum. To avoid this, please check into the drum before using.

@@Only use the advised quantities of fabric softener and detergent. Damage to the fabric can ensue if you over-fill.

Refer to the manufacturer's recommendations of quantities. @@Do not use your washer-dryer to wash articles with whalebones, material without hems or torn material. This appliance is heavy. Care should be taken when moving it. When unpacking the appliance, check that it is not damaged.

If in doubt, do not use it and contact the Service Centre. All packing and transit bolts must be removed before use. Serious damage can occur to the product and to property if this is not adhered to. See relevant section in the user manual. After having installed the appliance, check that it is not standing on the inlet and drain hose and the worktop is not pressing the electrical supply cable.

If the machine is situated on a carpeted floor, please adjust the feet in order to allow air to circulate freely under the appliance. Always be sure, that there is no water leakage from hoses and their connections after the installation. If the appliance is installed in a location subject to frost, please read the «dangers of freezing» chapter. Any plumbing work required to install this appliance should be carried out by a qualified plumber or competent person. Any electrical work required to install this appliance should be carried out by a qualified electrician or competent person. 3 Use This appliance is designed for domestic use. It must not be used for purposes other than those for which it was designed. Only wash fabrics which are designed to be machine washed. Follow the instructions on each garment label. Do not overload the appliance.

See the relevant section in the user manual. Before washing, ensure that all pockets are empty and buttons and zips are fastened. Avoid washing frayed or torn articles and treat stains such as paint, ink, rust, and grass before washing. Underwired bras must NOT be machine washed. Garments which have been in contact with volatile petroleum products should not be machine washed. If volatile cleaning fluids are used, care should be taken to ensure that the fluid is removed from the garment before placing in the machine. Never pull the power supply cable to remove the plug from the socket; always take hold of the plug itself. Never use the washer-dryer if the power supply cable, the control panel, the working surface or the base are damaged so that the inside of the washer-dryer is accessible. Make sure that children or pets do not climb into the drum. To prevent children or pets becoming trapped inside the drum the machine incorporates special feature.

To activate this device, rotate the button (without pressing it) inside the door clockwise until the groove is horizontal. If necessary use a coin. To disable this device and restore the possibility of closing the door, rotate the button anticlockwise until the groove is vertical. Child safety This appliance is not intended for use by person (including children) with reduced physical sensory or mental capabilities or lack of experience and knowledge unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. The packaging components (e.

g. plastic film, polystyrene) can be dangerous to children danger of suffocation! Keep them out of children's reach Keep all detergents in a safe place out of children's reach. 4 Description of the appliance 1 2 3 4 5 6 Detergent dispenser drawer Control panel Door opening handle Rating plate Drain pump Adjustable feet Detergent dispenser drawer Prewash Wash Fabric Softener 5 Control panel 1 Information 2 3 4 5 6 7 8 9 10 The control panel is illustrated above. It shows the programme selector dial as well as the different buttons, the pilot light(s) and the display. These are represented by relevant numbers which are explained in the table below.

Symbols: = Cotton, = Rinses, = Door, = Synthetics, = Drain, = Child Safety Lock = Delicates, = Spin, = Drying sector = Economy, = Super Quick, = Rinse Hold, 1 Programme selector dial and On/Off switch The programme selector dial allows to select a programme and/or to switch the machine on/off «O». It can be turned either clockwise or anticlockwise. 2 Spin reduction button and Rinse Hold option Press this button repeatedly to change the spin speed, if you want your laundry to be spun at a speed different from the one proposed by the washer-dryer or to select «Rinse Hold» option. The relevant light will light up.

6 3 Option button: Economy, Super Quick By pressing this button, you can select only one of the following options: ECONOMY or SUPER QUICK. The relevant light will light up. 4 Extra Rinse button 5 Drying Time button By pressing this button, the machine performs some additional rinses. The corresponding pilot light illuminates. By pressing this button you can select a timed drying for cotton or synthetics, the relevant light illuminates. Selecting this option the laundry is gently washed and spun to avoid any creasing.

In this way ironing is easier. Furthermore the machine will perform additional rinses. The display shows the following information: duration of the selected programme, selected drying time and delayed start, incorrect option selection, alarm codes, child safety lock and end of programme. 6 Easy Iron button 7 Display 8 Start/Pause button This button allows to start the selected programme; the corresponding green pilot light stops flashing. This button interrupts also a programme which is running, the corresponding green pilot light starts to flash. This 9 Door pilot light light illuminates when the appliance is working (after having pressed button 8 and indicates that the door is locked. By pressing this button, the wash programme can be delayed from 30 min - 60 min - 90 min, 2 hours and then by 1 hour up to a maximum of 20 hours. The delay value appears on the display. 10 Delay button 7 Functions Rinse hold (Button 2) By selecting this option the water of the last rinse is not emptied out to prevent the fabrics from creasing.



[You're reading an excerpt. Click here to read official ZANUSSI](http://yourpdfguides.com/dref/956083)

[ZKI245 user guide](http://yourpdfguides.com/dref/956083)

<http://yourpdfguides.com/dref/956083>

*When the programme has finished, the door is locked to indicate that the water must be empty out.*

*To empty out the water, please read the chapter «At the end of the programme». Drying Time button (Button 5) By pressing this button you can select a timed drying for cotton or synthetics. The relevant light illuminates. For Cottons you can select a drying time from 10 minutes to 250 minutes (4.10) while for Synthetics from 10 minutes to 130 minutes (2).*

*10). Every time you press the button the time increases by 5 mins. Economy (Button 3) Only for cottons and synthetics items lightly or normally soiled at a temperature of 40°C or higher. The washing time will be prolonged and the washing temperature will be reduced. Easy Iron (Button 6) Selecting this option the laundry is gently washed and spun to avoid any creasing.*

*In this way ironing is easier. Furthermore the machine will perform some additional rinses depending on the fabrics. Super Quick (Button 3) Short cycle for lightly soiled items or for laundry which needs only freshening up. We recommend that you reduce the fabrics loading. Door pilot light (9) After having pressed the button 8, this light illuminates and stays on. This light indicates when the door can be opened: light on: the door is locked and cannot be opened. The washing or the drying cycle starts working and the door is locked. light off: the door can be opened. The washing programme has finished. If there is water left in the tub, the light 9 remains lit.*

*The door will be still locked and it will be necessary to empty out before opening the door. Extra Rinse (Button 4) The machine performs some additional rinses during the washing cycle. This option is recommended for people who are allergic to detergents, and in areas where the water is very soft. 8 2.05 5.2 The display shows the following information: 5.1 Duration of the programme/ After selecting a programme the duration of the selected programme appears in minutes or hours and minutes on the display .(e.g. 5.*

*1 /Alarm codes In the event of operating problems, some alarm codes can be displayed, (see paragraph "What to do if..."). /End of programme The End of programme or the stop wit water left in the tub is indicated by a flashing zero «0».*

*«Stand by» If your laundry is not removed within 10 minutes after the programme is finished, the backlight of the display switches off and the energy saving system will be enabled. Only the button 8 pilot light is blinking to indicate that the appliance has to be switched off. By pressing any button the appliance will come out from the energy saving status and you could set another washing programme or swich off the appliance. 5.2 Child Safety lock This device permits you to leave the appliance unattended during its functioning.*

*2.05) During the programme, the time remaining is updated every minute. After having started the programme, the light 9 lights up and stays on. /Selected drying time After selecting a drying programme the drying time is shown in minutes or hours and minutes. After the programme has started, they Follow the wash code symbols on each garment label and the manufacturer's washing instructions. Sort the laundry as follows: whites, coloureds, synthetics, delicates, woollens. Remove the laundry when the appliance has finished drying. To avoid a static charge when drying is completed, use either a fabric softener when you are washing the laundry or a fabric conditioner specifically for tumble dryers. Particularly delicate items such as synthetic curtains, woollen and silk, garments with metal inserts, nylon stockings, bulky garments such as anoraks, bedcovers, quilts, sleeping bags and duvets must not be machine dried. Garments padded with foam-rubber or materials similar to foam-rubber must not be machine dried; they represent a fire hazard.*

*Also, fabrics containing residues of setting lotions or hair sprays, nail solvents or similar solutions must not be machine dried in order to avoid the formation of harmful vapours. For drying, follow the indications given on the manufacturer's labels. For drying, follow the indications given on the manufacturer's labels. May be tumble dried Drying at high temperature Drying at reduced temperature Do not tumble dry IMPORTANT! As a dryer, the machine works on the condensation principle. Therefore, the water tap must be open and the drain hose must drain water into a sink or into the drain pipe, even during the drying cycle. Temperatures 90° or 95° for normally soiled white cottons and linen (e.g. tea cloths, towels, tablecloths, sheets...*

*) for normally soiled, colour fast garments (e.g. shirts, night dresses, pyjamas...*

*rust removing product used cold. Be careful with rust stains which are not recent since the cellulose structure will already have been damaged and the fabric tends to hole. Mould stains: treat with bleach, rinse well (whites and fast coloureds only). Grass: soap lightly and treat with bleach If using concentrated powder or liquid detergents, a programme without prewash must be selected. The washing dryer incorporates a recirculation system which allows an optimal use of the concentrated detergent.*

*Pour liquid detergent into the dispenser drawer compartment marked just before starting the programme. Any fabric softener or starching additives must be poured into the compartment marked before starting the wash programme. Follow the product manufacturer's recommendations on quantities to use and do not exceed the «MAX» mark in the detergent dispenser drawer. Quantity of detergent to be used The type and quantity of detergent will depend on the type of fabric, load size, degree of soiling and hardness of the water used. Water hardness is classified in so-called «degrees» of hardness. Information on hardness of the water in your area can be obtained from the relevant water supply company, or from your local authority. Follow the product manufacturers' instructions on quantities to use. Degrees of water hardness Follow the product manufacturers' instructions on quantities to use. Use less detergent if: you are washing a small load, the laundry is lightly soiled, large amounts of foam form during washing. Before the first use WARNING! Ensure that the electrical and water connections comply with the installation instructions.*

*IMPORTANT! Remove the polystyrene block and any material from the drum. IMPORTANT! Before the first wash we recommend you to run a cotton cycle at the 90°C, without any laundry in the machine, to remove any manufacturing residue from the drum and tub. Pour 1/2 a measure of detergent into the main compartment of the dispenser drawer and start the machine. Acoustic signals The machine is provided of an acoustic device, which sounds in the following cases: at the end of the cycle in the event of operating problems By pressing the buttons 4 and 5 14 simultaneously for about 6 seconds, the acoustic signal is deactivated (except for the events of operating problems).*



[You're reading an excerpt. Click here to read official ZANUSSI](http://yourpdfguides.com/dref/956083)

[ZKI245 user guide](http://yourpdfguides.com/dref/956083)

<http://yourpdfguides.com/dref/956083>

By pressing these 2 buttons again, the the acoustic signal is reactivated. Child safety lock This device permits you to leave the appliance unattended during its functioning, so avoiding that children might accidentally start the machine or modify a running programme. This function remains able also when the washer-dryer is not working. To enable (disable) this option press simultaneously for about 6 seconds buttons 2 and 3 until the icon appears (disappears) on (from) the display. There are two different ways to set this option: before pressing the button 8: it will be impossible to start the machine. after pressing the button 8: it will be impossible to change any other programme or option.

Operating sequence - Washing only 1. Load the laundry Open the door by carefully pulling the door handle outwards. Place the laundry in the drum, one item at a time, shaking them out as much as possible. Close the door. 2.

Measure out the detergent and the fabric softener ATTENTION! If you turn the programme selector dial to another programme when the machine is working, the red pilot light of button 8 will flash 3 times and the message Err is displayed on the display to indicate a wrong selection. The machine will not perform the new selected programme. Select the spin speed or the Rinse Hold option by pressing button 2 When selecting a programme, the light corresponding to the maximum speed allowed for that programme will illuminate. The relevant light will light up. Select the desired option by pressing buttons 3, 4 and 6

Depending on the programme, different functions can be combined.

These must be selected after choosing the desired programme and before depressing the button 8. For the compatibility of the options with the washing programmes, refer to the section «Programmes table». Select the delayed start by pressing the button 10 Press this button to select the required delay. The selected delay time value will appear on the display for a few seconds, then the duration of the programme will appear again. You must select this option after you have set the programme and before you press the button 8. You can cancel the delay time at any moment, before you press button 8. If you have already pressed it, and you wish to cancel the delay time, proceed as follows: · set the washer-dryer to PAUSE by pressing button 8; 15 Pull out the dispenser drawer until it stops. Measure out the amount of detergent required, pour it into the main wash compartment and, if you wish to carry out a programme with the prewash, pour it into the compartment marked . If required, pour fabric softener into the compartment marked (the amount used must not exceed the «MAX» mark in the drawer). Close the drawer gently.

Select the required programme by means of the programme selector dial (1) Turn the programme selector dial to the required programme. The green light of button 8 starts to flash. It can be turned either clockwise or anticlockwise. On position «O» the programme is reset and the machine is switched off. At the end of the programme the selector dial must be turned to position «O», to switch the machine off. · press the button 10 once. On the display will appear the symbol «O». · press button 8 again to start the programme. IMPORTANT! · The selected delay can be modified only after you have turned the programme selector dial to the «O» position and after you have selected the programme again. · The door will be locked throughout the delay time.

If you need to open the door, you must first set the washer-dryer to PAUSE by pressing button 8. The door can be opened immediately or after a few minutes depending on the model. (In any case do not try to open the door if it is locked!). After you have closed the door, press the same again. Note! @@@@If a delay start has been selected, the display shows the countdown.

IMPORTANT! @@@@Changing a running programme is possible only by resetting it. @@Start the new programme by pressing button 8 again. The washing water in the tub will not empty out. @@Press the button again to restart the programme. @@Now you can select a new programme.

@@@If it does not switch off, this means that the machine is already heating or that the water level is too high. In this cases the door cannot be opened.

@@@At the end of the programme The machine stops automatically. @@The light of button 8 and the light 9 go off. The door can be opened.

@@turn the programme selector dial to «O» 2. select the draining or spinning programme 3. reduce the spin speed, if needed, by pressing the button 2 4. press button 8 5. @@@@If you do not intend to carry out another wash, close the water tap.

@@Note! @@@@1. Load the laundry. 2. @@@3. @@@@Every time you press the button the time increases by 5 mins. Note! The drying time will automatically increase by up to 2 minutes. This is quite normal. 4. Press the button 8 to start the programme. @@5.

At the end of the programme, the buzzer sounds. A flashing zero «0» will appear on the display. @@@@Attention! @@@@6. @@Remove the laundry. AUTODRYING Warning! @@Note! @@Do not use a dosing device/ball when carrying out a washing & drying programme.

1. Load the laundry. 2. Add detergent and fabric softener. 3.

Switch the machine on by turning the selector dial to the selected wash programme/fabric. 17 4. Select the drying time (see the drying programmes). 5. Select the required options by pressing the relevant buttons. The display shows the entire duration of the washing and the selected drying cycle. If possible, do not select a spin speed lower than that proposed by the appliance to avoid a too long drying time so saving energy. In any case the reduction of the spin speed is only possible after selecting drying. 6. Start the programme by pressing the button 8.

After the programme has started, the time remaining on the display is updated every minute. 7. At the end of the programme the buzzersounds. A flashing zero «0» appear on the display. At this point of the programme, starts an anti-crease phase which lasts about 10 minutes. During this time the door is locked and the display keeps showing the flashing zero «0». (If you wish to open the door before or during the anti-crease phase, please follow the instructions given in the previous chapter). 8. @@9. Remove the laundry.

Drying times Degree of drying Type of fabric Cotton and linen (bathrobes, bath towels, etc Synthetics and mixed fabrics (jumpers, blouses, underwear, household linen) Cotton and linen (sheets, tablecloths, shirts, etc.) Max Load 4 kg 3 kg 1.5 kg 2 kg 1kg 4 kg Spin speed 1400 rpm 1400 rpm 1400 rpm 900 rpm 900 rpm 1400 rpm 1400 rpm 1400 rpm Suggested drying times in mins 140 - 160 80 - 90 40 - 50 65 - 75 30 - 40 110 - 130 65 - 75 35 - 45 Suitable for items to put away without ironing Suitable for ironing 3 kg 1.5 kg In compliance with EC directive EN 50229 the cotton reference programme for the data entered in the Energy Label must be tested dividing the maximum washing load by two equal parts and drying with TIMED DRYING each of them.



[You're reading an excerpt. Click here to read official ZANUSSI](http://yourpdfguides.com/dref/956083)

[ZKI245 user guide](http://yourpdfguides.com/dref/956083)

<http://yourpdfguides.com/dref/956083>

*NOTE! The different type of cottons (towelling, sheets, shirts and so on) or eventual laundry rolling up during spinning phase may cause a not uniform dryness.*

*So, in the exceptional case that, at the end of the cycle, the laundry remains slightly wet, we suggest you to stretch the items rolled up out, to redistribute evenly the laundry in the drum and to select an additional drying cycle of 20-30 minutes. 18 Care and cleaning IMPORTANT! You must DISCONNECT the appliance from the electricity supply, before you can carry out any cleaning or maintenance work. Descaling The water we use normally contains lime. It is a good idea to periodically use a water softening powder in the machine. Do this separately from any laundry washing, and according to the softening powder manufacturer's instructions.*

*This will help to prevent the formation of lime deposits. Maintenance Wash With the use of low temperature washes it is possible to get a build up of residues inside the drum. We recommend that a maintenance wash be performed on a regular basis. To run a maintenance wash: The drum should be empty of laundry. Select the hottest cotton wash programme. Use a normal measure of detergent, must be a powder with biological properties. External cleaning Clean the exterior cabinet of the appliance with soap and water only, and then dry thoroughly. Cleaning the dispenser drawer The washing powder and additive dispenser drawer should be cleaned regularly. To aid cleaning, the top part of the additive compartment should be removed. Remove the drawer by pressing the catch downwards and by pulling it out.*

*Flush it out under a tap, to remove any traces of accumulated powder. @@@@blocking the pump. Proceed as follows: Disconnect the appliance. If necessary wait until the water has cooled down. Place a container close to the pump (A) to collect any spillage. @@ When no more water comes out, unscrew the pump cover and remove it. @@@@ Turn off the water tap. Unscrew the inlet hose. @@@@ Remove its cap. The water should drain by gravity into the bowl.*

*When the bowl is full, put the cap back on the hose. Empty the bowl. @@When the appliance is in use and depending on the programme selected there can be hot water in the pump. Never remove the pump cover during a wash cycle, always wait until the appliance has finished the cycle, and is empty. When replacing the cover, ensure it is securely retightened so as to stop leaks and young children being able to remove it.*

*Cleaning the water inlet filter If your water is very hard or contains traces of lime deposit, the water inlet filter may become clogged. It is therefore a good idea to clean it from time to time. Turn off the water tap. Unscrew the water inlet hose. Clean the filter using a hard bristle brush.*

*Tighten up the inlet hose. 20 What to do if... IMPORTANT! Certain problems are due to lack of simple maintenance or oversights, which can be solved easily without calling out an engineer. Before contacting your local Service Centre, please carry out the checks listed below. During machine operation it is possible that the red pilot light of button 8 flashes, a few acoustic signals sound and one of the following alarm codes appears on the display to indicate that the machine is not working: E10: problem with the water supply E20: problem with water draining E40: door open. Once the problem has been eliminated, press the button 8 to restart the programme. If after all checks, the problem persists, contact your local Service Centre. Malfunction Possible Cause / Solution The door has not been closed.*

*E40 · Close firmly the door. The plug is not properly inserted in the power socket. · Insert the plug into the power socket. There is no power at the socket. · Please check your domestic electrical installation. The main fuse or the fuse in the plug has blown. · Replace the fuse. The selector dial is not correctly positioned and the button 8 has not been depressed. · Please turn the selector dial and press the button 8 again. The button 10 has been selected.*

*· If the laundry are to be washed immediately, cancel the delay start The Child Safety Lock has been activated. · Deactivate this function. The water tap is closed. E10 · Open the water tap. The inlet hose is squashed or kinked.*

*E10 · Check the inlet hose connection. The filter in the inlet hose is blocked. E10 · Clean the water inlet hose filter. The door is not properly closed. E40 · Close firmly the door.*

*21 The washer-dryer does not start: The machine does not fill: Malfunction The machine fills then empties immediately: Possible Cause / Solution The end of the drain hose is too low. · Refer to relevant paragraph in «water drainage» section. The drain hose is squashed or kinked. E20) · Check the drain hose connection. The drain pump is clogged. E20 · Clean the drain pump. The option «Rinse hold» has been selected. · Select the draining or spinning programme The laundry is not evenly distributed in the drum. · Redistribute the laundry. Too much detergent or unsuitable detergent (creates too much foam) has been used.*

*· Reduce the detergent quantity or use another one. Check whether there are any leaks from one of the inlet hose fittings. It is not always easy to see this as the water runs down the hose; check to see if it is damp. · Check the water inlet hose connection. The inlet or the draining hose is damaged. · Replace it with a new one. The cap on the emergency emptying hose has not been replaced after cleaning the pump. · Refit the cap on the emergency emptying hose and place the latter back in its seat. Too little detergent or unsuitable detergent has been used. · Increase the detergent quantity or use another one.*

*Stubborn stains have not been treated prior to washing. · Use commercial products to treat the stubborn stains. The correct programme/temperature was not selected. · Check if you have selected the correct programme/temperature. Excessive laundry load.*

*· Reduce the laundry load. The machine does not empty and/or does not spin: There is water on the floor: Unsatisfactory washing results: 22 Malfunction Possible Cause / Solution The programme is still running. · Wait the end of washing cycle. The door lock has not been released. · Wait until the pilot light 9 has gone out.*

*There is water in the drum. · Select drain or spin programme to empty out the water. The transit bolts and packing have not been removed. · Check the correct installation of the appliance. The door will not open: The machine vibrates or is noisy: The support feet have not been adjusted. · Check the correct levelling of the appliance. The laundry is not evenly distributed in the drum. · Redistribute the laundry. Maybe there is very little laundry in the drum. · Load more laundry.*

*The electronic unbalance detection device has cut in because the laundry is not evenly distributed in the drum.*



[You're reading an excerpt. Click here to read official ZANUSSI](http://yourpdfguides.com/dref/956083)

[ZKI245 user guide](http://yourpdfguides.com/dref/956083)

<http://yourpdfguides.com/dref/956083>

The laundry is redistributed by reverse rotation of the drum. This may happen several times before the unbalance disappears and normal spinning can resume. If, after 10 minutes, the laundry is still not evenly distributed in the drum, the machine will not spin. In this case, redistribute the load manually and select the spin programme. Redistribute the laundry. The load is too small. Add more items, redistribute the load manually and then select the spinning programme. Spinning starts late or the machine does not spin: The machine is fitted with a type of motor which makes an unusual noise compared with other traditional motors. This new motor ensures a softer The machine makes an unusual noise start and more even distribution of the laundry in the drum when spinning, as well as increased stability of the machine.

No water is visible in the drum Machines based on modern technology operate very economically using very little water without affecting performance. 23 Malfunction The machine does not dry or does not dry properly Possible Cause / Solution The drying time has not been selected. · Select the drying time. The water tap is not turned on (E10) · Open the water tap. The drain filter is clogged (E20) · Clean the drain filter.

The machine is overloaded. · Reduce the laundry load. The selected drying time was not suitable for the laundry. · Select the suitable drying time for the laundry. If you are unable to identify or solve the problem, contact our service centre.

Before telephoning, make a note of the model, serial number and purchase date of your machine: the Service Centre will require this information. Mod. ... ..

. Prod. No. ... ..

.. Ser. No. .

... ..

... Technical data Dimensions Width Height Depth (including the porthole) Electrical connection Voltage Overall power - Fuse Water supply pressure 60 cm 82 cm 54 cm Information on the electrical connection is given on the rating plate on the inner edge of the appliance door Minimum Maximum 0,05 MPa 0,8 MPa 3. 0kg 4. 0kg 2 kg 6 kg 0 1400 rpm Maximum Drying Load Cotton Cotton Big Capacity Synthetics Cotton Maximum Maximum Load Spin Speed 24 Mod.

Prod ... .

No. ... ..

... ..

Ser. No. ...

... .. Consumption values Programme Programme duration For the duration of the programmes, please refer to the display on the control panel Energy consumption (in kWh) 2.1 1.2 1.5 1.

02 0.9 0.55 0.45 Water consumption (in litres) 57 53 65 42 44 56 58 Cotton 90°C Cotton 60°C Cotton 60°C + Prewash Cotton 60°+ Economy selected Synthetics 60°C Delicates 40°C Handwash 40° Information The consumption data shown on this chart is to be considered purely indicative, as it may vary depending on the quantity and type of laundry, on the inlet water temperature and on the ambient temperature. It refers to the highest temperature for each wash programme. (\*) The Cotton 60° + the option Economy selected with a load of 6 kg is the reference programme for the data entered in the energy label, in compliance with EEC 92/75 standards. Installation instruction Unpacking All transit bolts and packing must be removed before using the appliance. You are advised to keep all transit devices so that they can be refitted if the machine ever has to be transported again. 1. After removing all the packaging, carefully lay machine on it's back to remove the polystyrene base from the bottom.

2. Remove the power supply cable, the draining and the inlet hose from the hose holders on the rear of the appliance. A C B C B 25 3. With a suitable spanner unscrew and remove the central rear bolt A. 4.

Unscrew and remove the two large rear bolts B and the six smaller bolts C. E C C D 5. Remove the bracket D, refit the six smaller bolts C and slide out the relevant plastic spacer E. The machine must not be installed in rooms where the temperature can drop below 0. The water inlet hose and the drain hose must not be kinked.

Please ensure that when the appliance is installed, it is easily accessible for the engineer in the event of a breakdown. Carefully level by screwing the adjustable feet in or out. Never place cardboard, wood or similar materials under the machine to compensate for any unevenness in the floor. After having levelled the machine, tighten the lock nuts. 6. Open the porthole and remove the polystyrene block fitted on the door seal. 7. Fill the smaller upper hole and the two large ones with the corresponding plastic plug caps supplied in the bag containing the instruction booklet. Positioning Install the machine on a flat hard floor. Make sure that air circulation around the machine is not impeded by carpets, rugs etc.

Before placing it on small tiles, apply a rubber coating. Never try to correct any unevenness in the floor by putting pieces of wood, cardboard or similar materials under the machine. If it is impossible to avoid positioning the machine next to a gas cooker or coal-burning stove, an insulating panel covered with aluminium foil on the side facing the cooker or stove, must be inserted between the two appliances. 26 Water inlet The inlet hose is already screwed on the back of the appliance. 1. Set the hose correctly by loosening the ring nut. After positioning the inlet hose, be sure to tighten the ring nut again to prevent leaks.

2. Connect the hose with the angled connection to the machine. HEC0006 Attention! Do not place the inlet hose downwards.

Angle the hose to the left or right depending on the position of your water tap (see picture). 2. This appliance must be connected to a cold water supply.

Connect the hose to a tap with a 3/4" thread. The inlet hose must not be lengthened.

If it is too short and you do not wish to move the tap, you will have to purchase a new, longer hose specially designed for this type Special Sport 40° Sport Shoes 40° Silk Mini 30' Cold Hand Wash 30° Wool Spin Drain Rinse 30° 40° Delicates Off 95° 60° Eco 60° 40° Eco 40° Synthetics 50° 40° Easy Iron 40° ZWF10070W Cottons 3h 6h 9h 1000 900 700 Prewash Intensive Super Quick Spin Options Extra Rinse Wash Door End Start/Pause 1000 6kg of use. Water drainage This appliance is designed to be permanently plumbed into your home's drainage system using one of the following methods. 1. Into a drainage standpipe. Firstly form a hook in the end of the drain hose using the «U» piece supplied.

The drain hose may be extended to a maximum of 4 metres. An additional drain hose and joining piece is available from your local Service Force Centre. The joining piece must have an internal diameter of 18mm. If your drain hose looks like this (see below) you do not require the «U» piece. Just push the hose firmly into the standpipe. 2. Onto a sink outlet spigot. U piece supplied If the outlet spigot has not been used before, remove any blanking plug that may be in place. Place the drain hose into your standpipe, which should have an internal diameter of approximately 38mm thus ensuring there is an air break between the drain hose and standpipe.



[You're reading an excerpt. Click here to read official ZANUSSI](http://yourpdfguides.com/dref/956083)

[ZKI245 user guide](http://yourpdfguides.com/dref/956083)

<http://yourpdfguides.com/dref/956083>



(Fig. B and E). Mount the counter-magnet (6) and the hinges (1) as previously described. 4 6 Position the base into the recess with its front edge as far forward as the adjoining plinth line will allow.

The reason for placing the base in this position is to allow a small strip of beading to be fitted in front of the appliance feet. Fix the base firmly to the floor using four appropriate countersunk screws (see Fig. H). 5 E 7 1 3 8 2 Hardwood strip 5 mm x 25 mm 5 X 25 X 605 490 Recommendations regarding the construction and fitting of a base when the installation requires an integrated appliance to be raised. 600-605 H With the appliance installed adjust all four feet ensuring the machine is stable, and a clearance of approximately 5 mm is left between the top of the machine and the underside of the worktop.



[You're reading an excerpt. Click here to read official ZANUSSI](#)

[ZKI245 user guide](#)

<http://yourpdfguides.com/dref/956083>

30 A final check for stability should be carried out with the machine on spin with a load, this will identify the need for any further fine adjustment to the feet. A strip of beading approximately 605 mm W, x 5 mm H, x 25 mm D must be screwed down into the base directly in front of the machine's feet, this will provide additional security. If required an additional door magnet, part number 1242394-00/3 and disc, part number 1242393-00/5 are available from spare parts.

*Environmental concerns Packaging materials* The materials marked with the symbol are recyclable. >PE<=polyethylene >PS<=polystyrene

>PP<=polypropylene This means that they can be recycled by disposing of them properly in appropriate collection containers.

*Old machine Use authorised disposal sites for your old appliance. Help to keep your country tidy! The symbol on the product or on its packaging indicates that this product may not be treated as household waste. Instead it should be taken in to the appropriate collection point for the recycling of electrical and electronic equipment. By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling of this product. For more detailed information about recycling of this product, please contact your local council, your household waste disposal service or the shop where you purchased the product. Ecological hints To save water, energy and to help protect the environment, we recommend that you follow these tips: Normally soiled laundry may be washed without prewashing in order to save detergent, water and time (the environment is protected too!). The machine works more economically if it is fully loaded. With adequate pre-treatment, stains and limited soiling can be removed; the laundry can then be washed at a lower temperature. Measure out detergent according to the water hardness, the degree of soiling and the quantity of laundry being washed. 31 www.*

*electrolux.com www.zanussi.co.uk 132 964 630 - 00 - 302008 Subject to change without notice .*



[You're reading an excerpt. Click here to read official ZANUSSI](#)

[ZKI245 user guide](#)

<http://yourpdfguides.com/dref/956083>