




Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for ZANUSSI ZOB230X. You'll find the answers to all your questions on the ZANUSSI ZOB230X in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual ZANUSSI ZOB230X
User guide ZANUSSI ZOB230X
Operating instructions ZANUSSI ZOB230X
Instructions for use ZANUSSI ZOB230X
Instruction manual ZANUSSI ZOB230X

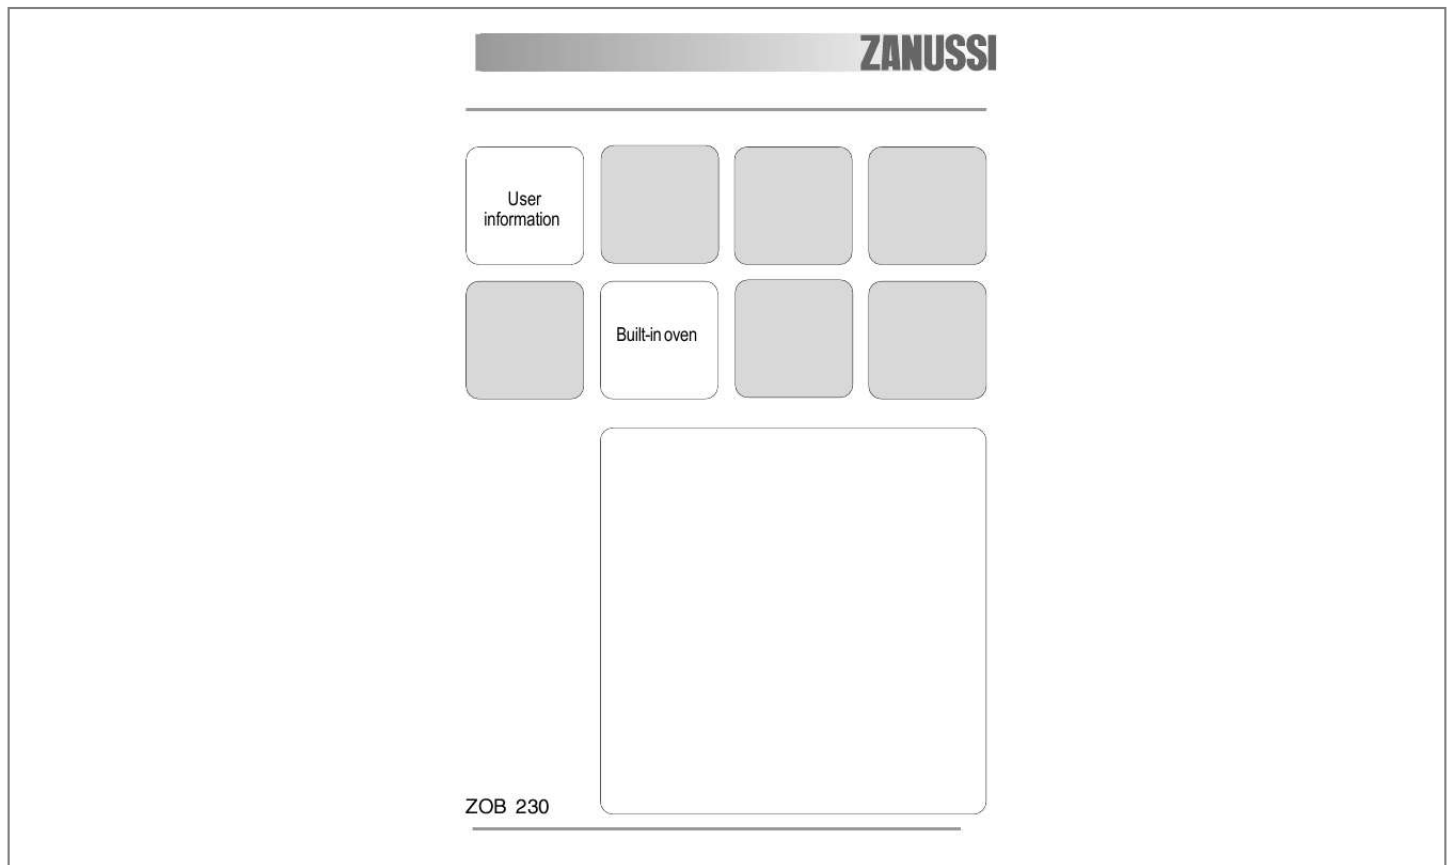

[You're reading an excerpt. Click here to read official ZANUSSI ZOB230X user guide](http://yourpdfguides.com/dref/954358)
<http://yourpdfguides.com/dref/954358>

Manual abstract:

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.... 8 Before using the oven for the first time .

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
9 Using the Oven

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.. 10 Baking and Roasting Tables ...

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....
.....
.....
.....
.....

14 Cleaning and Maintenance

.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....

16 If something is wrong

.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....

..... 19 Technical Data .

.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....

... 20 Electrical Connection ..

.....
.....
.....
.....

24 Guide to using the user instructions Safety instructions Step by step instructions Hints and Tips Environmental Informations This appliance conforms with the following ECC Directives: 2006/95 (Low Voltage Directive); 89/336 (EMC Directive); 93/68 (General Directive); and subsequent modifications. 4 Warnings and Important Safety Information These warnings are provided for the safety of the users and those living with them. So read them carefully before installing and using the appliance. This will allow you to obtain best performance, avoid improper actions, use the appliance in complete safety and also respect the environment. If you need assistance, contact our Customer Care Department on 08705 727 727 Installation . . . This oven must be installed by qualified personnel to the relevant British Standards. This oven is heavy. Take care when moving it. @@Do not attempt to modify the oven in any way. This oven is intended for domestic cooking only. It is not designed for commercial or industrial purposes.

@@@@@@@Never line any part of the oven with aluminium foil. Do not allow heatproof cooking material, e.g. roasting bags, to come into contact with oven elements. Never place plastic or any other material which may melt in or on the oven.

Do not place sealed cans or aerosols inside the oven. They may explode if they During use . . . are heated. Do not hang towels, dishcloths or clothes from the oven or its handle. Do not use this oven if it is in contact with water and never operate it with wet hands. Take great care when heating fats and oils as they will ignite if they become too hot.

Always use oven gloves to remove and replace food in the oven. Before cleaning the oven, either turn the power off or pull the mains plug out. Ensure that all controls are in the OFF position when not in use. Do not leave cookware containing foodstuffs, e.g. fat or oil in or on the oven in case it is inadvertently switched ON. When using other electrical appliances, ensure the cable does not come into contact with the hot surfaces of the oven. . . . 5 People Safety . . . This oven is designed to be operated by adults. Do not allow children to play near or with the oven. The oven gets hot when it is in use.

Children should be kept away until it has cooled. This appliance is not intended for use by children or other persons whose physical, sensory or mental capabilities or lack of experience and knowledge prevents them from using the appliance safely without supervision or instruction by a responsible person to ensure that they can use the appliance safely. Environmental Information . . After installation, please dispose of the packaging with due regard to safety and the environment. When disposing of an old appliance, make it unusable, by cutting off the cable. Remove any door catches, to prevent small children being trapped inside. on the product or on its packaging The symbol Maintenance and Cleaning Only clean this oven in accordance with the instructions.

Always allow the oven to cool down and switch off the electrical supply before carrying out any cleaning or maintenance work. The oven should be kept clean at all times. A build-up of fats or other foodstuffs could result in a fire, especially in the grill pan. Never use steam or high pressure steam cleaners to clean the appliance.

Do not use abrasive cleaners or sharp metal scrapers. These can scratch the glass in the oven door, which may result in the shattering of the glass. indicates that this product may not be treated as household waste. Instead it shall be handed over to the applicable collection point for the recycling of electrical and electronic equipment. By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling of this product.

For more detailed information about recycling of this product, please contact your local city office, your household waste disposal service or the shop where you purchased the product. Always keep these user instructions with the appliance. Should the appliance be passed on to third persons or sold, or if you leave this appliance behind when you move house, it is very important that the new user has access to these user instructions and the accompanying information.

Service · This oven should only be repaired or serviced by an authorised Service Engineer and only genuine approved spare parts should be used. 6 Description of the appliance 64 1 7 8 9 10 11 3 25 1.

2. 3. 4. 5. Control Panel Oven Function Control Knob Minute minder Thermostat Control Knob Mains On Indicator 6. Thermostat Control Indicator 7. Air Vents for Cooling Fan 8. Grill 9. Oven light 10. Oven Fan 11.

@@@@@@@The maximum timing is 60 minutes. @@@@@@@@@@@@@@Warm air is blown out through the aperture near the oven door handle. The fan switches off when, after cooking, the oven function control knob is set to OFF position 0. Before using the oven for the first time @@Before using for the first time, the oven should be heated up without food. During this time, an unpleasant odour may be emitted. This is absolutely normal. It is caused by manufacturing residues. Ensure the room is well ventilated. 1. Switch the oven function control knob to fan cooking .

2. Set the thermostat control knob to 250°C. 4. Open a window for ventilation. 5.

Allow the oven to run empty for approximately 45 minutes. This procedure should be repeated with the full grill function for approximately 5-10 minutes. To open the oven door, always hold the handle in the centre. Then let the oven cool down. Then dampen a soft cloth with warm water and a little mild washing-up liquid and use this to clean the oven cavity.

Before using for the first time, carefully wash the oven accessories as well. 9 Using the oven The oven is supplied with an exclusive system which produces a natural circulation of air and the constant recycling of steam. This system makes it possible to cook in a steamy environment and keep the dishes soft inside and crusty outside. Moreover, the cooking time and energy consumption are reduced to a minimum. During cooking steam may be produced which can be released when opening the oven door. This is absolutely normal. However, always stand back from the oven when opening the oven door during cooking or at the end of it to allow any build up of steam or heat to release.



[You're reading an excerpt. Click here to read official ZANUSSI ZOB230X user guide](http://yourpdfguides.com/dref/954358)
<http://yourpdfguides.com/dref/954358>

Attention! - Do not place objects on the oven base and do not cover any part of the oven with aluminium foil while cooking, as this could cause a heat build-up which would affect the baking results and damage the oven enamel. Always place pans, heat-resisting pans and aluminium trays on the shelf which has been inserted in the shelf runners. When food is heated, steam is created, like in a kettle.

When the steam comes into contact with the glass in the oven door, it condenses and creates water droplets. To reduce condensation, always preheat the empty oven for 10 minutes. 4 3 2 1 The oven has four shelf levels. The shelf positions are counted from the bottom of the oven as shown in the diagram. It is important that these shelves are correctly positioned as shown in the diagram. @@@@ @@@@ bread, pastries, scones, souffles, etc. Lower Temperatures Fan oven cooking generally requires lower temperatures than those of food. @@@@ Adjust the heat setting and the shelf as necessary, during cooking. @@ This increases the speed of defrosting. @@@@ @@@@ - Always cook thoroughly immediately after thawing.

@@ - Only joints of meat and poultry up to 2 kg. @@ Turn the oven function control knob to . 2. Ensure the thermostat control knob is in the OFF position. @@ Do not open the oven door before 3/4 of the baking time has elapsed.

@@@ Sponge mixtures must separate with difficulty from the spoon. The baking time would be unnecessarily extended by too much liquid. @@ On Roasting: Do not roast joints smaller than 1 kg. Smaller pieces could dry out when roasting. @@@@ Otherwise add them in the last half hour. @@ Roast beef and fillet, which is to remain pink inside, must be roasted at a higher temperature in a shorter time. If cooking meat directly on the oven shelf, insert the roasting pan in the shelf level below to catch the juices. Leave the joint to stand for at least 15 minutes, so that the meat juices do not run out. To reduce the build up of smoke in the oven, it is recommended to pour a little water in the roasting pan. To prevent condensation forming, add water several times. The plates can be kept warm in the oven at minimum temperature until serving. Caution! Do not line the oven with aluminium cleaning materials on your oven, check that they are suitable and that their use is recommended by the manufacturer. Cleaners that contain bleach should NOT be used as they may dull the surface finishes. Harsh abrasives should also be avoided. Oven Cavity The enamelled base of the oven cavity is best cleaned whilst the oven is still warm.

Wipe the oven over with a soft cloth soaked in warm soapy water after each use. @@@@ Proceed as follows: 1. open the oven door completely; 2. find the hinges linking the door to the oven (Fig. A); 3. unlock and turn the small levers located on the two hinges (Fig. B); 4. @@ C); 5. gently pull the oven door off its site (Fig. C); 6.

@@ Never use harsh abrasives. @@@@ Clean the oven control panel following the same precautions. DO NOT clean the oven door while the glass panels are warm. If this precaution is not observed the glass panel may shatter. @@@@ A Fig.

B Fig. C 17 Replacing The Oven Light Disconnect the appliance If the oven bulb needs replacing, it must comply with the following specifications: - Electric power: 15 W/25 W, - Electric rate: 230 V (50 Hz), - Resistant to temperatures of 300°C, - Connection type: E14. These bulbs are available from your local Service Force Centre. To replace the faulty bulb: 1. Ensure the oven is isolated from the electrical supply.

2. Push in and turn the glass cover anticlockwise. 3. Remove the faulty bulb and replace with the new one. 4. Refit the glass cover and restore the electrical supply. 18 If something is wrong If the appliance is not working correctly, please check the following before contacting the Electrolux Service Centre: PROBLEM The oven is not switching on. SOLUTION Check that both a cooking function and temperature have been selected or Check whether the appliance is correctly connected and the socket switch or the mains supply to the oven is ON. Select a temperature with the thermostat control knob or Select a function with the oven function control knob. Select a function with the function control knob or Check the light bulb, and replace it if necessary (see "Cleaning and Maintenance") The temperature may need adjusting or Following the advice contained in these instructions, especially the section "Using the oven".

When the cooking process is completed, do not leave the dishes standing in the oven for longer than 15-20 minutes. Check that shelves and bakeware are not vibrating in contact with the oven back panel. The oven temperature light does not come on. The oven light does not come on. It takes too long to cook the dishes or they cook too quickly. Steam and condensation settle on the food and in the oven cavity. The oven fan is noisy. 19 Technical Data Heating element ratings Grill element Convection element Oven light Cooling Fan Convection Fan Total rating Dimensions of the recess 1650 W 2000 W 25 W 25 W 25 W 2075 W 230 V Width Depth Height under top in column mm 593 mm 580 mm 560 mm 550 mm Oven Height Width Depth Oven capacity mm 335 mm 405 mm 400 mm 56 l Operating voltage (50 Hz) 20 Electrical Connection The oven is designed to be connected to 230 V (50 Hz) electricity supply. The oven has an easily accessible terminal block which is marked as follows: Letter L Live terminal Letter N Neutral terminal or E Earth terminal It is necessary that you install a double pole switch between the oven and the electricity supply (mains), with a minimum gap of 3mm between the switch contacts and of a type suitable for the required load in compliance with the current rules. The switch must not break the yellow and green earth cable at any point. the yellow and green earth cable should be 2-3 cm longer than the other cables. Important After installation and connecting, the cable must be placed so that it cannot at any point reach a temperature of more than 60°C above the ambient temperature. @@@@ 20 A max. For Europe use only Min.

@@ Dimensions of the oven and recess required are given in the relevant diagrams.

593 550 M IN 560 100 80 ÷ - 57 0 Securing the Appliance to the Cabinet 1. Open the oven door. 2. Fasten the oven to the cabinet placing the four distance holders (letter A) which fit exactly into the holes in the frame and then fit the four wood screws (letter B) provided. 22 Guarantee/ Customer Service Standard guarantee conditions We, Zanussi - Electrolux, undertake that if within 12 months of the date of the purchase this Zanussi Electrolux appliance or any part thereof is proved to be defective by reason only of faulty workmanship or materials, we will, at our option repair or replace the same FREE OF CHARGE for labour, materials or carriage on condition that: · The appliance has been correctly installed and used only on the electricity supply stated on the rating plate.



[You're reading an excerpt. Click here to read official ZANUSSI](#)

[ZOB230X user guide](#)

<http://yourpdfguides.com/dref/954358>

· The appliance has been used for normal domestic purposes only, and in accordance with the manufacturer's instructions. · The appliance has not been serviced, maintained, repaired, taken apart or tampered with by any person not authorised by us. · Electrolux Service Force Centre must undertake all service work under this guarantee · Any appliance or defective part replaced shall become the Company's property. · This guarantee is in addition to your statutory and other legal rights. Exclusions · Damage or calls resulting from transportation, improper use or neglect, the replacement of any light bulbs or removable parts of glass or plastic. @@@@2.Your telephone number. 3. Clear concise details of the fault. 4.

The model and Serial number of the appliance (found on the rating plate). 5.The purchase date. Please note a valid purchase receipt or guarantee documentation is required for in guarantee service calls. 23 Customer Care For general enquiries concerning your Electrolux appliance, or for further information on Electrolux products please contact our Customer Care Department by letter or telephone at the address below or visit our website at www.electrolux.co.uk Customer Care Department Electrolux Major Appliances Addington Way Luton Bedfordshire, LU4 9QQ Tel: 08705 727 727 (*) (*) Calls may be recorded for training purposes European Guarantee This appliance is guaranteed by Electrolux in each of the countries listed at the back of this user manual, for the period specified in the appliance guarantee or otherwise by law. If you move from one of these countries to another of the countries listed below the appliance guarantee will move with you subject to the following qualifications: · · · · The appliance guarantee starts from the date you first purchased the appliance which will be evidenced by production of a valid purchase document issued by the seller of the appliance. The appliance guarantee is for the same period and to the same extent for labour and parts as exists in your new country of residence for this particular model or range of appliances. The appliance guarantee is personal to the original purchaser of the appliance and cannot be transferred to another user. The appliance is installed and used in accordance with instructions issued by Electrolux and is only used within the home, i.e. is not used for commercial purposes. The appliance is installed in accordance with all relevant regulations in force within your new country of residence.

The provisions of this European Guarantee do not affect any of the rights granted to you by law. 24 25 ZOB 230 0.78 kWh 56 43 min. 41 min. 1130 cm² 26 27
www.
zanussi-electrolux.co.uk 28 35699-1301 12/07 R.A .



[You're reading an excerpt. Click here to read official ZANUSSI ZOB230X user guide](#)
<http://yourpdfguides.com/dref/954358>