



# Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for ZANUSSI ZTK 120. You'll find the answers to all your questions on the ZANUSSI ZTK 120 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual ZANUSSI ZTK 120  
User guide ZANUSSI ZTK 120  
Operating instructions ZANUSSI ZTK 120  
Instructions for use ZANUSSI ZTK 120  
Instruction manual ZANUSSI ZTK 120

## ZANUSSI

TUMBLE DRYER  
SECHE-LINGE  
WÄSCHETROCKNER  
TROMMELDROGER  
ZTK 120



GB ⚠ Unpacking: see page 5  
F ⚠ Débridage: voir page 17  
D ⚠ Entfernen der Transportsicherung: s. S. 29  
NL ⚠ Uitpakken: zie blz. 41

INSTRUCTION BOOKLET  
MODE D'EMPLOI  
GEBRAUCHSANWEISUNG  
GEBRUIKSAANWIJZING

GB  
F  
D  
NL

125981101



[You're reading an excerpt. Click here to read official ZANUSSI ZTK 120 user guide](http://yourpdfguides.com/dref/3021905)

<http://yourpdfguides.com/dref/3021905>

**Manual abstract:**

We recommend that you keep this instruction booklet for future reference and pass it on to any future owners. After unpacking the machine please check it is not damaged. If in doubt, do not start it but contact your local Service Centre. The symbols you will see on some paragraphs of this booklet have the following meaning: The warning triangle emphasize information that is particularly important for your safety or correct functioning of the appliance. The information marked with this symbol provides additional instructions and practical tips on the use of the appliance. Tips and information about economical and ecological use of the machine are marked with this symbol. Our contribution to the protection of the environment: we use recycled paper. These warnings have been provided in the interest of safety. You **MUST** read them carefully before installing or using the appliance. Any electrical work required to install this appliance should be carried out by a qualified electrician or competent person.

• Care must be taken to ensure that the appliance does not stand on the electrical supply cable. • If the machine is situated on a carpeted floor, please adjust the feet in order to allow air to circulate freely. • • • • • Keep them out of children's reach. • • • • • When the appliance is to be scrapped, cut off the electrical supply cable and destroy the plug with the remaining cable. Disable the door catch in order to prevent children from becoming trapped inside while playing.

This appliance is designed for domestic use only. If the machine is used for any other purposes or is not used correctly, the manufacturer accepts no responsibility for any damage that might occur. • Always unplug the appliance after use. • • • • • As these substances are volatile, they could cause an explosion. Tumble dry only items washed with water.

• • • • • If you have washed your laundry with stain remover you must execute an extra rinse cycle before loading your tumble dryer. • Please make sure that no gas lighters have accidentally been left in pockets of garments to be loaded into appliance. • Do not dry canvas shoes or sports shoes, as they could get stuck between the door and the drum, thus blocking this latter. • Leave the door slightly ajar when the appliance is not being used. This will allow the seal to be preserved. • Clean fluff filters after using the tumble dryer. To prevent fire risks, do not use the appliance if the fluff filters are damaged or without filters. • Do not allow fluff to accumulate around the dryer. This means that they can be recycled by disposing of them properly in appropriate collection containers. Use authorised disposal sites for your old appliance.

It is dangerous to alter the specifications or attempt to modify this product in any way. Repairs carried out by inexperienced persons may cause injury or serious malfunctioning. contact your local Service Centre. Always insist on genuine spare parts. • • • • • • • • • • • Always load well spun laundry. • • • • • To utilize the maximum load, laundry which is to be dried ready to put away (store dry) can be dried together with items to be ironed. To do this, select the time for iron-dry, remove the iron-dry items at the end of the programme and then finish-dry the rest of the load. • Clean the filters regularly to avoid excessive drying times and high electricity consumption. The room temperature should not exceed +35°C during drying. This appliance complies with the following E.

Slide out the polythene bag with the polystyrene stuffing before using the appliance. Pull off adhesive strips from inside machine on top of drum. Check that your domestic electrical installation can take the maximum load required (2.4 kW), also taking into account any other appliances in use. • • • • • • • • • • • Should the appliance be moved, it must be transported vertically.

• • • • • Read carefully the instructions supplied with the kit. • • • • • Air must be able to circulate freely all round the appliance. • • • • • If it is not, raise or lower the feet until it is. The feet must never be removed. • • • • • • • • • • • This operation must be carried out by qualified personnel. • • • • • • • • • • • This will help you to select the correct time for drying. Comes on when the appliance is switched on (ON/OFF button pressed down) and goes out when this button is released. This button is used to switch the dryer on. At the end of the programme, release this button by pressing it again to switch the dryer off. This light illuminates when the reservoir is full or improperly fitted. Press this button to reduce the temperature when drying particularly delicate cotton or linen items. In this case you should select a longer drying time. The selector dial incorporates two drying cycles, one of up to 150 minutes at a high temperature for cotton and linen, and one of up to 100 minutes at a low temperature for synthetic fabrics. To set the machine to the selected time, turn the dial clockwise until the time you want coincides exactly with the pointer. **NEVER** attempt to turn the dial in an anticlockwise direction.

• • • • • By depressing this button the heat is cut off. • • • • • Please follow the instructions on labels when drying mixed fabrics. • • • • • it is advisable to take note of them. • • • • • There may be dust inside a brand new tumble dryer. After each use If the drying programme has to be stopped before it reaches the end, we recommend that you turn the time selector dial to position (cooling) and wait until the end of this phase before removing the laundry. This will avoid a buildup of heat inside the appliance. Load the items one at a time, shaking them out loosely. Please check the laundry does not get caught between the door and filter. The drum turns alternately in both directions during drying. all drying programmes end with a 10 minute cooling phase (position on selector dial). The machine stops automatically at the end of this phase. 9. Release the AAN/UIT button (the mains-ON light goes out) and immediately remove the laundry. To change a programme which is running without opening the door, first depress the AAN/UIT button and then turn the time selector dial to the required time. Try to load to the maximum capacity of the machine as small loads are uneconomical.

For information, here is a list of the average weights of some common laundry items. • • • • • • • • • • • 30 seconds or using the special brief spin programme of your washing machine). • Knitted textiles (knitted underwear) may shrink a little during drying. Please do not overdry items of this type. • • • • • You can also put starched items into your dryer.

• • • • • • • • • • • Remove the laundry when the dryer has finished drying. • If individual items are still damp after drying, set a brief post-drying time, but at least 20 minutes. This will be necessary make the following checks: The plug is not fitted into the wall socket. • There is no electricity supply from the wall socket.



[You're reading an excerpt. Click here to read official ZANUSSI ZTK 120 user guide](http://yourpdfguides.com/dref/3021905)  
<http://yourpdfguides.com/dref/3021905>

*If, after the above checks, there is still a fault, call your local Service Centre. Please make sure you give the model and serial This information can be found on the rating plate (see picture on page 4 ). More than 55 million Electrolux Group products (such as refrigerators, cookers, washing machines, vacuum cleaners, chain saws and lawn mowers) are sold each year to a value of approx. USD 14 billion in more than 150 countries around the world. .*



[You're reading an excerpt. Click here to read official ZANUSSI ZTK  
120 user guide](#)

<http://yourpdfguides.com/dref/3021905>