



Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for ZANUSSI ZTK123. You'll find the answers to all your questions on the ZANUSSI ZTK123 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual ZANUSSI ZTK123
User guide ZANUSSI ZTK123
Operating instructions ZANUSSI ZTK123
Instructions for use ZANUSSI ZTK123
Instruction manual ZANUSSI ZTK123



ZTK123



[You're reading an excerpt. Click here to read official ZANUSSI ZTK123 user guide](http://yourpdfguides.com/dref/956178)
<http://yourpdfguides.com/dref/956178>

Manual abstract:

Contents Important safety information
3 Description of the appliance

5 The control panel

 6 Drying programmes .

 7 Before the first use

 8 Drying hints

 8 Operating sequence

 . 10 Care and cleaning
 13 Something not working

 . 16 Technical data

 . 18 Consumption values

 19 Disposal

 . 20 Installation

. 21 2 Important safety information In the interest of your safety and to ensure the correct use, before installing and first using the appliance, read this user manual carefully, including its hints and warnings.

To avoid unnecessary mistakes and accidents, it is important to ensure that all people using the appliance are thoroughly familiar with its operation and safety features. Save these instructions and make sure that they remain with the appliance if it is moved or sold, so that everyone using it through its life will be properly informed on appliance use and safety. General safety · It is dangerous to alter the specifications or attempt to modify this product in any way. · This appliance is not intended for use by persons (including children) with reduced physical, sensory or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. · Make sure that small pets do not climb into the drum.

To avoid this, please check into the drum before using. · Any objects such as coins, safety pins, nails, screws, stones or any other hard, sharp material can cause extensive damage and must not be placed into the machine. · In order to avoid danger of fires caused by excessive drying, do not use appliance to dry the following items: Cushions, quilts and the like (these items accumulate heat). · Items such as foam rubber (latex foam), shower caps, waterproof textiles, rubber backed articles and clothes or pillows fitted with foam rubber pads should not be dried in the tumble dryer. · Always unplug the appliance after use, clean and maintenance. · Under no circumstances should you attempt to repair the machine yourself. Repairs carried out by inexperienced persons may cause injury or serious malfunctioning. Contact your local Service Centre. Always insist on genuine spare parts. · Items that have been soiled with substances such as cooking oil acetone, petrol, kerosene, spot removers, turpentine, waxes and wax removers should be washed in hot water with an extra amount of detergent before being dried in the tumble dryer.

· Danger of explosion: Never tumble dry items that have been in contact with inflammable solvents (petrol, methylated spirits, dry cleaning fluid and the like). As these substance are volatile, they could cause an explosion. Only tumble dry items washed with water. · Risk of fire: items that have been spotted or soaked with vegetable or cooking oil constitute a fire hazard and should not be placed in the tumble dryer. @@@@RISK OF FIRE! Installation · This appliance is heavy. Care should be taken when moving it. · When unpacking the appliance, check that it is not damaged. If in doubt, do not use it and contact the Service Centre. · All packing and transit bolts must be removed before use. @@See relevant section in the user manual.

· The final part of a tumble dryer cycle occurs without heat (cool down cycle) to ensure that the items are left at a temperature that ensures that items will not be damaged. · Any electrical work required to install this appliance should be carried out by a qualified electrician or competent person. · Care must be taken to ensure that the appliance does not stand on the electrical supply cable. · If the machine is situated on a carpeted floor, please adjust the feet in order to allow air to circulate freely. · After having installed the appliance, check that it is not pressing or standing on its electrical supply cable.

· If the tumble dryer is placed on top of a washing machine, it is compulsory touse the stacking kit (optional accessory). Use · This appliance is designed for domestic use. It must not be used for purposes other 4 than those for which it was designed. · Only wash fabrics which are designed to be machine dried.

Follow the instructions on each garment label.

· If individual items are still damp after drying, set a brief post-drying time, but at least 30 minutes. This will be necessary particularly for multilayered items (e.g. collars, pockets, etc.). Make sure that no metal objects are left in the laundry (e.g. hair clips, safety pins, pins). Button up pillowcases, close zip fasteners, hooks and poppers.

Tie any belts or long tapes. To avoid laundry becoming tangled: close zips, button up duvet covers and tie loose ties or ribbons (e.g. of aprons). Turn items with double-layered fabrics inside out (e.g. with cotton lined anoraks, the cotton layer should be outermost). These fabrics will then dry better. Maximum loads Recommended loads are indicated in the programme charts. @@@@Open the door (see picture).

selector dial to the required programme. The light Start/Pause starts to flash. @@Turn the dial to the required the end of the cycle, the dryer performs an anticreasing phase (duration: 30 minutes maximum). @@@@@@If you do not intend to carry out another wash, close the water tap. @@Turn the time selector dial to "O"; all the lights go out.

The appliance is switched off. Remove the laundry. @@After each use · Clean the filters. · Empty the water reservoir. @@@@@@In a tumble dryer it simply collects in the filter.

@@When this occurs, clean the filters with warm water using a brush. @@@@@@To open the door, push the catch as per picture. @@Re-fit the condenser, turn the red stops upwards and close the door. @@@@The pilot light reminds you this operation. Proceed as follows: · Open the small door at the lower part of the cabinet · Turn the yellow stop upwards · Pull out the reservoir · Open the small cover and let water flow down · Close the small cover and re-insert correctly the reservoir Clean it with a brush and rinse it under the shower if necessary. Also clean the outside, removing all fluff. 14 · Push it until it clicks and turn the yellow stop downwards firmly lock it. · Close the small door and press the START/PAUSE button again to allow the programme to continue. Cleaning the air intake grille Using a vacuum cleaner remove the fluff from the air intake grille at the back of the appliance. P1203 Cleaning the drum When your laundry does not reach the desired degree of dryness, in other words, when it machine: the Service Centre will require this information.

Important: If you call out an engineer to a fault listed below, or to repair a fault caused by incorrect use or installation, a charge will be made even if the appliance is under guarantee. 1206 17 Technical data Technical data Dimensions Electrical connection Voltage - Overall power Fuse Depth with loading door open Maximum Load Use Cotton Synthetics Width Height Depth 60 cm 85 cm 58 cm Information on the electrical connection is given on the rating plate on the inner edge of the appliance door 109 cm 7 kg 3 kg Domestic + 5°C + 35°C This appliance conforms with the following EU Directives: 2006/95/EC dated 12.12.06 Low Voltage Directive 89/336/EEC dated 03.05.1989 EMC Directive inclusive of Amending Directive 92/31/EEC 93/68/EEC dated 22.07.1993 CE Marking Directive 18 Consumption values Consumption values (*) Programme duration (in minutes) 130 100 48 7 kg 3 kg Energy consumption (in kWh) 4,4 3,41 1,36 Revolutions per minute 1000 1000 1200 Programme Cottons Cupboard 1) Cottons Iron 1) Synthetics Cupboard 2) Max load: 1) Cottons load: 2) Synthetics load: The consumption values have been established under standard conditions. @@@@@@ · Always load well spun laundry. @@@@@@ · Ventilate the room well.

@@Help to keep your country tidy! Old appliance The symbol on the product or on its packaging indicates that this product may not be treated as household waste. Instead it should be taken to the appropriate collection point for the recycling of electrical and electronic equipment. By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling of this product. For more detailed information about recycling of this product, please contact your local council, your household waste disposal service or the shop where you purchased the product. 20 Installation Unpacking Slide out the polythene bag with the polystyrene stuffing before using the appliance Pull off adhesive strips from inside machine on top of drum.

the floor clearance through deeppile carpets, strips of wood or similar. This might cause heat build-up which would interfere with the operation of the appliance. @@@@@@Should the appliance be moved, it must be transported vertically. @@Positioning It is recommended that, for your convenience, the machine is positioned close to your washing machine. The tumble dryer must be installed in a clean place, where dirt does not build up.

Air must be able to circulate freely all round the appliance. Do not obstruct the front ventilation grille or the air intake grilles at the back of the machine. To keep vibration and noise to a minimum when the dryer is in use, it should be placed on a firm, level surface. Once in its permanent operating position, check that the dryer is absolutely level with the aid of a spirit level. If it is not, raise or lower the feet until it is. The feet must never be removed. Do not restrict

Stacking kit A special stacking kit is available through your dealer, to enable the mounting of the dryer on top of a front loading washing machine with cover's depth between 48 and 60 cm. Read carefully the instructions supplied with the kit. P1148 Door reversal To make it easier to load or unload the laundry the door can be reversed. @@This operation must be carried out by qualified personnel.

@@@@@Important: The manufacturer declines any responsibility for damage or injury through failure to comply with the above safety precaution.

Should the appliance power supply cable need to be replaced, this must be carried out by our Service Centre. Important: The power supply cable must be accessible after installing the machine.. 22 Albania Belgique/België/Belgien Česká republika Danmark Deutschland Eesti España France Great Britain

Hellas Hrvatska Ireland Italia +35 5 4 261 450 +32 2 363 04 44 +420 2 61 12 61 12 +45 70 11 74 00 +49 180 32 26 622 +37 2 66 50 030 Rr. Pjeter Bogdani Nr. 7 Tirane Bergensesteenweg 719, 1502 Lembeek Budjovická 3, Praha 4, 140 21 Sjøllandsgade 2, 7000 Fredericia Muggenhofer Str. 135, 90429

Nürnberg Pärnu mnt. 153, 11624 Tallinn Carretera M-300, Km. 29,900 Alcalá de Henares Madrid +34 902 11 63 88 www. electrolux.fr +44 8705 929 929 +30 23 10 56 19 70 +385 1 63 23 338 +353 1 40 90 753 +39 (0) 434 558500 Addington Way, Luton, Bedfordshire LU4 9QQ 4, Linnou Str., 54627 Thessaloniki Slavonska avenija 3, 10000 Zagreb Long Mile Road Dublin 12 C.



[You're reading an excerpt. Click here to read official ZANUSSI](http://yourpdfguides.com/dref/956178)

[ZTK123 user guide](http://yourpdfguides.com/dref/956178)

<http://yourpdfguides.com/dref/956178>

so Lino Zanussi, 26 33080 Porcia (PN) Kr. Barona iela 130/2, LV-1012, Riga Ozo 10A, LT 08200 Vilnius Rue de Bitbourg, 7, L-1273 Hamm H 1142
Budapest XIV, Erzsébet királyné útja 87 Latvija +37 17 84 59 34 Lietuva +370 5 2780609 Luxembourg +352 42 431 301 Magyarország +36 1 252 1773 23
Nederland +31 17 24 68 300 Vennootsweg 1, 2404 CG - Alphen aan den Rijn Norge +47 81 5 30 222 Risløkkvn.
2, 0508 Oslo Herziggasse 9, 1230 Wien Österreich +43 18 66 400 Polska +48 22 43 47 300 ul. Kolejowa 5/7, Warszawa Portugal +35 12 14 40 39 39
Quinta da Fonte - Edifício Gonçalves Zarco - Q 35 -2774-518 Paço de Arcos Romania +40 21 451 20 30 Str. Garii Progresului 2, S4, 040671 RO Schweiz -
Suisse Svizzera +41 62 88 99 111 Industriestrasse 10, CH-5506 Mägenwil Slovenija +38 61 24 25 731 Gerbiceva ulica 98, 1000 Ljubljana Slovensko +421 2
43 33 43 22 Electrolux Slovakia s.r.o.
Electrolux Domáce spotrebice SK, Seberíniho 1, 821 03 Bratislava 24 Suomi www.electrolux.fi Electrolux Service, S:t Göransgatan 143,S-105 45 Stockholm
Sverige +46 (0)771 76 76 76 Türkiye +90 21 22 93 10 25 129090 , , 16, "" +7 495 937 7837 25 www.electrolux.com 136906080-01-04042008 .



[You're reading an excerpt. Click here to read official ZANUSSI
ZTK123 user guide
<http://yourpdfguides.com/dref/956178>](#)