



Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for ZANUSSI ZWD14581W1. You'll find the answers to all your questions on the ZANUSSI ZWD14581W1 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual ZANUSSI ZWD14581W1
User guide ZANUSSI ZWD14581W1
Operating instructions ZANUSSI ZWD14581W1
Instructions for use ZANUSSI ZWD14581W1
Instruction manual ZANUSSI ZWD14581W1

ZANUSSI

User manual			
	Washer-dryer		



ZWD 14581 W1
ZWD 14581 S1



[You're reading an excerpt. Click here to read official ZANUSSI ZWD14581W1 user guide](http://yourpdfguides.com/dref/955240)
<http://yourpdfguides.com/dref/955240>

Manual abstract:

To avoid unnecessary mistakes and accidents, it is important to ensure that all people using the appliance are thoroughly familiar with its operation and safety features. Save these instructions and make sure that they remain with the appliance if it is moved or sold, so that everyone using it through its life will be properly informed on appliance use and safety. Always unplug the appliance and turn off the water supply after use, cleaning and maintenance. Under no circumstances should you attempt to repair the machine yourself. @@Contact your local Service Centre. @@@@Do not touch it! Make sure that small pets do not climb into the drum. To avoid this, please check into the drum before using. @@Only use the advised quantities of fabric softener and detergent.

Damage to the fabric can ensue if you over-fill. Refer to the manufacturer's recommendations of quantities.

Wash small items such as socks, laces, washable belts etc in a washing bag or pillow case as it is possible for such items to slip down between the tub and the inner drum. Do not use your washer-dryer to wash articles with whalebones, material without hems or torn material. This appliance is heavy. Care should be taken when moving it. When unpacking the appliance, check that it is not damaged.

If in doubt, do not use it and contact the Service Centre. All packing and transit bolts must be removed before use. Serious damage can occur to the product and to property if this is not adhered to. See relevant section in the user manual. After having installed the appliance, check that it is not standing on the inlet and drain hose and the worktop is not pressing the electrical supply cable.

If the machine is situated on a carpeted floor, please adjust the feet in order to allow air to circulate freely under the appliance. Always be sure, that there is no water leakage from hoses and their connections after the installation. If the appliance is installed in a location subject to frost, please read the «dangers of freezing» chapter. Any plumbing work required to install this appliance should be carried out by a qualified plumber or competent person. Any electrical work required to install this appliance should be carried out by a qualified electrician or competent person. 3 Use This appliance is designed for domestic use. It must not be used for purposes other than those for which it was designed. Only wash and dry fabrics which are designed to be machine washed and dried. Follow the instructions on each garment label. Do not overload the appliance.

See the relevant section in the user manual. Before washing, ensure that all pockets are empty and buttons and zips are fastened. Avoid washing frayed or torn articles and treat stains such as paint, ink, rust, and grass before washing. Underwired bras must NOT be machine washed. Garments which have been in contact with volatile petroleum products should not be machine washed. If volatile cleaning fluids are used, care should be taken to ensure that the fluid is removed from the garment before placing in the machine. As some duvets and eiderdowns should be washed/dried in large commercial machines because of their bulk, please check with the manufacturer of the item before washing in a domestic machine. The users should always check that they have not left their gas lighters (disposable or otherwise) in their clothing. Never tumble dry items that have had contact with chemicals such as dry cleaning fluid. These are of a volatile nature and could cause an explosion.

Only tumble dry items which have been washed in water or require airing. Plastic detergent dispensers should not remain in the drum during the drying cycle, as the plastic used is not designed to withstand the heat. If you wish to washthrough-to-dry you should use the conventional detergent dispenser drawer. Never pull the power supply cable to remove the plug from the socket; always take hold of the plug itself. Never use the washer-dryer if the power supply cable, the control panel, the working surface or the base are damaged so that the inside of the washer-dryer is accessible.

Child safety This appliance is not intended for use by persons (including children) with reduced physical sensory or mental capabilities or lack of experience and knowledge unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Young children should be supervised to ensure that they do not play with the appliance. The packaging components (e.g. plastic film, polystyrene) can be dangerous to children danger of suffocation! Keep them out of children's reach Keep all detergents in a safe place out of children's reach.

Make sure that children or pets do not climb into the drum. To avoid that they remain closed inside the drum, the machine incorporates special feature. To activate this device, rotate the button (without pressing it) inside the door clockwise until the groove is horizontal. If necessary use a coin. To disable this device and restore the possibility of closing the door, rotate the button anti-clockwise until the groove is vertical. 4 Description of the appliance Your new appliance is fitted with an automatic device which detects the laundry amount in some programmes for cotton and synthetic items and chooses the best cycle parameters for washing in an economical way. Cycle time duration, energy and water consumptions are proportional to the amount of each load. It is ideal when washing different small quantities of laundry. 1 2 3 4 5 Detergent dispenser drawer Control panel Door opening handle Special Sport 40° Sport Shoes 40° Silk Off 95° 60° Eco 60° 40° Eco 40° Synthetics 50° 40° Spin Drain Rinse 30° 40° Delicates Easy Iron 40° Cottons Delay Start 1 Mini 30' Cold Hand Wash 30° Wool 2 95 60 40 30 1600 900 700 Prewash Intensive Super Quick Temp Spin Options Extra Rinse Drain pump Adjustable feet End Start/Pause 3 4 5 Detergent dispenser drawer Prewash Wash Fabric Softener 5 Control panel and functions Delay Start Drying Cottons Synthetics Off Jetsystem+ Cotton Cotton Eco Synthetic Cottons Normal +Prewash +Superquick Normal +Prewash Spin +Superquick Synthetics Delicates 40° Easy Iron Temp. Spin Handwash Silk 30° Duvet 30° Mini 30' Specials Rinses Drain 90° 60° 40° 30° 1400 900 700 Extra Cupboard Iron Dry Drying Time Extra Rinse Lock Start/Pause 1 Information 2 3 4 5 6 7 8 9 10 The control panel is illustrated above.

It shows the programme selector dial as well as the different buttons, the pilot lights and the display. These are represented by relevant numbers which are explained in the table below. Control Panel key symbols: = cold wash, = «Night Cycle» option, = «Rinse Hold» option, 1 Programme selector dial and On/Off switch The programme selector dial allows you to select a programme and/or to switch the machine on/off.



[You're reading an excerpt. Click here to read official ZANUSSI](#)

[ZWD14581W1 user guide](#)

<http://yourpdfguides.com/dref/955240>

It can be turned either clockwise or anticlockwise. The light of button 8 starts to flash. Press this button repeatedly to change the temperature, if you want your laundry to be washed at a different temperature from the one proposed by the washer-dryer. The relevant light will light up. Press this button repeatedly to change the spin speed, if you want your laundry to be spun at a speed different from the one proposed by the washer-dryer or to select the «Night Cycle» or the «Rinse Hold» option. The relevant light will light up. 2 Temperature button 3 Spin reduction button 6 4 Dry button By pressing this button you can choose the required degree of drying for cottons and synthetics.

The corresponding pilot light illuminates. The drying time is automatically adjusted by the machine: the laundry will be dried to the selected degree of dryness. By pressing this button you can select a timed drying programme for cotton or synthetics, the relevant light illuminates. The selected drying time appears on the display. Every time you press this button the time increases by 5 mins.

By pressing this button, the machine performs some additional rinses. The relevant light illuminates. The display shows the following information: duration of the selected programme, delayed start, incorrect option selection, alarm codes, drying time, drying cycle, washing phases, child safety lock and end of programme. 5 Drying Time button 6 Extra Rinse button 7 Display 8 Start/Pause button This button allows you to start the selected programme; the corresponding green pilot light stops flashing. This button also interrupts a programme which is running, the corresponding green pilot light starts to flash. 9 «Lock» light This light indicates when it is possible to open the door. The wash programme can be delayed from 30 min - 60 min - 90 min, 2 hours and then by 1 hour up to a maximum of 20 hours by pressing this buttons. 10 Delay Start buttons 7 Functions Night Cycle (button 3) By selecting this option the machine will not drain the water of the last rinse, so as not to crease the laundry. As all spinning phases are suppressed, this washing cycle is very quiet and it can be selected at night or in times with a more economical power rate. On some programmes the rinses will be performed with more water. When the programme has finished, the display shows three flashing zeros «0.00» but the door is locked to indicate that the water must be emptied out. «Rinse Hold» (button 3) By selecting this option the water of the last rinse is not emptied out to prevent the fabrics from creasing. When the programme has finished, the display shows three flashing zeros «0.00» but the door is locked to indicate that the water must be emptied out.

To empty out the water see chapter «At the end of the programme». «Dry» (button 4) By pressing this button you can choose the required dryness degree for cottons and synthetics: Extra (cottons). Cupboard(cottons and synthetics). Iron (cottons). The corresponding pilot light illuminates. The drying time is automatically adjusted by the machine: the laundry will be dried to the seluo;What to do if...»). Programme table - Proportional programmes Programme/ Temperature Type of laundry White and coloured cotton (normally soiled) White and fast coloured cotton (normally or lightly soiled items) Synthetic or mixed fabrics Options Description of programme Main wash, rinses Long spin at the max speed Max load: 7 kg Main wash, rinses Long spin at the max speed Max load: 7 kg Main wash, rinses Short spin at 900 rpm Max load: 3.

5 kg Cotton 90°Proportional Cotton Eco Spin red. Extra Rinse 60°- 40° Proportional Synthetic Spin red. Extra Rinse 60°Proportional Spin red. Extra Rinse Cycle time duration, energy and water consumptions are proportional to the amount of the load. Programme table Programme/ Temperature Cottons Normal 90° Cottons + Prewash 90° Cottons + SuperQuick 90° 10 Type of laundry White and coloured cotton cotton (normally soiled items White and coloured cotton (heavily soiled cotton items) White cotton and coloured (slightly soiled items) Options Description of programme Main wash, rinses Long spin at the max speed Max load: 7 kg Prewash at 30°C Main wash, rinses Long spin at the max speed Max load: 7 kg Main wash, rinses Long spin at max speed Max load: 3.

5 kg Spin red. Extra rinse Spin red. Extra rinse Spin red. Extra rinse Programme table Programme/ Temperature Synthetics Normal 60° Synthetics + Prewash 60° Synthetics + Sachine will perform additional rinses. Special programme at 30°C, (the duration is approx. 30 minutes), suitable for laundry to be freshened up: e.g. a sport jacket worn only once or slightly soiled or new garments. Washing programme for a single synthetic duvet, blanket, bedspread etc. The washing temperature is 30°C. The spin is performed at 700 rpm. With this programme it is possible to rinse and spin cotton garments which have been washed by hand. The machine performs 3 rinses, followed by a final spin at maximum speed. The spin speed can be reduced by pressing the button 3 . For emptying out the water of the last rinse in programmes with the Rinse Hold or Night Cycle option.

Turn first the programme selector dial to «Off», then select programme Drain and press the button 8 . Separate spin for hand washed garments and after programmes with Rinse Hold or Night Cycle option. Before selecting this programme the selector dial must be turned to «Off». You can choose the speed by pressing the relevant button to adapt it to the fabrics to be spun. To reset a programme and to switch off the machine turn the selector dial to «Off». A new programme can now be selected. Handwash Silk Easy Iron Mini 30' Duvet Rinse Drain Spin Off = Cancelling I4 Washing and drying hints Sorting the laundry Follow the wash code symbols on each garment label and the manufacturer's washing instructions. Sort the laundry as follows: whites, coloureds, synthetics, delicates, woollens. Avoid drying dark clothes with light coloured fluffy items such as towels as these can attract the fluff. Remove the laundry when the appliance has finished drying.

To avoid a static charge when drying is completed, use either a fabric softener when you are washing the laundry or a fabric conditioner specifically for tumble dryers. Particularly delicate items such as synthetic curtains, woollen and silk, garments with metal inserts, nylon stockings, bulky garments such as anoraks, bedcovers, quilts, sleeping bags and duvets must not be machine dried. Garments padded with foam-rubber or materials similar to foam-rubber must not be machine dried; they represent a fire hazard. Also, fabrics containing residues of setting lotions or hair sprays, nail solvents or similar solutions must not be machine dried in order to avoid the formation of harmful vapours.



[You're reading an excerpt. Click here to read official ZANUSSI ZWD14581W1 user guide](http://yourpdfguides.com/dref/955240)
<http://yourpdfguides.com/dref/955240>

For drying, follow the indications given on the manufacturer's labels.

May be tumble dried. Drying at high temperature. Drying at reduced temperature. Do not tumble dry **IMPORTANT!** As a dryer, the machine works on the condensation principle. Therefore, the water tap must be open and the drain hose must drain water into a sink or into the drain pipe, even during the drying cycle. Temperatures 90° or 95° for normally soiled white cottons and linen (e.g. tea cloths, towels, tablecloths, sheets.

..) for normally soiled, colour fast garments (e.g. shirts, night dresses, pyjamas....) in linen, cotton or synthetic fibres and for lightly soiled white cotton (e.g. underwear). for delicate items (e.g. net curtains), mixed laundry including synthetic fibres and woollens bearing the label «pure new wool, machine washable, non-shrink». 50°/60° 30°-40°-Cold Before loading the laundry Never wash whites and coloureds together. Whites may lose their «whiteness» in the wash. New coloured items may run in the first wash; they should therefore be washed separately the first time. Make sure that no metal objects are left in the laundry (e.g. hair clips, safety pins, pins).

Button up pillowcases, close zip fasteners, hooks and poppers. Tie any belts or long tapes. Remove persistent stains before washing. Rub particularly soiled areas with a special detergent or detergent paste. Treat curtains with special care.

Remove hooks or tie them up in a bag or net. 15 Maximum loads Recommended loads are indicated in the programme charts. General rules: Cotton, linen: drum full but not too tightly packed; Synthetics: drum no more than half full; Delicate fabrics and woollens: drum no more than one third full. Washing a maximum load makes the most efficient use of water and energy. For heavily soiled laundry, reduce the load size.

Laundry weights The following weights are indicative: bathrobe napkin quilt cover sheet pillow case tablecloth towelling towel tea cloth night dress ladies' briefs man's work shirt man's shirt man's pyjamas blouse men's underpants 1200 g 100 g 700 g 500 g 200 g 250 g 200 g 100 g 200 g 100 g 600 g 200 g 500 g 100 g 100 g Oil based paint: moisten with benzine stain remover, lay the garment on a soft cloth and dab the stain; treat several times. Dried grease stains: moisten with turpentine, lay the garment on a soft surface and dab the stain with the fingertips and a cotton cloth. Rust: oxalic acid dissolved in hot water or a rust removing product used cold. Be careful with rust stains which are not recent since the cellulose structure will have already been damaged and the fabric tends to hole. Mould stains: treat with bleach, rinse well (whites and fast coloureds only). Grass: soap lightly and treat with bleach (whites and fast coloureds only). Ball point pen and glue: moisten with acetone (*), lay the garment on a soft cloth and dab the stain. Lipstick: moisten with acetone as above, then treat stains with methylated spirits. Remove any residual marks from white fabrics with bleach. Red wine: soak in water and detergent, rinse and treat with acetic or citric acid, then rinse.

Treat any residual marks with bleach. Ink: depending on the type of ink, moisten the fabric first with acetone (*), then with acetic acid; treat any residual marks on white fabrics with bleach and then rinse thoroughly. Tar stains: first treat with stain remover, methylated spirits or benzine, then rub with detergent paste. (*) do not use acetone on artificial silk. Removing stains Stubborn stains may not be removed by just water and detergent. It is therefore advisable to treat them prior to washing. Blood: treat fresh stains with cold water. For dried stains, soak overnight in water with a special detergent then rub in the soap and water. Detergents and additives Good washing results also depend on the choice of detergent and use of the correct quantities to avoid waste and protect the environment. Although biodegradable, detergents contain substances which, in large quantities, can upset the delicate balance of nature.

16 The choice of detergent will depend on the type of fabric (delicates, woollens, cottons, etc.), the colour, washing temperature and degree of soiling. All commonly available washer-dryer detergents may be used in this appliance: powder detergents for all types of fabric, powder detergents for delicate fabrics (60°C max) and woollens, liquid detergents, preferably for low temperature wash programmes (60°C max) for all types of fabric, or special for woollens only.

The detergent and any additives must be placed in the appropriate compartments of the dispenser drawer before starting the wash programme. If using concentrated powder or liquid detergents, a programme without prewash must be selected.

The washer-dryer incorporates a recirculation system which allows an optimal use of the concentrated detergent. Pour liquid detergent into the dispenser drawer compartment marked just before starting the programme. Any fabric softener or starching additives must be poured into the compartment marked before starting the wash programme. Follow the product manufacturer's recommendations on quantities to use and do not exceed the «MAX» mark in the detergent dispenser drawer. Follow the product manufacturers' instructions on quantities to use.

Degrees of water hardness Follow the product manufacturers' instructions on quantities to use. Use less detergent if: you are washing a small load, the laundry is lightly soiled, large amounts of foam form during washing. Degrees Level 1 2 3 4 Characteristic soft medium hard very hard German °dH 0-7 8-14 15-21 > 21 French °T.H. 0-15 16-25 26-37 > 37 Quantity of detergent to be used The type and quantity of detergent will depend on the type of fabric, load size, degree of soiling and hardness of the water used. Water hardness is classified in so-called «degrees» of hardness. Information on hardness of the water in your area can be obtained from the relevant water supply company. 17 Before the first use **WARNING!** Ensure that the electrical and water connections comply with the installation instructions. **IMPORTANT!** Remove the polystyrene block and any material from the drum. **IMPORTANT!** Before the first wash run a cotton cycle at 90°C or 95°C, without any laundry in the machine, to remove any manufacturing residue from the drum and tub.

Pour 1/2 a measure of detergent into the dispenser drawer and start the machine. Child safety lock This device permits you to leave the appliance unsupervised without having the worry that children might be injured by or cause damage to the appliance. This function remains enabled also when the washer-dryer is not working. There are two different ways to set this option: before pressing the button 8 : it will be impossible to start the machine. after pressing the button 8 : it will be impossible to change any other programme or option.



[You're reading an excerpt. Click here to read official ZANUSSI](#)

[ZWD14581W1 user guide](#)

<http://yourpdfguides.com/dref/955240>

Close the door. Pull out the dispenser drawer until it stops. Close the drawer gently. The green light of button 8 starts to flash. The selector dial can be turned either clockwise or anticlockwise.

IMPORTANT! The machine will not perform the new selected programme. Select the spin speed or Night Cycle or Rinse Hold option by pressing button 3 Press this button repeatedly to change the spin speed, if you want your laundry to be spun at a speed different from the one proposed by the appliance. Programme Option buttons Depending on the programme, different functions can be combined. These must be selected after choosing the desired programme and before pressing the button 8 . In case of wrong option selection, the appliance does not allow you to make the selection.

IMPORTANT! For the compatibility of the options with the washing programmes, please refer to the «Programme table». Select the Extra Rinse option by pressing the button 6 This option is recommended for people who are allergic to detergents, and in areas where the water is very soft. The machine performs some additional rinses. Select the delay start you want. Press the button 8 : the machine starts its hourly countdown.

Press the button again to restart the programme. You can now select a new programme. If the light 9 goes off, the door can be opened. In this case the door can not be opened. In any case do not force the door if it is locked! At the end of the programme The machine stops automatically. On the display will appear three flashing zeros «0.00». The door can be opened. To empty out the water: 1. turn the programme selector dial to «Off» 2.

press the button 8 again to start the programme. **IMPORTANT!** The door will be locked throughout the delay time. After you have closed the door, press the button 8 again. Note! The Delay Start cannot be selected with Drain programme. Changing a running programme is possible only by resetting it. Start the new programme by depressing the button 8 again. The 20 3. reduce the spin speed if needed, by pressing the relevant button 4. press the button 8 5. at the end of programme it will be possible to open the door.

Only the button 8 pilot light is blinking to indicate that the appliance has to be switched off. By pressing any button the appliance will come out from the energy saving status and you could set another washing programme or switch off the appliance. Turn the programme selector dial to «Off» to switch the machine off. Remove the laundry from the drum and carefully check that the drum is empty. If you do not intend to carry out another wash, close the water tap.

Leave the door open to prevent the formation of mildew and unpleasant smells. Operating sequence - Drying only The recommended load to dry in your washerdryer is 3.5 kg for cotton and 2 kg for synthetics. Note! The water tap must be open and the drain hose must be positioned in the sink or connected to the drain pipe. 1.

Load the laundry. 2. Turn the selector dial to «Cottons» or «Synthetics» programme in the «Drying» section. 3. By pressing the button 4 you can choose an automatic dryness degree for cottons and synthetics among: Extra (cottons). Cupboard (cottons and synthetics). Iron(cottons). Press this button until the pilot light of the desired dryness degree illuminates. The drying time is automatically adjusted by the machine: the laundry will be dried to the selected degree of dryness. 4.

By pressing the button 5 you can select the duration of the drying cycle for cottons or synthetic items. The relevant light illuminates. Press it repeatedly until the time you want appears on the display For Cottons you can select a drying time from 10 minutes to 250 minutes (4.10). For Synthetics you can select a drying time from 10 minutes to 130 minutes (2.10). Note! The drying time will automatically increase by up to 2 minutes. This is quite normal. 5. Press the button 8 to start the programme.

After the programme has started, the time remaining is updated every minute. 21 6. At the end of the programme, the buzzer sounds. Three flashing zeros «0.00» will appear on the display.

At this point, begins an «anti-crease phase», which lasts about 10 minutes. The door can be opened only at the end of this phase. Note! If you wish to open the door before the anticrease phase or to interrupt it, press any key or turn the programme selector dial to any programme position (except «Off»), the door can be immediately opened. 7. Turn the selector dial to the «Off» position to switch the machine off.

Note! 1. Load the laundry. 2. Add detergent and fabric softener. 3. 4. 5. Select the required options by pressing the relevant buttons. 6. for cottons and 700 r.p.

m. for synthetics with electronic drying - 900 r.p.m. for cottons and synthetics 6. Start the programme by pressing the button 8 . At the end of the programme the buzzer sounds. Three flashing zeros «0.00» appear on the display. (If you wish to open the door before or during the anti-crease phase, please follow the instructions given in the previous chapter).

7. Turn the selector dial to the «Off» position to switch the machine off. 8. Remove the laundry. Care and cleaning **IMPORTANT!** You must **DISCONNECT** the appliance from the electricity supply, before you can carry out any cleaning or maintenance work.

Descaling The water we use normally contains lime. It is a good idea to periodically use a water softening powder in the machine. Do this separately from any laundry washing, and according to the softening powder manufacturer's instructions. This will help to prevent the formation of lime deposits.

Maintenance Wash With the use of low temperature washes it is possible to get a build up of residues inside the drum.

We recommend that a maintenance wash be performed on a regular basis. To run a maintenance wash: The drum should be empty of laundry. Select the hottest cotton wash programme. Use a normal measure of detergent, must be a powder with biological properties. External cleaning Clean the exterior cabinet of the appliance with soap and water only, and then dry thoroughly. Cleaning the dispenser drawer The washing powder and additive dispenser drawer should be cleaned regularly. To aid cleaning, the top part of the additive compartment should be removed. Remove the drawer by pressing the catch downwards and by pulling it out. Flush it out under a tap, to remove any traces of accumulated powder. Cleaning the drawer recess Having removed the drawer, use a small brush to clean the recess, ensuring that all washing powder residue is removed from the upper and lower part of the recess.

Replace the drawer and run the rinse programme without any clothes in the drum. Cleaning the pump The pump should be inspected if the machine does not empty and/or spin the machine makes an unusual noise during draining due to objects such as safety pins, coins etc.



[You're reading an excerpt. Click here to read official ZANUSSI ZWD14581W1 user guide](http://yourpdfguides.com/dref/955240)
<http://yourpdfguides.com/dref/955240>

blocking the pump. Proceed as follows: · disconnect the appliance. · if the appliance is operating, wait, if necessary, until the water has cooled down. · open the pump door levering on the groove with a coin. · place a bowl with a small edge close to the pump to collect any spillage. 1 2 3 · pull out the emergency emptying cap from the filter cover, using a pliers. · when no more water comes out, unscrew the pump cover, using a pliers, and remove the filter. Always keep a rag nearby to dry up spillage of water when removing the cover.

· Close the pump door. · Remove any objects from the pump impeller by rotating it. **IMPORTANT!** When the appliance is in use and depending on the programme selected there can be hot water in the pump. Never remove the pump cover during a wash cycle, always wait until the appliance has finished the cycle, and is empty. When replacing the cover, ensure it is securely retightened so as to stop leaks and young children being able to remove it.

Cleaning the water inlet filter If your water is very hard or contains traces of lime deposit, the water inlet filter may become clogged. It is therefore a good idea to clean it from time to time. Turn off the water tap. Unscrew the water inlet hose. Clean the filter using a hard bristle brush.

Tighten up the inlet hose. · replace the emergency emptying cap into the filter cover and fix it firmly. 24 **The dangers of freezing** If the machine is exposed to temperatures below 0°C, certain precautions should be taken: pull out the plug from the power socket; turn off the water tap. unscrew the inlet hose. place a bowl with a small edge close to the pump to collect any spillage from the emergency emptying cap. Place the end of the inlet hose in a bowl placed on the floor and let water drain out. screw the water inlet hose back on and reposition the emergency emptying cap on again into the filter cover. when you intend to start the machine up again, make sure that the room temperature is above 0°C. **Emergency emptying out** If the water is not discharged, proceed as follows to empty out the machine: pull out the plug from the power socket; close the water tap; if necessary, wait until the water has cooled down; open the pump door using a suitable tool; place a bowl with a small edge close to the pump to collect any spillage. Remove the emergency emptying cap from the filter cover.

The water should drain by gravity into the bowl. When the bowl is full, put the cap back on filter cover. Empty the bowl. Repeat the procedure until water stops flowing out; clean the pump if necessary as previously described; replace the filter into the pump and screw it firmly as previously described; replace the emergency emptying cap into the filter cover and close the pump door. 25 **What to do if...** **IMPORTANT!** Certain problems are due to lack of simple maintenance or oversights, which can be solved easily without calling out an engineer. Before contacting your local Service Centre, please carry out the checks listed below. During machine operation it is possible that the red light of the button 8 flashes, the buzzer sounds and one of the following alarm codes appears on the display to indicate that the machine is not working.

E10: problem with the water supply E20: problem with water draining E40: door open. Once the problem has been eliminated, press the button 8 to restart the programme. If after all checks, the problem persists, contact your local Service Centre. **Malfunction Possible Cause / Solution** The door has not been closed. E40 · Close the door firmly.

The plug is not properly inserted in the power socket. · Insert the plug into the power socket. There is no power at the socket. · Please check your domestic electrical installation. The main fuse or the plug fuse has blown.

· Replace the fuse. The selector dial is not correctly positioned and the button 8 has not been pressed. · Please turn the selector dial and press button 8 again. The delay start has been selected. · If the laundry is to be washed immediately, cancel the delay start. The «Child Safety Lock» function has been selected. · Disable this function. The water tap is closed. E10 · Open the water tap. The inlet hose is squashed or kinked.

E10 · Check the inlet hose connection. The filter in the inlet hose is blocked. E10 · Clean the water inlet hose filter. The door is not properly closed. E40 · Close the door firmly. The washer-dryer does not start: The machine does not fill: 26 **Malfunction** The machine fills then empties immediately: **Possible Cause / Solution** The end of the drain hose is too low. · Refer to relevant paragraph in «water drainage» section. The drain hose is squashed or kinked. E20) · Check the drain hose connection. The drain pump is clogged.

E20 · Clean the drain pump. The option «Night Cycle» or «Rinse Hold» has been selected. · Select the «Drain» or «Spin» programmes The laundry is not evenly distributed in the drum. · Redistribute the laundry. Too much detergent or unsuitable detergent (creates too much foam) has been used. · Reduce the detergent quantity or use another one. Check whether there are any leaks from one of the inlet hose fittings. It is not always easy to see this as the water runs down the hose; check to see if it is damp. · Check the water inlet hose connection. The inlet hose or the drain hose is damaged. · Replace it with a new one. The emergency emptying cap has not been replaced on the filter after cleaning. · Refit the emergency emptying cap on the filter. Too little detergent or unsuitable detergent has been used. · Increase the detergent quantity or use another one. Stubborn stains have not been treated prior to washing. · Use commercial products to treat the stubborn stains. The correct temperature was not selected. · Check if you have selected the correct temperature. Excessive laundry load.

· Reduce the laundry load. Machines based on modern technology operate very economically using very little water without affecting performance. 27 **The machine does not empty and/or does not spin: There is water on the floor: Unsatisfactory washing results: No water is visible in the drum** **Malfunction Possible Cause / Solution** The programme is still running. · Wait until the end of washing cycle. The door lock has not been released. · Wait until the light 9 has gone off. There is water in the drum. · Select drain or spin programme to empty out the water. The transit bolts and packing have not been removed. · Check the correct installation of the appliance.

The support feet have not been adjusted. · Check the correct levelling of the appliance. The laundry is not evenly distributed in the drum. · Redistribute the laundry.



[You're reading an excerpt. Click here to read official ZANUSSI ZWD14581W1 user guide](http://yourpdfguides.com/dref/955240)
<http://yourpdfguides.com/dref/955240>

Maybe there is too little laundry in the drum.

· Load more laundry. The electronic unbalance detection device has cut in because the laundry is not evenly distributed in the drum. The laundry is redistributed by reverse rotation of the drum. This may happen several times before the unbalance disappears and normal spinning can resume. If, after 10 minutes, the laundry is still not evenly distributed in the drum, the machine will not spin.

In this case, redistribute the load manually and select the spin programme. Redistribute the laundry. The door will not open: The machine vibrates or is noisy: Spinning starts late or the machine does not spin: The machine does not dry or does not The drying time/dryness degree has not been selected. dry properly ·

Select the drying time or the dryness degree. The water tap is not turned on (E10) · Open the water tap. The drain filter is clogged (E20) · Clean the drain filter. The machine is overloaded. · Reduce the laundry load. The selected drying time or dryness degree was not suitable for the laundry. · Select the suitable drying time or dryness degree for the laundry.

28 Malfunction Possible Cause / Solution The machine is fitted with a type of motor which makes a different noise compared with other traditional motors. This new motor ensures a softer The machine makes an unusual noise start and more even distribution of the laundry in the drum when spinning, as well as increased stability of the machine. If you are unable to identify or solve the problem, contact our service centre. Before telephoning, make a note of the model, serial number and purchase date of your machine: the Service Centre will require this information. Mod.

. ... Prod.

No.

... .. Ser. No. ...

... .. Technical data Dimensions Width Height Depth (including the porthole) Electrical connection Voltage Overall power - Fuse 60 cm 85 cm 63 cm Information on the electrical connection is given on the rating plate on the inner edge of the appliance door Water supply pressure Minimum Maximum Mod.

Prod ...

. No. ...

... ..

... .. Ser. No. ...

. 0,05 MPa 0,8 MPa 7.0kg 3.5.

kg 5.0 kg 2.0 kg 1400 rpm (ZWD 14581W1) 1400 rpm (ZWD 14581 S1) Maximum Load Maximum Drying Load Cotton Cotton Cotton Big Capacity Synthetics Maximum Spin Speed 29 Consumption values Programme Energy consumption (in kWh) 2.1 0.9 0.

45 0.55 0.4 1.19 Water consumption (in litres) 62 54 63 63 62 52 Programme duration Cottons Normal 90° Synthetics Normal 60°C Easy Iron 40°C Delicates 40°C Handwash 40°C Cotton Eco 60°C (Proportional) Information The consumption data shown on this chart is to be considered purely indicative, as it may vary depending on the quantity and type of laundry, on the inlet water temperature and on the ambient temperature. It refers to the highest temperature for each wash programme.

(*) The «Cotton Eco at 60°C» with a load of 7 kg is the reference programme for the data entered in the energy label, in compliance with EEC 92/75 standards. 30 For the duration of the programmes, please refer to the display on the control panel. Installation Unpacking All transit bolts and packing must be removed before using the appliance. You are advised to keep all transit devices so that they can be refitted if the machine ever has to be transported again. 5. Remove the bracket D, refit the six smaller bolts C and slide out the relevant plastic spacer E. 1. After removing all the packaging, carefully lay machine on it's back to remove the polystyrene base from the bottom. 2. Remove the power supply cable and the draining hose from the hose holders on the rear of the appliance.

6. Open the porthole, take out the inlet hose from the drum and remove the polystyrene block fitted on the door seal. 7. Fill the smaller upper hole and the two large ones with the corresponding plastic plug caps supplied in the bag containing the instruction booklet. Positioning and Levelling Install the machine on a flat hard floor. Make sure that air circulation around the machine is not impeded by carpets, rugs etc. Check that the machine does not touch the wall or other kitchen units. Level the washer-dryer by raising or lowering the feet. The feet may be tight to adjust as they incorporate a self locking nut, but the machine MUST be level and stable. Any necessary adjustment can be made with a spanner.

If necessary, check the setting with a spirit level. A C B C B 3. With a suitable spanner unscrew and remove the central rear bolt A. 4. Unscrew and remove the two large rear bolts B and the six smaller bolts C.

E C C D Accurate levelling prevents vibration, noise and displacement of the machine during operation. Never place cardboard, wood or similar materials under the machine to compensate for any unevenness in the floor. 31 Some vibration is inevitable, especially if mounted on a wooden floor. Sprung wooden floors are particularly susceptible to vibration. For advice, consult a builder.

If possible, always place the machine on a solid floor. WARNING! The machine should NOT be placed on deep pile carpeting. Water inlet An inlet hose is supplied and can be found inside the machine drum. Do not use the hose from your previous machine to connect to the water supply. 1. Open the porthole and extract the inlet hose. 2. Connect the hose with the angled connection to the machine. Do not place the inlet hose downwards. Angle the hose to the left or right depending on the position of your water tap.

3. Set the hose correctly by loosening the ring nut. After positioning the inlet hose, be sure to tighten the ring nut again to prevent leaks. 4. Connect the hose to a tap with a 3/4" thread. Always use the hose supplied with the appliance. The inlet hose must not be lengthened. If it is too short and you do not wish to move the tap, you will have to purchase a new, longer hose specially designed for this type of use. 45° NOTE Installation should comply with local water authority and building regulations' requirements. The appliance must be connected to a cold water supply.

A minimum water pressure of 0.05 MPa (0.5 bar) is required for safe operation of the appliance. If you cannot make the cold water connection direct from the rising mains, you may be able to operate the appliance from your cold water storage system. There should be a minimum vertical distance of 5.02m (16.5 ft) between the appliance's inlet and the bottom of the water storage tank. Water drainage This appliance is designed to be permanently plumbed into your home's drainage system using one of the following methods. 1. Into a drainage standpipe.

32 35° U piece supplied Firstly form a hook in the end of the drain hose using the «U» piece supplied. Place the drain hose into your standpipe, which should have an internal diameter of approximately 38mm thus ensuring there is an air break between the drain hose and standpipe. Special Sport 40° Sport Shoes 40° Silk Mini 30' Off 95° 60° Eco 60° Cottons 3h 6h 9h 1000 900 700 Prewash Intensive Super Quick Spin Options Extra Rinse 40° Eco 40° Synthetics 50° 40° Spin Drain Rinse 30° 40° Delicates Easy Iron 40° Wash Door End Start/Pause 1000 6kg Cold Hand Wash 30° Wool ZWF10070W When discharging into a standpipe ensure that the top of the standpipe is no more than 90 cm (35).



[You're reading an excerpt. Click here to read official ZANUSSI
ZWD14581W1 user guide](http://yourpdfguides.com/dref/955240)
<http://yourpdfguides.com/dref/955240>

4") and no less than 60 cm (23.6") above floor level. 30 cm (12") 38 mm (1.5) standpipe diameter Push the drain hose onto the spigot and secure with a clip, ensure a loop is formed in the drain hose (see diagram) to prevent waste from the sink entering the washer-dryer. Important! @@@@The joining piece must have an internal diameter of 18mm. If your drain hose looks like this (see below) you do not require the «U» piece. Just push the hose firmly into the standpipe.

2. Onto a sink outlet spigot. If the outlet spigot has not been used before, remove any blanking plug that may be in place. Min. 60 cm (23.6) Max. 90 cm (35.4) SHOWER SINK BATH TOILET BIDET WASHING MACHINE RAINWATER 'RUN-OFF' DISHWASHER FOUL DRAIN SURFACE WATER DRAINS & SEWERS FOUL SEWERS SEWAGE TREATMENT WORKS TREATED DISCHARGE RIVER RIVER UNTREATED DISCHARGE Loop If you require any further advice please contact your local water authority. 3.3 Electrical connection Any electrical work required to install this appliance should be carried out by a qualified electrician or competent person. WARNING! This appliance must be earthed.

The manufacturer declines any liability should this safety measure not be observed. @@@@IMPORTANT! @@The appliance is supplied with a 13amp plug fitted. @@@@The wires in the mains lead are coloured in accordance with the following code: Green and Yellow ...

.....

.....

.....
..- Earth Blue ...

.....

.....

.....

.....

.....

.....

.....

.....- Neutral Brown.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

....- Live GREEN & YELLOW E 13 A Upon completion there must be no cut, or stray strands of wire present and the cord clamp must be secure over the outer sheath. WARNING! A cut off plug inserted into a 13 amp socket is a serious safety (shock) hazard. Ensure that the cut off plug is disposed of safely. Should the appliance power supply cable need to be replaced, this must be carried out by our Service Force Centre. The power supply cable must be easily accessible after installing the appliance. Permanent connection In the case of permanent connection it is necessary that you install a double pole switch between the appliance and the electricity supply (mains), with a minimum gap of 3mm between the switch contacts and of a type suitable for the required load in compliance with the current electrical regulations.

The switch must not break the yellow and green earth cable at any point. Fitting under a counter WARNING! Before any work to the appliance, you must disconnect the plug from the power socket. If the counter is too low and it becomes necessary to remove the top lid of the washer-dryer, a steel plate, known as a height reduction kit, must be used. Important! For safety reasons, it is dangerous to fit the appliance under a counter without the steel plate, which you can order in your nearest Service Force Centre. N L BROWN BLUE CORD CLAMP The wire coloured green and yellow must be connected to the terminal marked with the letter «E» or by the earth symbol or coloured green and yellow. The wire coloured blue must be connected to the terminal marked «N» or coloured black. The wire coloured brown must be connected to the terminal marked «L» or coloured red. 34 600 820 820 600 595 600 (see the picture above). The top must be fixed to the cabinet as follows: Unscrew the screws from the back panel of the appliance. Push the worktop to the back and raise it to remove

Environmental concerns Packaging materials The materials marked with the symbol are recyclable.

>PE<=polyethylene >PS<=polystyrene >PP<=polypropylene This means that they can be recycled by disposing of them properly in appropriate collection containers. Old machine Use authorised disposal sites for your old appliance. Help to keep your country tidy! The symbol on the product or on its packaging indicates that this product may not be treated as household waste. Instead it should be taken over to the appropriate collection point for the recycling of electrical and electronic equipment. By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling of this product.

For more detailed information about recycling of this product, please contact your local council, your household waste disposal service or the shop where you purchased the product. Ecological hints To save water, energy and to help protect the environment, we recommend that you follow these tips: Normally soiled laundry may be washed without prewashing in order to save detergent, water and time (the environment is protected too!). The machine works more economically if it is fully loaded. With adequate pre-treatment, stains and limited soiling can be removed; the laundry can then be washed at a lower temperature. Measure out detergent according to the water hardness, the degree of soiling and the quantity of laundry being washed.

35 www.electrolux.com www.zanussi-electrolux.co.uk 132 963 651-01-222008 Subject to change without notice .



[You're reading an excerpt. Click here to read official ZANUSSI ZWD14581W1 user guide](#)
<http://yourpdfguides.com/dref/955240>