



Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for ZANUSSI ZWD1472S. You'll find the answers to all your questions on the ZANUSSI ZWD1472S in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual ZANUSSI ZWD1472S
User guide ZANUSSI ZWD1472S
Operating instructions ZANUSSI ZWD1472S
Instructions for use ZANUSSI ZWD1472S
Instruction manual ZANUSSI ZWD1472S

ZANUSSI
Electrolux

WASHER-DRYER
ZWD 1272 W
ZWD 1472 W
ZWD 1472 S



i Quick Installation Guide:
visit our WEB SITE to view an install video
www.video.uk.electrolux.com

132 981 990

INSTRUCTION BOOKLET

GB



[You're reading an excerpt. Click here to read official ZANUSSI ZWD1472S user guide](http://yourpdfguides.com/dref/955244)
<http://yourpdfguides.com/dref/955244>

Manual abstract:

@@Care should be taken when moving it. @@All packing and transit bolts must be removed before use. Serious damage can occur to the product and to property if this is not adhered to. See relevant section in instructions. Any plumbing work required to install this appliance should be carried out by a qualified plumber or competent person. Any electrical work required to install this appliance should be carried out by a qualified electrician or competent person. Care must be taken to ensure that the appliance does not stand on the electrical supply cable. @@@@Pets and children have been known to climb into washer-dryers. Please check your drum before use. The glass door becomes very hot during the washing and drying cycle.

@@Keep all packaging well away from children. Keep all detergents in a safe place out of children's reach. Use Always unplug the appliance and turn off the water supply after use. Do not overload the appliance. See relevant section in the instruction book.

Only wash and dry fabrics which are designed to be machine washed and dried. If in doubt, consult the care label on the clothes. 2 Before washing, ensure that all pockets are empty and buttons and zips are fastened. Avoid washing frayed or torn articles and treat stains such as paint, ink, rust, and grass before washing. Underwired bras must NOT be machine washed.

Any objects such as coins, safety pins, nails, screws, stones or any other hard, sharp material can cause extensive damage and must not be placed into the machine. Garments which have been in contact with volatile petroleum products should not be machine washed. If volatile cleaning fluids are used, care should be taken to ensure that the fluid is removed from the garment before placing in the machine. Wash small items such as socks, laces, washable belts etc in a washing bag or pillow case as it is possible for such items to slip down between the tub and the inner drum. Only use the advised quantities of fabric softener. Damage to the fabric can ensue if you over-fill. Refer to the manufacturer's recommendations of quantities. As some duvets and eiderdowns should be washed/dried in large commercial machines because of their bulk, please check with the manufacturer of the item before washing in a domestic machine.

The users should always check that they have not left their gas lighters (disposable or otherwise) in their clothing. Never tumble dry items that have had contact with chemicals such as dry cleaning fluid.

These are of a volatile nature and could cause an explosion. Only tumble dry items which have been washed in water or require airing. Plastic detergent dispensers should not remain in the drum during the drying cycle, as the plastic used is not designed to withstand the heat. If you wish to wash-through-to-dry you should use the conventional detergent dispenser drawer. Leave the porthole door slightly ajar between washes to preserve the door seal. Under no circumstances should you attempt to repair the machine yourself. Repairs carried out by inexperienced persons may cause injury or serious malfunctioning.

Furthermore, it will invalidate your guarantee. Contact your local Service Force Centre. Always insist on genuine spare parts.

Contents For the User Important Safety Information Your New Washer-Dryer Description of the Appliance Detergent dispenser drawer Child safety feature 2 4 5 5 5 6-10 Wash Care Symbols Washing Programmes Drying Programmes Maintenance and Cleaning Descaling After each wash Maintenance wash External cleaning Cleaning the dispenser drawer Cleaning the drawer recess Cleaning the pump Cleaning the water inlet filter The dangers of freezing Emergency emptying out 17 18 19 20-21 20 20 20 20 20 20-21 21 21 21 22-23 23 24 11-14 Washing 11 Load the laundry 11 Measure out the detergent 11 Measure out the fabric softener 11 Switch the machine on 11 Select the required programme/fabric 11 Select the temperature 12 Select the spin speed or the "Rinse Hold" option 12 Select the desired options 12 Select the "Delay" 12 Start the programme 12 How to change an option or a programme during its cycle 13 How to cancel a programme during its cycle 13 How to open the door during the cycle of a programme 13 End of programme 13 Drying 3 kg of cotton 14 Autodrying 2 kg of synthetics 14 The Control Panel Operating sequence Something Not Working Service and Spare Parts Guarantee Conditions For the Installer Installation Instructions Technical Specifications Unpacking Positioning Water inlet Water drainage Levelling Special conditions In the interest of the environment Electrical connection 25 25 26 26 27 27-28 28 28 28 29 Washing and Drying Hints Which detergent to use?... And in which form? 15 16 16 Guide to use the Instruction Book The following symbols will be found in the text to guide you throughout the instructions: Safety instructions Hints and tips Environmental information 3 Your New Washer-Dryer This new machine, which is fitted with the New Jet System, meets all modern requirements for effective treatment of laundry with low water, energy and detergent consumption.

The special wool programme with its new delicate wash system treats your woollens with extreme care. The balance control device ensures that the machine remains stable when spinning. Automatic cooling of the wash water to 60°C before draining, with the 95°C programme. This reduces thermal shock to fabrics, helping to prevent creasing. The two drying programmes will give your wash that soft, relaxed feel whatever the weather.

In the interest of the environment Ecological hints To save water and energy and help protect the environment, we recommend that you follow these hints: Adjust the quantity of detergent according to the hardness of your water supply, the amount of laundry and the degree of soiling. Select the "Extra Quick" or the "40° AA" option for lightly soiled laundry. A programme without prewash is sufficient for normally soiled laundry. Try to load the maximum drying capacity of the machine as small loads are uneconomical. Always load well spun laundry. The higher the spin speed, the lower the electricity consumption and the shorter the drying times. Materials marked with the symbol are recyclable. Check with your local Council or Environmental Health Office to see if there are facilities in your area for re-cycling this appliance. When the appliance is to be scrapped, cut off the power supply cable and make the door lock device unusable to prevent young children from being trapped inside. Help to keep your country tidy - use authorised disposal sites for your old appliance.

The symbol on the product or on its packaging indicates that this product may not be treated as household waste. Instead it shall be handed over to the applicable collection point for the recycling of electrical and electronic equipment. By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling of this product.



[You're reading an excerpt. Click here to read official ZANUSSI](#)

[ZWD1472S user guide](#)

<http://yourpdfguides.com/dref/955244>

For more detailed information about recycling of this product, please contact your local city office, your household waste disposal service or the shop where you purchased the product. How do we help to protect the environment? We use recycled paper! Important Your machine is fitted with a balance control device, which ensures the machine is stable during the spin. If the wash load appears not to have been spun sufficiently at the end of the wash cycle, because it is not evenly distributed in the drum, the balance control device may have operated. It will therefore be necessary to redistribute the wash load manually and select a spin programme. For more detailed information see the section headed "Something Not Working". 4 Description of the Appliance 1 Detergent dispenser drawer 2 Control Panel 3 Door opening handle 4 Drain pump 5 Adjustable feet 1 2 On/Off Cotton Daily Cottons Synthetics Delicate Wool/ Handwash 95°C 60°C 50°C 40°C 30°C 1200 900 700 500 Rinse Hold Prewash Cottons Extra Dry Store Dry Iron Dry Delay ZWD 1272 W Prewash Wash Rinse Spin Drain Drying 40° AA Extra Quick Synthetics Store Dry Cottons Synthetics Skip JETSYSTEM 1 2 0 0 6 kg Fabrics Temperature Spin Speed Options Start/Pause Auto Dry Drying Time Reset 3 4 5 Detergent dispenser drawer Prewash Main wash Fabric softener C0063 Child safety feature This machine incorporates a special child safety feature to prevent small children from being trapped inside the machine. To activate this device, rotate the button (without pressing it) inside the door clockwise until the groove is horizontal.

If necessary use a coin. To disable this device and restore the possibility of closing the door, rotate the button anti-clockwise until the groove is vertical. P1131 5 The Control Panel ZWD 1272 W Delay ZWD 1272 W Prewash Wash Rinse Spin Drain Drying On/Off Cotton Daily Cottons Synthetics Delicate Wool / Handwash 95°C 60°C 50°C 40°C 30°C 1200 900 700 500 Rinse Hold Prewash Cottons Extra Dry Store Dry Iron Dry 40° AA Extra Quick Synthetics Store Dry Cottons Synthetics Skip Fabrics Temperature Spin Speed Options Start/Pause Auto Dry Drying Time Reset 1 2 3 4 5 6 7 8 9 10 11 12 13 1 On/Off button Press this button to switch the machine on. The display (9) will show three blinking dashes or a blinking zero. You will find more detailed explanations on page 7 and 8 (see "Display").

Press the "On/Off" button again to switch the machine off. 4 "Temperature" button Press this button repeatedly to increase or decrease the temperature, if you want your laundry to be washed at a temperature different from the one proposed by the machine. The relevant light will light up. Maximum temperatures are 95°C for Cottons and "Cotton daily" programme, 60°C for Synthetics, 40°C for delicate fabrics, Wool and fabrics to be handwashed (Wool / Handwash programme). 2 MAINS-ON light This light is connected to the "On/Off" button.

It lights up when you press the button, and goes out when you press it again. 5 "Spin Speed" button Press this button repeatedly to change the spin speed, if you want your laundry to be spun at a speed different from the one proposed by the machine. The relevant light will light up. Maximum speeds are: · for cotton: 1,400 rpm (ZWD 1472 W - 1472 S) 1,200 rpm (ZWD 1272 W); · for synthetic fabrics, wool and fabrics to be handwashed: 900 rpm; · for delicate fabrics: 700 rpm. "Rinse Hold" position: when you choose this option, the machine will not drain the water of the last rinse, so as not to crease Daily programme). · "Extra Quick": select this option for laundry that is only slightly soiled (not available for Cottons Daily and Wool / Handwash programmes). The washing time will be reduced according to the type of fabric and the selected temperature. The "Prewash", the "40° AA" and "Extra Quick" options cannot be selected together by means of the "Options" button. --- 7 · Duration of washing programme in hours and minutes, after you have selected a programme. 2.

05 Important! The first time you use the machine, when you switch it on, it may display a blinking zero. This is due to the fact that the machine has performed a washing cycle during the manufacturer's inspection tests, and this cycle has not been erased after its completion. · Delay start, a time value indicated in hours and selected by means of the relevant button (max 23 hours). While the programme is running (after you have pressed the "Start/Pause" button), the displayed time value decreases by one unit every minute. · Selected drying time in minutes or hours and minutes (max 130 mins). The delay time is displayed for 3 seconds, then the duration of the selected programme reappears. After you have e symbole «0'». · press the "Start/Pause" button again. Important! The door will be locked throughout the delay time. If you need to open the door, you must first set the machine to PAUSE by pressing the "Start/Pause" button. After you have closed the door, press the "Start/Pause" button again. 13 Programme phase indicator lights When you select a programme, the lights relevant to the phases that form the programme light up. Prewash Wash Rinse Spin Drain Drying After you have started the programme, only the light relevant to the phase that is currently being carried out will remain lit. 10 Operating Sequence WASHING Before the first wash we recommend that you run a cotton cycle at 95°C, with the machine empty, in order to remove any manufacturing residue from the drum and tub. Pour half a measure of detergent into the main wash compartment and start up the machine.

4. Switch the machine on Press the "On/Off" button to switch the machine on. The display will show three blinking dashes or a blinking zero. The light above the button will light up. On / Off --0 1.

Load the laundry Open the door. Place the laundry in the drum, one item at a time, shaking them out as much as possible. Close the door. 5. Select the desired programme/ fabric Press the "Fabrics" button repeatedly, in order to select the desired programme/fabric. The relevant light will light up. The lights relevant to the phases that form the programme will light up. The display will show the duration of the selected programme, calculated on the basis of the maximum load for each type of fabric. The "Start/Pause" button light will start flashing. If the load of laundry to be washed is small, at the beginning of the cycle the display will still indicate the duration relevant to the maximum load.



[You're reading an excerpt. Click here to read official ZANUSSI ZWD1472S user guide](http://yourpdfguides.com/dref/955244)
<http://yourpdfguides.com/dref/955244>

The duration value will be gradually adjusted during the execution of the cycle. Cotton daily Cottons Synthetics Delicate P0004 2. Measure out the detergent Pull out the dispenser drawer until it stops. Measure out the amount of detergent required and pour it into the main wash compartment. If you wish to carry out the prewash, pour detergent into the appropriate compartment marked 3. Measure out the fabric softener If required, pour fabric softener into the compartment marked , without exceeding the «MAX» mark. Prewash Wash Rinse Spin Drain Wool/ Handwash Fabrics Drying C0064 C0065 Close the drawer gently. 11 6. Select the temperature Press the "Temperature" button if you wish to select a temperature value different from the one proposed by the machine.

The relevant light will light up. 95°C 60°C 50°C 40°C 30°C Press the "Options" button so as to cause one of the lights to light up. Prewash 40° AA Extra Quick Options Temperature 9. Select the "Delay" Before you start the programme, if you wish the start to be delayed, press the "Delay" button repeatedly, or keep it pressed, to select the desired delay. The selected delay time value (up to 23 hours) will appear on the display for 3 seconds, then the duration of the programme will appear again.

Delay 7. Select the spin speed or the Rinse Hold option Press the "Spin Speed" button repeatedly, in order to select the desired spin speed or the "Rinse Hold" option. The relevant light will light up. If you select the "Rinse Hold" option, the machine will stop at the end of the programme with the water still in the tub. ZWD 1272 W ZWD 1472 W - S 1200 900 700 500 Rinse Hold 1400 900 700 500 Rinse Hold 10.

Start the programme Press the "Start/Pause" button. The relevant light will stop flashing and only the light relevant to the phase that is in progress will remain lit. If you have chosen a delayed start, the washing machine will begin the countdown. The display will show the duration of the programme or the selected delay. Spin Speed Spin Speed 8. Select the desired options If your laundry is very dirty, it may be advisable to select the "Prewash" option. If your laundry is lightly or normally soiled and it is necessary to prolong the washing time, select the "40° AA" option. If your laundry is only slightly soiled, select the "Extra Quick" option. The relevant light illuminates. Start/Pause 12 11.

How to change an option or a programme during its cycle Before you make any change, you must pause the machine by pressing the "Start/Pause" button. It is possible to change the temperature or any option before the programme carries it out. Changing a running programme is possible only by cancelling it and selecting a new programme. The machine will resume the cycle from the beginning and the washing water in the tub will not be emptied out. If it is necessary to drain the water, proceed as follows: · PAUSE the machine by pressing the "Start/Pause" button; · press the "Skip/Reset" button repeatedly, until only the "Drain" light remains lit; · press the "Start/Pause" button again. When the water has been drained, the display shows a blinking zero. You may now select a new programme and press the "Start/Pause" button to start it. After approximately 3 minutes, you can open the door. Pay attention to the level and temperature of the water in the machine! When you close the door and press the "On/Off" button again, the machine will resume the programme from the point where it had been interrupted. 14.

End of programme At the end of the programme, the machine stops automatically, the "Start/Pause" button light goes off and the display shows a blinking zero. If you had selected the "Rinse Hold" option, the "Start/Pause" button light goes off, the "Rinse Hold" button light remains lit and the door is locked to indicate that the water must be drained. The display shows a blinking zero. When the programme has been completed, a blinking zero appears on the display.

Press the "Skip/Reset" button repeatedly to erase the programme that has just been carried out.

If you omit to do this, the next time you switch the machine on, the blinking zero will appear on the display. Note: when you switch the machine on, if you must erase the previously performed programme, it is also sufficient to press the "Fabrics" button and select a new programme. Press the "On/Off" button to switch the machine off. The relevant light will go out. Remove the laundry from the machine.

Check whether the drum is completely empty, by rotating it with your hand. The purpose of this is to prevent any items of laundry from remaining accidentally in the drum, where they might get damaged in a subsequent wash (e.g. by shrinking) or bleed colour into another load of laundry. We advise you to close the water supply tap and disconnect the plug from the socket. Leave the door ajar in order to air the machine. 12. How to cancel a programme during its cycle To cancel a programme that is being carried out, first pause the machine by pressing the "Start/Pause" button, then press the "Skip/Reset" button repeatedly, until the display shows three blinking dashes. 13. How to open the door during the cycle of a programme You can open the door, after having set the machine to PAUSE, provided the following conditions exist: · the washing machine is not in the heating phase beyond 55°C; · the level of the water is not high; If these requirements are met, when you pause the machine the door can be opened.

Should it not be possible to open the door, and should it be absolutely necessary to do so, switch the machine off by pressing the "On/Off" button. 13 DRYING 3 KG OF COTTON You have for example just machine-washed and spun at 1200 rpm 6 kg of laundry. They are cotton fabrics of medium weight which you want to iron as soon as they are dry. Press the "Skip/Reset" button repeatedly to erase the programme that has just been carried out, the display will show three blinking dashes and switch the machine off by depressing "On/Off" button. Then remove the laundry from the appliance and divide the items to obtain two loads of approx. 3 kg each. The water tap must be open and the drain hose must be positioned in the sink or connected to the drain pipe. 1. Load the laundry. 2.

Depress the "On/Off" button to switch the machine on, the display will show three blinking dashes. 3. If you wish to carry out the electronic drying, depress "Auto Dry" button until the light "Iron Dry" illuminates. Cottons Extra Dry Store Dry Iron Dry 4. Press the "Start/Pause" button to start the programme.



[You're reading an excerpt. Click here to read official ZANUSSI ZWD1472S user guide](http://yourpdfguides.com/dref/955244)
<http://yourpdfguides.com/dref/955244>

Start/Pause 5. At the end of the programme press "Skip/Reset" button to clear the memory and switch the machine off by depressing "On/Off" button. 6. Remove the laundry. @@@@Attention! @@@@Load the laundry.

2. Add detergent and fabric softener. 3. Switch the machine on by depressing the "On/Off" button. 4. Select the wash programme/fabric and temperature. 5. Select the drying time or degree of drying. 6. Select the required options by means of the relevant buttons.

@@@@The lowest values you can select are the following: - 900 r.p.m. for cottons & synthetics with electronic drying - 900 r.p.m. for cottons and 700 r.p.m. for synthetics with timed drying 7.

Start the programme by depressing the "Start/Pause" button. 8. @@@@9. @@@@Weigh the laundry the first few times you use the appliance. @@@@Avoid washing unhemmed or torn items as they may unravel.

Before washing, empty all pockets of small objects which may have been left inside (coins, keys, screws etc). as these could damage the drain pump. When washing curtains, remove the hooks. Close poppers and zips and fasten loose buttons. It is essential to wash new coloured items separately when washing for the first time.

@@White items should not be washed with coloured items. @@Use a good quality detergent suitable for automatic washing machines. Use the correct quantities of detergent. For wool, use gentle detergent only in small quantities. @@@@Do not leave the damp laundry load in a heap too long before drying. @@@@Remove the laundry when the appliance has finished drying. @@@@Pour the detergent directly into the dispenser drawer, or alternatively measure the detergent into the specially designed dosing device* which should be placed on top of the laundry, and at the back of the machine drum. * If you use a dosing device in a washer dryer, please ensure the dosing device/ball is removed before carrying out a drying programme. COLOURS For coloured items you should use a detergent which is designed to clean while maintaining the original colour. Ariel Color does not contain bleach and therefore helps to preserve colours.

DELICATE ITEMS When washing delicates such as woollens, you should use a product which is specially designed to care for fine fabrics. Dreft Automatic is suitable for woollens and other delicates. FABRIC CONDITIONERS These are ideal for improving 'softness', and also reduce static cling on synthetics and make ironing easier. They are available in two types: For example Lenor liquid fabric softener, for use in the washing machine/washer dryer. The liquid fabric softener should be poured into the compartment marked with the symbol. Follow the manufacturer's dosage instructions and never exceed the MAX level. Bounce conditioning sheets for use in a tumble dryer. We recommend the conditioning sheets are pinned (using a safety pin) to an article of laundry and placed in the tumble dryer. 16 LAUNDRY BLEACH For additional stain removal you may wish to use a product such as Ace Gentle Bleach which is used in addition to your chosen detergent. Ace is suitable for all washable fabrics including silks, woollens and colours.

Wash Care Symbols Wash care labels inside garments recommend how to launder your clothes with the best results. The care labelling code is in line with care labelling used in the rest of Europe. The symbols used make it easy to select the correct programme on your washing machine. WASHING SYMBOL 95 WASH ACTION Normal (Maximum) Normal (Maximum) FABRIC White Cotton or Linen without Special Finishes Cotton, Linen or Viscose without Special Finishes Colourfast at 60°C. Nylon, Polyester/Cotton, Viscose with Special Finishes, Cotton/Acrylic Mix.

Cotton, Linen or Viscose Colourfast at 40°C but not 60°C. Acrylics, Acetate, Triacetate, Wool mixes, Polyester/wool blends. Wool, wool mixtures, Silks Do not machine wash 60 50 Reduced (Medium) Normal (Maximum) Reduced (Medium) Much Reduced (Minimum) Hand wash only 40 40 40 BLEACHING Chlorine bleach may be used IRONING Hot iron Warm iron Cool iron DRY CLEANING May be dry cleaned. Other letters and/or a bar beneath the circle will indicate the required process to the dry cleaner. TUMBLE DRYING with high heat setting with low heat setting May be tumble dried Cotton, Linen, Viscose Polyester mixtures, Wool Acrylic, Nylon, Polyester X Important Notes A cross through any symbol means «DO NOT» For best results, always use the dispenser drawer for dispensing detergents and liquid additives.

Once the dispenser has been filled, close it by pushing it in gently. This is particularly important if you are using 17 fabric conditioner to avoid the conditioner entering the machine prematurely. When using liquid detergent and a prewash programme, place the detergent into the correct compartment in the dispenser drawer, after the prewash has finished. Washing programmes Cotton programmes Type of laundry and symbols on labels 60 95 Load 6 kg Programme/ temperature Description of programme Consumption* Available options SPIN SPEED RINSE HOLD PREWASH Energy kWh 2.0 Water litres 52 White cotton: e.g. sheets, tablecloths, household linen 60 95 Cotton daily Main wash at 60° - 95°C 60°- 95°C 3 rinses Long spin Cottons 60°-95°C Main wash at 60° - 95°C 3 rinses Long spin 6 kg White cotton: e.g. sheets, tablecloths, household linen SPIN SPEED RINSE HOLD PREWASH 40° AA EXTRA QUICK SPIN SPEED RINSE HOLD PREWASH 40° AA ** EXTRA QUICK 2.0 52 30 60 40 Cottons 6 kg Coloured cotton + 60°- 50°- 40° 30°C 40AA *** : e.

g. @@@@shirts, blouses, underwear Delicate 2.5 kg fabrics: e.g. @@@@** Only at the temperature of 40°C or higher. @@@@Note!

@@@@@@@@@@@@@@@@This will help to prevent the formation of lime deposits. C0068 P1086 Cleaning the drawer recess Having removed the drawer, use a small brush to clean the recess, ensuring that all washing powder residue is removed from the upper and lower part of the recess. Replace the drawer and run the rinse programme without any clothes in the drum. After each wash Leave the door open for a while. This helps to prevent mould and stagnant smells forming inside the appliance.

Keeping the door open after a wash will also help to preserve the door seal. Maintenance Wash With the use of low temperature washes it is possible to get a build up of residues inside the drum. We recommend that a maintenance wash be performed on a regular basis. To run a maintenance wash: The drum should be empty of laundry. Select the hottest cotton wash programme.

Use a normal measure of detergent, must be a powder (such as Ariel Futur). P0038 Cleaning the pump The pump should be inspected if · the machine does not empty and/or spin · the machine makes an unusual noise during draining due to objects such as safety pins, coins etc. blocking the pump. Proceed as follows: · Disconnect the appliance.



[You're reading an excerpt. Click here to read official ZANUSSI](#)

[ZWD1472S user guide](#)

<http://yourpdfguides.com/dref/955244>

· If necessary wait until the water has cooled down.

· Open the pump door. External cleaning Clean the exterior cabinet of the appliance with a solution of mild washing up liquid and water and then dry thoroughly. Cleaning the dispenser drawer The washing powder and additive dispenser drawer should be cleaned regularly. Remove the drawer by pressing the catch downwards and by pulling it out. Flush it out under a tap, to remove any traces of accumulated powder. P1114 · Place a container close to the pump to collect any spillage. C0066 C0067 20 · Pull out the emergency emptying hose, place it in the container and remove its cap. · When no more water comes out, unscrew the pump cover and remove it. Always keep a rag nearby to dry up spillage of water when removing the cover. Cleaning the water inlet filter If your water is very hard or contains traces of lime deposit, the water inlet filter may become clogged.

It is therefore a good idea to clean it from time to time. Turn off the water tap. Unscrew the water inlet hose. Clean the filter using a hard bristle brush. Tighten up the inlet hose. P1115 · Remove any objects from the pump impeller by rotating it. P1090 The dangers of freezing If the machine is exposed to temperatures below 0°C, certain precautions should be taken. Turn off the water tap. Unscrew the inlet hose. Place the end of the emergency emptying hose and that of the inlet hose in a bowl placed on the floor and let water drain out.

Screw the water inlet hose back on and reposition the emergency emptying hose after having put the cap on again. When you intend to start the machine up again, make sure that the room temperature is above 0°C. · Put the cap back on the emergency emptying hose and place the latter back in its seat. Emergency emptying out P1117 · Screw the pump cover fully in. · Close the pump door.

Warning When the appliance is in use and depending on the programme selected there can be hot water in the pump. Never remove the pump cover during a wash cycle, always wait until the appliance has finished the cycle, and is empty. When replacing the cover, ensure it is securely retightened so as to stop leaks and young children being able to remove it. If the water is not discharged, proceed as follows to empty out the machine: · pull out the plug from the power socket; · close the water tap; · if necessary, wait until the water has cooled down; · open the pump door; · place a bowl on the floor and place the end of the emergency emptying hose into the bowl. Remove its cap.

The water should drain by gravity into the bowl. When the bowl is full, put the cap back on the hose. Empty the bowl. Repeat the procedure until water stops flowing out; · clean the pump if necessary as previously described; · replace the emergency emptying hose in its seat after having plugged it; · screw the pump cover again and close the door. 21 Something Not Working Certain problems are due to lack of simple maintenance or oversights, which can be solved easily without calling out an engineer. Before contacting your local Service Force Centre, please carry out the checks listed below. IMPORTANT: if you call out an engineer to a fault listed below, or to repair a fault caused by incorrect use or installation, a charge will be made even if the appliance is under guarantee.

During machine operation it is possible that one of the following alarm codes appears on the display and in the same time the buzzer sounds: - E10 : problem with the water supply - E20 : problem with water draining - E40 : door open Once the problem has been eliminated, press the "Start/Pause" button to restart the programme. If after all checks, the problem persists, contact your local Service Force Centre. Symptom The machine does not start Possible causes E The door has not been closed.

(E40) The plug is not properly inserted in the power socket. There is no supply at the socket. The main fuse or the fuse in the plug has blown. The "Start/Pause" button has not been depressed. The "Delay" option has been selected. E The water tap is closed. (E10) E The filter in the inlet hose is blocked.

(E10) E The inlet hose may be squashed or kinked. (E10) E The door has not been closed. (E40) The end of the drain hose is too low.

The end of the drain hose is submerged in water. There is no vent in the end of the drain hose. The machine does not fill The machine fills then empties immediately The machine does not empty and/or does not spin E The drain hose may be squashed or kinked. (E20) The "Rinse Hold" option has been selected. E The drain pump may be blocked.

(E20) The drain hose extension, if fitted, is not correct. Follow the instructions for connecting to the waste. The drainage system pipes are blocked. The wash load is unbalanced: redistribute the clothes inside the drum to allow the machine to spin. Too much detergent or unsuitable detergent has been used (creates too much foam).

Check whether there are any leaks from the inlet hose fittings. It is not always easy to see this as the water runs down the hose; check to see if it is damp. The drain hose may be damaged or not securely positioned. The detergent dispenser drawer or recess is clogged. The drainage system pipes are blocked. The cap on the emergency emptying hose has not been replaced after cleaning the pump. Too little detergent or unsuitable detergent has been used. An insufficient amount of detergent leaves the laundry looking grey and causes lime scale to form. Stubborn stains have not been treated prior to washing The correct wash programme/temperature has not been selected. Too much laundry has been placed in the drum.

22 There is water on the floor Unsatisfactory washing results Symptom The machine vibrates when spinning Possible causes The internal packing has not been removed. The machine is in contact with the wall or furniture. The machine is not level and stable (check diagonally). The washing load is badly distributed in the drum. Maybe there is very little laundry in the drum. The water level is above the bottom edge of the door. The machine is heating the water or drying the clothes. The drum is turning. The electronic balance control device has cut in because the laundry is not evenly distributed in the drum. The laundry is redistributed by reverse rotation of the drum.

This may happen several times before the unbalance disappears and normal spinning can resume. If, after a few minutes, the laundry is still not evenly distributed in the drum, the machine will spin at a lower spin or will not spin. In this case, redistribute the load manually and select the spin programme. The machine is fitted with a type of motor which makes an unusual noise compared with other traditional motors. This new motor ensures a softer start and more even distribution of the laundry in the drum when spinning, as well as increased stability of the machine.



[You're reading an excerpt. Click here to read official ZANUSSI ZWD1472S user guide](http://yourpdfguides.com/dref/955244)
<http://yourpdfguides.com/dref/955244>

Machines based on modern technology operate very economically using very little water without affecting performance. The drying time or degree of drying has not been selected E The water tap is not turned on (E10) E The drain pump is clogged (E20) The machine is overloaded The selected drying time or degree of dryness was not suitable for the laundry The door will not open Spinning starts late or the machine does not spin The machine makes an unusual noise No water is visible in the drum The machine does not dry or does not dry properly Service & Spare Parts In the event of your appliance requiring service, or if you wish to purchase spare parts, please contact your local Service Force Centre by telephoning: 0870 5 929929 Your telephone call will be automatically routed to the Service Force Centre covering your post code area. For the address of your local Service Force Centre and further information about Service Force, please visit the website at www.serviceforce.co.

uk. For Customer Service in Ireland please contact us at the address below: Zanussi Electrolux - Electrolux Group (Irl) Ltd Long Mile Road - Dublin 12 Republic of Ireland Tel: +353 (0)1 4090751 Email: service.eid@electrolux.ie To buy accessories, consumables and spare parts at our online shop please visit: <http://www.zanussielectrolux.co.uk> 23 Before calling out an engineer, please ensure you have read the details under the heading "Something Not Working". When you contact the Service Force Centre you will need to give the following details: 1. Your name, address and post code 2. Your telephone number 3.

Clear and concise details of fault 4. The model and serial number of the appliance (found on the rating plate - see picture) 5. The purchase date. Please note that a valid purchase receipt or guarantee documentation is required for inguarantee service calls. Mo Pro d.

d. No

.....

..... Ser. No.

..... Mod.

.....

.....

Prod. No.

... P0042 BD Ser. No.

.... Customer Care Department For general enquiries concerning your Zanussi Electrolux appliance or for further information on Zanussi Electrolux products, please contact our Customer Care Department by letter or telephone at the address below or visit our website at www.zanussi.co.uk Customer Care Department - Zanussi Electrolux Major Appliances Addington Way - Luton - Bedfordshire LU4 9QQ Tel 08705 727727* * calls to this number may be recorded for training purposes. Guarantee Conditions Standard guarantee conditions We, Zanussi Electrolux, undertake that if, within 12 months of the date of the purchase, this ZANUSSI ELECTROLUX appliance or any part thereof is proved to be defective by reason only of faulty workmanship or materials, we will, at our option repair or replace the same FREE OF ANY CHARGE for labour, materials or carriage on condition that: The appliance has been correctly installed and used only on the electricity supply stated on the rating plate. The appliance has been used for normal domestic purposes only, and in accordance with the manufacturer's instructions.

The appliance has not been serviced, maintained, repaired, taken apart or tampered with, by any person not authorised by us. All service work under this guarantee must be undertaken by a Service Force Centre. Any appliance or defective part replaced shall become the Company's property. This guarantee is in addition to your statutory and other legal rights. Home visits are made between 8.30am and 5.30pm Monday to Friday. Visits may be available outside these hours in which case a premium will be charged. Appliances found to be in use within a commercial environment, plus those which are subject to rental agreements. Products of Zanussi Electrolux manufacture which are NOT marketed by Zanussi Electrolux.

European guarantee If you should move to another country within Europe then your guarantee moves with you to your new home subject to the following qualifications: The guarantee starts from the date you first purchased your product. The guarantee is for the same period and to the same extent for labour and parts as exists in the new country of use for this brand or range of products. The guarantee relates to you and cannot be transferred to another user. Your new home is within the European Community (EC) or European Free Trade Area. The product is installed and used in accordance with our instructions and is only used domestically, i.e. a normal household. The product is installed taking into account regulations in your new country. Before you move please contact your nearest Customer Care Centre, listed below, to give them details of your new home. They will then ensure that the local Service Organisation is aware of your move and able to look after you and your appliances.

France Senlis +33 (0) 344 62 29 29 Germany Nurnberg +49 (0) 800 234 7378 Italy Pordenone +39 0434 39 4700 Sweden Stockholm +46 (0) 8 672 53 90 UK Luton +44(0) 8705 727 727 Ireland Dublin +353 (0)1 4090751 24 Exclusions This guarantee does not cover: Damage or calls resulting from transportation, improper use or neglect, the replacement of any light bulbs or removable parts of glass or plastic. Costs incurred for calls to put right an appliance which is improperly installed or calls to appliances outside the United Kingdom. Installation Instructions @@Care must be taken to ensure that the appliance does not stand on the electrical supply cable. Any electrical work required to install this appliance should be carried out by a qualified electrician or competent person. Any plumbing work required to install this appliance should be carried out by a qualified plumber or competent person.

Should the appliance power supply cable need to be replaced, this should be carried out by our Service Force Centre. Technical Specifications DIMENSIONS Height Width Depth 85 cm 60 cm 59 cm 230-240 V/50 Hz 2050 W (10A) Minimum Maximum Washing Cotton, linen Synthetics Delicate fabrics Wool/Handwash Drying Cotton, linen Synthetics Maximum Energy Water Time 0.05 MPa 0.8 MPa 6 kg 2.5 kg 2.

5 kg 2 kg 3 kg 2 kg 1200 rpm (ZWD 1272 W) 1400 rpm (ZWD 1472 W - ZWD 1472 S) 1.02 kWh 49 litres 142 mins POWER SUPPLY VOLTAGE TOTAL POWER ABSORBED WATER PRESSURE MAX LOAD CAPACITY SPIN SPEED CONSUMPTION DATA FOR WASHING 6 KG NORMALLY SOILED COTTON ITEMS AT 60°C + OPTION 40°AA SELECTED This appliance complies with the following E.E.C. Directives: - 73/23 EEC of 19.2.73 (Low Voltage Directive) and subsequent modifications; - 89/336 EEC of 3.5.89 (Electromagnetic Compatibility Directive) and subsequent modifications. 25 Unpacking All transit bolts and packing must be removed before using the appliance.

You are advised to keep all the packaging for re-use in case the machine is to be transported again. Using a spanner unscrew and remove the two rear bottom screws. Slide out the two plastic pins. Lay the machine gently on its back, making sure that the hoses are not squashed. Fill all the holes with the plastic plugs supplied with the instruction booklet.

[You're reading an excerpt. Click here to read official ZANUSSI ZWD1472S user guide](#)



<http://yourpdfguides.com/dref/955244>

P1128 P0002 Important ! You are advised to keep all the packaging for re-use in case the machine is to be transported again. In case of moving out the same precautions as per paragraphe "The dangers of freezing" must be taken i.e. the residual water in the hoses must be pumped out. P1129 P0001 Positioning
Install the machine on a flat hard floor.

Make sure that air circulation around the machine is not impeded by carpets, rugs etc. Check that the machine does not touch the wall or other kitchen units. Never place cardboard, wood or similar materials under the machine to compensate for any unevenness in the floor. Your new washing machine has been designed to be permanently plumbed in to your home's water supply and drainage system. However, if this is not possible, it may be connected to a suitable existing tap with the drain hose discharging into a sink.

The appliance has an inlet hose, with female 3/4" BSP thread connector. If this connection is not compatible with the plumbing of the existing installation, a variety of connectors are available from good hardware stores and plumbers merchants to suit most domestic plumbing. Any alteration to your existing plumbing must be carried out by a competent person, or qualified plumber. Remove the polystyrene block from the bottom of the machine and release the two plastic bags. Very carefully slide out the left polythene bag, removing it towards the right and then downwards.

1 2 3 P1124 P1126 Repeat the operation for the right polythene bag, removing it towards the left and then upwards. Installation on a Suspended Floor P1127 Remove the polystyrene base. Set the machine upright and unscrew the remaining rear screw. Slide out the relevant pin. Suspended wooden floors are particularly susceptible to vibration. To help prevent vibration we recommend you place a waterproof wood panel, at least 15 mm thick under the appliance, secured to at least 2 floor beams with screws. If possible install the appliance in one of the corners of the room, where the floor is more stable. 26 Water inlet Connect the hose supplied with the machine to a tap with a 3/4" thread. Do not use already employed hoses. U piece supplied P1199 P1088 Place the drain hose into your standpipe, which should have an internal diameter of approximately 38mm thus ensuring there is an air break between the drain hose and standpipe.

38 mm (1.2) standpipe diameter 30 cm (12") P1074 Installation should comply with local water authority and building regulations' requirements. The appliance must be connected to a cold water supply only. A minimum water pressure of 0.05 MPa (0.5 bar) is required for safe operation of the appliance. @@@@Set the hose correctly by loosening the ring nut. @@1. Into a drainage standpipe. @@@@The joining piece must have an internal diameter of 18mm.

If your drain hose looks like this (see below) you do not require the "U" piece". Just push the hose firmly into the standpipe. P1212 27 Min. 60 cm (23.6) Max. 90 cm (35.4) 2. Onto a sink outlet spigot. If the outlet spigot has not been used before, remove any blanking plug that may be in place. Any necessary adjustment can be made with a spanner.

Accurate levelling prevents vibration, noise and displacement of the machine during operation. Some vibration is inevitable, especially if mounted on a wooden floor. Sprung wooden floors are particularly susceptible to vibration. For advice, consult a builder. @@@@The joining piece must have an internal diameter of 18mm. In the interest of the environment Washing machines and dishwashers should be connected to the FOUL drainage system, the water will then be taken to a sewage works for treatment before being discharged safely into a river. It is essential that these appliances are not connected to the surface water drainage system as this water is discharged directly into a river or stream and may cause pollution. If you require any further advice please contact your local water authority. Important Before connecting up the machine to new pipework or to pipework that has not been used for some time, run off a reasonable amount of water to flush out any debris that may have collected in the pipes. Levelling Level the washing machine by raising or lowering the feet.

The feet may be tight to adjust as they incorporate a self locking nut, but the machine MUST be level and stable (check diagonally). P1051 28 The wires in the mains lead are coloured in accordance with the following code: Green and Yellow - Earth Blue - Neutral Brown - Live GREEN & YELLOW SHOWER SINK BATH TOILET BIDET E 13 A N L WASHING MACHINE RAINWATER 'RUN-OFF' DISHWASHER BROWN BLUE P1041 FOUL DRAIN CORD CLAMP SURFACE WATER DRAINS & SEWERS FOUL SEWERS SEWAGE TREATMENT WORKS TREATED DISCHARGE UNTREATED DISCHARGE RIVER RIVER P0987 Electrical connection Any electrical work required to install this appliance should be carried out by a qualified electrician or competent person. WARNING: THIS APPLIANCE MUST BE EARTHED. The manufacturer declines any liability should this safety measure not be observed. Before switching on, make sure the electricity supply voltage is the same as that indicated on the appliance's rating plate. The rating plate is located at the top of the rim of the open door. The wire coloured green and yellow must be connected to the terminal marked with the letter «E» or by the earth symbol or coloured green and yellow. The wire coloured blue must be connected to the terminal marked «N» or coloured black. The wire coloured brown must be connected to the terminal marked «L» or coloured red. Upon completion there must be no cut, or stray strands of wire present and the cord clamp must be secure over the outer sheath.

WARNING: A cut off plug inserted into a 13 amp socket is a serious safety (shock) hazard. Ensure that the cut off plug is disposed of safely. Should the appliance power supply cable need to be replaced, this must be carried out by our Service Force Centre. Note When the appliance is installed the power supply cable must be accessible. Permanent connection Mod.

.....
..... Prod. No. ...

..... P0042 BD Ser. No.

.....
.... The appliance is supplied with a 13amp plug fitted.

In the event of having to change the fuse in the plug supplied, a 13amp ASTA approved (BS1363/A) fuse must be used. Should the plug need to be replaced for any reason, proceed as described below. 29 In the case of permanent connection it is necessary that you install a double pole switch between the appliance and the electricity supply (mains), with a minimum gap of 3mm between the switch contacts and of a type suitable for the required load in compliance with the current electrical regulations. The switch must not break the yellow and green earth cable at any point. Mo Pro d.

d. No
...
... Ser. No.
..... From the Electrolux Group.

The world's No.



[You're reading an excerpt. Click here to read official ZANUSSI
ZWD1472S user guide
http://yourpdfguides.com/dref/955244](http://yourpdfguides.com/dref/955244)

I choice. The Electrolux Group is the world's largest producer of powered appliances for kitchen, cleaning and outdoor use. More than 55 million Electrolux Group products (such as refrigerators, cookers, washing machines, vacuum cleaners, chain saws and lawn mowers) are sold each year to a value of approx. USD 14 billion in more than 150 countries around the world. © Electrolux plc 2006 .



[You're reading an excerpt. Click here to read official ZANUSSI](#)

[ZWD1472S user guide](#)

<http://yourpdfguides.com/dref/955244>