



Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for ZANUSSI ZWF12080W. You'll find the answers to all your questions on the ZANUSSI ZWF12080W in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual ZANUSSI ZWF12080W
User guide ZANUSSI ZWF12080W
Operating instructions ZANUSSI ZWF12080W
Instructions for use ZANUSSI ZWF12080W
Instruction manual ZANUSSI ZWF12080W



User manual			
	Washing Machine		



ZWF 12080 W
ZWF 14080 W



[You're reading an excerpt. Click here to read official ZANUSSI ZWF12080W user guide](http://yourpdfguides.com/dref/955484)
<http://yourpdfguides.com/dref/955484>

Manual abstract:

To avoid unnecessary mistakes and accidents, it is important to ensure that all people using the appliance are thoroughly familiar with its operation and safety features. Save these instructions and make sure that they remain with the appliance if it is moved or sold, so that everyone using it through its life will be properly informed on appliance use and safety. Always unplug the appliance and turn off the water supply after use. Under no circumstances should you attempt to repair the machine yourself. @@Contact your local Service Centre. @@During high temperature wash programmes the door glass may get hot.

Do not touch it! Make sure that small pets do not climb into the drum. To avoid this, please check into the drum before using. @@Only use the advised quantities of fabric softener and detergent. Damage to the fabric can ensue if you over-fill.

Refer to the manufacturer's recommendations of quantities. @@Do not use your washing machine to wash articles with whalebones, material without hems or torn material. This appliance is heavy. Care should be taken when moving it. When unpacking the appliance, check that it is not damaged.

If in doubt, do not use it and contact the Service Centre. All packing and transit bolts must be removed before use. Serious damage can occur to the product and to property if this is not adhered to. See relevant section in the user manual. After having installed the appliance, check that it is not standing on the inlet and drain hose and the worktop is not obstructing the electrical supply cable.

If the machine is situated on a carpeted floor, please adjust the feet in order to allow air to circulate freely under the appliance. Always be sure, that there is no water leakage from hoses and their connections after the installation. If the appliance is installed in a location subject to frost, please read the «dangers of freezing» chapter. Any plumbing work required to install this appliance should be carried out by a qualified plumber or competent person. Any electrical work required to install this appliance should be carried out by a qualified electrician or competent person. 3 Use This appliance is designed for domestic use. It must not be used for purposes other than those for which it was designed. Only wash fabrics which are designed to be machine washed. Follow the instructions on each garment label. Do not overload the appliance.

See the relevant section in the user manual. Before washing, ensure that all pockets are empty and buttons and zips are fastened. Avoid washing frayed or torn articles and treat stains such as paint, ink, rust, and grass before washing. Underwired bras must NOT be machine washed. Garments which have been in contact with volatile petroleum products should not be machine washed. If volatile cleaning fluids are used, care should be taken to ensure that the fluid is removed from the garment before placing in the machine. Never pull the power supply cable to remove the plug from the socket; always take hold of the plug itself. Never use the washing machine if the power supply cable, the control panel, the working surface or the base are damaged so that the inside of the washing machine is accessible. The packaging components (e.g.

plastic film, polystyrene) can be dangerous to children danger of suffocation! Keep them out of children's reach Keep all detergents in a safe place out of children's reach. Make sure that children or pets do not climb into the drum. To avoid that they remain closed inside the drum, the machine incorporates special feature. To activate this device, rotate the button (without pressing it) inside the door clockwise until the groove is horizontal. If necessary use a coin.

To disable this device and restore the possibility of closing the door, rotate the button anti-clockwise until the groove is vertical. Child safety This appliance is not intended for use by persons (including children) with reduced physical sensory or mental capabilities or lack of experience and knowledge unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Young children should be supervised to ensure that they do not play with the appliance. 4 Description of the appliance 1 2 3 4 5 Detergent dispenser drawer Control panel Door opening handle Drain pump Adjustable feet 1 2 3 4 5 Detergent dispenser drawer Prewash Wash Fabric Softener 5 Control panel and functions Delay Start Specials Sport

40° Sport Shoes 40° Silk 30° Mini 30' Off 90° 60° Eco 60° Cottons 3h 6h 9h 1200 900 700 Prewash Intensive Super Quick Spin Options Half load 40° Eco 40° Synthetics 50° 40° Easy Iron 40° Rinses 30° 40° Delicates Drain Wash Door End Start/Pause Cold Hand Wash 30° Wool 40° Spin ZWF12080W 1 2 3 4 5 6 7 Information The control panel is illustrated above. It shows the programme selector dial as well as the different buttons, the pilot lights and the display. These are represented by relevant numbers which are explained in the table below. Control Panel key symbols: = «Night Cycle» option, = «Rinse Hold» option, 1 Programme selector dial and On/Off switch The programme selector dial allows you to select a programme and/or to switch the machine on/off. It can be turned either clockwise or anticlockwise. The light of button 5 starts to flash. Press this button repeatedly to change the spin speed, if you want your laundry to be spun at a speed different from the one proposed by the washing machine or to select the «Night cycle» and «Rinse Hold» option. The relevant light will light up. By pressing this button, you can select only one of the following options: Prewash, Intensive, Super Quick (see the relevant chapter «Operating sequence»). The relevant light will light up. 2 Spin reduction button 3 Options button 6 4 Auto Half Load button Select this option to reduce water consumption when washing a smaller load of cottons or linens. 5 Start/Pause button This button allows you to start the selected programme; the corresponding green pilot light stops flashing.

These are represented by relevant numbers which are explained in the table below. Control Panel key symbols: = «Night Cycle» option, = «Rinse Hold» option, 1 Programme selector dial and On/Off switch The programme selector dial allows you to select a programme and/or to switch the machine on/off. It can be turned either clockwise or anticlockwise. The light of button 5 starts to flash. Press this button repeatedly to change the spin speed, if you want your laundry to be spun at a speed different from the one proposed by the washing machine or to select the «Night cycle» and «Rinse Hold» option. The relevant light will light up. By pressing this button, you can select only one of the following options: Prewash, Intensive, Super Quick (see the relevant chapter «Operating sequence»). The relevant light will light up. 2 Spin reduction button 3 Options button 6 4 Auto Half Load button Select this option to reduce water consumption when washing a smaller load of cottons or linens. 5 Start/Pause button This button allows you to start the selected programme; the corresponding green pilot light stops flashing.

This button also interrupts a programme which is running, the corresponding green pilot light starts to flash. 6 Programme progress display The different pilot lights illuminate indicating when the door is locked and/or the running programme phase: wash (6.1), door (6.2) and end (6.3). This button makes it possible to delay the start of the washing programme by 3, 6, or 9 hours. 7 Delay Start button Functions Prewash (button 3) Select this option if you wish your laundry to be Night Cycle (button 2) prewashed at 30°C before the main wash. The By selecting this option the machine will not drain prewash ends with a short spin in programmes for the water of the last rinse, so as not to crease cotton and synthetic fabrics whereas in the the laundry.



[You're reading an excerpt. Click here to read official ZANUSSI ZWF12080W user guide](http://yourpdfguides.com/dref/955484)
<http://yourpdfguides.com/dref/955484>

As all spinning phases are programmes for delicate fabrics the water is only suppressed, this washing cycle is very quiet and drained. it can be selected at night or in times with a more Intensive (button 3) economical power rate.

On some programmes the rinses will be performed with more water. This option can be selected for heavily soiled laundry: the washing intensity will be increased. When the programme has finished, the display and the washing time will be prolonged by few shows three flashing zeros «0.00» but the door is locked to indicate that the water must be minutes depending on the selected type of fabric. emptied out. Rinse Hold (button 2) By selecting this option the water of the last rinse is not emptied out to prevent the fabrics from creasing.

When the programme has finished, the display shows three flashing zeros «0.00» but the door is locked to indicate that the water must be emptied out. To empty out the water see chapter «At the end of the programme». Super Quick (button 3) A very short cycle for slightly soiled items that have been used or worn for a short time. The washing time will be reduced according to the type of fabric and the selected temperature.

In this case we recommend you to reduce the load size. For the options compatibility with each programme, please refer to the «Programme table». 7 Auto Half Load (button 4) By selecting this option you can reduce water consumption on the rinse cycle when washing a smaller load of cottons or linens. The machine performs the rinses with less water. Pilot Light (s) 6 After having pressed the button 5 , the «Wash» (6.1) pilot light illuminates and stays on while the machine is working. At the end of any cycle it goes off. When the programme has finished, the «End» (6.3) pilot light illuminates and in the same time the light of button 5 goes off. If there is water left in the tub, the light 6.

3 illuminates but the door is locked. The «Door» pilot light (6.2) indicates if the door can be opened: · light on: the door cannot be opened. The appliance is operating or there is water left in the tub. Attention! If the door is locked do not try to open it! · light off: the door can be opened. The washing programme is finished. · flashing light: the door is opening. 8 Programme table Programme/ Temperature Cottons 90° - 60° Type of laundry Options Spin red. Prewash, Intensive, S. Quick(*) Auto Half Load Spin red.

Description of programme Main wash, rinses Long spin at max speed Max Load: 7 Kg Reduced Load: 3.5 Kg White cotton (normally soiled cotton items) White and fast coloured cotton (normally soiled cotton items) Cottons 60° Eco Main wash, rinses Long spin at max speed Prewash, Auto Half Load Max Load: 7 Kg Spin red. Prewash, Intensive, S. Quick(*), Auto Half Load Main wash, rinses Long spin at max speed Max Load: 7 Kg Reduced Load: 3.5 Kg Cottons 60° - 40° Coloured cotton normally soiled Cottons 40° Eco Main wash, rinses Coloured cotton lightly Spin red.

Long spin at max speed soiled Prewash, Auto Half Load Max Load: 7 Kg Synthetic or mixed fabrics Spin red. Prewash, Intensive, Super Quick(*) Spin red. Prewash Main wash, rinses Short spin at 900 rpm Max Load: 3.5 Kg Reduced Load: 1.5 Kg Main wash, rinses Short spin at 900 rpm Max Load: 1.

5 Kg Main wash, rinses: Cotton, linen: drum full but not too tightly packed; Synthetics: drum no more than half full; Delicate fabrics and woollens: drum no more than one third full. Washing a maximum load makes the most efficient use of water and energy. For heavily soiled laundry, reduce the load size.

Temperatures 90° or 95° for normally soiled white cottons and linen (e.g. tea cloths, towels, tablecloths, sheets...) for normally soiled, colour fast garments (e.g.

shirts, night dresses, pyjamas....) in linen, cotton or synthetic fibres and for lightly soiled white cotton (e.g. underwear). for delicate items (e.g. net curtains), mixed laundry including synthetic fibres and woollens bearing the label «pure new wool, machine washable, non-shrink».

50°/60° Laundry weights The following weights are indicative: bathrobe napkin quilt cover sheet pillow case tablecloth towelling towel tea cloth night dress ladies' briefs man's work shirt man's shirt man's pyjamas blouse men's underpants 1200 g 100 g 700 g 500 g 200 g 250 g 200 g 100 g 200 g 100 g 600 g 200 g 500 g 100 g 100 g 30°-40°-Cold Before loading the laundry Never wash whites and in large quantities, can upset the delicate balance of nature. Follow the product manufacturers' instructions on quantities to use. Use less detergent if: you are washing a small load, the laundry is lightly soiled, large amounts of foam form during washing. Degrees of water hardness Degrees Level 1 2 3 4 Characteristic soft medium hard very hard German °dH 0-7 8-14 15-21 > 21 French °T.H.

0-15 16-25 26-37 > 37 Before the first use WARNING! Ensure that the electrical and water connections comply with the installation instructions.

IMPORTANT! Remove the polystyrene block and any material from the drum. IMPORTANT! Pour 2 litres of water into the main wash compartment of the detergent drawer in order to activate the ECO valve. Then run a cotton cycle at 90°C or 95°C, without any laundry in the machine, to remove any manufacturing residue from the drum and tub. Pour 1/2 a measure of detergent into the dispenser drawer and start the machine.

Operating sequence 1. Load the laundry Open the door by carefully pulling the door handle outwards. Place the laundry in the drum, one item at a time, shaking them out as much as possible. Close the door. Measure out the detergent and the fabric softener Pull out the dispenser drawer until it stops. Measure out the amount of detergent required, pour it into the main wash compartment 14 and, if you wish to carry out a programme with the prewash phase, pour it into the compartment marked . If required, pour fabric softener into the compartment marked (the amount used must not exceed the «MAX» mark in the drawer). Close the drawer gently. Select the required programme by turning the programme selector dial (1) Turn the programme selector dial to the required programme. The green light of button 5 starts to flash.

The selector dial can be turned either clockwise or anticlockwise. Position «Off» to Reset programme/Switching OFF of the machine. At the end of the programme the selector dial must be turned to position «Off», to switch the machine off. IMPORTANT! If you turn the programme selector dial to another programme when the machine is working, the red light of button 5 will flash 3 times to indicate a wrong selection. The machine will not perform the new selected programme. @@@@The relevant light will light up. @@The appliance starts operating and the door is locked.



[You're reading an excerpt. Click here to read official ZANUSSI](#)

[ZWF12080W user guide](#)

<http://yourpdfguides.com/dref/955484>

@@@The relevant light illuminates. @@@@. press the button 5 again to start the programme. **IMPORTANT!** @@. The door will be locked throughout the delay time.

@@After you have closed the door, press the button 5 again. @@@@Changing a running programme is possible only by resetting it. @@Start the new programme by pressing the button 5 again. The washing water in the tub will not be emptied out. @@Press this button again to restart the programme.

@@You can now select a new programme. @@@@In this case the door can not be opened. @@@@Now it is possible to open the door.

@@@If you do not intend to carry out another wash, close the water tap. @@@Descaling The water we use normally contains lime.

@@@This will help to prevent the formation of lime deposits. Maintenance Wash With the use of low temperature washes it is possible to get a build up of residues inside the drum. We recommend that a maintenance wash be performed on a regular basis. To run a maintenance wash: The drum should be empty of laundry. Select the hottest cotton wash programme. Use a normal measure of detergent, must be a powder with biological properties. External cleaning

Clean the exterior cabinet of the appliance with soap and water only, and then dry thoroughly. Cleaning the dispenser drawer The washing powder and additive dispenser drawer should be cleaned regularly. Remove the drawer by pressing the catch downwards and by pulling it out. Flush it out under a tap, to remove any traces of accumulated powder.

Cleaning the drawer recess Having removed the drawer, use a small brush to clean the recess, ensuring that all washing powder residue is removed from the upper and lower part of the recess. Replace the drawer and run the rinse programme without any clothes in the drum. To aid cleaning, the top part of the additive compartment should be removed. Cleaning the pump The pump should be inspected if the machine does not empty and/or spin the machine makes an unusual noise during draining due to objects such as safety pins, coins etc. blocking the pump. Proceed as follows: Disconnect the appliance. If necessary wait until the water has cooled down. Open the pump door. Place a container close to the pump to collect any spillage. Pull out the emergency emptying hose, place it in the container and remove its cap.

When no more water comes out, unscrew the pump cover and remove it. Always keep a rag nearby to dry up spillage of water when removing the cover. 17 Remove any objects from the pump impeller by rotating it. Put the cap back on the emergency emptying hose and place the latter back in its seat. Screw the pump cover fully in.

Close the pump door. The dangers of freezing If the machine is exposed to temperatures below 0°C, certain precautions should be taken. Turn off the water tap. Unscrew the inlet hose. Place the end of the emergency emptying hose and that of the inlet hose in a bowl placed on the floor and let water drain out.

Screw the water inlet hose back on and reposition the emergency emptying hose after having put the cap on again. When you intend to start the machine up again, make sure that the room temperature is above 0°C. **IMPORTANT!** Every time you drain the water through the emergency emptying hose you must pour 2 litres of water into the main wash compartment of the detergent drawer and then run the drain programme. This will activate the ECO VALVE device.

Emergency emptying out If the water is not discharged, proceed as follows to empty out the machine: pull out the plug from the power socket; close the water tap; if necessary, wait until the water has cooled down; open the pump door; place a bowl on the floor and place the end of the emergency emptying hose into the bowl. Remove its cap. The water should drain by gravity into the bowl. When the bowl is full, put the cap back on the hose. Empty the bowl. Repeat the procedure until water stops flowing out; clean the pump if necessary as previously described; replace the emergency emptying hose in its seat after having plugged it; Refit filter and close the door.

IMPORTANT! When the appliance is in use and depending on the programme selected there can be hot water in the pump. Never remove the pump cover during a wash cycle, always wait until the appliance has finished the cycle, and is empty. When replacing the cover, ensure it is securely retightened so as to stop leaks and young children being able to remove it. Cleaning the water inlet filter If your water is very hard or contains traces of lime deposit, the water inlet filter may become clogged. It is therefore a good idea to clean it from time to time. Turn off the water tap. Unscrew the water inlet hose. Clean the filter using a hard bristle brush. Tighten up the inlet hose. 18 What to do if

.. **IMPORTANT!** Certain problems are due to lack of simple maintenance or oversights, which can be solved easily without calling out an engineer.

@@@Malfunction Possible Cause / Solution The door has not been closed. (Red light of button 5 flashes) · Close the door firmly.

The plug is not inserted into the power socket correctly. · Insert the plug into the power socket. There is no power at the socket. · Please check your domestic electrical installation. @@ · Replace the fuse.

@@ · Please turn the selector dial and press the button 5 again. The delay start has been selected. @@ (Red light of button 5 flashes) · Open the water tap. The inlet hose is squashed or kinked. @@The filter in the inlet hose is blocked. @@The door is not properly closed. (Red light of button 5 flashes) · Close the door firmly. @@@The drain hose is squashed or kinked. (Red light of button 5 flashes) · Check the drain hose connection. The drain pump is clogged.

(Red light of button 5 flashes) · Clean the drain pump. The option Rinse Hold or Night Cycle has been selected. · Select the Drain or Spin programme The laundry is not evenly distributed in the drum. · Redistribute the laundry. Too much detergent or unsuitable detergent (creates too much foam) has been used. · Reduce the detergent quantity or use another one. Check whether there are any leaks from one of the inlet hose fittings. It is not always easy to see this as the water runs down the hose; check to see if it is damp. · Check the water inlet hose connection. The inlet hose is damaged.

· Replace it with a new one. The cap on the emergency emptying hose has not been replaced after cleaning the pump. · Refit the cap on the emergency emptying hose and place the latter back in its seat. Too little detergent or unsuitable detergent has been used. · Increase the detergent quantity or use another one.

Stubborn stains have not been treated prior to washing. · Use commercial products to treat the stubborn stains. The correct temperature was not selected. · Check if you have selected the correct temperature. Excessive laundry load.

· Reduce the laundry load.



[You're reading an excerpt. Click here to read official ZANUSSI ZWF12080W user guide](http://yourpdfguides.com/dref/955484)
<http://yourpdfguides.com/dref/955484>

The machine does not empty and/or does not spin: There is water on the floor: Unsatisfactory washing results: 20 Malfunction Possible Cause / Solution The programme is still running. · Wait till the end of washing cycle. The door lock has not been released. · Wait until the light 6.2 has gone off. There is water in the drum. · Select drain or spin programme to empty out the water. The door will not open: The transit bolts and packing have not been removed. · Check the correct installation of the appliance.

The support feet have not been adjusted. The machine vibrates or is noisy: · Check the correct levelling of the appliance. The laundry is not evenly distributed in the drum. · Redistribute the laundry. Maybe there is too little laundry in the drum. · Increase the laundry load. The electronic unbalance detection device has cut in because the laundry is not evenly distributed in the drum. The laundry is redistributed by reverse rotation of the drum. This may happen several times before the unbalance disappears and normal spinning can start. Spinning starts late or the machine resume. If, after 10 minutes, the laundry is still not does not spin: evenly distributed in the drum, the machine will not spin.

In this case, redistribute the load manually and select the spin programme. Redistribute the laundry. The machine is fitted with a type of motor which makes a different noise compared with other traditional motors. This new motor ensures a softer The machine makes an unusual noise start and more even distribution of the laundry in the drum when spinning, as well as increased stability of the machine. Machines based on modern technology operate very No water is visible in the drum economically using very little water without affecting performance.

If you are unable to identify or solve the problem, contact our service centre. Before telephoning, make a note of the model, serial number and purchase date of your machine: the Service Centre will require this information. Mod. ..

. Prod. No. .

. Ser. No.

.

. Mod.

Prod. No.

. Ser.

No.

.

21 Consumption values Programme Programme duration (in minutes) 145 155 120 140 70 55 55 Energy consumption (in kWh) 2.1 1.19 1.4 1.14 0.6 0.4 0.25
Water consumption (in litres) 65 59 60 54 63 55 55 Cottons 90°C Cottons 60° Eco(*) Cottons 60°C - 40°C Cottons 40°C Eco Delicates 40°C - 30°C Wool 40°C Handwash 30° Information The consumption data shown on this chart is to be considered purely indicative, as it may vary depending on the quantity and type of laundry, on the inlet water temperature and on the ambient temperature. It refers to the highest temperature for each wash programme. (*) The "Cottons 60° Eco" with a load of 7 kg is the reference programme for the data entered in the energy label, in compliance with EEC 92/75 standards.

Technical data Dimensions Width Height Depth (including the porthole) Electrical connection Voltage Overall power - Fuse Water supply pressure 60 cm 85 cm 63 cm Information on the electrical connection is given on the rating plate on the inner edge of the appliance door Minimum Maximum 0,05 MPa 0,8 MPa 7 0 kg Maximum Load Spin Speed Cotton Maximum 1200 rpm (ZWF 12080 W) 1400 rpm (ZWF 14080 W) 22 Installation instruction Unpacking All transit bolts and packing must be removed before using the appliance. You are advised to keep all transit devices so that they can be refitted if the machine ever has to be transported again. 5. Remove the bracket D, refit the six smaller bolts C and slide out the relevant plastic spacer E. 1. After removing all the packaging, carefully lay machine on it's back to remove the polystyrene base from the bottom. 2. Remove the power supply cable and the draining hose from the hose holders on the rear of the appliance. 6. Open the porthole, take out the inlet hose from the drum and remove the polystyrene block fitted on the door seal. 7. Fill the smaller upper hole and the two large ones with the corresponding plastic plug caps supplied in the bag containing the instruction booklet. Positioning Install the machine on a flat hard floor. Make sure that air circulation around the machine is not impeded by carpets, rugs etc. Check that the machine does not touch the wall or other kitchen units.

Level the washing machine by raising or lowering the feet. The feet may be tight to adjust as they incorporate a self locking nut, but the machine MUST be level and stable. If necessary, check the setting with a spirit level. Any necessary adjustment can be made with a spanner. Accurate levelling prevents vibration, noise and displacement of the machine during operation.

Never place cardboard, wood or similar materials under the machine to compensate for any unevenness in the floor. A C B C B 3. With a suitable spanner unscrew and remove the central rear bolt A. 4. Unscrew and remove the two large rear bolts B and the six smaller bolts C. E C C D 23 Water inlet An inlet hose is supplied and can be found inside the machine drum. Do not use the hose from your previous machine to connect to the water supply. 1. Open the porthole and extract the inlet hose. 2.

Connect the hose with the angled connection to the machine. Do not place the inlet hose downwards. Angle the hose to the left or right depending on the position of your water tap. 3. Set the hose correctly by loosening the ring nut. After positioning the inlet hose, be sure to tighten the ring nut again to prevent leaks. 4. Connect the hose to a tap with a 3/4" thread. Always use the hose supplied with the appliance. The inlet hose must not be lengthened.

If it is too short and you do not wish to move the tap, you will have to purchase a new, longer hose specially designed for this type of use. 45° The appliance must be connected to a cold water supply. A minimum water pressure of 0.05 MPa (0.5 bar) is required for safe operation of the appliance.

If you cannot make the cold water connection direct from the rising mains, you may be able to operate the appliance from your cold water storage system. There should be a minimum vertical distance of 5.02m (16.5 ft) between the appliance's inlet and the bottom of the water storage tank. Water drainage This appliance is designed to be permanently plumbed into your home's drainage system using one of the following methods.

1. Into a drainage standpipe. Firstly form a hook in the end of the drain hose using the «U» piece supplied. Place the drain hose into your standpipe, which should have an internal diameter of approximately 38mm thus ensuring there is an air break between the drain hose and standpipe. 24 30 cm (12") 35° U piece supplied hen discharging into a standpipe ensure that the top of the standpipe is no more than 90 cm (35.4") and no less than 60 cm (23.6") above floor level. Special Sport 40° Sport Shoes 40° Silk Mini 30' Cold Hand Wash 30° Wool Spin Drain Rinse 30° 40° Delicates Off 95° 60° Eco 60° 40° Eco 40° Synthetics 50° 40° Easy Iron 40° ZWF10070W NOTE Installation should comply with local water authority and building regulations' requirements.



[You're reading an excerpt. Click here to read official ZANUSSI ZWF12080W user guide](#)

Cottons 3h 6h 9h 1000 900 700 Prewash Intensive Super Quick Spin Options Extra Rinse Wash Door End Start/Pause 1000 6kg 38 mm (1.5) standpipe diameter Special Sport 40° Sport Shoes 40° Silk Mini 30' Off 95° 60° Eco 60° Cottons 3h 6h 9h 1000 900 700 Prewash Intensive Super Quick Spin Options Extra Rinse 40° Eco 40° Synthetics 50° 40° Spin Drain Rinse 30° 40° Delicates Easy Iron 40° Wash Door End Start/Pause 1000 6kg Cold Hand Wash 30° Wool ZWF10070W Min.

60 cm (23.6) Max. 90 cm (35.4) Level the washing machine by raising or lowering the feet. The feet may be tight to adjust as they incorporate a self locking nut, but the machine **MUST** be level and stable. Any necessary adjustment can be made with a spanner. Accurate levelling prevents vibration, noise and displacement of the machine during operation. @@Sprung wooden floors are particularly susceptible to vibration. For advice, consult a builder. If possible, always place the machine on a solid floor.

@@@WARNING! @@An additional drain hose and joining piece is available from your local Service Force Centre. The joining piece must have an internal diameter of 18mm. If your drain hose looks like this (see below) you do not require the «U» piece. Just push the hose firmly into the standpipe. 2. Onto a sink outlet spigot. If the outlet spigot has not been used before, remove any blanking plug that may be in place. Loop Push the drain hose onto the spigot and secure with a clip, ensure a loop is formed in the drain hose (see diagram) to prevent waste from the sink entering the washing machine.

Important! Before connecting the machine to new pipework or to pipework that has not been used for some time, run off a reasonable amount of water to flush out any debris that may have collected in the pipes. @@@@WARNING! This appliance must be earthed.

@@Before switching on, make sure the electricity supply voltage is the same as that indicated on the appliance's rating plate. **IMPORTANT!** Information on the electrical connection is given on the rating plate on the inner edge of the appliance door. The appliance is supplied with a 13amp plug fitted. In the event of having to change the fuse in the plug supplied, a 13amp ASTA approved (BS1363/A) fuse must be used. Should the plug need to be replaced for any reason, proceed as described below. The wires in the mains lead are coloured in accordance with the following code: Green and Yellow

.....
.....
.....
..... - Earth Blue

.....
.....
.....
.....
.....
.....
.....
..... - Neutral Brown...

.....- Live The wire coloured green GREEN & YELLOW and yellow must be connected to the terminal marked with the letter «E» or by the or BROWN earth symbol coloured green and BLUE CORD CLAMP yellow. The wire coloured blue must be connected to the terminal marked «N» or coloured black. The wire coloured brown must be connected to the terminal marked «L» or coloured red.

Upon completion there must be no cut, or stray strands of wire present and the cord clamp must be secure over the outer sheath. **EN L WARNING!** A cut off plug inserted into a 13 amp socket is a serious safety (shock) hazard. Ensure that the cut off plug is disposed of safely. Should the appliance power supply cable need to be replaced, this **MUST** be carried out by our Service Force Centre. The power supply cable must be easily accessible after installing the appliance.

Permanent connection In the case of permanent connection it is necessary that you install a double pole switch between the appliance and the electricity supply (mains), with a minimum gap of 3mm between the switch contacts and of a type suitable for the required load in compliance with the current electrical regulations. The switch must not break the yellow and green earth cable at any point. 26 13 A Environmental concerns Packaging materials The materials marked with the symbol are recyclable. >PE<=polyethylene >PS<=polystyrene >PP<=polypropylene This means that they can be recycled by disposing of them properly in appropriate collection containers. Old machine Use authorised disposal sites for your old appliance.

Help to keep your country tidy! The symbol on the product or on its packaging indicates that this product may not be treated as household waste. Instead it should be taken to the appropriate collection point for the recycling of electrical and electronic equipment. By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling of this product. For more detailed information about recycling of this product, please contact your local council, your household waste disposal service or the shop where you purchased the product. Ecological hints To save water, energy and to help protect the environment, we recommend that you follow these tips: Normally soiled laundry may be washed without prewashing in order to save detergent, water and time (the environment is protected too!). The machine works more economically if it is fully loaded. With adequate pre-treatment, stains and limited soiling can be removed; the laundry can then be washed at a lower temperature. Measure out detergent according to the water hardness, the degree of soiling and the quantity of laundry being washed. 27

www.electrolux.

com www.zanussi-electrolux.co.uk 132963610-00-192008 Subject to change without notice .



[You're reading an excerpt. Click here to read official ZANUSSI ZWF12080W user guide](#)

