



Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for ZANUSSI ZWF1415W. You'll find the answers to all your questions on the ZANUSSI ZWF1415W in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual ZANUSSI ZWF1415W
User guide ZANUSSI ZWF1415W
Operating instructions ZANUSSI ZWF1415W
Instructions for use ZANUSSI ZWF1415W
Instruction manual ZANUSSI ZWF1415W



WASHING MACHINE
ZWF 1415W



i Quick Installation Guide:
visit our WEB SITE to view an install video
www.video.uk.electrolux.com

132 982 040

INSTRUCTION BOOKLET

GB



[You're reading an excerpt. Click here to read official ZANUSSI ZWF1415W user guide](http://yourpdfguides.com/dref/955509)
<http://yourpdfguides.com/dref/955509>

Manual abstract:

@@Care should be taken when moving it. @@All packing and transit bolts must be removed before use. Serious damage can occur to the product and to property if this is not adhered to. See relevant section in instructions. Any plumbing work required to install this appliance should be carried out by a qualified plumber or competent person. Any electrical work required to install this appliance should be carried out by a qualified electrician or competent person. Care must be taken to ensure that the appliance does not stand on the electrical supply cable. @@@@Pets and children have been known to climb into washing machines. Please check your drum before use. The glass door becomes very hot during the washing cycle.

@@Keep all packaging well away from children. Keep all detergents in a safe place out of children's reach. Always unplug the appliance and turn off the water supply after use. Do not overload the appliance. See relevant section in the instruction book.

Only wash fabrics which are designed to be machine washed. If in doubt, consult the care label on the clothes. Before washing, ensure that all pockets are empty and buttons and zips are fastened. Avoid washing frayed or torn articles and treat stains such as paint, ink, rust, and grass before washing. Underwired bras must NOT be machine washed.

Any objects such as coins, safety pins, nails, screws, stones or any other hard, sharp material can cause extensive damage and must not be placed into the machine. Garments which have been in contact with volatile petroleum products should not be machine washed. If volatile cleaning fluids are used, care should be taken to ensure that the fluid is removed from the garment before placing in the machine. Wash small items such as socks, laces, washable belts etc in a washing bag or pillow case as it is possible for such items to slip down between the tub and the inner drum. Only use the advised quantities of fabric softener. Damage to the fabric can ensue if you over-fill. Refer to the manufacturer's recommendations of quantities. As some duvets and eiderdowns should be washed in large commercial machines because of their bulk, please check with the manufacturer of the item before washing in a domestic machine. Leave the porthole door slightly ajar between washes to preserve the door seal. Under no circumstances should you attempt to repair the machine yourself.

Repairs carried out by inexperienced persons may cause injury or serious malfunctioning. Contact your local Service Force Centre. Always insist on genuine spare parts. 2 Contents For the User Important Safety Information Your New Washing Machine Description of the Appliance Detergent dispenser drawer Child safety feature 2 4 5 5 5 6-7 7 8-9 8 8 8 8 8 9 9 9 9 9 10 10 10 10 10 11 11 11 12-13 13 13 Wash Care Symbols Washing Programmes Maintenance and Cleaning Descaling After each wash Maintenance Wash External cleaning Cleaning the dispenser drawer Cleaning the drawer recess Cleaning the pump Cleaning the water inlet filter The dangers of freezing Emergency emptying out 14 15-16 17-18 17 17 17 17 17 17-18 18 18 18 19-20 20 21 The Control Panel Programme information Operating sequence Washing 5 kg of white cotton at 95°C Load the laundry Measure out the detergent and the fabric softener Select the required programme Select the spin reduction or option Select the required option (s) Start the programme Altering a programme Interrupting a programme Cancelling a programme Opening the door after the programme has started At the end of the programme Washing 2 kg of mixed fabrics at 50°C Load the laundry Measure out the detergent and the fabric softener Select the required programme Select the spin reduction or option Select the required option(s) Start the machine At the end of the programme Something Not Working Service and Spare Parts Guarantee Conditions For the Installer Installation Instructions Technical Specifications Unpacking Positioning Water inlet Water drainage Levelling Special conditions In the interest of the environment Electrical connection 22 22 23 23 24 24-25 25 25 25-26 26 Washing Hints Which detergent?... And in which form? Guide to use the Instruction Book The following symbols will be found in the text to guide you throughout the instructions: Safety instructions Hints and tips Environmental information 3 Your New Washing Machine Your new washing machine meets all modern requirements for effective treatment of laundry with low water, energy and detergent consumption. The programme selector dial combines the function of programme and temperature selection, making it easier to set the programme. The programme progress display shows the washing phase and the end of the programme .

The special wool programme with its new delicate wash system treats your woollens with extreme care. The ECO VALVE allows total use of detergent and reduces water consumption so saving energy. In the interest of the environment Ecological hints To save water and energy and help protect the environment, we recommend that you follow these hints: Adjust the quantity of detergent according to the hardness of your water supply, the amount of laundry and the degree of soiling. A programme without prewash is sufficient for normally soiled laundry. The machine works more economically if it is fully loaded.

With adequate pre-treatment, stains and limited soiling can be removed; the laundry can then be washed at a lower temperature, so saving energy. Materials marked with the symbol are recyclable. Check with your local Council or Environmental Health Office to see if there are facilities in your area for re-cycling this appliance. When the appliance is to be scrapped, cut off the power supply cable and make the door lock device unusable to prevent young children from being trapped inside. Help to keep your country tidy - use authorised disposal sites for your old appliance.

The symbol on the product or on its packaging indicates that this product may not be treated as household waste. Instead it shall be handed over to the applicable collection point for the recycling of electrical and electronic equipment. By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling of this product. For more detailed information about recycling of this product, please contact your local city office, your household waste disposal service or the shop where you purchased the product. How do we help to protect the environment? We use recycled paper! Important Your machine is fitted with a balance control device, which ensures the machine is stable during the spin. If the wash load appears not to have been spun sufficiently at the end of the wash cycle, because it is not evenly distributed in the drum, the balance control device may have operated.



[You're reading an excerpt. Click here to read official ZANUSSI ZWF1415W user guide](http://yourpdfguides.com/dref/955509)
<http://yourpdfguides.com/dref/955509>

It will therefore be necessary to redistribute the wash load manually and select a spin programme. For more detailed information see the section headed "Something Not Working". 4 Description of the Appliance 1 Detergent dispenser drawer 2 Programme guide 3 Control panel 4 Door opening handle 5 Drain pump 6 Adjustable feet 1 3 Programme Whites Whites + Economy Fast Coloureds Colour care Synthetics Synthetics Synthetics Delicates Delicates 95° 60°+E 60° 40° 60° 50° 40° 40° 30° ZWF 1415 W Wool Wool Cold Miniprogram Rinses Drain Spin Off 30° 30°/30 O Options Prewash Super Rinse Half Load Start/ Pause Prewashing/ Washing Rinses Spinning Drain AQUAC YCLE ESSENTIAL 1400 End 2 4 5 6 Detergent dispenser drawer Prewash Main wash Fabric softener C0069 Child safety feature This machine incorporates a special child safety feature to prevent small children from being trapped inside the machine. To activate this device, rotate the button (without pressing it) inside the door clockwise until the groove is horizontal.

If necessary use a coin. To disable this device and restore the possibility of closing the door, rotate the button anti-clockwise until the groove is vertical. P1131 5 The Control Panel Programme Whites Whites + Economy Fast Coloureds Colour care Synthetics Synthetics Synthetics Delicates Delicates 95° 60°+E 60° 40° 60° 50° 40° 40° 30° ZWF 1415 W Wool Wool Cold Miniprogram Rinses Drain Spin Off 30° 30°/30 O Options Prewash Super Rinse Half Load Start/ Pause Prewashing/ Washing Rinses Spinning Drain AQUAC YCLE ESSENTIAL 1400 End 1 Programme Option buttons 234567 3 "Prewash" button 8 1 Detergent dispenser drawer Depending on the programme, different functions can be combined. These must be selected after choosing the desired programme and before depressing the Start/Pause button. When these buttons are pressed, the corresponding pilot lights come on. When they are pressed again, the pilot lights go out. If an incorrect option is selected, the corresponding pilot light flashes for about 2 seconds. Select this option if you wish your laundry to be prewashed before the main wash (not available for Wool programmes and Miniprogram). The prewash ends with a short spin in programmes for cotton and synthetics/mixed fabrics, whereas in the programme for delicate fabrics the water is only drained. 4 "Super Rinse" button This option can be selected with all programmes except the Wool programmes and Miniprogram .

The machine will perform 2 additional rinses. This option is recommended for people who are allergic to detergents, and in areas where the water is very soft.

2 "Options" button By depressing this button you can reduce the final and the intermediate spin speeds or select the Rinse Hold (anti-crease) option. The corresponding pilot light comes on. : by selecting this option the speed will be reduced as follows: Cotton: from 1400 to 650 r.p.m. Synthetics/Mixed fabrics and Wool: from 900 to 450 r.p.m.

Delicates and Miniprogram : from 700 to 450 r.p.m. : by selecting this option the water of the last rinse is not emptied out to prevent the fabrics from creasing. When the programme has finished the phase light End is on and the door is blocked to indicate that the water must be emptied out. To do this: turn the programme selector dial to "O" select the drain or spin programme. The machine will perform the spin at the maximal speed .You can reduce the speed by means of the same button to adapt it to the fabrics to be spun. depress Start/Pause button. 6 5 "Half Load" button Select this button to reduce water consumption on the rinse cycle when washing a smaller load of laundry (maximum load size for cotton = 2.

5 kg). The machine will perform 2 rinses instead of 3. 6 Start Pause button After having selected the required programme, press this button to flash. The pilot lights corresponding to the various phases making up the programme come on. Programme 95 60E O SP EC 60 40 50H E T I C T C O 60 T 0 SYN T O N I A L I. Load the laundry Open the door by carefully pulling the door handle outwards. Place the laundry in the drum, one item at a time, shaking them out as much as possible. Close the door. 4. Select the spin reduction or option (Rinse Hold) Press the option button repeatedly, to select the desired option.

The relevant light illuminates. Options P0004 2. Measure out the detergent and the fabric softener Pull out the dispenser drawer until it stops. Measure out the amount of detergent required, pour it into the main wash compartment and, if you wish to carry out the prewash phase, pour it into the compartment marked . If required, pour fabric softener into the compartment marked (the amount used must not exceed the "MAX" mark in the drawer).

Close the drawer gently. 5. Select the required option(s) Select "Prewash" or "Super Rinse" option if required, the corresponding light illuminates. Prewash Super Rinse C0070 C0071 8 W OO 30 40 30 D E L I C A T E 4 L Half Load 6. Start the programme repeatedly, to select the desired option.

The relevant light illuminates. C0070 3. Measure out the fabric softener If required, pour fabric softener into the compartment marked (the amount used must not exceed the "MAX" mark in the drawer). Options 10 SPECIAL 6. Select the required option(s) Select "Prewash" or "Super Rinse" option if required, the corresponding light illuminates. 8. At the end of the programme The machine stops automatically. If the Rinse Hold option has been selected, the "End" phase light is on, the Start/Pause light is off and the door is blocked to indicate that the water must be emptied out before opening the door. To do this first turn the programme selector dial to "O" and then to drain programme or spin programme . The spin programme is performed at the maximum speed.

In order to avoid any creasing in synthetic, delicate and wool items, the spin reduction option must be selected. At the end of the programme, the door can then now be opened. Release of the lock is also indicated by the illumination of the "End" light and the extinction of the Start/Pause button light. Turn the programme selector dial to "O" to switch the machine off. Remove the laundry from the drum and carefully check that the drum is empty. If you do not intend to carry out another wash, close the water tap. Leave the door open to prevent the formation of mildew and unpleasant smells. Prewash Super Rinse Half Load 7. Start the machine Before starting up the machine check that: the appliance is plugged in the water supply tap is turned on the drain hose is correctly and securely positioned the door and the detergent dispenser drawer are closed.



[You're reading an excerpt. Click here to read official ZANUSSI](#)

[ZWF1415W user guide](#)

<http://yourpdfguides.com/dref/955509>

To start the selected programme, press the Start/Pause button; the corresponding light stops flashing.

The "Prewashing/Washing" pilot light illuminates. The machine starts operating. 11 Washing Hints Do NOT overload the machine. Weigh the laundry the first few times you use the appliance. The average weights of the most common items are listed below as a guide: 1000g = 1 kg Sheet Pillow case Tablecloth Serviette Tea towel Linen hand towel Towelling hand towel Towelling bath towel Bath robe Man's shirt Apron 700-1000 g 100-200 g 400-500 g 50-100 g 70-120 g 100-150 g 150-250 g 700-1000 g 1000-1500 g 200-300 g 150-200 g For wool, use gentle detergent only in small quantities.

Bleach is very corrosive; it should be used with care and kept out of reach of children. Some stains such as fruit, wine, grass, rust etc. are difficult to remove and should be treated before washing with specific products, which can be found in most household shops. In some cases it may help to soak the stain before washing with a special presoak product or biological detergent. Only wool marked "Pure New Wool - washable, preshrunk" can be washed in the machine using the wool programme; other types of wool should be washed in WOOL programme.

If you have used the machine to wash, rinse or spin only non-colour fast garments, there may be dye left in the sump. To ensure any subsequent wash is not contaminated with the dye, select and carry out a rinse and spin programme, without any garments, to ensure that any dye is removed from the sump. Once you have finished using the machine, you are advised to unplug it and turn off the water tap. Load the laundry loosely alternating large items with small ones.

Sort the laundry according to the type of fabric, colour-fastness and how dirty it is. Avoid washing unhemmed or torn items as they may unravel. Before washing, empty all pockets of small objects which may have been left inside (coins, keys, screws etc.) as these could damage the drain pump. When washing curtains, remove the hooks. Close poppers and zips and fasten loose buttons.

It is essential to wash new coloured items separately when washing for the first time. When washing fabrics requiring different wash temperatures together, always select the lowest temperature. White items should not be washed with coloured items. Very small items (handkerchiefs, ribbons, socks etc) should be washed in a washing bag or a pillow case. Use a good quality detergent suitable for automatic washing machines. Use the correct quantities of detergent. 12

Which detergent?....

To ensure you obtain the best wash results from your appliance, it is important to use the right detergent in your everyday wash, and only detergents recommended for use in automatic machines. To maintain the appearance of your clothes and household textiles and to make them last longer you should use different types of detergent for different washes, whether for whites, colours or delicates. And in which form? Not only are there different types of detergent, but they are also available in different forms. Whether you chose a powder or liquid in traditional or compact form is your own personal choice.

TRADITIONAL POWDERS Pour the powder directly into the dispenser drawer.

Do not sprinkle powder onto clothes in the machine drum. WHITES We recommend the Ariel product range which is biological and designed to provide excellent cleaning and stain removal even at low temperatures. TRADITIONAL LIQUIDS Liquid can be placed in the main wash compartment of the detergent drawer marked with the symbol , start the machine immediately upon placing the detergent in the dispenser drawer. Alternatively the detergent is measured into the specially designed dosing device* which should be placed on top of the laundry, and at the back of the machine drum. NON BIOLOGICAL

If you prefer to use a non biological detergent, which does not contain enzymes we recommend Fairy.

Fairy provides good cleaning and stain removal. COMPACT POWDERS AND LIQUIDS Compact detergents (or concentrates as they are also known) are available in liquid or powder form, and generally require a smaller dosage. Follow the manufacturer's instructions to ensure the most economical usage.

@@@Bounce conditioning sheets for use in a tumble dryer. @@@@Cotton, Linen or Viscose Colourfast at 40°C but not 60°C. Acrylics, Acetate, Triacetate, Wool mixes, Polyester/wool blends. @@@@Once the dispenser has been filled, close it by pushing it in gently. @@Progr. @@@@The programme times are intended as a guide only. @@@@load Progr.

@@@This will help to prevent the formation of lime deposits. C0072 C0073 Cleaning the drawer recess Having removed the drawer, use a small brush to clean the recess, ensuring that all washing powder residue is removed from the upper and lower part of the recess. Replace the drawer and run the rinse programme without any clothes in the drum. After each wash Leave the door open for a while. This helps to prevent mould and stagnant smells forming inside the appliance. Keeping the door open after a wash will also help to preserve the door seal. Maintenance Wash With the use of low temperature washes it is possible to get a build up of residues inside the drum. We recommend that a maintenance wash be performed on a regular basis. To run a maintenance wash: The drum should be empty of laundry. Select the hottest cotton wash programme.

Use a normal measure of detergent, must be a powder (such as Ariel Futur). P0038 Cleaning the pump The pump should be inspected if · the machine does not empty and/or spin · the machine makes an unusual noise during draining due to objects such as safety pins, coins etc. blocking the pump. Proceed as follows: · Disconnect the appliance. · If necessary wait until the water has cooled down.

· Open the pump door. External cleaning Clean the exterior cabinet of the appliance with mild washing up liquid and water only, and then dry thoroughly. Cleaning the dispenser drawer The washing powder and additive dispenser drawer should be cleaned regularly. Remove the drawer by pressing the catch downwards and by pulling it out. Flush it out under a tap, to remove any traces of accumulated powder.

To aid cleaning, the top part of the additive compartment should be removed. P1114 · Place a container close to the pump to collect any spillage. · Pull out the emergency emptying hose, place it in the container and remove its cap. 17 · When no more water comes out, unscrew the pump cover and remove it. Always keep a rag nearby to dry up spillage of water when removing the cover. Clean the filter using a hard bristle brush. Tighten up the inlet hose. P1115 P1090 · Remove any objects from the pump impeller by The dangers of freezing If the machine is exposed to temperatures below 0°C, certain precautions should be taken.



[You're reading an excerpt. Click here to read official ZANUSSI](#)

[ZWF1415W user guide](#)

<http://yourpdfguides.com/dref/955509>

Turn off the water tap. Unscrew the inlet hose.

Place the end of the emergency emptying hose and that of the inlet hose in a bowl placed on the floor and let water drain out. Screw the water inlet hose back on and reposition the emergency emptying hose after having put the cap on again. When you intend to start the machine again, make sure that the room temperature is above 0°C. Important! rotating it. Put the cap back on the emergency emptying hose and place the latter back in its seat. P1117 Every time you drain the water through the emergency emptying hose you must pour 2 litres of water into the main wash compartment of the detergent drawer and then run the drain programme. This will activate the ECO valve and avoid the detergent remains being wasted. Screw the pump cover fully in. Close the pump door. Emergency emptying out If the water is not discharged, proceed as follows to empty out the machine: pull out the plug from the power socket; close the water tap; if necessary, wait until the water has cooled down; open the pump door; place a bowl on the floor and place the end of the emergency emptying hose into the bowl.

Remove its cap. The water should drain by gravity into the bowl. When the bowl is full, put the cap back on the hose. Empty the bowl. Repeat the procedure until water stops flowing out; clean the pump if necessary as previously described; replace the emergency emptying hose in its seat after having plugged it; screw the pump cover again and close the door.

18 Warning When the appliance is in use and depending on the programme selected there can be hot water in the pump. Never remove the pump cover during a wash cycle, always wait until the appliance has finished the cycle, and is empty. When replacing the cover, ensure it is securely retightened so as to stop leaks and young children being able to remove it. Cleaning the water inlet filter If your water is very hard or contains traces of lime deposit, the water inlet filter may become clogged. It is therefore a good idea to clean it from time to time.

Turn off the water tap. Unscrew the water inlet hose. Something Not Working Certain problems are due to lack of simple maintenance or oversights, which can be solved easily without calling out an engineer. Before contacting your local Service Force Centre, please carry out the checks listed below.

@@@The plug is not properly inserted in the power socket. @@@Ensure the water tap is open. The filter in the inlet hose is blocked. The inlet hose may be squashed or kinked. The door has not been closed. The end of the drain hose is too low.

The end of the drain hose is submerged in water. There is no vent in the end of the drain hose. The drain hose may be squashed or kinked. The option has been selected. The drain pump may be blocked. The drain hose extension, if fitted, is not correct. Follow the instructions for connecting to the waste. The drainage system pipes are blocked. @@@@The drain hose may be damaged or not securely positioned. The detergent dispenser drawer or recess is clogged. The drainage system pipes are blocked. @@Too little detergent or unsuitable detergent has been used. An insufficient amount of detergent leaves the laundry looking grey and causes lime scale to form. Stubborn stains have not been treated prior to washing The correct wash programme has not been selected. Too much laundry has been placed in the drum.

19 The machine does not fill The machine fills then empties immediately The machine does not empty and/or does not spin There is water on the floor Unsatisfactory washing results Symptom The machine vibrates when spinning Possible causes The machine is in contact with the wall or furniture. The machine is not stable and level (check diagonally). The washing load is badly distributed in the drum. Maybe there is very little laundry in the drum. The programme is still running.

The door lock has not yet released. Water in the tub: the door cannot be opened if water is present in the tub. The electronic unbalance detection device has cut in because the laundry is not evenly distributed in the drum. The laundry is redistributed by reverse rotation of the drum. This may happen several times before the unbalance disappears and normal spinning can resume. If, after 10 minutes, the laundry is still not evenly distributed in the drum, the machine will not spin. In this case, redistribute the load manually and reselect the spin programme. The machine is fitted with a type of motor which makes an unusual noise compared with other traditional motors. This new motor ensures a softer start and more even distribution of the laundry in the drum when spinning, as well as increased stability of the machine. Machines based on modern technology operate very economically using very little water without affecting performance.

The door will not open Spinning starts late or the machine does not spin The machine makes an unusual noise No water is visible in the drum Service & Spare Parts In the event of your appliance requiring service, or if you wish to purchase spare parts, please contact your local Service Force Centre by telephoning: 0870 5 929929 Your telephone call will be automatically routed to the Service Force Centre covering your post code area. For the address of your local Service Force Centre and further information about Service Force, please visit the website at www.serviceforce.co.uk. For Customer Service in Ireland please contact us at the address below: Zanussi Electrolux - Electrolux Group (Irl) Ltd Long Mile Road - Dublin 12 Republic of Ireland Tel: +353 (0)1 4090751 Email: service.eid@electrolux.ie To buy accessories, consumables and spare parts at our online shop please visit: <http://www.zanussielectrolux.co.uk> 20 Before calling out an engineer, please ensure you have read the details under the heading "Something Not Working". When you contact the Service Force Centre you will need to give the following details: 1. Your name, address and post code 2. Your telephone number 3. Clear and concise details of fault 4.

The model and serial number of the appliance (found on the rating plate - see picture) 5. The purchase date. Please note that a valid purchase receipt or guarantee documentation is required for in-guarantee service calls. Mo Pro d. .

.... d. No

.

.. Ser . No . .

....

... Mod.

.... Prod. No.

.....

.. P0042 BD Ser. No. .

..... Customer Care Department For general enquiries concerning your Zanussi Electrolux appliance or for further information on Zanussi Electrolux products, please contact our Customer Care Department by letter or telephone at the address below or visit our website at www.zanussi.co.uk

co.uk Customer Care Department - Zanussi Electrolux Major Appliances - Addington Way Luton - Bedfordshire LU4 9QQ Tel 08705 72727* * calls to this number may be recorded for training purposes.



[You're reading an excerpt. Click here to read official ZANUSSI
ZWF1415W user guide](http://yourpdfguides.com/dref/955509)
<http://yourpdfguides.com/dref/955509>

Guarantee Conditions Standard guarantee conditions We, Zanussi Electrolux, undertake that if, within 12 months of the date of the purchase, this ZANUSSI ELECTROLUX appliance or any part thereof is proved to be defective by reason only of faulty workmanship or materials, we will, at our option repair or replace the same FREE OF ANY CHARGE for labour, materials or carriage on condition that: The appliance has been correctly installed and used only on the electricity supply stated on the rating plate. The appliance has been used for normal domestic purposes only, and in accordance with the manufacturer's instructions. The appliance has not been serviced, maintained, repaired, taken apart or tampered with, by any person not authorised by us. All service work under this guarantee must be undertaken by a Service Force Centre. Any appliance or defective part replaced shall become the Company's property. This guarantee is in addition to your statutory and other legal rights. Home visits are made between 8.30am and 5.

30pm Monday to Friday. Visits may be available outside these hours in which case a premium will be charged. Appliances found to be in use within a commercial environment, plus those which are subject to rental agreements. Products of Zanussi Electrolux manufacture which are NOT marketed by Zanussi Electrolux. European guarantee If you should move to another country within Europe then your guarantee moves with you to your new home subject to the following qualifications: The guarantee starts from the date you first purchased your product.

The guarantee is for the same period and to the same extent for labour and parts as exists in the new country of use for this brand or range of products. The guarantee relates to you and cannot be transferred to another user. Your new home is within the European Community (EC) or European Free Trade Area.

The product is installed and used in accordance with our instructions and is only used domestically, i.e.

a normal household. The product is installed taking into account regulations in your new country. Before you move please contact your nearest Customer Care Centre, listed below, to give them details of your new home. They will then ensure that the local Service Organisation is aware of your move and able to look after you and your appliances. France Senlis +33 (0) 344 62 29 29 Germany Nurnberg +49 (0) 800 234 7378 Italy Pordenone +39 0434 39 4700 Sweden Stockholm +46 (0) 8 672 53 90 UK Luton +44(0) 8705 727 727 Ireland Dublin +353 (0) 1 4090751 21 Exclusions This guarantee does not cover: Damage or calls resulting from transportation, improper use or neglect, the replacement of any light bulbs or removable parts of glass or plastic. Costs incurred for calls to put right an appliance which is improperly installed or calls to appliances outside the United Kingdom. Installation Instructions @ @Care must be taken to ensure that the appliance does not stand on the electrical supply cable. Any electrical work required to install this appliance should be carried out by a qualified electrician or competent person. Any plumbing work required to install this appliance should be carried out by a qualified plumber or competent person. Should the appliance power supply cable need to be replaced, this should be carried out by our Service Force Centre.

Technical Specifications DIMENSIONS Height Width Depth 85.0 cm 60.0 cm 62.5 cm 230-240 V/50 Hz 2050 W (10 A) Minimum Maximum 800 kP8888888 0.05 MPa (0.5 bar) 0.80 MPa (8.0 bar) 5.0 kg 2.0 kg 2.

0 kg 1.0 kg 1400 rpm 0.95 kWh 56 litres 135 mins POWER SUPPLY VOLTAGE TOTAL POWER ABSORBED WATER PRESSURE MAX LOAD CAPACITY Cotton, linen Synthetics/Mixed fabrics Delicate fabrics/Miniprogram Wool Maximum Energy Water Time SPIN SPEED CONSUMPTION DATA FOR WASHING 5 kg NORMALLY SOILED COTTON ITEMS AT 60°C (PROGR. 60E) This appliance complies with the following E.E.

C. Directives: - 73/23 EEC of 19.2.73 (Low Voltage Directive) and subsequent modifications; - 89/336 EEC of 3.5.

89 (Electromagnetic Compatibility Directive) and subsequent modifications. 22 Unpacking The transport safeguard must be removed before putting the appliance into operation. Important ! You are advised to keep all the packaging for re-use in case the machine is to be transported again. After removing all the packaging, with assistance carefully lay machine on it's back to remove the polystyrene base from the bottom. Remove the power supply cable and the draining hose from the hose holders on the rear of the appliance. Fill the smaller upper hole and the two large ones with the corresponding plastic plug caps supplied in the bag containing the instruction booklet. HEC0005 HEC0009 Important! All the different plug caps are supplied with the appliance in the plastic bag containing the instruction booklet. Connect the water inlet hose as described under the paragraph "Water inlet". Positioning HEC0008 HEC0001 With a suitable spanner unscrew and remove the central rear bolt A. Slide out the relevant plastic spacer.

Unscrew and remove the two large rear bolts B and the six smaller bolts C. A C C B DB HEC0002 HEC0003 Remove the bracket D and tighten up the six smaller bolts C. Open the porthole and remove the polystyrene block fitted with the adhesive tape on the door seal. Install the machine on a flat hard floor. Make sure that air circulation around the machine is not impeded by carpets, rugs etc. Check that the machine does not touch the wall or other kitchen units. Never place cardboard, wood or similar materials under the machine to compensate for any unevenness in the floor. Your new washing machine has been designed to be permanently plumbed in to your home's water supply and drainage system. However, if this is not possible, it may be connected to suitable existing tap with the drain hose discharging into a sink. The appliance has one inlet hose, with female 3/4" BSP thread connector.

If this connection is not compatible with the plumbing of the existing installation, a variety of connectors are available from good hardware stores and plumbers merchants to suit most domestic plumbing. Any alteration to your existing plumbing must be carried out by a competent person, or qualified plumber. Installation on a Suspended Floor Suspended wooden floors are particularly susceptible to vibration. To help prevent vibration we recommend you place a waterproof wood panel, at least 15 mm thick under the appliance, secured to at least 2 floor beams with screws. If possible install the appliance in one of the corners of the room, where the floor is more stable.

HEC0011 HEC0010 23 Water inlet An inlet hose is supplied and can be found inside the machine drum. Do not use the hose from your previous machine to connect to the water supply. 1. Open the porthole and extract the inlet hose . 2.

Connect the hose with the angled connection to the machine.



[You're reading an excerpt. Click here to read official ZANUSSI ZWF1415W user guide](http://yourpdfguides.com/dref/955509)
<http://yourpdfguides.com/dref/955509>

Important! Do not place the inlet hose downwards. Angle the hose to the left or right depending on the position of your water tap. Water drainage This appliance is designed to be permanently plumbed into your home's drainage system using one of the following methods. 1. Into a drainage standpipe. Firstly form a hook in the end of the drain hose using the "U" piece" supplied. U piece supplied P1199 HEC0006 Place the drain hose into your standpipe, which should have an internal diameter of approximately 38mm thus ensuring there is an air break between the drain hose and standpipe. 38 mm (1.2) standpipe diameter 30 cm (12") HEC0013 3.

Set the hose correctly by loosening the ring nut. After positioning the inlet hose, be sure to tighten the ring nut again to prevent leaks. 4. Connect the hose to a tap with a 3/4" thread. Always use the hose supplied with the appliance. When discharging into a standpipe ensure that the top of the standpipe is no more than 90cm (35.4") and no less than 60cm (23.6") above floor level. P1088 3 pin Installation should comply with local water authority and building regulations' requirements. The appliance must be connected to a cold water supply.

A minimum water pressure of 0.05 MPa (0.5 bar) is required for safe operation of the appliance. @@@@ @60 cm (23.6) Max. 90 cm (35.4) If your drain hose looks like this (see below) you do not require the "U" piece". Just push the hose firmly into the standpipe. Levelling Level the washing machine by raising or lowering the feet. The feet may be tight to adjust as they incorporate a self locking nut, but the machine MUST be level and stable.

If necessary, check the setting with a spirit level. P1212 2. Onto a sink outlet spigot. HEC007 If the outlet spigot has not been used before, remove any blanking plug that may be in place. Any necessary adjustment can be made with a spanner. @@@@ Sprung wooden floors are particularly susceptible to vibration. For advice, consult a builder. @@@@ The base should protrude a few centimetres beyond the edges of the machine. Warning The machine should NOT be placed on deep pile carpeting. Loop P1198 Important Note Please ensure that when the appliance is installed it is easily accessible for the engineer in the event of a breakdown.

Before connecting the machine to new pipework or to pipework that has not been used for some time, run off a reasonable amount of water to flush out any debris that may have collected in the pipes. For the correct functioning of the machine the drain hose must be hooked on the proper support piece situated on the top of the back side of the appliance. In the interest of the environment Washing machines and dishwashers should be connected to the FOUL drainage system, the water will then be taken to a sewage works for treatment before being discharged safely into a river. It is essential that these appliances are not connected to the surface water drainage system as this water is discharged directly into a river or stream and may cause pollution. 25 If you require any further advice please contact your local water authority. Should the plug need to be replaced for any reason, proceed as described below. The wires in the mains lead are coloured in accordance with the following code: Green and Yellow - Earth Blue - Neutral Brown - Live GREEN & YELLOW E 13 A SHOWER SINK BATH TOILET BIDET WASHING MACHINE RAINWATER 'RUN-OFF' DISHWASHER N L BROWN FOUL DRAIN SURFACE WATER DRAINS & SEWERS FOUL SEWERS SEWAGE TREATMENT WORKS TREATED DISCHARGE BLUE P1041 CORD CLAMP UNTREATED DISCHARGE RIVER RIVER P0987 Electrical connection Any electrical work required to install this appliance should be carried out by a qualified electrician or competent person. WARNING: THIS APPLIANCE MUST BE EARTHED. The manufacturer declines any liability should this safety measure not be observed. Before switching on, make sure the electricity supply voltage is the same as that indicated on the appliance's rating plate.

The rating plate is located at the bottom of the rim of the open door. The wire coloured green and yellow must be connected to the terminal marked with the letter «E» or by the earth symbol or coloured green and yellow. The wire coloured blue must be connected to the terminal marked «N» or coloured black. The wire coloured brown must be connected to the terminal marked «L» or coloured red. Upon completion there must be no cut, or stray strands of wire present and the cord clamp must be secure over the outer sheath.

WARNING: A cut off plug inserted into a 13 amp socket is a serious safety (shock) hazard. Ensure that the cut off plug is disposed of safely. Should the appliance power supply cable need to be replaced, this must be carried out by our Service Force Centre. Note When the appliance is installed the power supply cable must be accessible. Permanent connection In the case of permanent connection it is necessary that you install a double pole switch between the appliance and the electricity supply (mains), with a minimum gap of 3mm between the switch contacts and of a type suitable for the required load in compliance with the current electrical regulations.

The switch must not break the yellow and green earth cable at any point. 26 Mo Pro d. d. No ..

.....

.....

Ser. No.

.. Mod. ...

..... Prod. No. .

.....

.....

P0042 BD Ser. No.

. The appliance is supplied with a 13amp plug fitted. In the event of having to change the fuse in the plug supplied, a 13amp ASTA approved (BS1363/A) fuse must be used. From the Electrolux Group. The world's No. 1 choice. The Electrolux Group is the world's largest producer of powered appliances for kitchen, cleaning and outdoor use. More than 55 million Electrolux Group products (such as refrigerators, cookers, washing machines, vacuum cleaners, chain saws and lawn mowers) are sold each year to a value of approx. USD 14 billion in more than 150 countries around the world. © Electrolux plc 2006 .



[You're reading an excerpt. Click here to read official ZANUSSI](#)

[ZWF1415W user guide](#)

<http://yourpdfguides.com/dref/955509>