



# Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for ZANUSSI ZWF1421W. You'll find the answers to all your questions on the ZANUSSI ZWF1421W in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

**User manual ZANUSSI ZWF1421W**  
**User guide ZANUSSI ZWF1421W**  
**Operating instructions ZANUSSI ZWF1421W**  
**Instructions for use ZANUSSI ZWF1421W**  
**Instruction manual ZANUSSI ZWF1421W**



[You're reading an excerpt. Click here to read official ZANUSSI ZWF1421W user guide](http://yourpdfguides.com/dref/955515)  
<http://yourpdfguides.com/dref/955515>

**Manual abstract:**

@@Care should be taken when moving it. @@All packing and transit bolts must be removed before use. Serious damage can occur to the product and to property if this is not adhered to. See relevant section in instructions. Any plumbing work required to install this appliance should be carried out by a qualified plumber or competent person. Any electrical work required to install this appliance should be carried out by a qualified electrician or competent person. Care must be taken to ensure that the appliance does not stand on the electrical supply cable. @@@@Pets and children have been known to climb into washing machines. Please check your drum before use. The glass door becomes very hot during the washing cycle.

@@Keep all packaging well away from children. @@Do not overload the appliance. See relevant section in the instruction book. 2 Always look through the glass door to check if water has drained before opening the door. The user should always check that they have not left their gas lighter (disposable or otherwise) in their clothing.

Only wash fabrics which are designed to be machine washed. If in doubt, consult the care label on the clothes. Before washing, ensure that all pockets are empty and buttons and zips are fastened. Avoid washing frayed or torn articles and treat stains such as paint, ink, rust, and grass before washing. Underwired bras must NOT be machine washed.

Any objects such as coins, safety pins, nails, screws, stones or any other hard, sharp material can cause extensive damage and must not be placed into the machine. Garments which have been in contact with volatile petroleum products should not be machine washed. If volatile cleaning fluids are used, care should be taken to ensure that the fluid is removed from the garment before placing in the machine. Wash small items such as socks, laces, washable belts etc in a washing bag or pillow case as it is possible for such items to slip down between the tub and the inner drum. Only use the advised quantities of fabric softener. Damage to the fabric can ensue if you over-fill. Refer to the manufacturer's recommendations of quantities. As some duvets and eiderdowns should be washed in large commercial machines because of their bulk, please check with the manufacturer of the item before washing in a domestic machine. Leave the porthole door slightly ajar between washes to preserve the door seal. Under no circumstances should you attempt to repair the machine yourself.

Repairs carried out by inexperienced persons may cause injury or serious malfunctioning. Contact your local Service Force Centre. Always insist on genuine Zanussi spare parts. 35.293.010....ZWF1421.

qxd 04/10/2005 12:18 Página 3 Contents For the User Important Safety Information Your New Washing Machine Description of the Appliance Detergent dispenser drawer 2 4 5 5 6-7 8 9-12 9 9 9 9 10 10 10 10 10 10 10 11 11 11 11 11 11 11 12 Washing Hints Which detergent?... And in which form? 13-14 14 14 15 16-17 18-19 18 18 18 18 18 18 18-19 19 19 19 20-21 21 22 Wash Care Symbols Washing Programmes Maintenance and Cleaning Descaling After each wash Maintenance Wash External cleaning Cleaning the dispenser drawer Cleaning the drawer recess Cleaning the pump Cleaning the water inlet filter The dangers of freezing Emergency emptying out The Control Panel Programme information Operating Sequence Washing 5 kg of white cotton at 90°C Load the laundry Measure out the detergent and the fabric softener Select the required programme Select the spin speed or option "RINSE HOLD" or "NO SPIN" Select the required option Select the delay start Start the machine Altering a programme Interrupting a programme Cancelling a programme Opening the door after the programme has started At the end of the programme Washing 2.

5 kg of mixed fabrics at 40°C Load the laundry Measure out the detergent and the fabric softener Select the required programme Select the spin speed or option "RINSE HOLD" or "NO SPIN" Select the required option(s) Start the machine At the end of the programme Something Not Working Service and Spare Parts Guarantee Conditions For the Installer Installation Instructions Technical Specifications Unpacking Positioning Water inlet Water drainage Levelling Special conditions In the interest of the environment Electrical connection 23 23 24 24 24-25 25-26 26 26 26-27 27 Guide to use the Instruction Book The following symbols will be found in the text to guide you throughout the instructions: Safety instructions Hints and tips Environmental information 3 35.293.010...

.ZWF1421.qxd 04/10/2005 12:18 Página 4 Your New Washing Machine Your new washing machine meets all modern requirements for effective treatment of laundry with low water, energy and detergent consumption. q q q q The programme selector dial combines the function of programme and temperature selection, making it easier to set the programme. The programme progress display shows the delay start, the functioning of the machine and the end of the programme. The special wool programme with its new delicate wash system treats your woollens with extreme care. The ECO VALVE allows total use of detergent and reduces water consumption so saving energy. In the interest of the environment q q q Ecological hints To save water and energy and help protect the environment, we recommend that you follow these hints: q Adjust the quantity of detergent according to the hardness of your water supply, the amount of laundry and the degree of soiling. q A programme without prewash is sufficient for normally soiled laundry. q The machine works more economically if it is fully loaded.

q With adequate pre-treatment, stains and limited soiling can be removed; the laundry can then be washed at a lower temperature, so saving energy. q Materials marked with the symbol are recyclable. Check with your local Council or Environmental Health Office to see if there are facilities in your area for re-cycling this appliance. When the appliance is to be scrapped, cut off the power supply cable and make the door lock device unusable to prevent young children from being trapped inside. Help to keep your country tidy - use authorised disposal sites for your old appliance. The symbol on the product or on its packaging indicates that this product may not be treated as household waste. Instead it shall be handed over to the applicable collection point for the recycling of electrical and electronic equipment. By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling of this product. For more detailed information about recycling of this product, please contact your local city office, your household waste disposal service or the shop where you purchased the product. How do we help to protect the environment? We use recycled paper! Important Your machine is fitted with a balance control device, which ensures the machine is stable during the spin.



[You're reading an excerpt. Click here to read official ZANUSSI](#)

[ZWF1421W user guide](#)

<http://yourpdfguides.com/dref/955515>

If the wash load appears not to have been spun sufficiently at the end of the wash cycle, because it is not evenly distributed in the drum, the balance control device may have operated. It will therefore be necessary to redistribute the wash load manually and select a spin programme. For more detailed information see the section headed "Something Not Working". 4 35.293.

010....ZWF1421.

qxd 04/10/2005 12:18 Página 5 Description of the Appliance 1 Detergent dispenser drawer 2 Programme guide 3 Control panel 4 Door opening handle 5 Drain pump 6 Adjustable feet Detergent dispenser drawer Prewash Main wash Fabric softener C0069 5 35.293.010....ZWF1421.qxd 04/10/2005 12:18  
Página 6 The Control Panel 1 Detergent dispenser drawer Programme Option buttons Depending on the programme, different functions can be combined. These must be selected after choosing the desired programme and before depressing the Start/Pause button. When these buttons are pressed, the corresponding pilot lights come on.

When they are pressed again, the pilot lights go out. If an incorrect option is selected, the corresponding pilot light flashes for about 2 seconds. The prewash ends with a short spin in programmes for cotton and synthetic fabrics, whereas in the programme for delicate fabrics the water is only drained. 3 "Half Load" button Select this button to reduce water consumption on the rinse phase when washing a smaller load of cottons or linens (maximum load size = 2.5 kg). The machine will perform 2 rinses instead of 3. This function is not available on all programmes. If the corresponding pilot light flashes, this indicates that this option is not available. 2 "Options" button By depressing this button you can select two different options: q DAILY: to be used for lightly soiled cotton or synthetic items in order to obtain good washing performance in a short time. QUICK: a very short cycle for cotton, synthetic or delicate items that have been used or worn for a short time.

These options cannot be used with the Economy programme 60E and E40. The light corresponding to the selected option illuminates. If an option is chosen that is not allowed with the selected programme, both lights will flash 3 times. Max. recommended load 3.

5 kg. q 5 "Start / Pause" button After having selected the required programme, press this button to start the machine; the corresponding pilot light stops flashing. To interrupt a programme which is running, depress the Start/Pause button: the corresponding pilot light starts to flash. To restart the programme from the point at which it was interrupted, press the Start/Pause button again. 6 "Delay Start" button This button makes it possible to delay the starting of the washing programme by 12, 8, 4 and 2 hours.

The delay you have selected is indicated by the illumination of the corresponding light. The machine begins the countdown after depressing START/PAUSE button. You must select this option after you have set the programme and before you press the Start/Pause button. You can cancel the delay time at any moment, before you press the Start/Pause button. If you have already pressed the Start/Pause button, and you wish to cancel the delay time, proceed as follows: 6 2 "Prewash" button Select this option if you wish your laundry to be prewashed before the main wash (not available for wool, handwash and Miniprogram). 35.293.010...

.ZWF1421.qxd 04/10/2005 12:18 Página 7 · set the washing machine to PAUSE by pressing the Start/Pause button; · press the Delay Start button once, the light relevant to the selected delay goes off. · press the Start/Pause button again to start the programme. Important! The selected delay can be changed only after selecting the washing programme again. q The door will be locked throughout the delay time. If you need to open the door, you must first set the washing machine to PAUSE by pressing the Start/Pause button. Wait 2 or 3 minutes before opening the door. After you have closed the door, press the Start/Pause button again. q The delay start can not be selected with Spin Drain programmes. and 7 Programme progress display When you choose the delayed start, ton. 8 35.293.010..

..ZWF1421.qxd 04/10/2005 12:18 Página 9 Operating Sequence Before the first wash, we recommend that you pour 2 litres of water into the main wash compartment of the detergent drawer in order to activate the ECO valve. Then run a cotton cycle at 90°C, without any laundry in the machine, to remove any manufacturing residue from the drum and tub.

Pour 1/2 a measure of detergent into the dispenser drawer and start the machine. WASHING 5 KG OF WHITE COTTON AT 90°C Suppose you have 5 kg of heavy soiled laundry to wash. It is white cotton and is suitable for high temperature washing. 3. Select the required programme Turn the programme selector dial to the 90°C programme. The light Start/Pause starts to flash. The pilot lights corresponding to the various phases making up the programme co 35.293.010..

..ZWF1421.qxd 04/10/2005 12:19 Página 11 WASHING 2.5 KG OF MIXED FABRICS AT 40°C Suppose you have 2.5 kg of lightly soiled mixed fabrics to wash. They are rather delicate fabrics and should not be washed at a high temperature. 4. Select the required programme Turn the programme selector dial to the 40 programme in SYNTHETIC sector. The Start/Pause light starts to flash.

The pilot lights corresponding to the various phases making up the programme come on. 1. Load the laundry Open the door by carefully pulling the door handle outwards. Place the laundry in the drum, one item at a time, shaking them out as much as possible. Close the door. P0004 2. Measure out the detergent Pull out the dispenser drawer until it stops. Measure out the amount of detergent required and pour it into the main wash compartment. If you wish to carry out the prewash phase, pour the detergent into the compartment marked . 5. Select the spin speed or option RINSE HOLD or NO SPIN Turn the selector dial to the required position. 6. Select the required option(s) C0064 Select Daily, Quick Wash or Prewash or if required, the corresponding light illuminates. 3. Measure out the fabric softener If required, pour fabric softener into the compartment marked (the amount used must not exceed the "MAX" mark in the drawer). Close the drawer gently. Options Prewash Half Load C0065 11 35.293.010..

..ZWF1421.qxd 04/10/2005 12:19 Página 12 7. Start the machine Before starting up the machine check that: q the appliance is plugged in q the water supply tap is turned on q the drain hose is correctly and securely positioned q the door and the detergent dispenser drawer are closed. To start the selected programme, press the Start/Pause button; the corresponding light stops flashing. The Washing pilot light illuminates. The machine starts operating. 8. At the end of the programme The machine stops automatically.



[You're reading an excerpt. Click here to read official ZANUSSI ZWF1421W user guide](http://yourpdfguides.com/dref/955515)  
<http://yourpdfguides.com/dref/955515>

If the RINSE HOLD option has been selected, the phase light "End" is on to indicate that the water must be emptied out before opening the door. To do this first turn the programme selector dial to "O" and then to drain programme or spin programme. Reduce the spin speed if needed, by using the spin speed selector dial. Release of the lock is also indicated by the illumination of the "End" light. Turn the programme selector dial to "O" to switch the machine off. Remove the laundry from the drum and carefully check that the drum is empty. If you do not intend to carry out another wash, close the water tap. Leave the door open to prevent the formation of mildew and unpleasant smells. Start/ Pause 12 35.293.

010....ZWF1421.qxd 04/10/2005 12:19 Página 13 Washing Hints Do NOT overload the machine. Weigh the laundry the first few times you use the appliance. The average weights of the most common items are listed below as a guide: 1000g = 1 kg Sheet Pillow case Tablecloth Serviette Tea towel Linen hand towel Towelling hand towel Towelling bath towel Bath robe Man's shirt Apron 700-1000 g 100-200 g 400-500 g 50-100 g 70-120 g 100-150 g 150-250 g 700-1000 g 1000-1500 g 200-300 g 150-200 g q q q q q q q q q q q q q q q q q q Load the laundry loosely alternating large items with small ones. Sort the laundry according to the type of fabric, colour-fastness and how dirty it is. Avoid washing unhemmed or torn items as they may unravel.

Before washing, empty all pockets of small objects which may have been left inside (coins, keys, screws etc.) as these could damage the drain pump. When washing curtains, remove the hooks. Close poppers and zips and fasten loose buttons. It is essential to wash new coloured items separately when washing for the first time. When washing fabrics requiring different wash temperatures together, always select the lowest temperature. White items should not be washed with coloured items. q Very small items (handkerchiefs, ribbons, socks etc) should be washed in a washing bag or a pillow case. Use a good quality detergent suitable for automatic washing machines. Use the correct quantities of detergent.

For wool, use gentle detergent only in small quantities. Bleach is very corrosive; it should be used with care and kept out of reach of children. Some stains such as fruit, wine, grass, rust etc. are difficult to remove and should be treated before washing with specific products, which can be found in most household shops. In some cases it may help to soak the stain before washing with a special presoak product or biological detergent.

@@@Bounce conditioning sheets for use in a tumble dryer.

@@@Cotton, Linen or Viscose Colourfast at 40°C but not 60°C. Acrylics, Acetate, Triacetate, Wool mixes, Polyester/wool blends.

@@@Once the dispenser has been filled, close it by pushing it in gently. @@Progr.

@@@The programme times are intended as a guide only. @@Progr. @@Special short programme for lightly soiled synthetic or mixed fabrics

Separate rinse cycle for hand washed items of all fabric For emptying out the last rinse water in programmes with the Rinse Hold option. Separate spin for all fabric For cancelling the wash programme which is running and for switching the machine off 40 - Wash at 40 °C(cold) 3 rinses Short spin Spin / Rinse Hold/

No Spin Half Load 2 kg 55 Miniprogram Wash at 30 °C 2 rinses Short spin Spin / Rinse Hold/ No Spin 2 kg 30 Rinses 3 rinses Short spin Spin / Rinse Hold/ No Spin 6 kg 30 Drain Draining of water - 2 Spin Long or short \* spin Spin 6 kg 10/6 O \* If the spin speed selector dial is on positions 1400 or 900 r.p.m. the machine performs a long spin. On positions 700 or 500 r.p.m.

the machine performs a short spin. 17 35.293.010....ZWF1421.qxd 04/10/2005 12:19 Página 18 Maintenance and Cleaning Before any maintenance or cleaning is carried out you must DISCONNECT the appliance from the electricity supply. Descaling The water we use normally contains lime.

It is a good idea to periodically use a water softening powder in the machine. Do this separately from any laundry washing, and according to the softening powder manufacturer's instructions. This will help to prevent the formation of lime deposits. C0072 C0073 Cleaning the drawer recess Having removed the drawer, use a small brush to clean the recess, ensuring that all washing powder residue is removed from the upper and lower part of the recess. Replace the drawer and run the rinse programme without any clothes in the drum.

After each wash Leave the door open for a while. This helps to prevent mould and stagnant smells forming inside the appliance. Keeping the door open after a wash will also help to preserve the door seal. Maintenance Wash With the use of low temperature washes it is possible to get a build up of residues inside the drum. We recommend that a maintenance wash be performed on a regular basis.

To run a maintenance wash: q The drum should be empty of laundry. q Select the hottest cotton wash programme. q Use a normal measure of detergent, must be a powder (such as Ariel Futur). P0038 Cleaning the pump The pump should be inspected if · the machine does not empty and/or spin · the machine makes an unusual noise during draining due to objects such as safety pins, coins etc. blocking the pump. Proceed as follows: · Disconnect the appliance. · If necessary wait until the water has cooled down. · Open the pump door. External cleaning Clean the exterior cabinet of the appliance with mild washing up liquid and water only, and then dry thoroughly. Cleaning the dispenser drawer The washing powder and additive dispenser drawer should be cleaned regularly.

Remove the drawer by pressing the catch downwards and by pulling it out. Flush it out under a tap, to remove any traces of accumulated powder. To aid cleaning, the top part of the additive compartment should be removed. P1114 · Place a container close to the pump to collect any spillage. 18 35.293.010.... ZWF1421.qxd 04/10/2005 12:19 Página 19 · When no more water comes out, unscrew the pump cover and remove it. Always keep a cloth nearby to dry up spillage of water when removing the cover. Clean the filter using a hard bristle brush. Tighten up the inlet hose.

P1090 P1115 · Remove any objects from the pump impeller by The dangers of freezing If the machine is exposed to temperatures below 0°C, certain precautions should be taken. q Turn off the water tap. q Unscrew the inlet hose. q Place the end of the emergency emptying hose and that of the inlet hose in a bowl placed on the floor and let water drain out. q Screw the water inlet hose back on and reposition the emergency emptying hose after having put the cap on again.

q When you intend to start the machine up again, make sure that the room temperature is above 0°C.



[You're reading an excerpt. Click here to read official ZANUSSI](http://yourpdfguides.com/dref/955515)

[ZWF1421W user guide](http://yourpdfguides.com/dref/955515)

<http://yourpdfguides.com/dref/955515>

*Important! rotating it. · Put the cap back on the emergency emptying hose and place the latter back in its seat. P1117 Every time you drain the water through the emergency emptying hose you must pour 2 litres of water into the main wash compartment of the detergent drawer and then run the drain programme. This will activate the ECO valve avoiding that part of the detergent remains unused at next washing. · Screw the pump cover fully in. · Close the pump door. Emergency emptying out If the water is not discharged, proceed as follows to empty out the machine: · pull out the plug from the power socket; · close the water tap; · if necessary, wait until the water has cooled down; · open the pump door; · place a bowl on the floor and place the end of the emergency emptying hose into the bowl. Remove its cap. The water should drain by gravity into the bowl.*

*When the bowl is full, put the cap back on the hose. Empty the bowl. Repeat the procedure until water stops flowing out; · clean the pump if necessary as previously described; · replace the emergency emptying hose in its seat after having plugged it; · screw the pump cover again and close the door. 19 Warning When the appliance is in use and depending on the programme selected there can be hot water in the pump. @@@@It is therefore a good idea to clean it from time to time. Turn off the water tap. @@@@The plug is not properly inserted in the power socket. @@@@The delay start has been selected. Ensure the water tap is open. The filter in the inlet hose is blocked.*

*The inlet hose may be squashed or kinked. The door has not been closed. The end of the drain hose is too low. The end of the drain hose is submerged in water. There is no vent in the end of the drain hose.*

*The drain hose may be squashed or kinked. The option RINSE HOLD or NO SPIN has been selected. The drain pump may be blocked. The drain hose extension, if fitted, is not correct. Follow the instructions for connecting to the waste.*

*The drainage system pipes are blocked. @@Too much detergent or unsuitable detergent has been used (creates too much foam). Check whether there are any leaks from one of the inlet hose fittings. It is not always easy to see this as the water runs down the hose; check to see if it is damp. The drain hose may be damaged or not securely positioned. The cap on the emergency emptying hose has not been replaced after cleaning the pump or not fully screwed up. The drainage system pipes are blocked. Too little detergent or unsuitable detergent has been used. An insufficient amount of detergent leaves the laundry looking grey and causes lime scale to form. Stubborn stains have not been treated prior to washing The correct wash programme has not been selected.*

*Too much laundry has been placed in the drum. 20 The machine does not fill q q q q The machine fills then empties immediately The machine does not empty and/or does not spin q q q q q q q q There is water on the floor q q q q Unsatisfactory washing results q q q q 35.293.010....ZWF1421.qxd 04/10/2005 12:19 Página 21 Symptom The machine vibrates when spinning Possible causes q q q q The internal packing has not been removed. The machine is in contact with the wall or furniture.*

*The machine is not stable and level (check diagonally). The washing load is badly distributed in the drum. Maybe there is very little laundry in the drum. The programme is still running. Water in the tub: the door cannot be opened if water is present in the tub.*

*The electronic unbalance detection device has cut in because the laundry is not evenly distributed in the drum. The laundry is redistributed by reverse rotation of the drum. This may happen several times before the unbalance disappears and normal spinning can resume. If, after 20 minutes, the laundry is still not evenly distributed in the drum, the machine will not spin. In this case, redistribute the load manually and reselect the spin programme.*

*The machine is fitted with a type of motor which makes an unusual noise compared with other traditional motors. This new motor ensures a softer start and more even distribution of the laundry in the drum when spinning, as well as increased stability of the machine. Machines based on modern technology operate very economically using very little water without affecting performance. The door will not open q q Spinning starts late or the machine does not spin q The machine makes an unusual noise q No water is visible in the drum q Service & Spare Parts In the event of your appliance requiring service, or if you wish to purchase spare parts, please contact your local Service Force Centre by telephoning: 0870 5 929929 Your telephone call will be automatically routed to the Service Force Centre covering your post code area. For the address of your local Service Force Centre and further information about Service Force, please visit the website at [www.serviceforce.co.uk](http://www.serviceforce.co.uk). For Customer Service in Ireland please contact us at the address below: Zanussi Electrolux Electrolux Group (Irl) Ltd Long Mile Road Dublin 12 Republic of Ireland Tel: +353 (0)1 4090751 Email: [service.eid@electrolux](mailto:service.eid@electrolux).*

*ie Before calling out an engineer, please ensure you have read the details under the heading "Something Not Working". When you contact the Service Force Centre you will need to give the following details: 1. Your name, address and post code 2. Your telephone number 3. Clear and concise details of fault 4. The model and serial number of the appliance (found on the rating plate - see picture) 5. The purchase date. Please note that a valid purchase receipt or guarantee documentation is required for inguarantee service calls. Mo Pro d. .*

*.....  
d. No. ...*

*· ..... ..*

*.. Ser . No. ....*

*... Mod. .*

*.....*

*.... Prod. No. ....*

*..... P0042 BD Ser. No. .*

*.....*

*... 21 35.293.*

*010....ZWF1421.qxd 04/10/2005 12:19 Página 22 Customer Care Department For general enquiries concerning your Zanussi Electrolux appliance or for further information on Zanussi Electrolux products, please contact our Customer Care Department by letter or telephone at the address below or visit our website at [www.zanussi.co.uk](http://www.zanussi.co.uk) Zanussi Electrolux Customer Care (Major Appliances) Addington Way Luton Bedfordshire LU4 9QQ Tel 08705 727727\* or visit our website at: [www.zanussi-electrolux](http://www.zanussi-electrolux).*

*co.uk \* calls to this number may be recorded for training purposes Guarantee Conditions Standard guarantee conditions We, Zanussi Electrolux, undertake that if, within 12 months of the date of the purchase, this ZANUSSI ELECTROLUX appliance or any part thereof is proved to be defective by reason only of faulty workmanship or materials, we will, at our option repair or replace the same FREE OF ANY CHARGE for labour, materials or carriage on condition that: q The appliance has been correctly installed and used only on the electricity supply stated on the rating plate. q The appliance has been used for normal domestic purposes only, and in accordance with the manufacturer's instructions.*



[You're reading an excerpt. Click here to read official ZANUSSI  
ZWF1421W user guide](http://yourpdfguides.com/dref/955515)  
<http://yourpdfguides.com/dref/955515>

*q The appliance has not been serviced, maintained, repaired, taken apart or tampered with, by any person not authorised by us. q All service work under this guarantee must be undertaken by a Service Force Centre. q Any appliance or defective part replaced shall become the Company's property. q This guarantee is in addition to your statutory and other legal rights. Home visits are made between 8.30am and 5.30pm Monday to Friday.*

*Visits may be available outside these hours in which case a premium will be charged. q q Appliances found to be in use within a commercial environment, plus those which are subject to rental agreements. Products of Zanussi Electrolux manufacture which are NOT marketed by Zanussi Electrolux. European guarantee If you should move to another country within Europe then your guarantee moves with you to your new home subject to the following qualifications: q The guarantee starts from the date you first purchased your product. q The guarantee is for the same period and to the same extent for labour and parts as exists in the new country of use for this brand or range of products.*

*q The guarantee relates to you and cannot be transferred to another user. q Your new home is within the European Community (EC) or European Free Trade Area. q The product is installed and used in accordance with our instructions and is only used domestically, i.e. a normal household.*

*q The product is installed taking into account regulations in your new country. Before you move please contact your nearest Customer Care Centre, listed below, to give them details of your new home. They will then ensure that the local Service Organisation is aware of your move and able to look after you and your appliances. France Germany Italy Sweden UK Ireland 22 Senlis Nurnberg Pordenone Stockholm Luton Dublin +33 (0)344 62 29 29 +49 (0)800 234 7378 +39 (0)432 394700 +46 (0)8 6725390 +44 (0)8705 727727 +353 (0)1 40907528 Exclusions This guarantee does not cover: q q Damage or calls resulting from transportation, improper use or neglect, the replacement of any light bulbs or removable parts of glass or plastic. Costs incurred for calls to put right an appliance which is improperly installed or calls to appliances outside the United Kingdom. 35.293.010...*

*.ZWF1421.qxd 04/10/2005 12:19 Página 23 Installation Instructions @@Care must be taken to ensure that the appliance does not stand on the electrical supply cable. Any electrical work required to install this appliance should be carried out by a qualified electrician or competent person. Any plumbing work required to install this appliance should be carried out by a qualified plumber or competent person. Should the appliance power supply cable need to be replaced, this should be carried out by our Service Force Centre. Technical Specifications DIMENSIONS Height Width Depth 85 cm 60 cm 60 cm 230-240 V/50 Hz 2100 W (10 A) Minimum Maximum Cotton, linen Synthetics Delicate fabrics Wool and Handwash Maximum Energy Water Times 0.05 MPa (0.5 bar) 800 kP88888888 0.80 MPa (8.*

*0 bar) 6.0 kg 2.5 kg 2.5 kg 2.0 kg 1400 rpm l.*

*14 kWh 54 litres 155 minutes POWER SUPPLY VOLTAGE TOTAL POWER ABSORBED WATER PRESSURE MAX LOAD CAPACITY SPIN SPEED CONSUMPTION DATA FOR WASHING 6 KG NORMALLY SOILED COTTON ITEMS AT 60°C (PROGR. 60E) This appliance complies with the following E.E.C. Directives: - 73/23 EEC of 19.*

*2.73 (Low Voltage Directive) and subsequent modifications; - 89/336 EEC of 3.5.89 (Electromagnetic Compatibility Directive) and subsequent modifications. 23 35.293.010....*

*ZWF1421.qxd 04/10/2005 12:19 Página 24 Unpacking All transit bolts and packing must be removed before using the appliance You are advised to keep all the packaging for re-use in case the appliance has to be transported again. s s Plug the 3 holes with the plastic plugs which you can find in the envelope containing the instruction booklet. Unscrew and remove the three rear transit bolts (using a spanner). P0002 P0287 s Lay the machine gently on its back, making sure that the hoses are not squashed. We suggest a polystyrene angle bracket from the packing is placed on the floor before tilting it back to avoid the hoses being squashed. Important ! You are advised to keep all the packaging for re-use in case the machine is to be transported again. In case of moving out the same precautions as per paragraph "The dangers of freezing" must be taken i.e. the residual water in the hoses must be pumped out.*

*Positioning Install the machine on a flat hard floor. Make sure that air circulation around the machine is not impeded by carpets, rugs etc. Check that the machine does not touch the wall or other kitchen units. Never place cardboard, wood or similar materials under the machine to compensate for any unevenness in the floor. Your new washing machine has been designed to be permanently plumbed in to your home's water supply and drainage system. However, if this is not possible, it may be connected to suitable existing tap with the drain hose discharging into a sink. The appliance has one inlet hose, with female 3/4" BSP thread connector. If this connection is not compatible with the plumbing of the existing installation, a variety of connectors are available from good hardware stores and plumbers merchants to suit most domestic plumbing. Any alteration to your existing plumbing must be carried out by a competent person, or qualified plumber. s Carefully remove the polyethylene bags located at the base of the machine by pulling them toward the centre of the machine.*

*I 2 P0018 AL009 s Place the machine in an upright position and remove the three plastic spacers. Installation on a Suspended Floor P0001 Suspended wooden floors are particularly susceptible to vibration. To help prevent vibration we recommend you place a waterproof wood panel, at least 15 mm thick under the appliance, secured to at least 2 floor beams with screws. If possible install the appliance in one of the corners of the room, where the floor is more stable. 24 35.293.010....*

*ZWF1421.qxd 04/10/2005 12:19 Página 25 Water inlet Connect the hose to a tap with a 3/4" thread. Do not use previously used hoses for water connection. U piece supplied P1199 P1088 Place the drain hose into your standpipe, which should have an internal diameter of approximately 38mm thus ensuring there is an air break between the drain hose and standpipe. 38 mm (1.2) standpipe diameter 30 cm (12") P1200 Installation should comply with local water authority and building regulations' requirements. The appliance must be connected to a cold water supply. A minimum water pressure of 50 kPa (0.5 bar) is required for safe operation of the appliance. If you cannot make the cold water connection direct from the rising mains, you may be able to operate the appliance from your cold water storage system.*

*@@Set the hose correctly by loosening the ring nut. @@1. Into a drainage standpipe. @@@@The joining piece must have an internal diameter of 18mm.*



[You're reading an excerpt. Click here to read official ZANUSSI ZWF1421W user guide](http://yourpdfguides.com/dref/955515)  
<http://yourpdfguides.com/dref/955515>

@@ Just push the hose firmly into the standpipe.  
P1212 25 Min. 60 cm (23.6) Max. 90 cm (35.4) 35.

293.010...ZWF1421.qxd 04/10/2005 12:19 Página 26 2. Onto a sink outlet spigot. If the outlet spigot has not been used before, remove any blanking plug that may be in place. P1051 P1197 Push the drain hose onto the spigot and secure with a clip if required, ensure a loop is formed in the drain hose (see diagram) to prevent waste from the sink entering the washing machine.

Any necessary adjustment can be made with a spanner. Accurate levelling prevents vibration, noise and displacement of the machine during operation. Some vibration is inevitable, especially if mounted on a wooden floor. Sprung wooden floors are particularly susceptible to vibration. For advice, consult a builder. @@@@Warning The machine should NOT be placed on deep pile carpeting. @@@@The joining piece must have an internal diameter of 18mm. Important q Before connecting the machine to new pipework or to pipework that has not been used for some time, run off a reasonable amount of water to flush out any debris that may have collected in the pipes. In the interest of the environment Washing machines and dishwashers should be connected to the FOUL drainage system, the water will then be taken to a sewage works for treatment before being discharged safely into a river. It is essential that these appliances are not connected to the surface water drainage system as this water is discharged directly into a river or stream and may cause pollution. If you require any further advice please contact your local water authority. Levelling Level the washing machine by raising or lowering the feet. The feet may be tight to adjust as they incorporate a self locking nut, but the machine MUST be level and stable. 26 35.293.

010...ZWF1421.

qxd 04/10/2005 12:19 Página 27 Electrical connection Any electrical work required to install this appliance should be carried out by a qualified electrician or competent person. WARNING: THIS APPLIANCE MUST BE EARTHED. The manufacturer declines any liability should this safety measure not be observed. Before switching on, make sure the electricity supply voltage is the same as that indicated on the appliance's rating plate. The rating plate is located at the bottom of the rim of the open door. The wires in the mains lead are coloured in accordance with the following code: Green and Yellow - Earth Blue - Neutral Brown - Live GREEN & YELLOW E 13 A N L BROWN BLUE P1041 CORD CLAMP Mod. ....

..... Prod. No. ...

.....

.... P0042 BD Ser.

No. ....

The appliance is supplied with a 13amp plug fitted. In the event of having to change the fuse in the plug supplied, a 13amp ASTA approved (BS 1363/A) fuse must be used. Should the plug need to be replaced for any reason, proceed as described below. The wire coloured green and yellow must be connected to the terminal marked with the letter «E» or by the earth symbol or coloured green and yellow. The wire coloured blue must be connected to the terminal marked «N» or coloured black. The wire coloured brown must be connected to the terminal marked «L» or coloured red. Upon completion there must be no cut, or stray strands of wire present and the cord clamp must be secure over the outer sheath. WARNING: A cut off plug inserted into a 13 amp socket is a serious safety (shock) hazard. Ensure that the cut off plug is disposed of safely. Should the appliance power supply cable need to be replaced, this must be carried out by our Service Force Centre.

Note When the appliance is installed the power supply cable must be accessible. Mo Pro d. ...

... d. No.

.....

..... Ser . No. ...

.....

. Permanent connection In the case of permanent connection it is necessary that you install a double pole switch between the appliance and the electricity supply (mains), with a minimum gap of 3mm between the switch contacts and of a type suitable for the required load in compliance with the current electrical regulations. The switch must not break the yellow and green earth cable at any point. 27 35.293.

010...ZWF1421.qxd 04/10/2005 12:19 Página 28 From the Electrolux Group. The world's No. 1 choice. The Electrolux Group is the world's largest producer of powered appliances for kitchen, cleaning and outdoor use. More than 55 million Electrolux Group products (such as refrigerators, cookers, washing machines, vacuum cleaners, chain saws and lawn mowers) are sold each year to a value of approx.

USD 14 billion in more than 150 countries around the world. EHPOESL/Z - 10/2005 .



[You're reading an excerpt. Click here to read official ZANUSSI ZWF1421W user guide](http://yourpdfguides.com/dref/955515)  
<http://yourpdfguides.com/dref/955515>