



Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for ZANUSSI ZWF14380W. You'll find the answers to all your questions on the ZANUSSI ZWF14380W in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual ZANUSSI ZWF14380W
User guide ZANUSSI ZWF14380W
Operating instructions ZANUSSI ZWF14380W
Instructions for use ZANUSSI ZWF14380W
Instruction manual ZANUSSI ZWF14380W

ZANUSSI

User manual			
	Washing Machine		



ZWF 14380 W
ZWF 14380 S



[You're reading an excerpt. Click here to read official ZANUSSI ZWF14380W user guide](http://yourpdfguides.com/dref/955526)
<http://yourpdfguides.com/dref/955526>

Manual abstract:

To avoid unnecessary mistakes and accidents, it is important to ensure that all people using the appliance are thoroughly familiar with its operation and safety features. Save these instructions and make sure that they remain with the appliance if it is moved or sold, so that everyone using it through its life will be properly informed on appliance use and safety. Always unplug the appliance and turn off the water supply after use, cleaning and maintenance. Under no circumstances should you attempt to repair the machine yourself. @@Contact your local Service Centre. @@During high temperature wash programmes the door glass may get hot. Do not touch it! Make sure that small pets do not climb into the drum. To avoid this, please check into the drum before using.

@@Only use the advised quantities of fabric softener and detergent. Damage to the fabric can ensue if you over-fill.

Refer to the manufacturer's recommendations of quantities. @@Do not use your washing machine to wash articles with whalebones, material without hems or torn material. This appliance is heavy. Care should be taken when moving it. When unpacking the appliance, check that it is not damaged.

If in doubt, do not use it and contact the Service Centre. All packing and transit bolts must be removed before use. Serious damage can occur to the product and to property if this is not adhered to. See relevant section in the user manual. After having installed the appliance, check that it is not standing on the inlet and drain hose and the worktop is not pressing the electrical supply cable.

If the machine is situated on a carpeted floor, please adjust the feet in order to allow air to circulate freely under the appliance. Always be sure, that there is no water leakage from hoses and their connections after the installation. If the appliance is installed in a location subject to frost, please read the «dangers of freezing» chapter. Any plumbing work required to install this appliance should be carried out by a qualified plumber or competent person. Any electrical work required to install this appliance should be carried out by a qualified electrician or competent person. 3 Use This appliance is designed for domestic use. It must not be used for purposes other than those for which it was designed. Only wash fabrics which are designed to be machine washed. Follow the instructions on each garment label. Do not overload the appliance.

See the relevant section in the user manual. Before washing, ensure that all pockets are empty and buttons and zips are fastened. Avoid washing frayed or torn articles and treat stains such as paint, ink, rust, and grass before washing. Underwired bras must NOT be machine washed. Garments which have been in contact with volatile petroleum products should not be machine washed. If volatile cleaning fluids are used, care should be taken to ensure that the fluid is removed from the garment before placing in the machine. Never pull the power supply cable to remove the plug from the socket; always take hold of the plug itself. Never use the washing machine if the power supply cable, the control panel, the working surface or the base are damaged so that the inside of the washing machine is accessible. Make sure that children or pets do not climb into the drum. To prevent children or pets becoming trapped inside the drum, the machine incorporates special feature.

To activate this device, rotate the button (without pressing it) inside the door clockwise until the groove is horizontal. If necessary use a coin. To disable this device and restore the possibility of closing the door, rotate the button anti-clockwise until the groove is vertical. Child safety This washing machine is not intended for use by young children or infirm persons without supervision. Young children should be supervised to ensure that they do not play with the appliance.

The packaging components (e.g. plastic film, polystyrene) can be dangerous to children danger of suffocation! Keep them out of children's reach Keep all detergents in a safe place out of children's reach. 4 Description of the appliance 1 2 3 4 5 Detergent dispenser drawer Control panel Door opening handle Drain pump Adjustable feet 1 2 3 4 5 Detergent dispenser drawer Prewash Wash Fabric Softener 5 Control panel and functions 1 Programme selector dial and On/Off switch 2 3 4 5 6 7 8 1 The programme selector dial allows you to select a programme and/or to switch the machine on/off. It can be turned either clockwise or anticlockwise.

The light of button 6 starts to flash. Press this button repeatedly to change the spin speed, if you want your laundry to be spun at a speed different from the one proposed by the washing machine or to select the Night Cycle and Rinse Hold . The relevant light will light up. By pressing this button, you can select only one of the following option: Prewash, Intensive, Super Quick (see the relevant chapter «Operating sequence»). The relevant light will light up. By pressing this button, the machine performs some additional rinses. The display shows the following information: duration of the selected programme, delayed start, incorrect option selection, alarm codes, child lock activated, heating phase and end of programme. 2 Spin reduction button 3 Options button 4 Extra Rinse button 5 Display 6 Start/Pause button 7 Delay Start button 8 Indicator lights 6 This button allows you to start the selected programme; the corresponding green pilot light stops flashing. It also interrupts a programme which is running, the corresponding green pilot light starts to flash. By pressing this button the wash programme can be delayed from 30 min - 60 min - 90 min, 2 hours and then by 1 hour up to a maximum of 20 hours.

The different pilot lights illuminate depending on the running programme phase: Programme table Programme/ Temperature Cottons 95° Type of laundry Options Description of programme Main wash, rinses Long spin at the max Spin red. White cotton (normally Prewash, Intensive, speed soiled cotton items). Max load: 7 kg Super Quick, Extra rinse *Reduced Load: 3.5 kg White and fast coloured cotton (normally soiled cotton items) Coloured cotton lightly soiled Spin red. Prewash, Extra rinse Spin red. Prewash, Intensive, S. Quick, Extra rinse Spin red. Prewash, Extra rinse Spin red. Prewash, Intensive, Super Quick Extra rinse Spin red. Prewash, Extra rinse Main wash, rinses Long spin at the max speed Max load: 7 kg Main wash, rinses, long spin at the max speed Max load: 7 kg *Reduced Load: 3.

5 kg Main wash, rinses Long spin at the max speed Max load: 7 kg Main wash rinses Short spin 900 rpm Max load: 3.5 kg *Reduced Load: 1.5 kg Main wash rinses Short spin 900 rpm Max load: 1 kg Cottons 60° Eco Cottons 60° - 40° Cottons 40° Eco Coloured cotton lightly soiled Synthetics 50° - 40° Synthetic or mixed fabrics Synthetics Easy iron 40° Synthetic or mixed fabrics to be gently washed and spun.



[You're reading an excerpt. Click here to read official ZANUSSI](#)

[ZWF14380W user guide](#)

<http://yourpdfguides.com/dref/955526>

Delicates 40° - 30° Delicate fabrics, for example curtains. Main wash, rinses Prewash, Super Quick Short spin 700 rpm Max load: 3.

5 kg Intensive, Extra Rinse *Reduced Load: 1.5 kg * If you select the SUPER QUICK option by pressing the relevant button, we recommend you, to reduce the maximum load as indicated in the table above. Full loading is possible however with somewhat reduced cleaning results. 7 Programme table Programme/ Temperature Wool 40° Handwash 30° - Cold Mini 30' 30° Silk 30° Sport Shoes 40° Type of laundry Programme for wool «Pure new wool, nonshrink, machine washable» label. Special programme for hand washing fabrics Short cycle for lightly soiled fabrics Silk items to be gently washed and spun. Short cycle for 1 pair of sport shoes Programme for heavily soiled synthetics items Separate rinse cycle for hand washed items of cotton. For emptying out the last rinse water in programmes with the Rinse Hold or Night Cycle option. Separate spin for cottons. Spin red. Options Description of programme Main wash rinses Short spin 900 rpm Max load: 2 kg Main wash, rinses Short spin 900 rpm, Max load: 2 kg Main Wash, rinses Short spin 700 rpm Max load: 2 kg, Spin red., , Spin red., , Main wash, rinses Short spin 700 rpm Max load: 1 kg Main Wash, rinses Short spin 900 rpm Max load: 1 pair Prewash at 30°C Main wash, rinses Short spin 900 rpm, Max load: 2.5 kg rinses Long spin at the max speed Max load: 7 kg Draining of water Spin Red. Prewash, Extra rinse Spin red., , Sport 40° Extra rinse Spin red.

Extra rinse Rinse Drain Spin Drain and long spin at the max speed Max load: 7 kg 8 Programme information Cottons Eco This programme can be selected for slightly or normally soiled cotton items. The temperature will decrease and the washing time will be extended. This allows you to obtain a good washing efficiency whilst saving energy. Washing programme for machine washable wool as well as for hand washable woollens and delicate fabrics with the «hand washing» care symbol. Note: A single or bulky item may cause imbalance. If the appliance doesn't perform the final spin phase, add more items, redistribute the load manually and then select the spinning programme. By selecting this programme, the laundry is gently washed and spun to avoid any creasing. In this way ironing is easier. Furthermore the machine will perform additional rinses. With this programme it is possible to rinse and spin cotton garments which have been washed by hand.

The machine performs 3 rinses, followed by a final spin at maximum speed. The spin speed can be reduced by pressing the relevant button. For emptying out the water of the last rinse in programmes with the Rinse Hold or Night Cycle option. Firstly, turn the programme selector dial to «Off», then select programme Drain and press the button 6. Separate spin for hand washed garments and after programmes with Rinse Hold or Night Cycle option. Before selecting this programme the selector dial must be turned to «Off». You can choose the speed by pressing the relevant button to adapt it to the fabrics to be spun. With this programme it is possible to wash one pair of sport shoes. The shoes would be gently washed and spun. Washing temperature 40°C. Note! Do not wash your sport shoes together with laundry. This prrst with acetone (*), then with acetic acid; treat any residual marks on white fabrics with bleach and then rinse thoroughly. Tar stains: first treat with stain remover, methylated spirits or benzine, then rub with detergent paste. (*) do not use acetone on artificial silk. Detergents and additives Good washing results also depend on the choice of detergent and use of the correct quantities to avoid waste and protect the environment. Although biodegradable, detergents contain substances which, in large quantities, can upset the delicate balance of nature. The choice of detergent will depend on the type of fabric (delicates, woollens, cottons, etc.), the colour, washing temperature and degree of soiling. All commonly available washing machine detergents may be used in this appliance: powder detergents for all types of fabric, powder detergents for delicate fabrics (60°C max) and woollens, liquid detergents, preferably for low temperature wash programmes (60°C max) for all types of fabric, or special for woollens only. The detergent and any additives must be placed in the appropriate compartments of the dispenser drawer before starting the wash programme.

If using concentrated poquired, pour it into the main wash compartment and, if you wish to carry out a programme with the prewash phase, pour it into the compartment marked . If required, pour fabric softener into the compartment marked (the amount used must not exceed the «MAX» mark in the drawer). Close the drawer gently. Select the required programme by turning the programme selector dial (1) The green light of the button 6 starts to flash. The selector dial can be turned either clockwise or anticlockwise. Turn to position «Off» to Reset programme / Switch OFF of the machine. At the end of the programme the selector dial must be turned to position «Off», to switch the machine off. When selecting a programme, the light corresponding to the maximum speed allowed for that programme will illuminate (refer to the section «Programme table» for the maximum allowed by each cycle spin speed). Press this button repeatedly to change the spin speed, if you want your laundry to be spun at a speed different from the one proposed by the appliance. Night Cycle : by selecting this option, the machine will not drain the water of the last rinse, so as not to crease the laundry.

As all spinning phases are suppressed, this washing cycle is very quiet and it can be selected at night or in times with a more economical power rate. On some programmes, the rinses will be performed with more water. When the programme has finished, the display shows a flashing zero «0.00» but the door remains locked to indicate that the water must be emptied out. Rinse Hold : by selecting this option the water of the last rinse is not emptied out to prevent the fabrics from creasing.

When the programme has finished, the display shows a flashing zero «0.00» but the door remains locked to indicate that the water must be emptied out. To empty out the water, see the paragraph «At the end of the cycle». 14 Operating sequence Select the desired option by pressing the button 3 Press this button repeatedly, to select one of the available options. The relevant light will light up.

Prewash: select this option if you wish your laundry to be prewashed at 30°C before the main wash. The prewash ends with a short spin in programmes for cotton and synthetic fabrics, whereas in the programmes for delicate fabrics the water is only drained. Intensive: this option can be selected for heavily soiled laundry: the washing intensity will be increased and the washing time will be prolonged by a few minutes depending on the selected type of fabric.



[You're reading an excerpt. Click here to read official ZANUSSI ZWF14380W user guide](http://yourpdfguides.com/dref/955526)
<http://yourpdfguides.com/dref/955526>

Super Quick: a very short cycle for slightly soiled items that have been used or worn for a short time. The washing time will be reduced according to the type of fabric and the selected temperature. We recommend that you to reduce the laundry load (see the programmes table). @@@@ Select the delay start by pressing the button 7. Press the button 6 : the machine starts its countdown. The programme will start after the selected delay has expired. @@@@ · press the button 6 again to start the programme.

IMPORTANT! @@ · The door will be locked throughout the delay time. @@After you have closed the door, press the button 6 again. The Delay Start cannot be selected with Drain programme. @@@@**IMPORTANT!** @@@@The appliance is operating or there is water left in the tub. Attention! If the door is locked do not try to open it! · light off: the door can be opened. The washing programme is finished. · flashing light: the door is opening. @@@@Changing a running programme is possible only by resetting it. @@Start the new programme by pressing the button 6 again. The washing water in the tub will not be emptied out.

@@Press this button again to restart the programme. @@You can now select a new programme. @@@@In this case the door can not be opened. @@@@After this procedure, it will be necessary to set the programme and the options again and then to press button 6 . At the end of the programme The machine stops automatically.

On the display will appear a flashing «0.00» and the door can be opened. If the «Rinse hold» or «Night Cycle» option has been selected, the display will show a flashing «0.00» and the door remains locked to indicate that the water must be emptied out before opening the door. To empty out the water proceed as follows: 1.

turn the programme selector dial to «Off» 2.select the Drain or Spin programme 3.reduce the spin speed if needed, by pressing the relevant button 4.press the button 6 to start the selected programme 5.at the end of programme, only the «End» light illuminates. Now it is possible to open the door. 17 Turn the programme selector dial to «Off» to switch the machine off. Remove the laundry from the drum and carefully check that the drum is empty. If you do not intend to carry out another wash, close the water tap. Leave the door open to prevent the formation of mildew and unpleasant smells.

Care and cleaning IMPORTANT! You must **DISCONNECT** the appliance from the electricity supply, before you can carry out any cleaning or maintenance work. Descaling The water we use normally contains lime. It is a good idea to periodically use a water softening powder in the machine. Do this separately from any laundry washing, and according to the softening powder manufacturer's instructions. This will help to prevent the formation of lime deposits. Maintenance Wash With the use of low temperature washes it is possible to get a build up of residues inside the drum. We recommend that a maintenance wash be performed on a regular basis. To run a maintenance wash: The drum should be empty of laundry. Select the hottest cotton wash programme. Use a normal measure of detergent, must be a powder with biological properties.

18 External cleaning Clean the exterior cabinet of the appliance with soap and water only, and then dry thoroughly. Cleaning the dispenser drawer The washing powder and additive dispenser drawer should be cleaned regularly. To aid cleaning, the top part of the additive compartment should be removed.

Remove the drawer by pressing the catch downwards and by pulling it out. Flush it out under a tap, to remove any traces of accumulated powder. Cleaning the drawer recess Having removed the drawer, use a small brush to clean the recess, ensuring that all washing powder residue is removed from the upper and lower Remove any objects from the pump impeller by rotating it. Refit the cap on the emergency emptying hose and place the latter back in its seat. Screw the pump cover fully in. Close the pump door. part of the recess.

Replace the drawer and run the rinse programme without any clothes in the drum. **IMPORTANT!** When the appliance is in use and depending on the programme selected there can be hot water in the pump. Never remove the pump cover during a wash cycle, always wait until the appliance has finished the cycle, and is empty. When replacing the cover, ensure it is securely retightened so as to stop leaks and young children being able to remove it. Cleaning the water inlet filter If your water is very hard or contains traces of lime deposit, the water inlet filter may become clogged. It is therefore a good idea to clean it from time to time. Turn off the water tap. Unscrew the water inlet hose. Clean the filter using a hard bristle brush. @@blocking the pump.

Proceed as follows: Disconnect the appliance. If necessary wait until the water has cooled down. Open the pump door. Place a container close to the pump to collect any spillage. @@When no more water comes out, unscrew the pump cover and remove it. @@ Turn off the water tap. Unscrew the inlet hose.

@@@@Remove its cap. The water should drain by gravity into the bowl. When the bowl is full, put the cap back on the hose.

Empty the bowl. @@@@Once the problem has been eliminated, press the button 6 to restart the programme. If after all checks, the problem persists, contact your local Service Centre. Malfunction Possible Cause / Solution The door has not been closed. E40 · Close the door firmly.

The plug is not properly inserted in the power socket. · Insert the plug into the power socket. There is no power at the socket. · Please check your domestic electrical installation. The main fuse or the fuse in the plug has blown.

· Replace the fuse. The selector dial is not correctly positioned and the button 6 has not been pressed. · Please turn the selector dial and press the button 6 again. The delay start has been selected. · If the laundry are to be washed immediately, cancel the delay start. The Child Safety Lock function has been activated. · Deactivate this function. The water tap is closed. E10 · Open the water tap. The inlet hose is squashed or kinked.

E10 · Check the inlet hose connection. The filter in the inlet hose is blocked. E10 · Clean the water inlet hose filter. The door is not properly closed. E40 · Close the door firmly. 21 The washing machine does not start: The machine does not fill: Malfunction The machine fills then empties immediately: Possible Cause / Solution The end of the drain hose is too low. · Refer to relevant paragraph in «water drainage» section. The drain hose is squashed or kinked. E20) · Check the drain hose connection. The drain pump is clogged.

E20 · Clean the drain pump. The option «Rinse hold» or «Night Cycle» has been selected. · Select the draining or spinning programmes.



[You're reading an excerpt. Click here to read official ZANUSSI](http://yourpdfguides.com/dref/955526)

[ZWF14380W user guide](http://yourpdfguides.com/dref/955526)

<http://yourpdfguides.com/dref/955526>

The laundry is not evenly distributed in the drum. · Redistribute the laundry.

Too much detergent or unsuitable detergent (creates too much foam) has been used. · Reduce the detergent quantity or use another one. Check whether there are any leaks from one of the inlet hose fittings. It is not always easy to see this as the water runs down the hose; check to see if it is damp. · Check the water inlet hose connection.

The inlet or drain hose is damaged. · Replace it with a new one. The cap on the emergency emptying hose has not been replaced after cleaning the pump. · Refit the cap on the emergency emptying hose and place the latter back in its seat. Too little detergent or unsuitable detergent has been used. · Increase the detergent quantity or use another one. Stubborn stains have not been treated prior to washing. · Use commercial products to treat the stubborn stains. The correct temperature was not selected. · Check if you have selected the correct temperature.

Excessive laundry load. · Reduce the laundry load. The machine does not empty and/or does not spin; There is water on the floor: Unsatisfactory washing results: 22 Malfunction Possible Cause / Solution The programme is still running. · Wait the end of washing cycle. The door lock has not been released. · Wait a few minutes until the «Door» light has gone off. There is water in the drum. · Select drain or spin programme to empty out the water. The transit bolts and packing have not been removed. · Check the correct installation of the appliance.

The support feet have not been adjusted. · Check the correct levelling of the appliance. The laundry is not evenly distributed in the drum. · Redistribute the laundry. Maybe there is very little laundry in the drum.

· Load more laundry. The electronic unbalance detection device has cut in because the laundry is not evenly distributed in the drum. The laundry is redistributed by reverse rotation of the drum. This may happen several times before the unbalance disappears and normal spinning can resume. If, after 10 minutes, the laundry is still not evenly distributed in the drum, the machine will not spin.

In this case, redistribute the load manually and select the spin programme. Redistribute the laundry. If the load is very small, add more items, redistribute the load manually and then select the spinning programme. The door will not open: The machine vibrates or is noisy: Spinning starts late or the machine does not spin: The machine is fitted with a type of motor which makes a different noise compared with other traditional motors. This new motor ensures a softer The machine makes an unusual noise start and more even distribution of the laundry in the drum when spinning, as well as increased stability of the machine. No water is visible in the drum Machines based on modern technology operate very economically using very little water without affecting performance. 23 If you are unable to identify or solve the problem, contact our service centre. Before telephoning, make a note of the model, serial number and purchase date of your machine: the Service Centre will require this information. Mod. .

.. ... Prod. No.

... ..

. ... Ser.

No.

Technical data Dimensions Width Height Depth (including the porthole) Electrical connection Voltage Overall power - Fuse 60 cm 85 cm 63 cm Information on the electrical connection is given on the rating plate on the inner edge of the appliance door Water supply pressure Minimum Maximum 0,05 MPa 0,8 MPa 70 3.5 3.5 2.0 0 kg kg kg Maximum Load Cotton Synthetics Delicates Woollens and handwash Maximum Spin Speed 1400 rpm 24 Mod. Prod No. .

... ..

... ..

... Ser. No.

... Consumption values Programme Programme duration (in hours and minutes) For the duration of the programmes, please refer to the display on the control panel Energy consumption (in kWh) 2.2 1.19 1.4 1.2 0.55 0.

35 0.25 Water consumption (in litres) 65 52 62 57 58 52 52 Cottons 95°C Cottons 60° Eco(*) Cottons 60°C - 40°C Cottons 40° Eco Delicates 40°C - 30°C Wool 40°C Handwash 30°C - Cold Information The consumption data shown on this chart is to be considered purely indicative, as it may vary depending on the quantity and type of laundry, on the inlet water temperature and on the ambient temperature. It refers to the highest temperature for each wash programme. (*) The "Cottons 60° Eco" is the reference programme with a load of 7 kg for the data entered in the energy label, in compliance with EEC 92/75 standards. 25 Installation instruction Unpacking All transit bolts and packing must be removed before using the appliance.

You are advised to keep all transit devices so that they can be refitted if the machine ever has to be transported again. 5. Remove the bracket D, refit the six smaller bolts C and slide out the relevant plastic spacer E. 1. After removing all the packaging, carefully lay machine on it's back to remove the polystyrene base from the bottom.

2. Remove the power supply cable, the inlet and the draining hoses from the hose holders on the rear of the appliance. 6. Remove the polystyrene block fitted on the door seal. 7. Fill the smaller upper hole and the two large ones with the corresponding plastic plug caps supplied in the bag containing the instruction booklet. Positioning Install the machine on a flat hard floor. Make sure that air circulation around the machine is not impeded by carpets, rugs etc. Check that the machine does not touch the wall or other kitchen units. C A B C B 3.

With a suitable spanner unscrew and remove the central rear bolt A. 4. Unscrew and remove the two large rear bolts B and the six smaller bolts C. E C C Water inlet The inlet hose is already screwed on the back of the appliance. 1. Set the hose correctly by loosening the ring nut. After positioning the inlet hose, be sure to tighten the ring nut again to prevent leaks. Do not place the inlet hose downwards. Angle the hose to the left or right depending on the position of your water tap (see picture). D HEC0006 26 2.

This appliance must be connected to a cold water supply. Connect the hose to a tap with a 3/4" thread. The inlet hose must not be lengthened. If it is too short and you do not wish to move the tap, you will have to purchase a new, longer hose specially designed for this type of use..

NOTE Installation should comply with local water authority and building regulations' requirements. The appliance must be connected to a cold water supply. A minimum water pressure of 0.05 MPa (0.5 bar) is required for safe operation of the appliance.

If you cannot make the cold water connection direct from the rising mains, you may be able to operate the appliance from your cold water storage system. There should be a minimum vertical distance of 5.02m (16.5 ft) between the appliance's inlet and the bottom of the water storage tank.



[You're reading an excerpt. Click here to read official ZANUSSI ZWF14380W user guide](#)

Water drainage This appliance is designed to be permanently plumbed into your home's drainage system using one of the following methods. 1. Into a drainage standpipe. Special Sport 40° Sport Shoes 40° Silk Mini 30' Off 95° 60° Eco 60° Cottons 3h 6h 9h 1000 900 700 Prewash Intensive Super Quick Spin Options Extra Rinse 40° Eco 40° Synthetics 50° 40° Spin Drain Rinse 30° 40° Delicates Easy Iron 40° Wash Door End Start/Pause 1000 6kg Cold Hand Wash 30° Wool ZWF10070W Firstly form a hook in the end of the drain hose using the «U» piece supplied. Place the drain hose into your standpipe, which should have an internal diameter of approximately 38mm thus ensuring there is an air break between the drain hose and standpipe. When discharging into a standpipe ensure that the top of the standpipe is no more than 90 cm (35.

4") and no less than 60 cm (23.6") above floor level. Special Sport 40° Sport Shoes 40° Silk Mini 30' Off 95° 60° Eco 60° Cottons 3h 6h 9h 1000 900 700 Prewash Intensive Super Quick Spin Options Extra Rinse 40° Eco 40° Synthetics 50° 40° Spin Drain Rinse 30° 40° Delicates Easy Iron 40° Wash Door End Start/Pause 1000 6kg Cold Hand Wash 30° Wool ZWF10070W 30 cm (12") Min. 60 cm (23.6) 38 mm (1.5) standpipe diameter The drain hose may be extended to a maximum of 4 metres. An additional drain hose and joining piece is available from your local Service Force Centre. The joining piece must have an internal diameter of 18mm. If your drain hose looks like this (see below) you do not require the «U» piece. Just push the hose firmly into the standpipe.

2. Onto a sink outlet spigot. If the outlet spigot has not been used before, remove any blanking plug that may be in place. U piece supplied 27 Max. 90 cm (35.

4) Loop Special conditions If the floor is carpeted or covered with crumbly or soft material, insert a rigid support base under the feet to prevent noise, vibration or displacement. @@WARNING! The machine should NOT be placed on deep pile carpeting. @@@@If you require any further advice please contact your local water authority. Push the drain hose onto the spigot and secure with a clip, ensure a loop is formed in the drain hose (see diagram) to prevent waste from the sink entering the washing machine. Important! Before connecting the machine to new pipework or to pipework that has not been used for some time, run off a reasonable amount of water to flush out any debris that may have collected in the pipes.

Levelling Level the washing machine by raising or lowering the feet. The feet may be tight to adjust as they incorporate a self locking nut, but the machine MUST be level and stable. If necessary, check the setting with a spirit level. SHOWER Any necessary adjustment can be made with a spanner. Accurate levelling prevents vibration, noise and displacement of the machine during operation. @@@@Sprung wooden floors are particularly susceptible to vibration. For advice, consult a builder. If possible, always place the machine on a solid floor. @@WARNING! This appliance must be earthed. @@Before switching on, make sure the electricity supply voltage is the same as that indicated on the appliance's rating plate.

IMPORTANT! Information on the electrical connection is given on the rating plate on the inner edge of the appliance door. The appliance is supplied with a 13amp plug fitted. In the event of having to change the fuse in the plug supplied, a 13amp ASTA approved (BS1363/A) fuse must be used. Should the plug need to be replaced for any reason, proceed as described below. The wires in the mains lead are coloured in accordance with the following code: Green and

Yellow

.....

.....

.....

.....- Earth Blue

.....

.....

.....

.....

.....

.....

.....- Neutral Brown....

.....

.....

.....

.....

.....

.....

.- Live GREEN & YELLOW E 13 A The wire coloured blue must be connected to the terminal marked «N» or coloured black. The wire coloured brown must be connected to the terminal marked «L» or coloured red. Upon completion there must be no cut, or stray strands of wire present and the cord clamp must be secure over the outer sheath. WARNING! A cut off plug inserted into a 13 amp socket is a serious safety (shock) hazard.

Ensure that the cut off plug is disposed of safely. Should the appliance power supply cable need to be replaced, this must be carried out by our Service Force Centre. The power supply cable must be easily accessible after installing the appliance. Permanent connection In the case of permanent connection it is necessary that you install a double pole switch between the appliance and the electricity supply (mains), with a minimum gap of 3mm between the switch contacts and of a type suitable for the required load in compliance with the current electrical regulations. The switch must not break the yellow and green earth cable at any point. N L BROWN BLUE CORD CLAMP The wire coloured green and yellow must be connected to the terminal marked with the letter «E» or by the earth symbol or coloured green and yellow. 29 Environmental concerns Packaging materials The materials marked with the symbol are recyclable. >PE<=polyethylene >PS<=polystyrene >PP<=polypropylene This means that they can be recycled by disposing of them properly in appropriate collection containers. Old machine Use authorised disposal sites for your old appliance. Help to keep your country tidy! The symbol on the product or on its packaging indicates that this product may not be treated as household waste.

Instead it should be taken to the appropriate collection point for the recycling of electrical and electronic equipment. By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling of this product. For more detailed information about recycling of this product, please contact your local council, your household waste disposal service or the shop where you purchased the product. Ecological hints To save water, energy and to help protect the environment, we recommend

that you follow these tips: Normally soiled laundry may be washed without prewashing in order to save detergent, water and time (the environment is protected too!). The machine works more economically if it is fully loaded. With adequate pre-treatment, stains and limited soiling can be removed; the laundry can then be washed at a lower temperature. Measure out detergent according to the water hardness, the degree of soiling and the quantity of laundry being washed. 30 31 www.electrolux.com www.zanussi-electrolux.co.uk 132 962 510 - 01 - 28 2008 Subject to change without notice .



[You're reading an excerpt. Click here to read official ZANUSSI ZWF14380W user guide](#)
<http://yourpdfguides.com/dref/955526>