





# Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for ZANUSSI ZWF16070W. You'll find the answers to all your questions on the ZANUSSI ZWF16070W in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

**User manual ZANUSSI ZWF16070W**  
**User guide ZANUSSI ZWF16070W**  
**Operating instructions ZANUSSI ZWF16070W**  
**Instructions for use ZANUSSI ZWF16070W**  
**Instruction manual ZANUSSI ZWF16070W**



User manual			
	Washing Machine		



ZWF 10070 W  
ZWF 12070 W  
ZWF 12070 S  
ZWF 14070 W  
ZWF 16070 W  
ZWF 16070 S



[You're reading an excerpt. Click here to read official ZANUSSI ZWF16070W user guide](http://yourpdfguides.com/dref/955534)  
<http://yourpdfguides.com/dref/955534>

**Manual abstract:**

Save these instructions and make sure that they remain with the appliance if it is moved or sold, so that everyone using it through its life will be properly informed on appliance use and safety. Always unplug the appliance and turn off the water supply after use, clean and maintenance. Under no circumstances should you attempt to repair the machine yourself. Repairs carried out by inexperienced persons may cause injury or serious malfunctioning. Contact your local Service Centre. @@During high temperature wash programmes the door glass may get hot. Do not touch it! Make sure that small pets do not climb into the drum. To avoid this, please check into the drum before using. @@Only use the advised quantities of fabric softener and detergent. Damage to the fabric can ensue if you over-fill.

Refer to the manufacturer's recommendations of quantities. @@@@Care should be taken when moving it. When unpacking the appliance, check that it is not damaged. If in doubt, do not use it and contact the Service Centre. All packing and transit bolts must be removed before use.

Serious damage can occur to the product and to property if this is not adhered to. See relevant section in the user manual. After having installed the appliance, check that it is not standing on the inlet and drain hose and the worktop is not pressing the electrical supply cable. If the machine is situated on a carpeted floor, please adjust the feet in order to allow air to circulate freely Always be sure, that there is no water leakage from hoses and their connections after the installation. If the appliance is installed in a location subject to frost, please read the «dangers of freezing» chapter.

Any plumbing work required to install this appliance should be carried out by a qualified plumber or competent person. Any electrical work required to install this appliance should be carried out by a qualified electrician or competent person. 3 Use This appliance is designed for domestic use. It must not be used for purposes other than those for which it was designed. Only wash fabrics which are designed to be machine washed. Follow the instructions on each garment label. Do not overload the appliance. See the relevant section in the user manual. Before washing, ensure that all pockets are empty and buttons and zips are fastened. Avoid washing frayed or torn articles and treat stains such as paint, ink, rust, and grass before washing.

Underwired bras must NOT be machine washed. Garments which have been in contact with volatile petroleum products should not be machine washed. If volatile cleaning fluids are used, care should be taken to ensure that the fluid is removed from the garment before placing in the machine. Never pull the power supply cable to remove the plug from the socket; always take hold of the plug itself. Never use the washing machine if the power supply cable, the control panel, the working surface or the base are damaged so that the inside of the washing machine is accessible. Make sure that children or pets do not climb into the drum. To avoid this the machine incorporates special feature. To activate this device, rotate the button (without pressing it) inside the door clockwise until the groove is horizontal. If necessary use a coin. To disable this device and restore the possibility of closing the door, rotate the button anti-clockwise until the groove is vertical.

Child safety This washing machine is not intended for use by young children or infirm persons without supervision. Young children should be supervised to ensure that they do not play with the appliance. The packaging components (e.g. plastic film, polystyrene) can be dangerous to children danger of suffocation!

Keep them out of children's reach Keep all detergents in a safe place out of children's reach.

4 Description of the appliance 1 2 3 4 5 Detergent dispenser drawer Control panel Door opening handle Special 1 Sport 40° Sport Shoes 40° Silk Mini 30' Cold Hand Wash 30° Wool Spin Drain Rinse 30° 40° Delicates Off 95° 60° Eco 60° 40° Eco 40° Synthetics 50° 40° Easy Iron 40° Cottons 2 3h 6h 9h Drain pump Adjustable feet 1000 900 700 Prewash Intensive Super Quick Spin Options Extra Rinse Wash Door End Start/Pause 1000 6kg ZWF10070W 3 4 5 Detergent dispenser drawer Prewash Wash Fabric Softener 5 Control panel and functions Delay Start Special Sport 40° Sport Shoes 40° Silk Mini 30' Off 95° 60° Eco 60° Cottons 3h 6h 9h 1000 900 700 Prewash Intensive Super Quick Spin Options Extra Rinse 40° Eco 40° Synthetics 50° 40° Spin Drain Rinse 30° 40° Delicates Easy Iron 40° Wash Door End Start/Pause Cold Hand Wash 30° Wool ZWF10070W 1 2 3 4 5 6 7 1 Programme selector dial and On/Off switch

2 Spin reduction button 3 Options button The programme selector dial allows to select a programme and/or to switch the machine on/off. It can be turned either clockwise or anticlockwise. The light Start/Pause starts to flash. Press the Spin button repeatedly to change the spin speed, if you want your laundry to be spun at a speed different from the one proposed by the washing machine or to select the Night cycle and Rinse Hold. The relevant light will light up.

By means of the Options button, you can select only one of the following option: Prewash, Intensive, Super Quick (see the relevant chapter «Operating sequence»). The relevant light will light up. 4 Extra Rinse button By means of this button, the machine performs some additional rinses. 5 Start/Pause button The Start/Pause button allows to start the selected programme; the corresponding green pilot light stops flashing. This button interrupts also a programme which is running, the corresponding green pilot light starts to flash. 6 Programme progress display 7 Delay Start button 6 The different pilot lights illuminate depending on the running programme phase. This button makes it possible to delay the starting of the washing programme by 3, 6, and 9 hours. Programme table Programme/ Temperature Cottons 95° Type of laundry White cotton (heavy soiled cotton items): e.g. sheets, tablecloths, household linen, towels.

White and fast coloured cotton (normally soiled cotton items): sheets, household linen, underwear, Coloured cotton lightly soiled, shirts, blouses, towels, underwear. Coloured cotton lightly soiled, shirts, blouses, underwear. Synthetic or mixed fabrics, underwear, coloured garments, nonshrink shirts, blouses. Synthetic or mixed fabrics to be gentle washed and spun. Options Spin red. Prewash, Intensive, Super Quick Extra rinse Description of programme Main wash at 95°C 3 rinses Long spin Cottons 60° Eco Spin red. Prewash, Extra rinse Spin red. Prewash, Intensive, S.



[You're reading an excerpt. Click here to read official ZANUSSI ZWF16070W user guide](http://yourpdfguides.com/dref/955534)  
<http://yourpdfguides.com/dref/955534>

*Quick, Extra rinse Spin red. Prewash, Extra rinse Spin red.*

*Prewash, Intensive, Super Quick Extra rinse Spin red. Prewash, Extra rinse Main wash at 60°C 3 rinses Long spin Main wash at 60° - 40°C 3 rinses Long spin Main wash at 40° 3 rinses Long spin Main wash at 50° - 40° 3 rinses Short spin Main wash at 40° 4 rinses Short spin Main wash at 40°-30°C 3 rinses Short spin Cottons 60° - 40° Cottons 40° Eco Synthetics 50° - 40° Synthetics Easy iron 40° Delicates 40° - 30° Delicate fabrics, for example curtains.*

*Prewash, Intensive, Super Quick, Extra Rinse Max load for Cottons...*

.....

.....

.....

.....

*.6 kg Max load for Synthetics....*

.....

.....

.....

*.3 kg Max load for Delicates ....*

.....

.....

.....

*.3 kg 7 Programme table Programme/ Temperature Wool 40° Type of laundry Programme for wool «Pure new wool, nonshrink, machine washable» label. Special programme for hand washing fabrics Short cycle for lightly soiled fabrics Silk items to be gently washed and spun. Short cycle for 1 pair of sport shoes (2 pairs if they are small) Programme for heavily soiled synthetics items Separate rinse cycle for hand washed items of cotton fabric. Options Description of programme Main wash at 40° 3 rinses Short spin Main wash at 30° - Cold 3 rinses Short spin Main Wash at 30°C 2 rinses Short spin Main wash at 30°C 2 rinses Short spin Main Wash at 40°C 3 rinses Short spin Prewash at 30°C Main wash at 40°C 3 rinses Short spin 3 rinses Long spin Spin red. , , Handwash 30° - Cold Mini 30' 30° Silk 30° Sport Shoes 40° Sport 40° Spin red., , Spin Red., Prewash, Extra rinse Spin Red., , Extra rinse Spin red. Extra rinse Rinse Drain For emptying out the last rinse water in programmes with the Rinse Hold or Night Cycle option. Separate spin for cottons. Spin red. Draining of water Spin Drain and long spin Max load for Wool/Handwash ...*

.....

.....

.....

*..... 2 kg Max load for Mini 30 `..*

.....

.....

.....

.....

*..... 2.*

*5 kg Max load for Silk .....*

.....

.....

.....

.....

.....

.....

*..1 kg Max load for Sport Shoes 40° .....*

.....

.....

.....

*1 pair (2 pairs if they are small) Max load for Sport 40° .....*

.....

.....

.....

.....

*..3 kg 8 Programme information Wool and Handwash Easy Iron Washing programme for machine washable wool as well as for hand washable woollens and delicate fabrics with the «hand washing» care symbol . Selecting this programme the laundry is gently washed and spun to avoid any creasing. In this way ironing is easier.*

*Furthermore the machine will perform additional rinses. With this programme it is possible to rinse and spin cotton garments which have been washed by hand. The machine performs 3 rinses, followed by a final spin at maximum speed. The spin speed can be reduced by depressing Spin button. For emptying out the water of the last rinse in programmes with the Rinse Hold or Night Cycle option.*

*Turn first the programme selector dial to «Off», then select programme Dst coloureds only). Grass: soap lightly and treat with bleach (whites and fast*

coloureds only). Ball point pen and glue: moisten with acetone (\*), lay the garment on a soft cloth and dab the stain. Lipstick: moisten with acetone as above, then treat stains with methylated spirits. Remove any residual marks from white fabrics with bleach. Red wine: soak in water and detergent, rinse and treat with acetic or citric acid, then rinse. Treat any residual marks with bleach. Ink: depending on the type of ink, moisten the fabric first with acetone (\*), then with acetic acid; treat any residual marks on white fabrics with bleach and then rinse thoroughly. Tar stains: first treat with stain remover, methylated spirits or benzene, then rub with detergent paste. (\*) do not use acetone on artificial silk.

etc.), the colour, washing temperature and degree of soiling. All commonly available washing machine detergents may be used in this appliance: powder detergents for all types of fabric, powder detergents for delicate fabrics (60°C max) and woollens, liquid detergents, preferably for low temperature wash programmes (60°C max) for all types of fabric, or special for woollens only. The detergent and any additives must be placed in the appropriate compartments of the dispenser drawer before starting the wash programme. If using concentrated powder or liquid detergents, a programme without prewash must be selected. The washing machine incorporates a recirculation system which allows an optimal use of the concentrated detergent. Pour liquid detergent into the dispenser drawer compartment marked just before starting the programme. Any fabric softener or starching additives must be poured into the compartment marked before starting the wash programme. Follow the product manufacturer's recommendations to care the laundry. As all spinning phases are suppressed, this washing cycle is very noiseless and it can be selected at night or in times with a more economical power 13 Operating sequence rate. On Cotton, Synthetic, Delicates, Silk, Sport Shoes 40°, and Sport 40° programmes the rinses will be performed with more water. When the programme has finished the «Door» and «End» pilot lights are alight, the Start/Pause and «Wash» lights are off and the door is blocked to indicate that the water must be emptied out. Rinse Hold : by selecting this option the water of the last rinse is not emptied out to prevent the fabrics from creasing. When the programme has finished the pilot lights «Door» and «End» are alight, the Start/Pause and «Wash» lights are off and the door is locked to indicate that the water must be emptied out. To empty out the water: 1.

turn the programme selector dial to «Off» 2.select the Drain or Spin programme 3.reduce the spin speed if needed, by means of the relevant button 4.depress Start/Pause button 5. at the end of programme, only the pilot lights End comes on.

5. Select Prewash, Intensive, Super Quick option Prewash Intensive Super Quick Options Intensive: this option can be selected for heavily soiled laundry: the washing intensity will be increased and the washing time will be prolonged by few minutes depending on the selected type of fabric. This option can be selected with all cottons, Synthetics and Delicates programmes, except for Eco and Easy Iron programmes. Super Quick: a very short cycle for slightly soiled items that have been used or worn for a short time. This option is not available with the Wool, Handwash, Mini 30', Silk, Sport Shoes 40°, Easy Iron, Sport 40° and Eco programmes. The max. load recommended for cotton: is 3 kg and for synthetic and delicate is 1.5 kg. IMPORTANT! If an option is chosen that is not allowed with the selected programme, the red pilot light of the Start/Pause button will flash 3 times. The washing time will be reduced according to the type of fabric and the selected temperature.

6. Select the Extra Rinse option This button can be selected with all Extra Rinse programmes except the Mini 30', Silk, Wool and Hand wash programmes.



[You're reading an excerpt. Click here to read official ZANUSSI ZWF16070W user guide](http://yourpdfguides.com/dref/955534)  
<http://yourpdfguides.com/dref/955534>

The machine performs some additional rinses. This option is recommended for people who are allergic to detergents, and in areas where the water is very soft. 7. Select the Start/Pause To start the selected programme, press the Start/Pause button; the corresponding green pilot light stops flashing. Press the «Options» button repeatedly, to select only one of the available options. The relevant light will light up. Prewash: select this option if you wish your laundry to be prewashed at 30°C before the main wash (not available for Wool, Handwash, Mini 30' and Silk). The prewash ends with a short spin in programmes for cotton and synthetic fabrics, and Sport 40°, whereas in the programmes for delicate fabrics and Sport 40° Shoes the water is only drained.

14 Operating sequence Wash Door End Start/Pause The «Wash» and «Door» lights are alight to indicate that the appliance starts operating and the door is locked. · set the washing machine to PAUSE by pressing the Start/Pause button; · press the Delay Start button once, the light relevant to the selected delay goes off. · press the Start/Pause button again to start the programme. IMPORTANT! · The selected delay can be changed only after selecting the washing programme again. · The door will be locked throughout the delay time.

If you need to open the door, you must first set the washing machine to PAUSE by pressing the Start/Pause button and then wait about 2 minutes until the «Door» light has gone off. After you have closed the door, press the Start/Pause button again. The Delay Start can not be selected with Drain programmes.

Programme progress display After having depress Start/Pause button, the «Wash» pilot light illuminates and stays on while the machine is working. To interrupt a programme which is running, depress the Start/Pause button: the corresponding green pilot light starts to flash.

To restart the programme from the point at which it was interrupted, press the Start/Pause button again. If you have chosen a delayed start, the machine will begin the countdown. IMPORTANT! If an incorrect option is selected, the red pilot light of the Start/ Pause button flashes for 3 times. 8. Select the Delay Start

Before you start the programme, if you wish to delay the start, press the Delay Start button repeatedly, to select the desired delay. Delay Start 3h 6h 9h The relevant light illuminates. This button makes it possible to delay the starting of the washing programme by 3, 6, and 9 hours. You must select this option after you have set the programme and before you press the Start/Pause button. You can cancel the delay time at any moment, before you press the Start/Pause button. If you have already pressed the Start/Pause button, and you wish to cancel the delay time, proceed as follows: Wash Door End The «Door» pilot light indicates if the door can be opened: · light on: the door cannot be opened.

The appliance is running. · light off: the door can be opened. The washing programme is finished. · flashing light: the door is opening. When the programme has finished, the «End» pilot light illuminates and the «Wash» light goes off. @@@@Changing a running programme is possible only by resetting it. @@The washing water in the tub will not emptied out. Start the new programme by depressing the Start/Pause button again. @@Depress the button again to restart the programme. @@Now you can select a new programme.

@@@@@In this case the door can not be opened. @@At the end of the programme The machine stops automatically. @@The door can be opened (the Door light is off). @@@@@@If you do not intend to carry out another wash, close the water tap. @@@@Descaling The water we use normally contains lime.

@@@@@This will help to prevent the formation of lime deposits. @@We recommend that a maintenance wash be performed on a regular basis. To run a maintenance wash: The drum should be empty of laundry. Select the hottest cotton wash programme. @@@@@@Flush it out under a tap, to remove any traces of accumulated powder.

@@@@@blocking the pump. Proceed as follows: Disconnect the appliance. If necessary wait until the water has cooled down. Open the pump door. Place a container close to the pump to collect any spillage. @@When no more water comes out, unscrew the pump cover and remove it. @@@@Screw the pump cover fully in. @@ Turn off the water tap. Unscrew the inlet hose. @@@@@@IMPORTANT! @@This will activate the ECO VALVE device avoiding that part of the detergent remains unused at next washing.

Emergency emptying out If the water is not discharged, proceed as follows to empty out the machine: pull out the plug from the power socket; close the water tap; if necessary, wait until the water has cooled down; open the pump door; place a bowl on the floor and place the end of the emergency emptying hose into the bowl. Remove its cap. The water should drain by gravity into the bowl. When the bowl is full, put the cap back on the hose. Empty the bowl. Repeat the procedure until water stops flowing out; clean the pump if necessary as previously described; replace the emergency emptying hose in its seat after having plugged it; screw the pump cover again and close the door. IMPORTANT! When the appliance is in use and depending on the programme selected there can be hot water in the pump. Never remove the pump cover during a wash cycle, always wait until the appliance has finished the cycle, and is empty. When replacing the cover, ensure it is securely retightened so as to stop leaks and young children being able to remove it. Cleaning the water inlet filter If your water is very hard or contains traces of lime deposit, the water inlet filter may become clogged.

It is therefore a good idea to clean it from time to time. Turn off the water tap. Unscrew the water inlet hose. Clean the filter using a hard bristle brush. Tighten up the inlet hose.

18 Something not working IMPORTANT! Certain problems are due to lack of simple maintenance or oversights, which can be solved easily without calling out an engineer. Before contacting your local Service Centre, please carry out the checks listed below. During machine operation it is possible that the red Start/Pause pilot light flashes to indicate that the machine is not working. Once the problem has been eliminated, press the Start/Pause button to restart the programme. If after all checks, the problem persists, contact your local Service Centre.

Malfunction Possible Cause / Solution The door has not been closed. (Red Start/Pause pilot light flashes) · Close firmly the door. The plug is not properly inserted in the power socket. · Insert the plug into the power socket. There is no power at the socket. · Please check your domestic electrical installation. The main fuse has blown. · Replace the fuse. The selector dial is not correctly positioned and the Start/Pause button has not been depressed.



[You're reading an excerpt. Click here to read official ZANUSSI](#)

[ZWF16070W user guide](#)

<http://yourpdfguides.com/dref/955534>

· Please turn the selector dial and press the Start/Pause button again.

The delay start has been selected. · If the laundry are to be washed immediately, cancel the delay start The water tap is closed. (Red Start/Pause pilot light flashes) · Open the water tap. The inlet hose is squashed or kinked. (Red Start/Pause pilot light flashes) · Check the inlet hose connection. The filter in the inlet hose is blocked. (Red Start/Pause pilot light flashes) · Clean the water inlet hose filter. The door is not properly closed. (Red Start/Pause pilot light flashes) · Close firmly the door. The washing machine does not start: The machine does not fill: 19 Malfunction The machine fills then empties immediately: Possible Cause / Solution The end of the drain hose is too low.

· Refer to relevant paragraph in «water drainage» section. The drain hose is squashed or kinked. (Red Start/ Pause pilot light flashes) · Check the drain hose connection. The drain pump is clogged. (Red Start/Pause pilot light flashes) · Clean the drain pump.

The option or has been selected. · Select the Drain or Spin programmes The laundry is not evenly distributed in the drum. · Redistribute the laundry. Too much detergent or unsuitable detergent (creates too much foam) has been used. · Reduce the detergent quantity or use another one.

@@@ · Check the water inlet hose connection. The inlet hose is damaged. · Change it with a new one. @@@@ Too little detergent or unsuitable detergent has been used. · Increase the detergent quantity or use another one. Stubborn stains have not been treated prior to washing. · Use commercial products to treat the stubborn stains. The correct temperature was not selected. · Check if you have selected the correct temperature. Excessive laundry load.

@@ · Wait the end of washing cycle. The door lock has not been released. The door will not open: · Wait about 2 minute. There is water in the drum. · Select drain or spin programme to empty out the water. The transit bolts and packing have not been removed. · Check the correct installation of the appliance. The support feet have not been adjusted. · Check the correct levelling of the appliance. @@ · Redistribute the laundry.

Maybe there is very little laundry in the drum. · Load more laundry. @@ The laundry is redistributed by reverse rotation of the drum. @@@@ @@@@ Redistribute the laundry. @@ This new motor The machine makes an unusual noise traditionalmore even distribution of ensures a softer start and the laundry in the drum when spinning, as well as increased stability of the machine.

Machines based on modern technology operate very No water is visible in the drum economically using very little water without affecting performance. If you are unable to identify or solve the problem, contact our service centre. Before telephoning, make a note of the model, serial number and purchase date of your machine: the Service Centre will require this information. Mod. .

.. ... Prod. No.

... ... Ser.

No. ... .

... ..

Mod. Prod ... . No. ... .

.. ... ..

Ser. No. ...

... ..

. 21 Technical data Dimensions Width Height Depth (including the porthole) Electrical connection Voltage Overall power - Fuse 60 cm 85 cm 63 cm Information on the electrical connection is given on the rating plate on the inner edge of the appliance door Water supply pressure Minimum Maximum 0,05 MPa 0,8 MPa 6 3 3 2 kg kg kg kg Maximum Load Cotton Synthetics Delicates Woollens and handwash Maximum Spin Speed 0 1000 rpm (ZWF 10070 W) 1200 rpm (ZWF 12070 W - S) 1400 rpm (ZWF 14070 W) 1600 rpm (ZWF 16070 W - S) 22 Consumption values Programme Programme duration (in minutes) 125 155 100 145 80 90 55 60 60 30 30 65 100 45 2 10 Energy consumption (in kWh) 2.0 1.02 1.3 1.14 0.8 0.35 0.55 0.4 0.

4 0.25 0.2 0.5 0.65 0.1 - Water consumption (in litres) 61 54 58 54 51 60 60 53 53 55 47 60 59 42 - Cottons 95°C Cottons 60° Eco(\*) Cottons 60°C - 40°C Cottons 40°C Eco Synthetics 50°C - 40°C Synthetics Easy Iron 40°C Delicates 40°C - 30°C Wool 40°C Handwash 40° Mini 30' Silk 30°C Sport Shoes 40°C Sport 40°C Rinse Drain Spin Infos The consumption data shown on this chart is to be considered purely indicative, as it may vary depending on the quantity and type of laundry, on the inlet water temperature and on the ambient temperature. It refers to the highest temperature for each wash programme. (\*) The "Cottons 60° Eco" is the reference programme for the data entered in the energy label, in compliance with EEC 92/75 standards. 23 Installation instruction Unpacking All transit bolts and packing must be removed before using the appliance. You are advised to keep all transit devices so that they can be refitted if the machine ever has to be transported again.

5. Remove the bracket D, refit the six smaller bolts C and slide out the relevant plastic spacer E. 1. After removing all the packaging, carefully lay machine on it's back to remove the polystyrene base from the bottom. 2.

Remove the power supply cable and the draining hose from the hose holders on the rear of the appliance. 6. Open the porthole, take out the inlet hose from the drum and remove the polystyrene block fitted with the adhesive tape on the door seal. Open the porthole, take out the inlet hose from the drum and remove the polystyrene block fitted with the adhesive tape on the door seal. 7.

Fill the smaller upper hole and the two large ones with the corresponding plastic plug caps supplied in the bag containing the instruction booklet. Positioning Install the machine on a flat hard floor. Make sure that air circulation around the machine is not impeded by carpets, rugs etc. Check that the machine does not touch the wall or other kitchen units. Level the washing machine by raising or lowering the feet. The feet may be tight to adjust as they incorporate a self locking nut, but the machine MUST be level and stable. If necessary, check the setting with a spirit level. Any necessary adjustment can be made with a spanner. Accurate levelling prevents vibration, noise and displacement of the machine during operation. Never place cardboard, wood or similar materials under the machine to compensate for any unevenness in the floor.

A C B C B 3. With a suitable spanner unscrew and remove the central rear bolt A. 4. Unscrew and remove the two large rear bolts B and the six smaller bolts C. E C C D 24 Water inlet An inlet hose is supplied and can be found inside the machine drum. Do not use the hose from your previous machine to connect to the water supply. 1. Open the porthole and extract the inlet hose. 2. Connect the hose with the angled connection to the machine.

Do not place the inlet hose downwards. Angle the hose to the left or right depending on the position of your water tap. 3. Set the hose correctly by loosening the ring nut.

[You're reading an excerpt. Click here to read official ZANUSSI ZWF16070W user guide](#)



<http://yourpdfguides.com/dref/955534>

After positioning the inlet hose, be sure to tighten the ring nut again to prevent leaks.

4. Connect the hose to a tap with a 3/4" thread. Always use the hose supplied with the appliance. The inlet hose must not be lengthened. If it is too short and you do not wish to move the tap, you will have to purchase a new, longer hose specially designed for this type of use.

45° The appliance must be connected to a cold water supply. A minimum water pressure of 0.05 MPa (0.5 bar) is required for safe operation of the appliance. If you cannot make the cold water connection direct from the rising mains, you may be able to operate the appliance from your cold water storage system. There should be a minimum distance of 5.02m (16.5 ft) between the appliance's inlet and the bottom of the water storage tank. Water drainage This appliance is designed to be permanently plumbed into your home's drainage system using one of the following methods. 1.

Into a drainage standpipe. U piece supplied NOTE Installation should comply with local water authority and building regulations' requirements. Firstly form a hook in the end of the drain hose using the «U» piece supplied. Place the drain hose into your standpipe, which should have an internal diameter of approximately 38mm thus ensuring there is an air break between the drain hose and standpipe. When discharging into a standpipe ensure that the top of the standpipe is no more than 90 cm (35.4") and no less than 60 cm (23.6") above floor level. 25 30 cm (12") 35° Special Sport 40° Sport Shoes 40° Silk Mini 30' Off 95° 60° Eco 60° Cottons 3h 6h 9h 1000 900 700 Prewash Intensive Super Quick Spin Options Extra Rinse 40° Eco 40° Synthetics 50° 40° Spin Drain Rinse 30° 40° Delicates Easy Iron 40° Wash Door End Start/Pause 1000 6kg Cold Hand Wash 30° Wool ZWF10070W 38 mm (1.2) standpipe diameter Special Sport 40° Sport Shoes 40° Silk Mini 30' Off 95° 60° Eco 60° Cottons 3h 6h 9h 1000 900 700 Prewash Intensive Super Quick Spin Options Extra Rinse 40° Eco 40° Synthetics 50° 40° Spin Drain Rinse 30° 40° Delicates Easy Iron 40° Wash Door End Start/Pause 1000 6kg Cold Hand Wash 30° Wool ZWF10070W Min. 60 cm (23.

6) Max. 90 cm (35.4) Levelling Level the washing machine by raising or lowering the feet. The feet may be tight to adjust as they incorporate a self locking nut, but the machine MUST be level and stable. Any necessary adjustment can be made with a spanner.

Accurate levelling prevents vibration, noise and displacement of the machine during operation. Some vibration is inevitable, especially if mounted on a wooden floor. Sprung wooden floors are particularly susceptible to vibration. For advice, consult a builder. If possible, always place the machine on a solid floor.

Special conditions If the floor is carpeted or covered with crumbly or soft material, insert a rigid support base under the feet to prevent noise, vibration or displacement. The base should protrude a few centimetres beyond the edges of the machine. WARNING! The machine should NOT be placed on deep pile carpeting. NOTE Please ensure that when the appliance is installed it is easily accessible for the engineer in the event of a breakdown. In the interest of the environment Washing machines and dishwashers should be connected to the FOUL drainage system, the water will then be taken to a sewage works for treatment before being discharged safely into a river. It is essential that these appliances are not connected to the surface water drainage system as this water is discharged directly into a river or stream and may cause pollution. The drain hose may be extended to a maximum of 4 metres. An additional drain hose and joining piece is available from your local Service Force Centre. The joining piece must have an internal diameter of 18mm. If your drain hose looks like this (see below) you do not require the «U» piece.

Just push the hose firmly into the standpipe. 2. Onto a sink outlet spigot. If the outlet spigot has not been used before, remove any blanking plug that may be in place. Loop Push the drain hose onto the spigot and secure with a clip if required, ensure a loop is formed in the drain hose (see diagram) to prevent waste from the sink entering the washing machine. Important! Before connecting the machine to new pipework or to pipework that has not been used for some time, run off a reasonable amount of water to flush out any debris that may have collected in the pipes. 26 If you require any further advice please contact your local water authority. SHOWER SINK BATH TOILET BIDET WASHING MACHINE RAINWATER 'RUN-OFF' DISHWASHER FOUL DRAIN SURFACE WATER DRAINS & SEWERS FOUL SEWERS SEWAGE TREATMENT WORKS TREATED DISCHARGE RIVER RIVER UNTREATED DISCHARGE

Electrical connection Any electrical work required to install this appliance should be carried out by a qualified electrician or competent person. WARNING! This appliance must be earthed. The manufacturer declines any liability should this safety measure not be observed.

Before switching on, make sure the electricity supply voltage is the same as that indicated on the appliance's rating plate. IMPORTANT! Information on the electrical connection is given on the rating plate on the inner edge of the appliance door. The appliance is supplied with a 13amp plug fitted. In the event of having to change the fuse in the plug supplied, a 13amp ASTA approved (BS1363/A) fuse must be used. Should the plug need to be replaced for any reason, proceed as described below.

The wires in the mains lead are coloured in accordance with the following code: Green and Yellow .....

.....

.....

.....

- Earth Blue .....

.....

.....

.....

.....

.....- Neutral Brown...

.....

.....

.....

.....

.....

.....

.....- Live The wire coloured green GREEN & YELLOW and yellow must be connected to the terminal marked with the letter «E» or by the or BROWN earth symbol coloured green and BLUE CORD CLAMP yellow. The wire coloured blue must be connected to the terminal marked «N» or coloured black. The wire coloured brown must be connected to the terminal marked «L» or coloured red.



*Upon completion there must be no cut, or stray strands of wire present and the cord clamp must be secure over the outer sheath. E N L WARNING! A cut off plug inserted into a 13 amp socket is a serious safety (shock) hazard. Ensure that the cut off plug is disposed of safely. Should the appliance power supply cable need to be replaced, this must be carried out by our Service Force Centre. The power supply cable must be easily accessible after installing the appliance. Permanent connection In the case of permanent connection it is necessary that you install a double pole switch between the appliance and the electricity supply (mains), with a minimum gap of 3mm between the switch contacts and of a type suitable for the required load in compliance with the current electrical regulations.*



[You're reading an excerpt. Click here to read official ZANUSSI ZWF16070W user guide](http://yourpdfguides.com/dref/955534)  
<http://yourpdfguides.com/dref/955534>

The switch must not break the yellow and green earth cable at any point. 13 A 27 Environmental concerns Packaging materials The materials marked with the symbol are recyclable. >PE<=polyethylene >PS<=polystyrene >PP<=polypropylene This means that they can be recycled by disposing of them properly in appropriate collection containers. Old machine Use authorised disposal sites for your old appliance.

Help to keep your country tidy! The symbol on the product or on its packaging indicates that this product may not be treated as household waste. Instead it shall be handed over to the applicable collection point for the recycling of electrical and electronic equipment. @@@@ The machine works more economically if it is fully loaded. @@ Measure out detergent according to the water hardness, the degree of soiling and the quantity of laundry being washed. 28 Guarantee conditions Standard guarantee conditions We, Zanussi-Electrolux, undertake that if within 12 months of the date of the purchase this Zanussi-Electrolux appliance or any part thereof is proved to be defective by reason only of faulty workmanship or materials, we will, at our option repair or replace the same FREE OFCHARGE for labour, materials or carriage on condition that: The appliance has been correctly installed and used only on the electricity supply stated on the rating plate.

The appliance has been used for normal domestic purposes only, and in accordance with the manufacturer's instructions. The appliance has not been serviced, maintained, repaired, taken apart or tampered with by any person not authorised by us. Electrolux Service Force Centre must undertake all service work under this guarantee. @@@@ Appliances found to be in use within a commercial environment, plus those which are subject to rental agreements. Products of Electrolux manufacturer that are not marketed by Electrolux.

Service and Spare Parts. In the event of your appliance requiring service, or if you wish to purchase spare parts, please contact your local Service Force Centre by telephoning: 0870 5 929 929 Your telephone call will be automatically routed to the Service Force Centre covering your postcode area. For the address of your local Service Force Centre and further information about Service Force, please visit the website at [www.serviceforce.co.uk](http://www.serviceforce.co.uk) Before calling out an engineer, please ensure you have read the details under the heading «Something not working». When you contact the Service Force Centre you will need to give the following details: 1 2 3 4 Your name, address and postcode. Your telephone number. Clear concise details of the fault. The model and Serial number of the appliance (found on the rating plate).

5 The purchase date. Please note a valid purchase receipt or guarantee documentation is required for in guarantee service calls. Customer Care For general enquiries concerning your Electrolux appliance, or for further information on Electrolux products please contact our Customer Care Department by letter or telephone at the address below or visit our website at [www.electrolux.co.uk](http://www.electrolux.co.uk) Customer Care Department Electrolux Major Appliances Addington Way Luton Bedfordshire, LU4 9QQ Tel: 08705 727 727 (\*) (\*) Calls may be recorded for training purposes 29 For Customer Service in The Republic of Ireland please contact us at the address below: Electrolux Group (Irl) Ltd Long Mile Road, Dublin 12, Republic of Ireland Tel: + 353 (0)1 4090751 Email: [service.eid@electrolux.ie](mailto:service.eid@electrolux.ie) European guarantee This appliance is guaranteed by Electrolux, in each of the countries listed in the following page, for the period specified in the appliance guarantee or otherwise by law. If you move from one of these countries to another of these countries the appliance guarantee will move with you subject to the following qualifications: The appliance guarantee starts from the date you first purchased the appliance which will be evidenced by production of a valid purchase document issued by seller of the appliance. The appliance guarantee is for the same period and to the same extent for labour and parts as exists in your country of residence for this particular model or range of appliances.

The appliance guarantee is personal to the original purchaser of the appliance and cannot be transferred to another user. The appliance is installed and used in accordance with instructions issued by Electrolux and is only used within the home, i.e. is not used for commercial purposes. The appliance is installed in accordance with all relevant regulations in force within your new country of residence.

The provisions of this European Guarantee do not affect any of the rights granted to you by law. 30 [www.electrolux.com](http://www.electrolux.com) Albania Belgique/België/Belgien Česká republika Danmark Deutschland Eesti España France Great Britain Hellas Hrvatska Ireland Italia Latvija Lituania Luxembourg Magyarország Nederland Norge Österreich Polska Portugal Romania Schweiz-Suisse-Svizzera Slovenija Slovensko Suomi Sverige Tüürkiye +35 5 4 261 450 +32 2 363 04 44 +420 2 61 12 61 12 +45 70 11 74 00 +49 180 32 26 622 +37 2 66 50 030 +34 902 11 63 88 [www.electrolux.com](http://www.electrolux.com).

fr +44 8705 929 929 +30 23 10 56 19 70 +38 51 63 23 338 +353 1 40 90 753 +39 (0) 434 558500 +37 17 84 59 34 +370 5 27 80 609 +35 2 42 43 13 01 +36 1 252 1773 +31 17 24 68 300 +47 81 5 30 222 +43 18 66 400 +48 22 43 47 300 +35 12 14 40 39 39 +40 21 451 20 30 +41 62 88 99 111 +38 61 24 25 731 +421 2 43 33 43 22 [www.electrolux.fi](http://www.electrolux.fi) +46 (0)771 76 76 76 +90 21 22 93 10 25 +7 095 937 7837 Rr. Pjeter Bogdani Nr. 7 Tirane Bergensesteenweg 719, 1502 Lembeek Budjovická 3, Praha 4, 140 21 Sjællandsgade 2, 7000 Fredericia Muggenhofer Str. 135, 90429 Nürnberg Mustamäe tee 24, 10621 Tallinn Carretera M-300, Km. 29,900 Alcalá de Henares Madrid Addington Way, Luton, Bedfordshire LU4 9QQ 4, Limnou Str., 54627 Thessaloniki Slavonska avenija 3, 10000 Zagreb Longmile Road Dublin 12 C.so Lino Zanussi, 26 - 33080 Porcia (PN) Kr. Barona iela 130/2, LV-1012, Riga Verkiu, 2 9, 09108 Vilnius, Lithuania Rue de Bitbourg, 7, L-1273 Hamm H-1142 Budapest XIV, Erzsébet királyné útja 87 Vennootweg 1, 2404 CG - Alphen aan den Rijn Risløkkvn.

2, 0508 Oslo Herziggasse 9, 1230 Wien ul. Kolejowa 5/7, Warsaw Quinta da Fonte - Edifício Gonçalves Zarco - Q35 -2774-518 Paço de Arcos Str. Garii Progresului 2, S4, 040671 RO Industriestrasse 10, CH-5506 Mägenwil Traska 132, 1000 Ljubljana Electrolux Slovakia s.r.o., Electrolux Domáce spotrebiče SK, Seberínho 1, 821 03 Bratislava Electrolux Service, S:t Göransgatan 143, S-105 45 Stockholm Tarlabai caddesi no : 35 Taksim Istanbul 129090 , , 16, ""

31 [www.electrolux.com](http://www.electrolux.com) [www.zanussi-electrolux.co](http://www.zanussi-electrolux.co).

uk 132973860 Subject to change without notice .



[You're reading an excerpt. Click here to read official ZANUSSI ZWF16070W user guide](#)  
<http://yourpdfguides.com/dref/955534>