




Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for ZANUSSI ZWF1621W. You'll find the answers to all your questions on the ZANUSSI ZWF1621W in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual ZANUSSI ZWF1621W
User guide ZANUSSI ZWF1621W
Operating instructions ZANUSSI ZWF1621W
Instructions for use ZANUSSI ZWF1621W
Instruction manual ZANUSSI ZWF1621W



WASHING MACHINE
ZWF 1021 W - ZWF 1221 W
ZWF 1221 S - ZWF 1421 W
ZWF 1421 S - ZWF 1621 W
ZWF 1621 S

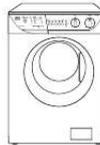

 Quick Installation Guide:
visit our WEB SITE to view an install video
www.video.uk.electrolux.com

132562920

INSTRUCTION BOOKLET

GB



[You're reading an excerpt. Click here to read official ZANUSSI ZWF1621W user guide](http://yourpdfguides.com/dref/955541)
<http://yourpdfguides.com/dref/955541>

Manual abstract:

@@Care should be taken when moving it. @@All packing and transit bolts must be removed before use. Serious damage can occur to the product and to property if this is not adhered to. See relevant section in instructions. Any plumbing work required to install this appliance should be carried out by a qualified plumber or competent person. Any electrical work required to install this appliance should be carried out by a qualified electrician or competent person. Care must be taken to ensure that the appliance does not stand on the electrical supply cable. @@@@Pets and children have been known to climb into washing machines. Please check your drum before use. The glass door becomes very hot during the washing cycle.

@@Keep all packaging well away from children. Keep all detergents in a safe place out of children's reach. Use Do not overload the appliance. See relevant section in the instruction book. Only wash fabrics which are designed to be machine washed.

If in doubt, consult the care label on the clothes. Before washing, ensure that all pockets are empty and buttons and zips are fastened. Avoid washing frayed or torn articles and treat stains such as paint, ink, rust, and grass before washing. Underwired bras must NOT be machine washed. Any objects such as coins, safety pins, nails, screws, stones or any other hard, sharp material can cause extensive damage and must not be placed into the machine.

Garments which have been in contact with volatile petroleum products should not be machine washed. If volatile cleaning fluids are used, care should be taken to ensure that the fluid is removed from the garment before placing in the machine. Wash small items such as socks, laces, washable belts etc in a washing bag or pillow case as it is possible for such items to slip down between the tub and the inner drum. Only use the advised quantities of fabric softener. Damage to the fabric can ensue if you over-fill. Refer to the manufacturer's recommendations of quantities. As some duvets and eiderdowns should be washed in large commercial machines because of their bulk, please check with the manufacturer of the item before washing in a domestic machine. Leave the porthole door slightly ajar between washes to preserve the door seal. Under no circumstances should you attempt to repair the machine yourself. Repairs carried out by inexperienced persons may cause injury or serious malfunctioning.

Contact your local Service Force Centre. Always insist on genuine Zanussi/Electrolux spare parts. Always unplug the appliance and turn off the water supply after use. 2 Contents For the User Important Safety Information Your New Washing Machine Description of the Appliance Detergent dispenser drawer Child safety feature 2 4 5 5 5 6-7 8 9-12 9 9 9 9 9 10 10 10 10 10 10 11 11 11 11 11 11 12 12 Washing Hints Which detergent?... And in which form? 13-14 14 14 15 16-17 18-19 18 18 18 18 18 18-19 19 19 19 20-21 21-22 22 Wash Care Symbols Washing Programmes Maintenance and Cleaning Descaling After each wash Maintenance Wash External cleaning Cleaning the dispenser drawer Cleaning the drawer recess Cleaning the pump Cleaning the water inlet filter The dangers of freezing Emergency emptying out The Control Panel Programme information Operating Sequence Washing 5 kg of white cotton at 95°C Load the laundry Measure out the detergent and the fabric softener Select the required programme Select the spin speed or option "RINSE HOLD" or "NO SPIN" Select the required option Select the delay start Start the programme Altering an option or a running programme Interrupting a programme Cancelling a programme Opening the door after the programme has started At the end of the programme Washing 2.5 kg of mixed fabrics at 40°C Load the laundry Measure out the detergent and the fabric softener Select the required programme Select the spin speed or option "RINSE HOLD" or "NO SPIN" Select the required option(s) Start the programme At the end of the programme Something Not Working Service and Spare Parts Guarantee Conditions For the Installer Installation Instructions Technical Specifications Unpacking Positioning Water inlet Water drainage Levelling Special conditions In the interest of the environment Electrical connection 23 23 24 24 25 25-26 26 26 26-27 27 Guide to use the Instruction Book The following symbols will be found in the text to guide you throughout the instructions: Safety instructions Hints and tips Environmental information 3 Your New Washing Machine Your new washing machine meets all modern requirements for effective treatment of laundry with low water, energy and detergent consumption. The programme selector dial combines the function of programme and temperature selection, making it easier to set the programme.

The programme progress display shows the delay start, the functioning of the machine and the end of the programme. The special wool programme with its new delicate wash system treats your woollens with extreme care. The ECO VALVE allows total use of detergent and reduces water consumption so saving energy. In the interest of the environment Ecological hints To save water and energy and help protect the environment, we recommend that you follow these hints: Adjust the quantity of detergent according to the hardness of your water supply, the amount of laundry and the degree of soiling. A programme without prewash is sufficient for normally soiled laundry.

The machine works more economically if it is fully loaded. With adequate pre-treatment, stains and limited soiling can be removed; the laundry can then be washed at a lower temperature, so saving energy. Materials marked with the symbol are recyclable. Check with your local Council or Environmental Health Office to see if there are facilities in your area for re-cycling this appliance. When the appliance is to be scrapped, cut off the power supply cable and make the door lock device unusable to prevent young children from being trapped inside.

Help to keep your country tidy - use authorised disposal sites for your old appliance. The symbol on the product or on its packaging indicates that this product may not be treated as household waste. Instead it shall be handed over to the applicable collection point for the recycling of electrical and electronic equipment. By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling of this product. For more detailed information about recycling of this product, please contact your local city office, your household waste disposal service or the shop where you purchased the product. How do we help to protect the environment? We use recycled paper! Important Your machine is fitted with a balance control device, which ensures the machine is stable during the spin.



[You're reading an excerpt. Click here to read official ZANUSSI ZWF1621W user guide](http://yourpdfguides.com/dref/955541)
<http://yourpdfguides.com/dref/955541>

We recommend that a maintenance wash be performed on a regular basis. To run a maintenance wash: The drum should be empty of laundry. Select the hottest cotton wash programme. Use a normal measure of detergent, must be a powder (such as Ariel Futur). P0038 Cleaning the pump The pump should be inspected if the machine does not empty and/or spin the machine makes an unusual noise during draining due to objects such as safety pins, coins etc. blocking the pump. Proceed as follows: · Disconnect the appliance. · If necessary wait until the water has cooled down. · Open the pump door. External cleaning Clean the exterior cabinet of the appliance with mild washing up liquid and water only, and then dry thoroughly.

Cleaning the dispenser drawer The washing powder and additive dispenser drawer should be cleaned regularly. Remove the drawer by pressing the catch downwards and by pulling it out. Flush it out under a tap, to remove any traces of accumulated powder. To aid cleaning, the top part of the additive compartment should be removed. P1114 · Place a container close to the pump to collect any spillage.

· Pull out the emergency emptying hose, place it in the container and remove its cap. 18 · When no more water comes out, unscrew the pump cover and remove it. Always keep a rag nearby to dry up spillage of water when removing the cover. Turn off the water tap. Unscrew the water inlet hose. Clean the filter using a hard bristle brush. Tighten up the inlet hose. P1115 P1090 · Remove any objects from the pump impeller by rotating it. The dangers of freezing If the machine is exposed to temperatures below 0°C, certain precautions should be taken. Turn off the water tap. Unscrew the inlet hose. Place the end of the emergency emptying hose and that of the inlet hose in a bowl placed on the floor and let water drain out. Screw the water inlet hose back on and reposition the emergency emptying hose after having put the cap on again. When you intend to start the machine again, make sure that the room temperature is above 0°C. Important! · Put the cap back on the emergency emptying hose and place the latter back in its seat.

Every time you drain the water through the emergency emptying hose you must pour 2 litres of water into the main wash compartment of the detergent drawer and then run the drain programme. This will activate the ECO valve and avoid the detergent remains being wasted. P1117 · Screw the pump cover fully in. · Close the pump door. Emergency emptying out If the water is not discharged, proceed as follows to empty out the machine: · pull out the plug from the power socket; · close the water tap; · if necessary, wait until the water has cooled down; · open the pump door; · place a bowl on the floor and place the end of the emergency emptying hose into the bowl. Remove its cap. The water should drain by gravity into the bowl. When the bowl is full, put the cap back on the hose.

Empty the bowl. @@@@ @@@@ @@@@ @@@@ @@@@ @@@@ @@@@ @@@@ @@@@ @@@@ The plug is not properly inserted in the power socket.

@@ The selector dial is not correctly positioned and the Start/Pause button has not been depressed. The delay start has been selected. Ensure the water tap is open. The filter in the inlet hose is blocked. The inlet hose may be squashed or kinked.

The door has not been closed. The end of the drain hose is too low. The end of the drain hose is submerged in water. There is no vent in the end of the drain hose. The drain hose may be squashed or kinked.

The option RINSE HOLD or NO SPIN has been selected. The drain pump may be blocked. The drain hose extension, if fitted, is not correct. Follow the instructions for connecting to the waste. The drainage system pipes are blocked. The wash load is unbalanced: redistribute the clothes inside the drum to allow the machine to spin. Too much detergent or unsuitable detergent has been used (creates too much foam). Check whether there are any leaks from one of the inlet hose fittings. It is not always easy to see this as the water runs down the hose; check to see if it is damp. The drain hose may be damaged or not securely positioned.

The cap on the emergency emptying hose has not been replaced after cleaning the pump or not fully screwed up. The drainage system pipes are blocked. Too little detergent or unsuitable detergent has been used. An insufficient amount of detergent leaves the laundry looking grey and causes lime scale to form.

Stubborn stains have not been treated prior to washing The correct wash programme has not been selected. Too much laundry has been placed in the drum.

20 The machine does not fill The machine fills then empties immediately The machine does not empty and/or does not spin There is water on the floor Unsatisfactory washing results Symptom The machine vibrates when spinning Possible causes The internal packing has not been removed. The machine is in contact with the wall or furniture. The machine is not stable and level (check diagonally). The washing load is badly distributed in the drum.

Maybe there is very little laundry in the drum. The programme is still running. The door lock has not yet released. Water in the tub: the door cannot be opened if water is present in the tub. The electronic unbalance detection device has cut in because the laundry is not evenly distributed in the drum.

The laundry is redistributed by reverse rotation of the drum. This may happen several times before the unbalance disappears and normal spinning can resume. If, after 20 minutes, the laundry is still not evenly distributed in the drum, the machine will not spin. In this case, redistribute the load manually and reselect the spin programme. The machine is fitted with a type of motor which makes an unusual noise compared with other traditional motors.

This new motor ensures a softer start and more even distribution of the laundry in the drum when spinning, as well as increased stability of the machine.

Machines based on modern technology operate very economically using very little water without affecting performance. Before calling out an engineer, please ensure you have read the details under the heading "Something Not Working". When you contact the Service Force Centre you will need to give the following details: 1. Your name, address and post code 2. Your telephone number 3. Clear and concise details of fault 4. The model and serial number of the appliance (found on the rating plate - see picture) 5. The purchase date. Please note that a valid purchase receipt or guarantee documentation is required for inguarantee service calls.

The door will not open Spinning starts late or the machine does not spin The machine makes an unusual noise No water is visible in the drum Service & Spare Parts In the event of your appliance requiring service, or if you wish to purchase spare parts, please contact your local Service Force Centre by telephoning: 0870 5 929929 Your telephone call will be automatically routed to the Service Force Centre covering your post code area.



[You're reading an excerpt. Click here to read official ZANUSSI](#)

[ZWF1621W user guide](#)

<http://yourpdfguides.com/dref/955541>

For the address of your local Service Force Centre and further information about Service Force, please visit the website at www.serviceforce.co.uk. For Customer Service in Ireland please contact us at the address below: Zanussi Electrolux - Electrolux Group (Irl) Ltd Long Mile Road - Dublin 12 Republic of Ireland Tel: +353 (0)1 4090751 Email: service.aid@electrolux.ie To buy accessories, consumables and spare parts at our online shop please visit: <http://www.zanussielectrolux.co>.

uk 21 Mo Pro d.
. d. No ...
... ..
... Ser . No
.
Mod.
..... Prod. No. ..
..... P0042 BD Ser.
No.
.....

Customer Care Department For general enquiries concerning your Zanussi Electrolux appliance or for further information on Zanussi Electrolux products, please contact our Customer Care Department by letter or telephone at the address below or visit our website at www.zanussi.co.uk Customer Care Department - Zanussi Electrolux Major Appliances Addington Way - Luton - Bedfordshire LU4 9QQ Tel 08705 727727* * calls to this number may be recorded for training purposes. Guarantee Conditions Standard guarantee conditions We, Zanussi Electrolux, undertake that if, within 12 months of the date of the purchase, this ZANUSSI ELECTROLUX appliance or any part thereof is proved to be defective by reason only of faulty workmanship or materials, we will, at our option repair or replace the same FREE OF ANY CHARGE for labour, materials or carriage on condition that: The appliance has been correctly installed and used only on the electricity supply stated on the rating plate. The appliance has been used for normal domestic purposes only, and in accordance with the manufacturer's instructions. The appliance has not been serviced, maintained, repaired, taken apart or tampered with, by any person not authorised by us. All service work under this guarantee must be undertaken by a Service Force Centre. Any appliance or defective part replaced shall become the Company's property. This guarantee is in addition to your statutory and other legal rights.

Home visits are made between 8.30am and 5.30pm Monday to Friday. Visits may be available outside these hours in which case a premium will be charged.

Appliances found to be in use within a commercial environment, plus those which are subject to rental agreements. Products of Zanussi Electrolux manufacture which are NOT marketed by Zanussi Electrolux. European guarantee If you should move to another country within Europe then your guarantee moves with you to your new home subject to the following qualifications: The guarantee starts from the date you first purchased your product. The guarantee is for the same period and to the same extent for labour and parts as exists in the new country of use for this brand or range of products. The guarantee relates to you and cannot be transferred to another user. Your new home is within the European Community (EC) or European Free Trade Area. The product is installed and used in accordance with our instructions and is only used domestically, i.e. a normal household. The product is installed taking into account regulations in your new country. Before you move please contact your nearest Customer Care Centre, listed below, to give them details of your new home.

They will then ensure that the local Service Organisation is aware of your move and able to look after you and your appliances. France Germany Italy Sweden UK Ireland 22 Senlis Nurnberg Pordenone Stockholm Luton Dublin +33 (0)344 62 20 13 +49 (0)800 234 7378 +39 (0)800 11 75 11 +46 (0)20 78 77 50 +44(0) 8705 727 727 +353 (0)1 40907528 Exclusions This guarantee does not cover: Damage or calls resulting from transportation, improper use or neglect, the replacement of any light bulbs or removable parts of glass or plastic. Costs incurred for calls to put right an appliance which is improperly installed or calls to appliances outside the United Kingdom. Installation Instructions @@Care must be taken to ensure that the appliance does not stand on the electrical supply cable. Any electrical work required to install this appliance should be carried out by a qualified electrician or competent person. Any plumbing work required to install this appliance should be carried out by a qualified plumber or competent person. Should the appliance power supply cable need to be replaced, this should be carried out by our Service Force Centre. Technical Specifications DIMENSIONS Height Width Depth 85 cm 60 cm 62.5 cm 230-240 V/50 Hz 2050 W (10 A) Minimum Maximum Cotton, linen Synthetics Delicate fabrics Wool/Handwash/Miniprogram Maximum 0.05 MPA (0.5 bar) 800 kP8880.80 MPA (8.0 bar) 6.0 kg 2.5 kg 2.

5 kg 2.0 kg 1000 rpm (ZWF 1021 W) 1200 rpm (ZWF 1221 W - S) 1400 rpm (ZWF 1421 W - S) 1600 rpm (ZWF 1621 W - S) 1.14 kWh 54 litres 155 minutes
POWER SUPPLY VOLTAGE TOTAL POWER ABSORBED WATER PRESSURE MAX LOAD CAPACITY SPIN SPEED CONSUMPTION DATA FOR
WASHING 6 KG NORMALLY SOILED COTTON ITEMS AT 60°C (PROGR. 60E) Energy Water Times This appliance complies with the following E.E.C.

Directives: - 73/23 EEC of 19.2.73 (Low Voltage Directive) and subsequent modifications; - 89/336 EEC of 3.5.

89 (Electromagnetic Compatibility Directive) and subsequent modifications. 23 Unpacking The transport safeguard must be removed before putting the appliance into operation. Important ! You are advised to keep all the packaging for re-use in case the machine is to be transported again. After removing all the packaging, with assistance carefully lay machine on it's back to remove the polystyrene base from the bottom. Remove the power supply cable and the draining hose from the hose holders on the rear of the appliance.

Fill the smaller upper hole and the two large ones with the corresponding plastic plug caps supplied in the bag containing the instruction booklet. HEC0005 HEC0009 Important! All the different plug caps are supplied with the appliance in the plastic bag containing the instruction booklet. Connect the water inlet hose as described under the paragraph "Water inlet". Positioning HEC0008 HEC0001 With a suitable spanner unscrew and remove the central rear bolt A.

Slide out the relevant plastic spacer.

. Unscrew and remove the two large rear bolts B and the six smaller bolts C. A C C B DB HEC0002 HEC0003 Remove the bracket D. Open the porthole and remove the polystyrene block fitted with the adhesive tape on the door seal. Install the machine on a flat hard floor. Make sure that air circulation around the machine is not impeded by carpets, rugs etc. Check that the machine does not touch the wall or other kitchen units. Never place cardboard, wood or similar materials under the machine to compensate for any unevenness in the floor. Your new washing machine has been designed to be permanently plumbed in to your home's water supply and drainage system. However, if this is not possible, it may be connected to a suitable existing tap with the drain hose discharging into a sink.



[You're reading an excerpt. Click here to read official ZANUSSI
ZWF1621W user guide](http://yourpdfguides.com/dref/955541)
<http://yourpdfguides.com/dref/955541>

The appliance has an inlet hose, with female 3/4" BSP thread connector. If this connection is not compatible with the plumbing of the existing installation, a variety of connectors are available from good hardware stores and plumbers merchants to suit most domestic plumbing. Any alteration to your existing plumbing must be carried out by a competent person, or qualified plumber. Installation on a Suspended Floor Suspended wooden floors are particularly susceptible to vibration. To help prevent vibration we recommend you place a waterproof wood panel, at least 15 mm thick under the appliance, secured to at least 2 floor beams with screws. If possible install the appliance in one of the corners of the room, where the floor is more stable. HEC0011 HEC0010 24 Water inlet An inlet hose is supplied and can be found inside the machine drum. Do not use the hose from your previous machine to connect to the water supply. 1. Open the porthole and extract the inlet hose .

2. Connect the hose with the angled connection to the machine. Important! Do not place the inlet hose downwards. Angle the hose to the left or right depending on the position of your water tap. Water drainage This appliance is designed to be permanently plumbed into your home's drainage system using one of the following methods.
1. Into a drainage standpipe. Firstly form a hook in the end of the drain hose using the "U" piece" supplied. U piece supplied P1199 HEC0006 HEC0013 P1088 When discharging into a standpipe ensure that the top of the standpipe is no more than 90cm (35.4") and no less than 60cm (23.6") above floor level. 3 pin Installation should comply with local water authority and building regulations' requirements. The appliance must be connected to a cold water supply. A minimum water pressure of 0.05 MPa (0.5 bar) is required for safe operation of the appliance. @@@@60 cm (23.6) Max. 90 cm (35.4) 30 cm (12") 3.

Set the hose correctly by loosening the ring nut. @@@4. Connect the hose to a tap with a 3/4" thread. @@An additional drain hose and joining piece is available from your local Service Force Centre. The joining piece must have an internal diameter of 18mm. If your drain hose looks like this (see below) you do not require the "U" piece". Just push the hose firmly into the standpipe. Levelling Level the washing machine by raising or lowering the feet. The feet may be tight to adjust as they incorporate a self locking nut, but the machine MUST be level and stable (check diagonally). @@Onto a sink outlet spigot. @@@@@@Sprung wooden floors are particularly susceptible to vibration. For advice, consult a builder. If possible, always place the machine on a solid floor. Special conditions P1197 Push the drain hose onto the spigot and secure with a clip if required, ensure a loop is formed in the drain hose (see diagram) to prevent waste from the sink entering the washing machine. If the floor is carpeted or covered with crumbly or soft material, insert a rigid support base under the feet to prevent noise, vibration or displacement.

The base should protrude a few centimetres beyond the edges of the machine. Warning The machine should NOT be placed on deep pile carpeting. Note Please ensure that when the appliance is installed it is easily accessible for the engineer in the event of a breakdown. Loop P1198 In the interest of the environment Washing machines and dishwashers should be connected to the FOUL drainage system, the water will then be taken to a sewage works for treatment before being discharged safely into a river. It is essential that these appliances are not connected to the surface water drainage system as this water is discharged directly into a river or stream and may cause pollution.

26 Important Before connecting up the machine to new pipework or to pipework that has not been used for some time, run off a reasonable amount of water to flush out any debris that may have collected in the pipes. If you require any further advice please contact your local water authority. Should the plug need to be replaced for any reason, proceed as described below. The wires in the mains lead are coloured in accordance with the following code: Green and Yellow - Earth Blue - Neutral Brown - Live GREEN & YELLOW SHOWER SINK BATH TOILET BIDET E 13 A N L WASHING MACHINE RAINWATER 'RUN-OFF' DISHWASHER BROWN BLUE P1041 FOUL DRAIN CORD CLAMP SURFACE WATER DRAINS & SEWERS FOUL SEWERS SEWAGE TREATMENT WORKS TREATED DISCHARGE UNTREATED DISCHARGE RIVER RIVER P0987 Electrical connection Any electrical work required to install this appliance should be carried out by a qualified electrician or competent person. WARNING: THIS APPLIANCE MUST BE EARTHED. The manufacturer declines any liability should this safety measure not be observed. Before switching on, make sure the electricity supply voltage is the same as that indicated on the appliance's rating plate. The rating plate is located at the top of the rim of the open door. The wire coloured green and yellow must be connected to the terminal marked with the letter «E» or by the earth symbol or coloured green and yellow. The wire coloured blue must be connected to the terminal marked «N» or coloured black.

The wire coloured brown must be connected to the terminal marked «L» or coloured red. Upon completion there must be no cut, or stray strands of wire present and the cord clamp must be secure over the outer sheath. WARNING: A cut off plug inserted into a 13 amp socket is a serious safety (shock) hazard. Ensure that the cut off plug is disposed of safely. Should the appliance power supply cable need to be replaced, this must be carried out by our Service Force Centre. The power supply cable must be easily accessible after installing the appliance. Permanent connection In the case of permanent connection it is necessary that you install a double pole switch between the appliance and the electricity supply (mains), with a minimum gap of 3mm between the switch contacts and of a type suitable for the required load in compliance with the current electrical regulations. The switch must not break the yellow and green earth cable at any point. Mo Pro d. .

.... d.
No
.
. . Ser . No
... Mod. .
.....
.... Prod. No.
..... P0042 BD Ser. No. .
.....

... The appliance is supplied with a 13amp plug fitted. In the event of having to change the fuse in the plug supplied, a 13amp ASTA approved (BS1363/A) fuse must be used.

27 From the Electrolux Group. The world's No. 1 choice. The Electrolux Group is the world's largest producer of powered appliances for kitchen, cleaning and outdoor use. More than 55 million Electrolux Group products (such as refrigerators, cookers, washing machines, vacuum cleaners, chain saws and lawn mowers) are sold each year to a value of approx. USD 14 billion in more than 150 countries around the world.

[You're reading an excerpt. Click here to read official ZANUSSI ZWF1621W user guide](#)



<http://yourpdfguides.com/dref/955541>