



Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for ZANUSSI ZWF1632W. You'll find the answers to all your questions on the ZANUSSI ZWF1632W in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual ZANUSSI ZWF1632W
User guide ZANUSSI ZWF1632W
Operating instructions ZANUSSI ZWF1632W
Instructions for use ZANUSSI ZWF1632W
Instruction manual ZANUSSI ZWF1632W



WASHING MACHINE
ZWF 1432 W
ZWF 1432 S
ZWF 1632 W



 Quick Installation Guide:
visit our WEB SITE to view an install video
www.video.uk.electrolux.com

1:02 981 730

INSTRUCTION BOOKLET

GB



[You're reading an excerpt. Click here to read official ZANUSSI ZWF1632W user guide](http://yourpdfguides.com/dref/955544)
<http://yourpdfguides.com/dref/955544>

Manual abstract:

@@Care should be taken when moving it. It is dangerous to alter the specifications or attempt to modify this product in any way. All packing and transit bolts must be removed before use. Serious damage can occur to the product and to property if this is not adhered to. See relevant section in instructions. Any plumbing work required to install this appliance should be carried out by a qualified plumber or competent person. Any electrical work required to install this appliance should be carried out by a qualified electrician or competent person. @@@@ Pets and children have been known to climb into washing machines. Please check your drum before use. The glass door becomes very hot during the washing cycle.

Keep children away from the vicinity of the appliance whilst it is in operation. Keep all packaging well away from children. Keep all detergents in a safe place out of children's reach. Always unplug the appliance and turn off the water supply after use. Do not overload the appliance.

See relevant section in the instruction book. Only wash fabrics which are designed to be machine washed. If in doubt, consult the care label on the clothes. Before washing, ensure that all pockets are empty and buttons and zips are fastened. Avoid washing frayed or torn articles and treat stains such as paint, ink, rust, and grass before washing.

Underwired bras must NOT be machine washed. Any objects such as coins, safety pins, nails, screws, stones or any other hard, sharp material can cause extensive damage and must not be placed into the machine. Garments which have been in contact with volatile petroleum products should not be machine washed. If volatile cleaning fluids are used, care should be taken to ensure that the fluid is removed from the garment before placing in the machine. Wash small items such as socks, laces, washable belts etc in a washing bag or pillow case as it is possible for such items to slip down between the tub and the inner drum. Only use the advised quantities of fabric softener. Damage to the fabric can ensue if you over-fill. Refer to the manufacturer's recommendations of quantities. As some duvets and eiderdowns should be washed in large commercial machines because of their bulk, please check with the manufacturer of the item before washing in a domestic machine. Leave the porthole door slightly ajar between washes to preserve the door seal.

Under no circumstances should you attempt to repair the machine yourself. Repairs carried out by inexperienced persons may cause injury or serious malfunctioning. Contact your local Service Force Centre. Always insist on genuine spare parts. 2 Contents For the User Important Safety Information Your New Washing Machine Description of the Appliance Detergent dispenser drawer Child safety feature 2 4 5 5 5 6-8 6 9-11 9 9 9 9 9 10 10 10 10 10 11 11 12-13 13 13 14 Washing Programmes Maintenance and Cleaning Descaling After each wash Maintenance Wash External cleaning Cleaning the dispenser drawer Cleaning the drawer recess Cleaning the pump Cleaning the water inlet filter The dangers of freezing Emergency emptying out 15 16-17 16 16 16 16 16 16-17 17 17 18-19 19-20 20 The Control Panel Turning the acoustic signal off Operating Sequence Load the laundry Measure out the detergent Measure out the fabric softener Switch the machine on Select the required programme/fabric Select the temperature Select the spin speed or the Rinse Hold option Select the desired options Start the programme How to change an option or a programme during its cycle How to cancel a programme during its cycle How to open the door during the cycle of a programme End of programme Something Not Working Service and Spare Parts Guarantee Conditions For the Installer Installation Instructions Technical Specifications Unpacking Positioning Water inlet Water drainage Levelling Special conditions In the interest of the environment Electrical connection 21 21 22 22 23 23-24 24 24 24-25 25 Washing Hints Which detergent?... And in which form? Wash Care Symbols Guide to use the Instruction Book The following symbols will be found in the text to guide you throughout the instructions: Safety instructions Hints and tips Environmental information 3 Your New Washing Machine Your new washing machine meets all modern requirements for effective treatment of laundry with low water, energy and detergent consumption. Even small loads are washed "economically" because the amount of water used is regulated automatically according to the load and type of fabric.

The possibility of selecting the temperature and all the options offered by this washing machine gives you truly "customised" washing. Automatic cooling of the wash water to 60°C before draining, with the 95°C programme. This reduces thermal shock to fabrics, helping to prevent creasing. The special wool programme with its new delicate wash system treats your woollens with extreme care. The programme progress display shows the different washing phases. The balance control device ensures that the washing machine remains stable when spinning. The ECO VALVE allows total use of detergent and reduces water consumption so saving energy. In the interest of the environment Materials marked with the symbol are recyclable. Check with your local Council or Environmental Health Office to see if there are facilities in your area for re-cycling this appliance. When the appliance is to be scrapped, cut off the power supply cable and make the door lock device unusable to prevent young children from being trapped inside.

Help to keep your country tidy - use authorised disposal sites for your old appliance. The symbol on the product or on its packaging indicates that this product may not be treated as household waste. Instead it shall be handed over to the applicable collection point for the recycling of electrical and electronic equipment. By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling of this product. For more detailed information about recycling of this product, please contact your local city office, your household waste disposal service or the shop where you purchased the product. Ecological hints To save water and energy and help protect the environment, we recommend that you follow these hints: Normally soiled laundry may be washed without prewashing in order to save detergent, water and time (the environment is protected too!). The machine works more economically if it is fully loaded. With adequate pre-treatment, stains and limited soiling can be removed; the laundry can then be washed at a lower temperature. Measure out detergent according to the water hardness, the degree of soiling and the quantity of laundry being washed. How do we help to protect the environment? We use recycled paper! Important Your machine is fitted with a balance control device, which ensures the machine is stable during the spin.



[You're reading an excerpt. Click here to read official ZANUSSI ZWF1632W user guide](http://yourpdfguides.com/dref/955544)
<http://yourpdfguides.com/dref/955544>

If the wash load appears not to have been spun sufficiently at the end of the wash cycle, because it is not evenly distributed in the drum, the balance control device may have operated. It will therefore be necessary to redistribute the wash load manually and select a spin programme. For more detailed information see the section headed "Something Not Working". 4 Description of the Appliance 1 2 3 4 5 Detergent dispenser drawer Control panel Door opening handle Drain pump Adjustable feet 1 2 ZWF 1432 W On/Off Cottons Synthetics Delicates Wool 95°C 60°C 50°C 40°C 30°C 1200 900 700 500 Rinse Hold Prewash 40° AA Half Load Start/ Pause Prewash Wash Rinse Rinse Hold Spin Drain Filter End Skip AQUAC YCLE 6 kg Fabrics Temp. Spin Option Reset 3 4 5 Detergent dispenser drawer Prewash Main wash Fabric softener C0063 Child safety feature This machine incorporates a special child safety feature to prevent small children from being trapped inside the machine. To activate this device, rotate the button (without pressing it) inside the door clockwise until the groove is horizontal. If necessary use a coin. To disable this device and restore the possibility of closing the door, rotate the button anti-clockwise until the groove is vertical. P1131 5 The Control Panel ZWF 1432 W ZWF 1432 W On/Off Cottons Synthetics Delicates Wool 95°C 60°C 50°C 40°C 30°C 1400 900 700 500 Rinse Hold Prewash 40° AA Half Load Start/ Pause Prewash Wash Rinse Rinse Hold Spin Drain Filter End Skip Fabrics Temp. Spin Option Reset 1 2 3 4 5 6 7 8 9 1 "On/Off" button Press this button to switch the washing machine on.

Press the On/Off button again to switch the machine off. 2 MAINS-ON light This light is connected to the "On/Off" button. It lights up when you press the button, and goes out when you press it again. IMPORTANT! By pressing the "Temp." and "Spin" buttons simultaneously for about 3 seconds, the acoustic signal is deactivated at the end of the cycle, when selecting the programmes and in case of an incorrect option selection. By pressing these 2 buttons again the acoustic signal is reactivated. 3 "Fabrics" button Press this button repeatedly to select the programme on the basis of the type of laundry to be washed. The light relevant to the selected programme will light up. The washing machine will propose a temperature and automatically select the maximum spin value provided for the programme you have chosen. You can change these values by operating buttons 4 and 5. 5 "Spin" button Press this button repeatedly to change the spin speed, if you want your laundry to be spun at a speed different from the one proposed by the washing machine. The relevant light will light up. Maximum speeds are: · for cotton: 1,400 rpm for Models ZWF 1432 W and ZWF 1432 S; 1,600 rpm for Model ZWF 1632 W · for synthetic fabrics and wool: 900 rpm; · for delicate fabrics: 700 rpm. · "Rinse Hold" position: when you choose this option, the machine will not drain the water of the last rinse, so as not to crease the laundry. At the end of the cycle, the light of the "Start/Pause" button goes out, the "End" and "Rinse Hold" pilot lights illuminate and the door is locked to indicate that the water must be drained. 4 "Temp." button Press this button repeatedly to increase or decrease the temperature, if you want your laundry to be washed at a temperature different from the one proposed by the washing machine. The relevant light will light up. Maximum temperatures are 95°C for cotton, 60°C for synthetic fabrics, 40°C for delicate fabrics and wool. 6 To complete the cycle, press "Skip Reset" button once, all the leds are off, then choose one of the following options: · Drain only: press FABRIC button in order to select the desired programme and press the "Skip Reset" being carried out will remain lit.

At the end of the programme the "End" pilot light illuminates. If the light "Filter" lights up at the end of the programme this means that the drain pump is clogged. In the event of operating problems "End" light starts to flash and an audible warning signal is given: 1 flash = the machine does not fill 2 flashes = the machine does not empty 4 flashes = the door has not been closed To eliminate the problem, see paragraph "Something not working". 8 Operating Sequence Before the first wash, we recommend that you pour 2 litres of water into the main wash compartment of the detergent drawer in order to activate the ECO valve. Then run a cotton cycle at 95°C, without any laundry in the machine, to remove any manufacturing residue from the drum and tub. Pour 1/2 a measure of detergent into the main wash compartment of the dispenser drawer and start the machine. WASHING 5 KG OF WHITE COTTON AT 95°C Suppose you have 5 kg of laundry to wash. It is white cotton and issary to do so, switch the machine off by pressing the "On/Off" button. After approximately 3 minutes, you can open the door. Pay attention to the level and temperature of the water in the washing machine! When you close the door and press the "On/Off" button again, the washing machine will resume the programme from the point where it had been interrupted. · Drain and Spin: press FABRIC button in order to select the the previously selected programme (the type of fabric just washed) and press the "Skip Reset" button until the only led "Spin" illuminates. You can change the spin speed by means of "Spin" button if needed, then depress "Start/Pause" button. When the programme has been completed, an audible signal is given. Press the Skip Reset button repeatedly to erase the programme that has just been carried out. If you omit to do this, the next time you switch the washing machine on, you will hear an audible signal.

Note: when you switch the machine on, if you must erase the previously performed programme, it is also sufficient to press the FABRIC button and select a new programme. Press the "On/Off" button to switch the machine off. The relevant light will go out. Remove the laundry from the washing machine. Check whether the drum is completely empty, by rotating it with your hand.

The purpose of this is to prevent any items of laundry from remaining accidentally in the drum, where they might get damaged in a subsequent wash (e.g. by shrinking) or bleed colour into another load of laundry. We advise you to close the water supply tap and disconnect the plug from the socket. Leave the door ajar in order to air the washing machine. 13. End of programme At the end of the programme, the washing machine stops automatically, gives an audible signal, the "Start/Pause" button light goes off and the "End" light illuminates.



[You're reading an excerpt. Click here to read official ZANUSSI ZWF1632W user guide](http://yourpdfguides.com/dref/955544)
<http://yourpdfguides.com/dref/955544>

If you have selected the "Rinse Hold" option, the door is locked, the Start/Pause button light goes off, the "End" pilot light illuminates and the Rinse Hold pilot light remains lit to indicate that the water must be drained. To complete the cycle, press "Skip Reset" button once, all the leds are off, then choose one of the following options: · Drain only: press FABRIC button in order to select the desired programme and press the "Skip Reset" button until the only led "Drain" illuminates. Depress "Start/Pause" button 11 Washing Hints Do NOT overload the machine.

Weigh the laundry the first few times you use the appliance. The average weights of the most common items are listed below as a guide: 1000g = 1 kg Sheet Pillow case Tablecloth Serviette Tea towel Linen hand towel Towelling hand towel Towelling bath towel Bath robe Man's shirt Apron 700-1000 g 100-200 g 400-500 g 50-100 g 70-120 g 100-150 g 150-250 g 700-1000 g 1000-1500 g 200-300 g 150-200 g Load the laundry loosely alternating large items with small ones. Sort the laundry according to the type of fabric, colour-fastness and how dirty it is. Avoid washing unhemmed or torn items as they may unravel. Before washing, empty all pockets of small objects which may have been left inside (coins, keys, screws etc). as these could damage the drain pump. When washing curtains, remove the hooks. Close poppers and zips and fasten loose buttons. It is essential to wash new coloured items separately when washing for the first time. When washing fabrics requiring different wash temperatures together, always select the lowest temperature.

White items should not be washed with coloured items. Very small items (handkerchiefs, ribbons, socks etc) should be washed in a washing bag or a pillow case. Use a good quality detergent suitable for automatic washing machines. Use the correct quantities of detergent. For wool, use gentle detergent only in small quantities.

Bleach is very corrosive; it should be used with care and kept out of reach of children. Some stains such as fruit, wine, grass, rust etc. are difficult to remove and should be treated before washing with specific products, which can be found in most household shops. In some cases it may help to soak the stain before washing with a special presoak product or biological detergent. Only wool marked "Pure New Wool - washable, preshrunk" can be washed in the the wool programme; If you have used the machine to wash, rinse or spin only non-colour fast garments, there may be dye left in the sump.

To ensure any subsequent wash is not contaminated with the dye, select and carry out a rinse and spin programme, without any garments, to ensure that any dye is removed from the sump. @@@@Bounce conditioning sheets for use in a tumble dryer.

@@@@@Cotton, Linen or Viscose Colourfast at 40°C but not 60°C. Acrylics, Acetate, Triacetate, Wool mixes, Polyester/wool blends. @@@@Once the dispenser has been filled, close it by pushing it in gently. @@@@Note! For the duration of the programmes, please refer to the display on the control panel. 15 Maintenance and Cleaning Before any maintenance or cleaning is carried out you must DISCONNECT the appliance from the electricity supply. Descaling The water we use normally contains lime. It is a good idea to periodically use a water softening powder in the machine. Do this separately from any laundry washing, and according to the softening powder manufacturer's instructions.

This will help to prevent the formation of lime deposits. Remove the drawer by pressing the catch downwards and by pulling it out. Flush it out under a tap, to remove any traces of accumulated powder. To aid cleaning, the top part of the additive compartment should be removed. Cleaning the drawer recess Having removed the drawer, use a small brush to clean the recess, ensuring that all washing powder residue is removed from the upper and lower part of the recess.

Replace the drawer and run the rinse programme without any clothes in the drum. After each wash Leave the door open for a while. This helps to prevent mould and stagnant smells forming inside the appliance. Keeping the door open after a wash will also help to preserve the door seal. Maintenance Wash With the use of low temperature washes it is possible to get a build up of residues inside the drum.

We recommend that a maintenance wash be performed on a regular basis. To run a maintenance wash: The drum should be empty of laundry. Select the hottest cotton wash programme. Use a normal measure of detergent, must be a powder (such as Ariel Futur). P0038 Cleaning the pump The pump should be inspected if · the machine does not empty and/or spin · the machine makes an unusual noise during draining due to objects such as safety pins, coins etc. blocking the pump. Proceed as follows: · Disconnect the appliance. · If necessary wait until the water has cooled down. · Open the pump door. External cleaning Clean the exterior cabinet of the appliance with soap and water only, and then dry thoroughly.

Cleaning the dispenser drawer The washing powder and additive dispenser drawer should be cleaned regularly. P1114 C0066 C0067 · Place a container close to the pump to collect any spillage. · Pull out the emergency emptying hose, place it in the container and remove its cap. · When no more water comes out, unscrew the pump cover and remove it. Always keep a rag nearby to dry up spillage of water when removing the cover. 16 P1115 P1090 · Remove any objects from the pump impeller by rotating it. The dangers of freezing If the machine is exposed to temperatures below 0°C, certain precautions should be taken. Turn off the water tap. Unscrew the inlet hose. Place the end of the emergency emptying hose and that of the inlet hose in a bowl placed on the floor and let water drain out.

Screw the water inlet hose back on and reposition the emergency emptying hose after having put the cap on again. When you intend to start the machine up again, make sure that the room temperature is above 0°C. Important! Every time you drain the water through the emergency emptying hose you must pour 2 litres of water into the main wash compartment of the detergent drawer and then run the drain programme. This will activate the ECO valve avoiding that part of the detergent remains unused at next washing. · Put the cap back on the emergency emptying hose and place the latter back in its seat. P1117 · Screw the pump cover fully in. · Close the pump door. Emergency emptying out If the water is not discharged, proceed as follows to empty out the machine: · pull out the plug from the power socket; · close the water tap; · if necessary, wait until the water has cooled down; · open the pump door; · place a bowl on the floor and place the end of the emergency emptying hose into the bowl.



[You're reading an excerpt. Click here to read official ZANUSSI ZWF1632W user guide](http://yourpdfguides.com/dref/955544)
<http://yourpdfguides.com/dref/955544>

Remove its cap. The water should drain by gravity into the bowl.

When the bowl is full, put the cap back on the hose. Empty the bowl. Repeat the procedure until water stops flowing out; · clean the pump if necessary as previously described; · replace the emergency emptying hose in its seat after having plugged it; · screw the pump cover again and close the door. Warning When the appliance is in use and depending on the programme selected there can be hot water in the pump. Never remove the pump cover during a wash cycle, always wait until the appliance has finished the cycle, and is empty.

When replacing the cover, ensure it is securely retightened so as to stop leaks and young children being able to remove it. Cleaning the water inlet filter If your water is very hard or contains traces of lime deposit, the water inlet filter may become clogged. It is therefore a good idea to clean it from time to time.

Turn off the water tap. Unscrew the water inlet hose.

Clean the filter using a hard bristle brush. Tighten up the inlet hose. @@@@The plug is not properly inserted in the power socket. There is no supply at the socket. The main fuse or the fuse in the plug has blown. The Start/Pause button has not been depressed. The water tap is closed. The filter in the inlet hose is blocked. The inlet hose may be squashed or kinked. The door has not been closed.

The end of the drain hose is too low. The end of the drain hose is submerged in water. There is no vent in the end of the drain hose. The drain hose may be squashed or kinked. The Rinse Hold option has been selected. The drain pump may be blocked. The drain hose extension, if fitted, is not correct. Follow the instructions for connecting to the waste. The drainage system pipes are blocked. @@@@Check whether there are any leaks from the inlet hose fittings.

@@The drain hose may be damaged or not securely positioned. The detergent dispenser drawer or recess is clogged. The drainage system pipes are blocked.

@@The water level is above the bottom edge of the door. The machine is heating the water.

The drum is turning. @@The machine is in contact with the wall or furniture. The machine is not level and stable (check diagonally). The washing load is badly distributed in the drum. Maybe there is very little laundry in the drum.

@@The laundry is redistributed by reverse rotation of the drum. This may happen several times before the unbalance disappears and normal spinning can resume. If, after 6 minutes, the laundry is still not evenly distributed in the drum, the machine will not spin. In this case, redistribute the load manually and select the spin programme. The machine is fitted with a type of motor which makes an unusual noise compared with other traditional motors. This new motor ensures a softer start and more even distribution of the laundry in the drum when spinning, as well as increased stability of the machine. Machines based on modern technology operate very economically using very little water without affecting performance. Too little detergent or unsuitable detergent has been used. An insufficient amount of detergent leaves the laundry looking grey and causes lime scale to form. Stubborn stains have not been treated prior to washing The correct wash programme/temperature has not been selected.

Too much laundry has been placed in the drum. Before calling out an engineer, please ensure you have read the details under the heading "Something Not Working". When you contact the Service Force Centre you will need to give the following details: 1. Your name, address and post code 2. Your telephone number 3. Clear and concise details of fault 4. The model and serial number of the appliance (found on the rating plate - see picture) 5. The purchase date. Please note that a valid purchase receipt or guarantee documentation is required for inguarantee service calls. Spinning starts late or the machine does not spin The machine makes an unusual noise No water is visible in the drum Unsatisfactory washing results Service & Spare Parts In the event of your appliance requiring service, or if you wish to purchase spare parts, please contact your local Service Force Centre by telephoning: 0870 5 929929 Your telephone call will be automatically routed to the Service Force Centre covering your post code area.

For the address of your local Service Force Centre and further information about Service Force, please visit the website at www.serviceforce.co.uk. For Customer Service in Ireland please contact us at the address below: Zanussi Electrolux Electrolux Group (Irl) Ltd Long Mile Road Dublin 12 Republic of Ireland Tel: +353 (0)1 4090751 Email: service@electrolux.ie

To buy accessories, consumables and spare parts at our online shop please visit: <http://www.zanussielectrolux.co.uk> 19 Mo Pro d.

..... d. No

.

.. . Ser . No .

.....

*.... Mod
..... Prod. No. ...
.....
... P0042 BD Ser. No.*

..... Customer Care For general enquiries concerning your Zanussi Electrolux appliance or for further information on Zanussi Electrolux products, please contact our Customer Care Department by letter or telephone at the address below or visit our website at www.zanussi.co.uk

zanussi.co.uk: Customer Care Department - Zanussi/Electrolux Major Appliances Addington Way, Luton Bedfordshire LU4 9QQ Tel 08705 727 727 * calls to this number may be recorded for training purposes. Guarantee Conditions Standard guarantee conditions We, Zanussi Electrolux, undertake that if, within*

12 months of the date of the purchase, this ZANUSSI ELECTROLUX appliance or any part thereof is proved to be defective by reason only of faulty workmanship or materials, we will, at our option repair or replace the same FREE OF ANY CHARGE for labour, materials or carriage on condition that: The appliance has been correctly installed and used only on the electricity supply stated on the rating plate. The appliance has been used for normal domestic purposes only, and in accordance with the manufacturer's instructions. The appliance has not been serviced, maintained, repaired, taken apart or tampered with, by any person not authorised by us. All service work under this guarantee must be undertaken by a Service Force Centre. Any appliance or defective part replaced shall become the Company's property. This guarantee is in addition to your statutory and other legal rights. Home visits are made between 8.30am and 5.30pm Monday to Friday. Visits may be available outside these hours in which case a premium will be charged. Appliances found to be in use within a commercial environment, plus those which are subject to rental agreements. Products of Zanussi Electrolux manufacture which are NOT marketed by Zanussi Electrolux.

European guarantee If you should move to another country within Europe then your guarantee moves with you to your new home subject to the following qualifications: The guarantee starts from the date you first purchased your product. The guarantee is for the same period and to the same extent for labour and parts as exists in the new country of use for this brand or range of products.

[You're reading an excerpt. Click here to read official ZANUSSI](#)



[ZWF1632W user guide](#)

<http://yourpdfguides.com/dref/955544>

The guarantee relates to you and cannot be transferred to another user. Your new home is within the European Community (EC) or European Free Trade Area. The product is installed and used in accordance with our instructions and is only used domestically, i.e. a normal household. The product is installed taking into account regulations in your new country. Before you move please contact your nearest Customer Care Centre, listed below, to give them details of your new home. They will then ensure that the local Service Organisation is aware of your move and able to look after you and your appliances. France Senlis +33 (0) 344 62 29 29 Germany Nurnberg +49 (0) 800 234 7378 Italy Pordenone +39 0434 39 4700 Sweden Stockholm +46 (0) 8 672 53 90 UK Luton +44 (0) 8705 727 727 Ireland Dublin +353 (0) 1 4090751 20 Exclusions This guarantee does not cover: Damage or calls resulting from transportation, improper use or neglect, the replacement of any light bulbs or removable parts of glass or plastic. Costs incurred for calls to put right an appliance which is improperly installed or calls to appliances outside the United Kingdom. Installation Instructions It is dangerous to alter the specifications or attempt to modify this product in any way. @@Any electrical work required to install this appliance should be carried out by a qualified electrician or competent person. Any plumbing work required to install this appliance should be carried out by a qualified plumber or competent person.

Technical Specifications DIMENSIONS Height Width Depth 85 cm 60 cm 63 cm 230-240 V/50 Hz 2050 W (10A) Minimum Maximum Cotton, linen Synthetics Delicate fabrics Wool Maximum 0.05 MPa (0.5 bar) 0.8 MPa (8 bar) 6 kg 2,5 kg 2,5 kg 2 kg 1400 rpm (ZWF 1432 W - S) 1600 rpm (ZWF 1632 W) POWER SUPPLY VOLTAGE TOTAL POWER ABSORBED WATER PRESSURE MAXIMUM RECOMMENDED LOAD SPIN SPEED CONSUMPTION DATA FOR WASHING 6 KG NORMALLY SOILED COTTON ITEMS AT 60°C + 40°AA option selected This appliance complies with the following E.E.C. Directives: - 73/23 EEC of 19.2.73 (Low Voltage Directive) and subsequent modifications; - 89/336 EEC of 3.5.

89 (Electromagnetic Compatibility Directive) and subsequent modifications. 21 Unpacking The transport safeguard must be removed before putting the appliance into operation. Important ! You are advised to keep all the packaging for re-use in case the machine is to be transported again. Fill the smaller upper hole and the two large ones with the corresponding plastic plug caps supplied in the bag containing the instruction booklet. After removing all the packaging, with assistance carefully lay machine on it's back to remove the polystyrene base from the bottom.

Remove the power supply cable and the draining hose from the hose holders on the rear of the appliance HEC0010 HEC0005 Important! All the different plug caps are supplied with the appliance in the plastic bag containing the instruction booklet. Connect the water inlet hose as described under the paragraph "Water inlet". HEC0008 HEC0001 Positioning Install the machine on a flat hard floor. Make sure that air circulation around the machine is not impeded by carpets, rugs etc. Check that the machine does not touch the wall or other kitchen units.

Never place cardboard, wood or similar materials under the machine to compensate for any unevenness in the floor. Your new washing machine has been designed to be permanently plumbed in to your home's water supply and drainage system. However, if this is not possible, it may be connected to a suitable existing tap with the drain hose discharging into a sink. The appliance has an inlet hose, with female 3/4" BSP thread connector. If this connection is not compatible with the plumbing of the existing installation, a variety of connectors are available from good hardware stores and plumbers merchants to suit most domestic plumbing. Any alteration to your existing plumbing must be carried out by a competent person, or qualified plumber. With a suitable spanner unscrew and remove the central rear bolt A. Slide out the relevant plastic spacer. Unscrew and remove the two large rear bolts B and the six smaller bolts C. A C B HEC0002S HEC0003S C B Remove the bracket D and tighten up the six smaller bolts C.

D HEC0011S HEC0014 C C Installation on a Suspended Floor Suspended wooden floors are particularly susceptible to vibration. To help prevent vibration we recommend you place a waterproof wood panel, at least 15 mm thick under the appliance, secured to at least 2 floor beams with screws. If possible install the appliance in one of the corners of the room, where the floor is more stable. Open the porthole and remove the polystyrene block fitted with the adhesive tape on the door seal. 22 Water inlet An inlet hose is supplied and can be found inside the machine drum. Do not use the hose from your previous machine to connect to the water supply. 1. Open the porthole and extract the inlet hose. 2. Connect the hose with the angled connection to the machine.

Important! Do not place the inlet hose downwards. Angle the hose to the left or right depending on the position of your water tap. Water drainage This appliance is designed to be permanently plumbed into your home's drainage system using one of the following methods. 1. Into a drainage standpipe. Firstly form a hook in the end of the drain hose using the "U" piece" supplied. U piece supplied P1199 HEC0006 HEC0013 When discharging into a standpipe ensure that the top of the standpipe is no more than 90cm (35.4") and no less than 60cm (23.6") above floor level. P1088 3 pin Installation should comply with local water authority and building regulations' requirements.

The appliance must be connected to a cold water supply. @@@@The joining piece must have an internal diameter of 18mm. 23 Min. 60 cm (23.6) Max. 90 cm (35.4) 30 cm (12") 3. Set the hose correctly by loosening the ring nut. After positioning the inlet hose, be sure to tighten the ring nut again to prevent leaks. 4.

Connect the hose to a tap with a 3/4" thread. Always use the hose supplied with the appliance. Place the drain hose into your standpipe, which should have an internal diameter of approximately 38mm thus ensuring there is an air break between the drain hose and standpipe. 38 mm (11.2) standpipe diameter If your drain hose looks like this (see below) you do not require the "U" piece". Just push the hose firmly into the standpipe. Levelling Level the washing machine by raising or lowering the feet. @@If necessary, check the setting with a spirit level. P1212 2. Onto a sink outlet spigot.

@@@@@Sprung wooden floors are particularly susceptible to vibration. For advice, consult a builder. If possible, always place the machine on a solid floor. Push the drain hose onto the spigot and secure with a clip if required, ensure a loop is formed in the drain hose (see diagram) to prevent waste from the sink entering the washing machine.



[You're reading an excerpt. Click here to read official ZANUSSI ZWF1632W user guide](http://yourpdfguides.com/dref/955544)
<http://yourpdfguides.com/dref/955544>

Special conditions If the floor is carpeted or covered with crumbly or soft material, insert a rigid support base under the feet to prevent noise, vibration or displacement.

The base should protrude a few centimetres beyond the edges of the machine. **Warning** The machine should NOT be placed on deep pile carpeting. Note Please ensure that when the appliance is installed it is easily accessible for the engineer in the event of a breakdown. Loop P1198 Important Before connecting the machine to new pipework or to pipework that has not been used for some time, run off a reasonable amount of water to flush out any debris that may have collected in the pipes. In the interest of the environment Washing machines and dishwashers should be connected to the FOUL drainage system, the water will then be taken to a sewage works for treatment before being discharged safely into a river.

It is essential that these appliances are not connected to the surface water drainage system as this water is discharged directly into a river or stream and may cause pollution. 24 If you require any further advice please contact your local water authority. Should the plug need to be replaced for any reason, proceed as described below. The wires in the mains lead are coloured in accordance with the following code: Green and Yellow - Earth Blue - Neutral Brown - Live GREEN & YELLOW SHOWER SINK BATH TOILET BIDET E 13 A N L WASHING MACHINE RAINWATER 'RUN-OFF' DISHWASHER BROWN BLUE P1041 FOUL DRAIN CORD CLAMP SURFACE WATER DRAINS & SEWERS FOUL SEWERS SEWAGE TREATMENT WORKS TREATED DISCHARGE UNTREATED DISCHARGE RIVER RIVER P0987 Electrical connection Any electrical work required to install this appliance should be carried out by a qualified electrician or competent person. **WARNING: THIS APPLIANCE MUST BE EARTHED.** The manufacturer declines any liability should this safety measure not be observed. Before switching on, make sure the electricity supply voltage is the same as that indicated on the appliance's rating plate. The rating plate is located at the top of the rim of the open door. The wire coloured green and yellow must be connected to the terminal marked with the letter «E» or by the earth symbol or coloured green and yellow. The wire coloured blue must be connected to the terminal marked «N» or coloured black.

The wire coloured brown must be connected to the terminal marked «L» or coloured red. Upon completion there must be no cut, or stray strands of wire present and the cord clamp must be secure over the outer sheath. **WARNING:** A cut off plug inserted into a 13 amp socket is a serious safety (shock) hazard. Ensure that the cut off plug is disposed of safely. Should the appliance power supply cable need to be replaced, this must be carried out by our Service Force Centre. Note When the appliance is installed the power supply cable must be accessible. Permanent connection Mod. ...

.....
.. Prod. No. .
.....

P0042 BD Ser. No.

. The appliance is supplied with a 13amp plug fitted. In the event of having to change the fuse in the plug supplied, a 13amp ASTA approved (BS1363/A) fuse must be used. In the case of permanent connection it is necessary that you install a double pole switch between the appliance and the electricity supply (mains), with a minimum gap of 3mm between the switch contacts and of a type suitable for the required load in compliance with the current electrical regulations. The switch must not break the yellow and green earth cable at any point.

Mo Pro d.
. d. No

... .. Ser .
No

25 From the Electrolux Group. The world's No. 1 choice. The Electrolux Group is the world's largest producer of powered appliances for kitchen, cleaning and outdoor use. More than 55 million Electrolux Group products (such as refrigerators, cookers, washing machines, vacuum cleaners, chain saws and lawn mowers) are sold each year to a value of approx. USD 14 billion in more than 150 countries around the world. © Electrolux plc 2006 .



[You're reading an excerpt. Click here to read official ZANUSSI ZWF1632W user guide](http://yourpdfguides.com/dref/955544)
<http://yourpdfguides.com/dref/955544>