



Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for ZANUSSI ZWF16581W. You'll find the answers to all your questions on the ZANUSSI ZWF16581W in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual ZANUSSI ZWF16581W
User guide ZANUSSI ZWF16581W
Operating instructions ZANUSSI ZWF16581W
Instructions for use ZANUSSI ZWF16581W
Instruction manual ZANUSSI ZWF16581W



User manual			
	Washing Machine		



ZWF 16581 W
ZWF 16581 S



[You're reading an excerpt. Click here to read official ZANUSSI ZWF16581W user guide](http://yourpdfguides.com/dref/955548)
<http://yourpdfguides.com/dref/955548>

Manual abstract:

Save these instructions and make sure that they remain with the appliance if it is moved or sold, so that everyone using it through its life will be properly informed on appliance use and safety. Always unplug the appliance and turn off the water supply after use, clean and maintenance. Under no circumstances should you attempt to repair the machine yourself. Repairs carried out by inexperienced persons may cause injury or serious malfunctioning. Contact your local Service Centre. @@During high temperature wash programmes the door glass may get hot. Do not touch it! Make sure that small pets do not climb into the drum. To avoid this, please check into the drum before using. @@Only use the advised quantities of fabric softener and detergent. Damage to the fabric can ensue if you over-fill.

Refer to the manufacturer's recommendations of quantities. @@@@Care should be taken when moving it. When unpacking the appliance, check that it is not damaged. If in doubt, do not use it and contact the Service Centre. All packing and transit bolts must be removed before use.

Serious damage can occur to the product and to property if this is not adhered to. See relevant section in the user manual. After having installed the appliance, check that it is not standing on the inlet and drain hose and the worktop is not pressing the electrical supply cable. If the machine is situated on a carpeted floor, please adjust the feet in order to allow air to circulate freely Always be sure, that there is no water leakage from hoses and their connections after the installation. If the appliance is installed in a location subject to frost, please read the «dangers of freezing» chapter.

Any plumbing work required to install this appliance should be carried out by a qualified plumber or competent person. Any electrical work required to install this appliance should be carried out by a qualified electrician or competent person. 3 Use This appliance is designed for domestic use. It must not be used for purposes other than those for which it was designed. Only wash fabrics which are designed to be machine washed. Follow the instructions on each garment label. Do not overload the appliance. See the relevant section in the user manual. Before washing, ensure that all pockets are empty and buttons and zips are fastened. Avoid washing frayed or torn articles and treat stains such as paint, ink, rust, and grass before washing.

Underwired bras must NOT be machine washed. Garments which have been in contact with volatile petroleum products should not be machine washed. If volatile cleaning fluids are used, care should be taken to ensure that the fluid is removed from the garment before placing in the machine. Never pull the power supply cable to remove the plug from the socket; always take hold of the plug itself. Never use the washing machine if the power supply cable, the control panel, the working surface or the base are damaged so that the inside of the washing machine is accessible. Make sure that children or pets do not climb into the drum. To avoid this the machine incorporates special feature. To activate this device, rotate the button (without pressing it) inside the door clockwise until the groove is horizontal. If necessary use a coin. To disable this device and restore the possibility of closing the door, rotate the button anti-clockwise until the groove is vertical.

Child safety This washing machine is not intended for use by young children or infirm persons without supervision. Young children should be supervised to ensure that they do not play with the appliance. The packaging components (e.g. plastic film, polystyrene) can be dangerous to children danger of suffocation!

Keep them out of children's reach Keep all detergents in a safe place out of children's reach.

4 Description of the appliance Your new washing machine is fitted with an automatic device which detects the laundry amount in some programmes for cotton and synthetic items and chooses the best cycles parameters for washing in an economical way. Cycle time duration, energy and water consumptions are proportional to the amount of each load. It is ideal when washing different small quantities of laundry. 1 2 3 4 5 Detergent dispenser drawer Control panel Door opening handle 1 Sport 40° Sport Shoes 40° Wool Off Jetsystem+ Cotton Cotton Eco Synthetic Cottons Normal +Prewash +Superquick Normal +Prewash Spin +Superquick Synthetics Delicate Handwash Silk Duvet Mini 30' Special Rinse Drain 2 Delay Start 95° 60° 40° 30° 1600 900 700 Heavy Normal Light Lock Easy Iron Extra Rinse Start/Pause Drain pump Adjustable feet 1600 7kg Temp. Spin Soil Level ZWF16581W 3 4 5 Detergent dispenser drawer Prewash Wash Fabric Softener 5 Control panel and functions Delay Start Sport 40° Sport Shoes 40° Wool Handwash Silk Duvet Mini 30' Special Rinse Drain Spin Off Jetsystem+ Cotton Cotton Eco Synthetic Cottons Normal +Prewash +Superquick Normal +Prewash +Superquick Synthetics Delicate ZWF16581W 95° 60° 40° 30° 1600 900 700 Heavy Normal Light Lock Easy Iron Extra Rinse Start/Pause Temp.

Spin Soil Level 1 2 3 4 5 6 7 8 9 1 Programme selector dial and On/Off switch The programme selector dial allows to select a programme and/or to switch the machine on/off. It can be turned either clockwise or anticlockwise. The light Start/Pause starts to flash. Press this button repeatedly to change the washing temperature, if you want your laundry to be washed at a temperature different from the one proposed by the washing machine. The relevant light will light up.

2 Temperature button 3 Spin reduction button 4 Soil level button Press the Spin button repeatedly to change the spin speed, if you want your laundry to be spun at a speed different from the one proposed by the washing machine. The relevant light will light up. By means of this button, you can select the soil level option: Heavy, Normal, Light (see the relevant chapter «Operating sequence»). The relevant light will light up. 5 Easy iron button 6 Extra Rinse button Selecting this button the laundry is gently washed and spun to avoid any creasing.

In this way ironing is easier. By means of this button, the machine performs some additional rinses. The display shows the following information: duration of the selected programme, washing programme phase icons, delayed start, weight calculation phase, incorrect option selection, alarm codes, child safety option, heating phase and end of programme. 7 Display 6 8 Start/Pause button The Start/Pause button allows to start the selected programme; the corresponding green pilot light stops flashing. This button interrupts also a programme which is running, the corresponding green pilot light starts to flash.



[You're reading an excerpt. Click here to read official ZANUSSI](#)

[ZWF16581W user guide](#)

<http://yourpdfguides.com/dref/955548>

9 Delay Start buttons By means of this buttons, the wash programme can be delayed from 30 min - 60 min - 90 min, 2 hours and then by 1 hour up to a maximum of 20 hours . Programme table - Proportional programmes Programme/ Temperature Type of laundry White and coloured cotton (Normally soiled): e.g. sheets, tablecloths, household linen, towels. White and fast coloured cotton (normally or lightly soiled items): sheets, household linen, underwear Synthetic or mixed fabrics, underwear, coloured garments, nonshrink shirts, blouses.

Options Description of programme Cotton 95 Proportional Cotton Eco Main wash from 95°C Spin red. to Cold Heavy, Light, 3 rinses Easy iron, Extra rinse Long spin Spin red. Easy iron Extra rinse Main wash from 95°C to 40°C 2 rinses Long spin 60- 40 proportional Synthetic 60 proportional Main wash from 60°C Spin red. to Cold Heavy, Light, 3 rinses Easy iron, Extra rinse Short spin Cycle time duration, energy and water consumptions are proportional to the amount of load. Important! When selcting these programmes the «Normal» pilot light illuminates.

7 Programme table Programme/ Temperature Type of laundry White and coloured cotton cotton (normally soiled items): sheets, tablecloths, household linen, towels. White and coloured cotton (heavy soiled cotton items): sheets, household linen, underwear White cotton (slightly soiled items): e.g. sheets, tablecloths, household linen, towels. Synthetic or mixed fabrics, underwear, coloured garments, nonshrink shirts, blouses.

Synthetic or mixed fabrics, underwear, coloured garments, nonshrink shirts, blouses. Synthetic or mixed fabrics lightly soiled Options Spin red. Heavy, Easy iron, Extra rinse Spin red. Heavy, Easy iron Extra rinse Description of programme Main wash from 95°C to Cold 3 rinses Long spin Prewash at 30°C Main wash from 60°C to Cold 3 rinses Long spin Cottons Normal 95 Cottons + Prewash 95 Cottons + SuperQuick 95 Synthetics Normal 60 Synthetics + Prewash 60 Synthetics + SuperQuick 60 Delicates Main wash from 95°C to Cold Spin red. Easy iron, Extra rinse 2 rinses Long spin Spin red. Easy iron, Extra rinse Spin red. Easy Iron Extra rinse Spin red. Easy iron, Extra rinse Main wash from 60°C to Cold 3 rinses Short spin Prewash at 30°C Main wash from 60° to Cold 3 rinses Short spin Main wash from 60° to Cold 2 rinses Short spin Main wash from 40°C to Cold 3 rinses Short spin 40- Delicate fabrics, for example curtains. Extra Rinse Max load for Cottons ..

.....
.....
.....
.....7.0 kg Max load for Synthetics .

.....
.....
.....
.....3.5 kg Max load for Delicates

.....
.....
.....
.....3.5 kg 8 Programme table - Special programmes Programme/ Temperature Type of laundry Short cycle for lightly soiled fabrics Short cycle for blankets Silk items to be gentle washed and spun. Special programme for hand washing fabrics Programme for wool «Pure new wool, nonshrink, machine washable» label. Short cycle for 1 pair of sport shoes (2 pairs if they are small) Programme for heavily soiled synthetics items Options Description of programme Main Wash at 30°C 2 rinses Short spin Main Wash at 30°C 3 rinses Short spioo tightly packed; Synthetics: drum no more than half full; Delicate fabrics and woollens: drum no more than one third full. Washing a maximum load makes the most efficient use of water and energy. For heavily soiled laundry, reduce the load size.

Temperatures 90° or 95° for normally soiled white cottons and linen (e.g. tea cloths, towels, tablecloths, sheets...) for normally soiled, colour fast garments (e.g. shirts, night dresses, pyjamas...

) in linen, cotton or synthetic fibres and for lightly soiled white cotton (e.g. underwear). for delicate items (e.g. net curtains), mixed laundry including synthetic fibres and woollens bearing the label «pure new wool, machine washable, non-shrink». 50°/60° Laundry weights The following weights are indicative: bathrobe napkin quilt cover sheet pillow case tablecloth towelling towel tea cloth night dress ladies' briefs man's work shirt man's shirt man's pyjamas blouse men's underpants 1200 g 100 g 700 g 500 g 200 g 250 g 200 g 100 g 200 g 100 g 600 g 200 g 500 g 100 g 100 g 30°-40°- (Cold) Before loading the laundry Never wash whites and coloureds together. Whites may lose their «whiteness» in the wash. New coloured items may run in the first wash; they should therefore be washed separately the first time.

Make sure that no metal objects are left in the laundry (e.g. hair clips, safety pins, pins). Button up pillowcases, close zip fasteners, hooks and poppers. Tie any belts or long tapes. Remove persistent stains before washing. Rub particularly soiled areas with a special detergent or detergent paste. Treat curtains with special care. Remove hooks or tie them up in a bag or net. Removing stains Stubborn stains may lectrical and water connections comply with the installation instructions.

IMPORTANT! Remove the polystyrene block and any material from the drum. IMPORTANT! We recommend you to run run a cotton cycle at 95°C, without any laundry in the machine, to remove any manufacturing residue from the drum and tub. Pour 1/2 a measure of detergent into the dispenser drawer and start the machine. 14 Operating sequence 1. Load the laundry Open the door by carefully pulling the door handle outwards. Place the laundry in the drum, one item at a time, shaking them out as much as possible. Close the door. 2. Measure out the detergent and the fabric softener Cottons, Synthetics, Special Turn the programme selector dial to the required programme. The Start/Pause light starts to flash, the display shows the duration of the selected programme. and the display shows the duration of the selected programme.The green Start/Pause light starts to flash. Position «Off» to Reset programme/Switching OFF of the machine. At the end of the programme the selector dial must be turned to position «Off», to switch the machine off. IMPORTANT! If you turn the programme selector dial to another programme when the machine is working, the red Start/Pause pilot light will flash 3 times and the message Err is displayed on the display to indicate a wrong selection.

The machine will not perform the new selected programme. Pull out the dispenser drawer until it stops. Measure out the amount of detergent required, pour it into the main wash compartment and, if you wish to carry out a programme with the prewash phase, pour it into the compartment marked . If required, pour fabric softener into the compartment marked (the amount used must not exceed the «MAX» mark in the drawer). Close the drawer gently.

3. Select the required programme Sport 40° Sport Shoes 40° Wool Handwash Silk Duvet Mini 30' Special Rinse Drain Spin Off Jetsystem+ Cotton Cotton Eco Synthetic Cottons Normal +Prewash +Superquick Normal +Prewash +Superquick Synthetics Delicate 4.



[You're reading an excerpt. Click here to read official ZANUSSI
ZWF16581W user guide](http://yourpdfguides.com/dref/955548)
<http://yourpdfguides.com/dref/955548>

Select the temperature 95° 60° 40° 30° Temp. The selector dial is divided into following the sections: Press this button repeatedly to increase or decrease the temperature, if you want your laundry to be washed at a temperature different from the one proposed by the washing machine. Maximum temperatures are 95°C for Cottons, 60°C for Synthetics, 40°C for Delicate, Wool, Handwash, Sport Shoes 40° and Sport 40°, 30°C for Silk, Duvet and Mini 30', while corresponds to cold wash. 15 Operating sequence 5. Select the spin speed or Night Cycle or Rinse Hold option 1600 900 700 appears a flashing zero «0.00», the «Lock» light is alight and the door is locked to indicate that the water must be emptied out. To empty out the water: 1. turn the programme selector dial to «Off» 2.

select the Drain or Spin programme 3. reduce the spin speed if needed, by means of the relevant button 4. depress Start/Pause button 5. at the end of programme, the display shows a flashing zero «0.00» and the «Lock» light goes off (and it will be possible to open the door). 6. Select the Soil Level option Heavy Normal Light Soil Level Spin Press the Spin button repeatedly to change the spin speed, if you want your laundry to be spun at a speed different from the one proposed by the appliance. The relevant light will light up. Maximum speeds are: Cottons: 1600 rpm; Synthetics, Wool, Handwash, Sport Shoes 40° and Sport 40°: 900 rpm Delicate, Mini 30', Duvet and Silk: 700 rpm; Night Cycle : by selecting this option, the machine will not drain the water of the last rinse, so as not to crease the laundry. As all spinning phases are suppressed, this washing cycle is very noiseless and it can be selectionned at night or in times with a more economical power rate.

On Cotton, Synthetics, Delicates, Silk, Sport Shoes 40° and Sport 40° programmes the rinses will be performed with more water. When the programme has finished, the Start/Pause light goes off, the display shows a flashing zero «0.00», the «Lock» light is alight and the door is blocked to indicate that the water must be emptied out. Rinse Hold : by selecting this option the water of the last rinse is not emptied out to prevent the fabrics from creasing. When the programme has finished, the Start/Pause light goes off, on the display 16 **IMPORTANT!** Not all the soil levels are compatible and can be selected with any programme.

Press the «Soil Level» button repeatedly, to increase or decrease the time cycle duration for cotton and synthetic. The relevant light will light up. Heavy Select this option for heavily soiled laundry. The washing intensity will be increased and the washing time will be prolonged by about 10 minutes. Normal: Select this option for normally soiled laundry .

Depending on the selected programme, the corresponding «Normal » light will illuminate by default. Light: Select this option for slightly soiled items that have been used or worn for a short time. Operating sequence The washing intensity will be decreases and the washing time will be reduced by few xminutes. 7

Select the Easy Iron option Selecting this button the laundry is gently washed and spun to Easy Iron avoid any creasing. In this way ironing is easier. Furthermore the machine will perform some additional rinses. This functxion can be used for cotton and synthetic. The Easy iron cannot be selected with Night Cycle option. If you press this button, simultaneously for about 6 seconds, in combination with Extra Rinse" button, the child safety lock will be enabled (see Display paragraph). 8 Select the Extra Rinse option This button can be selected with all Extra Rinse programmes except Wool, Hand wash, Mini 30', Duvet and Silk programmes.

The machine performs some additional rinses. This option is recommended for people who are allergic to detergents, and in areas where the water is very soft. If you press this button, simultaneously for about 6 seconds, in combination with "Easy Iron" button the child safety lock will be enabled (see Display paragraph). **IMPORTANT!** If an option is chosen that is not allowed with the selected programme, the red pilot light of the Start/Pause button will flash 3 times. 9. Display The display shows the following information: Duration of the selected programme After selecting a programme, the duration is displayed in hours and minutes (for example 2.05). The duration is calculated automatically on the basis of the maximum recommended load for each type of fabric. 2.05 After the programme has started, the time remaining is updated every minute.

ATTENTION! When selecting the «proportional» programmes, the display shows the washing duration of the maximum recommended load. After the Start/Pause has been pressed, on the display appears an arrows animation indicating that the appliance is calculating the laundry amount and the real duration. During this time, the washing duration shown decreases. Lock Start/Pause When the calculating phase has finished, the arrows animation disappears from the display and the washing time is adjusted to the real load. 17 Operating sequence Washing programme phase icons By selecting the wash programme, the washing programme phase icons corresponding to the various phases making up the programme are shown in the bottom of the display. Alarm codes In the event of operating problems, some alarm codes can be displayed, for example E20 (see paragraph "Something not working"). E20 2.05 2.05 Heating phase During the washing cycle the display shows a temperature icon illuminated to indicate that the appliance has started the heating phase of the water in the tub. Child safety lock enabled This device permits you to leave the appliance unsupervised without having the worry that children might be injured by or cause damage to the appliance.

After the machine has started, only the running icon stays on. When the programme has finished, a flashing zero «0.00» is displayed. Delayed start The selected delay (20 hours max) set by means of the relevant button appears on the display for about 3 seconds, then the duration of the previously selected programme is displayed. 2.05 15 h minute. The delay time value decreases by one unit every hour and then, when 1 hours remain, the time decreases every Easy Iron Extra Rinse Incorrect option selection If an option which is not compatible with the set wash programme is selected, the message Err is displayed for about 2 seconds and the integrated red Start/Pause light start flashing. This function remains able also when the washing machine is not working. There are two different ways to set this option: before pressing the Start/Pause: it will be impossible to start the machine. after pressing the Start/Pause: it will be impossible to change any other programme or option.



[You're reading an excerpt. Click here to read official ZANUSSI ZWF16581W user guide](http://yourpdfguides.com/dref/955548)
<http://yourpdfguides.com/dref/955548>

To enable or disable this option press simultaneously for about 6 seconds "Easy Iron" and "Extra Rinse" buttons until the icon appears or disappears on the display. 18 Operating sequence 10. Select the Start/Pause To start the selected programme, press the Start/Pause button; the corresponding green pilot light stops flashing. Lock Start/Pause The «Lock» light illuminates to indicate that the appliance starts operating and the door is locked. The "Lock" light indicates if the door can be opened: light on: the door cannot be opened. The appliance is running. light off: the door can be opened. The washing programme is finished. @@@@@IMPORTANT! @@11. @@@@@ Select the delay start.

@@The programme will start after the selected delay has expired. @@@@The door will be locked throughout the delay time. @@After you have closed the door, press the Start/Pause button again. Note! The Delay Start cannot be selected with Drain programme. @@@@Changing a running programme is possible only by resetting it.

@@Start the new programme by depressing the Start/Pause button again. The washing water in the tub will not emptied out. @@Depress the button again to restart the programme. @@@@If the «Lock» light goes off, the door can be opened. @@In this case the door can not be opened.

@@@At the end of the programme The machine stops automatically. @@The door can be opened. @@The display will show a flashing «0.00».

@@@If you do not intend to carry out another wash, close the water tap. @@@@Descaling The water we use normally contains lime. @@@@This will help to prevent the formation of lime deposits. @@We recommend that a maintenance wash be performed on a regular basis. To run a maintenance wash: The drum should be empty of laundry. Select the hottest cotton wash programme.

Use a normal measure of detergent, must be a powder with biological properties. External cleaning Clean the exterior cabinet of the appliance with soap and water only, and then dry thoroughly. Cleaning the dispenser drawer The washing powder and additive dispenser drawer should be cleaned regularly. Remove the drawer by pressing the catch downwards and by pulling it out. Flush it out under a tap, to remove any traces of accumulated powder. Cleaning the drawer recess Having removed the drawer, use a small brush to clean the recess, ensuring that all washing powder residue is removed from the upper and lower part of the recess. Replace the drawer and run the rinse programme without any clothes in the drum. Cleaning the pump The pump should be inspected if the machine does not empty and/or spin the machine makes an unusual noise during draining due to objects such as safety pins, coins etc. blocking the pump.

Proceed as follows: Disconnect the appliance.

If necessary wait until the water has cooled down. Open the pump door. Place a container close to the pump to collect any spillage. Pull out the emergency emptying hose, place it in the container and remove its cap. When no more water comes out, unscrew the pump cover and remove it.

Always keep a rag nearby to dry up spillage of water when removing the cover. To aid cleaning, the top part of the additive compartment should be removed.

21 Remove any objects from the pump impeller by rotating it. Put the cap back on the emergency emptying hose and place the latter back in its seat. Screw the pump cover fully in.

Close the pump door. The dangers of freezing If the machine is exposed to temperatures below 0°C, certain precautions should be taken. Turn off the water tap. Unscrew the inlet hose. Place the end of the emergency emptying hose and that of the inlet hose in a bowl placed on the floor and let water drain out.

Screw the water inlet hose back on and reposition the emergency emptying hose after having put the cap on again. When you intend to start the machine up again, make sure that the room temperature is above 0°C. Emergency emptying out If the water is not discharged, proceed as follows to empty out the machine: pull out the plug from the power socket; close the water tap; if necessary, wait until the water has cooled down; open the pump door; place a bowl on the floor and place the end of the emergency emptying hose into the bowl. Remove its cap. The water should drain by gravity into the bowl.

When the bowl is full, put the cap back on the hose. Empty the bowl. Repeat the procedure until water stops flowing out; clean the pump if necessary as previously described; replace the emergency emptying hose in its seat after having plugged it; screw the pump cover again and close the door. IMPORTANT!

When the appliance is in use and depending on the programme selected there can be hot water in the pump. Never remove the pump cover during a wash cycle, always wait until the appliance has finished the cycle, and is empty. When replacing the cover, ensure it is securely retightened so as to stop leaks and young children being able to remove it. Cleaning the water inlet filter If your water is very hard or contains traces of lime deposit, the water inlet filter may become clogged. It is therefore a good idea to clean it from time to time. Turn off the water tap. Unscrew the water inlet hose.

Clean the filter using a hard bristle brush. Tighten up the inlet hose. 22 Something not working IMPORTANT! Certain problems are due to lack of simple maintenance or oversights, which can be solved easily without calling out an engineer. Before contacting your local Service Centre, please carry out the checks listed below. During machine operation it is possible that the red Start/Pause pilot light flashes, one of the following alarm codes appears on the display and 3 acoustic signals sound every 20 seconds to indicate that the machine is not working.

@@@Malfunction Possible Cause / Solution The door has not been closed. E40 · Close firmly the door. The plug is not properly inserted in the power socket. · Insert the plug into the power socket. There is no power at the socket.

· Please check your domestic electrical installation. The main fuse has blown. · Replace the fuse. @@@@The delay start has been selected. @@E10 · Open the water tap. The inlet hose is squashed or kinked. E10 · Check the inlet hose connection. The filter in the inlet hose is blocked. E10 · Clean the water inlet hose filter. The door is not properly closed.

E40 · Close firmly the door. @@@@The drain hose is squashed or kinked. E20) · Check the drain hose connection. The drain pump is clogged. E20 · Clean the drain pump. The option or has been selected. @@ · Redistribute the laundry. @@ · Reduce the detergent quantity or use another one. @@It is not always easy to see this as the water runs down the hose; check to see if it is damp. · Check the water inlet hose connection.

The inlet hose is damaged. · Change it with a new one. The cap on the emergency emptying hose has not been replaced after cleaning the pump.



[You're reading an excerpt. Click here to read official ZANUSSI](http://yourpdfguides.com/dref/955548)

[ZWF16581W user guide](http://yourpdfguides.com/dref/955548)

<http://yourpdfguides.com/dref/955548>

· Put the cap back on the emergency emptying and place the latter back in its seat. Too little detergent or unsuitable detergent has been used.
· Increase the detergent quantity or use another one. Stubborn stains have not been treated prior to washing. · Use commercial products to treat the stubborn stains. The correct temperature was not selected. · Check if you have selected the correct temperature.

Excessive laundry load. · Introduce into the drum less laundry. The machine does not empty and/or does not spin: There is water on the floor: Unsatisfactory washing results: 24 Malfunction Possible Cause / Solution The programme is still running. · Wait the end of washing cycle. The door lock has not been released. The door will not open: · Wait until the «Lock» light has gone out. There is water in the drum. · Select drain or spin programme to empty out the water. The transit bolts and packing have not been removed. · Check the correct installation of the appliance.

The support feet have not been adjusted. · Check the correct levelling of the appliance. The machine vibrates or is noisy: The laundry is not evenly distributed in the drum. · Redistribute the laundry. Maybe there is very little laundry in the drum. · Load more laundry. The electronic unbalance detection device has cut in because the laundry is not evenly distributed in the drum. The laundry is redistributed by reverse rotation of the drum. This may happen several times before the unbalance disappears and normal spinning can Spinning starts late or the machine does not spin: resume. If, after 10 minutes, the laundry is still not evenly distributed in the drum, the machine will not spin.

In this case, redistribute the load manually and select the spin programme. Redistribute the laundry. The machine is fitted with a type of motor which makes an unusual noise compared with other motors. This new motor The machine makes an unusual noise traditionalmore even distribution of ensures a softer start and the laundry in the drum when spinning, as well as increased stability of the machine. Machines based on modern technology operate very No water is visible in the drum economically using very little water without affecting performance.

If you are unable to identify or solve the problem, contact our service centre. Before telephoning, make a note of the model, serial number and purchase date of your machine: the Service Centre will require this information. Mod. ..

... .. Prod. No. .

... .. Ser. No.

... ..

... .. Mod.

Prod No.

... .. Ser.

No.

... ..

25 Technical data Dimensions Width Height Depth (including the porthole) Electrical connection Voltage Overall power - Fuse Water supply pressure 60 cm 85 cm 63 cm Information on the electrical connection is given on the rating plate on the inner edge of the appliance door Minimum Maximum 0,05 MPa 0,8 MPa 7.0 3.5 3.5 2.0 0 kg kg kg kg Maximum Load Cotton Synthetics Delicates Woollens and handwash Maximum Spin Speed 1600 rpm Consumption values Programmes Programme duration (in minutes) Please refer to the display on the control panel. Energy consumption (in kWh) 2.1 1.19 2.3 0.9 Water consumption (in litres) 62 52 46 Cotton 95°C - Proportional Cotton 60° Eco(*) - Proportional Synthetic 60°C - Proportional Infos The consumption data for the proportional programmes given on this chart is to be considered purely indicative and refers to the highest load size for each wash programme.

26 Consumption values Programme Energy consumption (in kWh) 2.1 2.3 0.6 0.9 1.05 0.4 0.55 0.25 0.35 0.
25 0.4 0.4 0.5 0.65 0.

1 - Water consumption (in litres) 62 74 41 54 64 42 63 47 75 50 58 58 57 70 46 - Programme duration Cottons Normal 95°C Cottons Prewash 95°C Cottons Superquick 95 Synthetics Normal 60°C Synthetics Prewash 60°C Synthetics Superquick 60°C Delicates 40°C Mini 30' Duvet 30°C Silk 30°C Handwash 40°C Wool 40°C Sport Shoes 40°C Sport 40°C Rinse Drain Spin Infos The consumption data shown on this chart is to be considered purely indicative, as it may vary depending on the quantity and type of laundry, on the inlet water temperature and on the ambient temperature. It refers to the highest temperature for each wash programme. (*) The "Cotton 60° Eco" is the reference programme for the data entered in the energy label, in compliance with EEC 92/75 standards. For the duration of the programmes, please refer to the display on the control panel. 27 Installation instruction Unpacking All transit bolts and packing must be removed before using the appliance.

You are advised to keep all transit devices so that they can be refitted if the machine ever has to be transported again. 5. Remove the bracket D, refit the six smaller bolts C and slide out the relevant plastic spacer E. 1. After removing all the packaging, carefully lay machine on it's back to remove the polystyrene base from the bottom. 2. Remove the power supply cable and the draining hose from the hose holders on the rear of the appliance. 6. Open the porthole, take out the inlet hose from the drum and remove the polystyrene block fitted with the adhesive tape on the door seal. Open the porthole, take out the inlet hose from the drum and remove the polystyrene block fitted with the adhesive tape on the door seal.

7. Fill the smaller upper hole and the two large ones with the corresponding plastic plug caps supplied in the bag containing the instruction booklet. Positioning Install the machine on a flat hard floor. Make sure that air circulation around the machine is not impeded by carpets, rugs etc. Check that the machine does not touch the wall or other kitchen units. Level the washing machine by raising or lowering the feet. The feet may be tight to adjust as they incorporate a self locking nut, but the machine MUST be level and stable. If necessary, check the setting with a spirit level. Any necessary adjustment can be made with a spanner. Accurate levelling prevents vibration, noise and displacement of the machine during operation.

Never place cardboard, wood or similar materials under the machine to compensate for any unevenness in the floor. A C B C B 3. With a suitable spanner unscrew and remove the central rear bolt A. 4. Unscrew and remove the two large rear bolts B and the six smaller bolts C.

E C C D 28 Water inlet An inlet hose is supplied and can be found inside the machine drum. Do not use the hose from your previous machine to connect to the water supply. 1. Open the porthole and extract the inlet hose. 2.

Connect the hose with the angled connection to the machine. Do not place the inlet hose downwards. Angle the hose to the left or right depending on the position of your water tap. 3. Set the hose correctly by loosening the ring nut. After positioning the inlet hose, be sure to tighten the ring nut again to prevent leaks. 4. Connect the hose to a tap with a 3/4" thread.



[You're reading an excerpt. Click here to read official ZANUSSI ZWF16581W user guide](#)

Always use the hose supplied with the appliance. The inlet hose must not be lengthened.

If it is too short and you do not wish to move the tap, you will have to purchase a new, longer hose specially designed for this type of use. 45° The appliance must be connected to a cold water supply. A minimum water pressure of 0.05 MPa (0.5 bar) is required for safe operation of the appliance. If you cannot make the cold water connection direct from the rising mains, you may be able to operate the appliance from your cold water storage system. There should be a minimum distance of 5.02m (16.5 ft) between the appliance's inlet and the bottom of the water storage tank. Water drainage This appliance is designed to be permanently plumbed into your home's drainage system using one of the following methods.

1. Into a drainage standpipe. U piece supplied NOTE Installation should comply with local water authority and building regulations' requirements. Firstly form a hook in the end of the drain hose using the «U» piece supplied. Place the drain hose into your standpipe, which should have an internal diameter of approximately 38mm thus ensuring there is an air break between the drain hose and standpipe.

When discharging into a standpipe ensure that the top of the standpipe is no more than 90 cm (35.4") and no less than 60 cm (23.6") above floor level. 29 30 cm (12") 35° Special Sport 40° Sport Shoes 40° Silk Mini 30' Off 95° 60° Eco 60° Cottons 3h 6h 9h 1000 900 700 Prewash Intensive Super Quick Spin Options Extra Rinse 40° Eco 40° Synthetics 50° 40° Spin Drain Rinse 30° 40° Delicates Easy Iron 40° Wash Door End Start/Pause 1000 6kg Cold Hand Wash 30° Wool ZWF10070W 38 mm (11.2) standpipe diameter Special Sport 40° Sport Shoes 40° Silk Mini 30' Off 95° 60° Eco 60° Cottons 3h 6h 9h 1000 900 700 Prewash Intensive Super Quick Spin Options Extra Rinse 40° Eco 40° Synthetics 50° 40° Spin Drain Rinse 30° 40° Delicates Easy Iron 40° Wash Door End Start/Pause 1000 6kg Cold Hand Wash 30° Wool ZWF10070W Min.

60 cm (23.6) Max. 90 cm (35.4) Levelling Level the washing machine by raising or lowering the feet. The feet may be tight to adjust as they incorporate a self locking nut, but the machine MUST be level and stable. Any necessary adjustment can be made with a spanner. Accurate levelling prevents vibration, noise and displacement of the machine during operation. Some vibration is inevitable, especially if mounted on a wooden floor. Sprung wooden floors are particularly susceptible to vibration. For advice, consult a builder.

If possible, always place the machine on a solid floor. Special conditions If the floor is carpeted or covered with crumbly or soft material, insert a rigid support base under the feet to prevent noise, vibration or displacement. The base should protrude a few centimetres beyond the edges of the machine.

WARNING! The machine should NOT be placed on deep pile carpeting. NOTE Please ensure that when the appliance is installed it is easily accessible for the engineer in the event of a breakdown. In the interest of the environment Washing machines and dishwashers should be connected to the FOUL drainage system, the water will then be taken to a sewage works for treatment before being discharged safely into a river. It is essential that these appliances are not connected to the surface water drainage system as this water is discharged directly into a river or stream and may cause pollution. The drain hose may be extended to a maximum of 4 metres. An additional drain hose and joining piece is available from your local Service Force Centre. The joining piece must have an internal diameter of 18mm.

If your drain hose looks like this (see below) you do not require the «U» piece. Just push the hose firmly into the standpipe. 2. Onto a sink outlet spigot. If the outlet spigot has not been used before, remove any blanking plug that may be in place.

Loop Push the drain hose onto the spigot and secure with a clip if required, ensure a loop is formed in the drain hose (see diagram) to prevent waste from the sink entering the washing machine. Important! Before connecting the machine to new pipework or to pipework that has not been used for some time, run off a reasonable amount of water to flush out any debris that may have collected in the pipes. 30 If you require any further advice please contact your local water authority. SHOWER SINK BATH TOILET BIDET WASHING MACHINE RAINWATER 'RUN-OFF' DISHWASHER FOUL DRAIN SURFACE WATER DRAINS & SEWERS FOUL SEWERS SEWAGE TREATMENT WORKS TREATED DISCHARGE RIVER RIVER UNTREATED DISCHARGE Electrical connection Any electrical work required to install this appliance should be carried out by a qualified electrician or competent person. WARNING! This appliance must be earthed.

The manufacturer declines any liability should this safety measure not be observed. Before switching on, make sure the electricity supply voltage is the same as that indicated on the appliance's rating plate. IMPORTANT! Information on the electrical connection is given on the rating plate on the inner edge of the appliance door. The appliance is supplied with a 13amp plug fitted. In the event of having to change the fuse in the plug supplied, a 13amp ASTA approved (BS1363/A) fuse must be used. Should the plug need to be replaced for any reason, proceed as described below. The wires in the mains lead are coloured in accordance with the following code: Green and Yellow

.....
.....
.....
.....- Earth Blue

.....
.....
.....
.....
.....
.....
.....
...- Neutral Brown..

.....
.....
.....
.....

.....- Live The wire coloured green GREEN & YELLOW and yellow must be connected to the terminal marked with the letter «E» or by the or BROWN earth symbol coloured green and BLUE CORD CLAMP yellow. The wire coloured blue must be connected to the terminal marked «N» or coloured black. The wire coloured brown must be connected to the terminal marked «L» or coloured red. Upon completion there must be no cut, or stray strands of wire

present and the cord clamp must be secure over the outer sheath. ENL WARNING! A cut off plug inserted into a 13 amp socket is a serious safety (shock) hazard. Ensure that the cut off plug is disposed of safely. Should the appliance power supply cable need to be replaced, this must be carried out by our Service Force Centre.

The power supply cable must be easily accessible after installing the appliance. Permanent connection In the case of permanent connection it is necessary that you install a double pole switch between the appliance and the electricity supply (mains), with a minimum gap of 3mm between the switch contacts and of a type suitable for the required load in compliance with the current electrical regulations. The switch must not break the yellow and green earth cable at any point.



[You're reading an excerpt. Click here to read official ZANUSSI](#)

[ZWF16581W user guide](#)

<http://yourpdfguides.com/dref/955548>

13 A 31 Environmental concerns Packaging materials The materials marked with the symbol are recyclable. >PE<=polyethylene >PS<=polystyrene >PP<=polypropylene This means that they can be recycled by disposing of them properly in appropriate collection containers.

Old machine Use authorised disposal sites for your old appliance. Help to keep your country tidy! The symbol on the product or on its packaging indicates that this product may not be treated as household waste. Instead it shall be handed over to the applicable collection point for the recycling of electrical and electronic equipment. @@@@ The machine works more economically if it is fully loaded. @@ Measure out detergent according to the water hardness, the degree of soiling and the quantity of laundry being washed. 32 Guarantee conditions Standard guarantee conditions We, Zanussi-Electrolux, undertake that if within 12 months of the date of the purchase this Zanussi-Electrolux appliance or any part thereof is proved to be defective by reason only of faulty workmanship or materials, we will, at our option repair or replace the same FREE OF CHARGE for labour, materials or carriage on condition that: The appliance has been correctly installed and used only on the electricity supply stated on the rating plate. The appliance has been used for normal domestic purposes only, and in accordance with the manufacturer's instructions. The appliance has not been serviced, maintained, repaired, taken apart or tampered with by any person not authorised by us. Electrolux Service Force Centre must undertake all service work under this guarantee. @@@@ Appliances found to be in use within a commercial environment, plus those which are subject to rental agreements.

Products of Electrolux manufacturer that are not marketed by Electrolux. Service and Spare Parts. In the event of your appliance requiring service, or if you wish to purchase spare parts, please contact your local Service Force Centre by telephoning: 0870 5 929 929 Your telephone call will be automatically routed to the Service Force Centre covering your postcode area. For the address of your local Service Force Centre and further information about Service Force, please visit the website at www.serviceforce.co.uk Before calling out an engineer, please ensure you have read the details under the heading «Something not working». When you contact the Service Force Centre you will need to give the following details: 1 2 3 4 Your name, address and postcode. Your telephone number. Clear concise details of the fault.

The model and Serial number of the appliance (found on the rating plate). 5 The purchase date. Please note a valid purchase receipt or guarantee documentation is required for in guarantee service calls. Customer Care For general enquiries concerning your Electrolux appliance, or for further information on Electrolux products please contact our Customer Care Department by letter or telephone at the address below or visit our website at www.electrolux.co.uk

Customer Care Department Electrolux Major Appliances Addington Way Luton Bedfordshire, LU4 9QQ Tel: 08705 727 727 (*) (*) Calls may be recorded for training purposes 33 For Customer Service in The Republic of Ireland please contact us at the address below: Electrolux Group (Irl) Ltd Long Mile Road, Dublin 12, Republic of Ireland Tel: + 353 (0)1 4090751 Email: service.eid@electrolux.ie European guarantee This appliance is guaranteed by Electrolux, in each of the countries listed in the following page, for the period specified in the appliance guarantee or otherwise by law. If you move from one of these countries to another of these countries the appliance guarantee will move with you subject to the following qualifications: The appliance guarantee starts from the date you first purchased the appliance which will be evidenced by production of a valid purchase document issued by seller of the appliance. The appliance guarantee is for the same period and to the same extent for labour and parts as exists in your country of residence for this particular model or range of appliances. The appliance guarantee is personal to the original purchaser of the appliance and cannot be transferred to another user. The appliance is installed and used in accordance with instructions issued by Electrolux and is only used within the home, i.e. is not used for commercial purposes. The appliance is installed in accordance with all relevant regulations in force within your new country of residence. The provisions of this European Guarantee do not affect any of the rights granted to you by law. 34 www.electrolux.com Albania Belgique/België/Belgien Česká republika Danmark Deutschland Eesti España France Great Britain Hellas Hrvatska Ireland Italia Latvija Lituania Luxembourg Magyarország Nederland Norge Österreich Polska Portugal Romania Schweiz-Suisse-Svizzera Slovenija Slovensko Suomi Sverige Türkiye +35 5 4 261 450 +32 2 363 04 44 +420 2 61 12 61 12 +45 70 11 74 00 +49 180 32 26 622 +37 2 66 50 030 +34 902 11 63 88 www.electrolux.com

[electrolux.fr](http://www.electrolux.fr) +44 8705 929 929 +30 23 10 56 19 70 +38 51 63 23 338 +353 1 40 90 753 +39 (0) 434 558500 +37 17 84 59 34 +370 5 27 80 609 +35 2 42 43 13 01 +36 1 252 1773 +31 17 24 68 300 +47 81 5 30 222 +43 18 66 400 +48 22 43 47 300 +35 12 14 40 39 39 +40 21 451 20 30 +41 62 88 99 111 +38 61 24 25 731 +421 2 43 33 43 22 www.electrolux.fi +46 (0)771 76 76 76 +90 21 22 93 10 25 +7 095 937 7837 Rr. Pjeter Bogdani Nr. 7 Tirane Bergensesteenweg 719, 1502 Lembeek Budjovická 3, Praha 4, 140 21 Sjællandsgade 2, 7000 Fredericia Muggenhofer Str. 135, 90429 Nürnberg Mustamäe tee 24, 10621 Tallinn Carretera M-300, Km. 29,900 Alcalá de Henares Madrid Addington Way, Luton, Bedfordshire LU4 9QQ 4, Limnou Str., 54627 Thessaloniki Slavonska avenija 3, 10000 Zagreb Longmile Road Dublin 12 C.so Lino Zanussi, 26 - 33080 Porcia (PN) Kr. Barona iela 130/2, LV-1012, Riga Verkiu, 2 9, 09108 Vilnius, Lithuania Rue de Bitbourg, 7, L-1273 Hamm H-1142 Budapest XIV, Erzsébet királyné útja 87 Vennootsweg 1, 2404 CG - Alphen aan den Rijn Risløkkvn. 2 , 0508 Oslo Herzigasse 9, 1230 Wien ul. Kolejowa 5/7, Warsaw Quinta da Fonte - Edifício Gonçalves Zarco - Q35 -2774-518 Paço de Arcos Str. Garii Progresului 2, S4, 040671 RO Industriestrasse 10, CH-5506 Mägenwil Traska 132, 1000 Ljubljana Electrolux Slovakia s.r. o., Electrolux Domáce spotrebiče SK, Seberíniho 1, 821 03 Bratislava Electrolux Service, S:t Göransgatan 143, S-105 45 Stockholm Tarlabai caddesi no : 35 Taksim Istanbul I29090 , , 16, "" 35 www.electrolux.com www.zanussi-electrolux.co.uk 132973870 Subject to change without notice .



[You're reading an excerpt. Click here to read official ZANUSSI ZWF16581W user guide](#)
<http://yourpdfguides.com/dref/955548>