



Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for ZANUSSI ZWF185W. You'll find the answers to all your questions on the ZANUSSI ZWF185W in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual ZANUSSI ZWF185W
User guide ZANUSSI ZWF185W
Operating instructions ZANUSSI ZWF185W
Instructions for use ZANUSSI ZWF185W
Instruction manual ZANUSSI ZWF185W

ZANUSSI

WASHING MACHINE USER MANUAL

ZWF185W



[You're reading an excerpt. Click here to read official ZANUSSI ZWF185W user guide](http://yourpdfguides.com/dref/651860)
<http://yourpdfguides.com/dref/651860>

Manual abstract:

@@@Remove the plug by holding. Do not plug the power supply with wet hands. Never touch the machine with wet hands or feet. Never open the detergent drawer while the device is running. @@Since the machine can reach high temperatures while running, do not touch the drain hose and water during draining. In case of any failure, first unplug the device and close the water tap. Do not attempt to repair. Please apply to the nearest authorized service station. Do not forget that the packing material of your machine may be hazardous for children. Do not let your children play with the washing machine. Keep your pet away from your machine. Your machine should only be used by adults within the information written in this manual. Your machine is designed for use in house environment. Warranty will be invalid if you use it for commercial purposes. The appliance should not be put on a carpet which can block the air ventilation on the bottom side.

RECOMMENDATIONS · · · The detergent or softener in contact with air for a long time will dry and stick to your detergent drawer. To avoid this put your detergent and softener into the detergent drawer just before washing. It is recommended that you use pre-washing program for only very dirty clothes. Please do not exceed the maximum loading capacity. 2 · · If you will not use your machine for a long time, unplug your machine, close the water supply and leave the door open in order to keep the inside of the machine dry and for prevention from unpleasant odour.

As a result of the quality control procedures, a certain amount of water may remain in your machine. This is not harmful for your machine. **SECTION 2: INSTALLATION** You must pay attention to the following issues before using your washing machine. **REMOVAL OF TRANSPORTATION SCREWS** · · · ·

Transportation screws, which are located at the back side of the machine, must be removed before running the machine. Loosen the screws by rotating counterclockwise by a suitable wrench. (DIAGRAM-1) Remove the screws by pulling them. (DIAGRAM-2) To the holes where the transport screws have been removed, insert the plastic transport screw taps found in the accessories bag. (DIAGRAM-3) The transportation screws, that have been removed from the machine should be kept in hand for any other transportation necessities. **DIAGRAM-2 DIAGRAM-1 DIAGRAM-3 ADJUSTMENT OF FEET** · · Do not install your machine on rugs or similar surfaces. For your machine to work silently and without any vibration, it should be settled on a flat, non-slippery and tough ground.

3 · · · · You can adjust the balance of your machine from its feet. First, loosen the plastic adjustment nut. Adjust by rotating the feet upwards or downwards. After the balance has been reached, tighten the plastic adjustment nut again by rotating it upwards. Never put cartons, wooden blocks or similar materials under the machine to balance the irregularities on the level of the ground. **ELECTRICAL CONNECTION** · · Your washing machine works with 220-240V and 50Hz. A special grounded plug has been attached to the network cable of your washing machine. This plug must definitely be inserted to a grounded socket with 10 ampere. The fuse flow value of the electricity line attached to this should also be 10 ampere. If you have no such sockets and fuses in your house, let it be made by a qualified electrician.

Our company will not be responsible for any damages that may occur as a result of usage without grounding. · **WATER SUPPLY CONNECTION** · Depending on the features your machine, may be with single water inlet (cold) or double water inlet (cold/hot). The white headed hose is for cold water inlet and red headed hose is for hot water inlet (valid for machines with hot&cold water inlet). To prevent leakage from the connection joints, 1 (valid for cold water inlet) or 2 (valid for machines with hot&cold water inlet) seals are included in the hose packing. Fit these seals at the end of water inlet hoses on the tap side.

Connect the white headed hose to the water inlet valve with white filter and connect the red headed hose to the water inlet valve with red filter (latter is valid in machines with hot&cold water inlet). Tighten the plastic parts of the connections with your hand. Please call a qualified plumber for safer connections. · · 4 · · · Water pressure of 1-10 bars from your tap will enable your machine to work more efficiently. (1 bar pressure means water flow of more than 8 liters in 1 minute from a fully opened tap).

After connections are completed, check for the non-leakage of the connection joints by turning on your tap completely. Be sure that water inlet hoses are not folded, broken or crushed. Mount the water inlet hoses to a 3"/4, geared water tap. Cold water inlet (White filter valve) **WATER DRAIN CONNECTION** · · · Be sure that water inlet hoses are not folded, twisted, crushed or elongated by stretching. Water drain hose should be mounted at a height of minimum 60 cm, maximum 100 cm from the ground. The end of the water drain hose may directly be fitted to the dirty water outlet hole or a special apparatus mounted on the outlet bracket of the wash-stand. Never attempt to extend the water drain hose by adding extra parts. 5 **SECTION 3: TECHNICAL SPECIFICATIONS**
ZWF185W Maximum dry laundry capacity (kg) Recommended loading (kg) Height (cm) Width (cm) Depth (cm) Maximum spin cycle (rpm) 5 4,5 85 59,6 51 800 (*) Maximum spin cycles depend on the model you've chosen 1 2 3 4 5 6 7 1-Upper tray 2-Detergent drawer 3-Control panel 4-Door 5-Handle 6-Filter cover 7-Kickplate These technical specifications written above for single water inlet (cold) and double water inlet (cold/hot) in machines. 6 **SECTION 4: CONTROL PANEL** 1 2 3 4 5 6 1-Detergent drawer 2-Start/pause light 3-Function indicator lights 4-Program ready light 7 8 5-Program knob 6-Start/pause button 7-Function buttons 8-Program end light 7 **START/PAUSE BUTTON** Used to start a selected program or pause during running. **WARNING!** It is required for the program knob to be brought to O(off) position before selecting the program or changing a continuing program.

FUNCTION INDICATOR LIGHTS When the start/pause button or any function button is pressed, the corresponding light turns on. The light turns off when the function button or start/pause button is re-pressed, or when the process the selected function is completed. The function indicator lights are also used in failure detection system mentioned in section 9. **FUNCTION BUTTONS** Rinse hold This function is recommended to be used when the clothes cannot be taken immediately after the end of the program. This will prevent occurrence of wrinkles. When this button is pressed, the last rinsing water is not drained.



[You're reading an excerpt. Click here to read official ZANUSSI](http://yourpdfguides.com/dref/651860)

[ZWF185W user guide](http://yourpdfguides.com/dref/651860)

<http://yourpdfguides.com/dref/651860>

For the program to continue from the same point, repress the same button. 8 If you do not want your sensitive clothes to be spinned or you want them to be spinned sensitively, turn the program knob to O (off) position. Bring the program knob on one of the draining or spinning programs you desire and press the start/pause button. If the program you have selected is a drain program, your machine will draining the water inside.

If you have selected a spinning program, your machine will perform a spinning operation and then end the program. Extra rinse You can have one more rinsing done in addition to the rinses which your machine has made in all washing programs by using this function. 9 WARNING! Functions vary depending on the model you have chosen. If you forgot to use additional function and your machine starts to wash push the additional function button if the indicator light is on. Additional function will be activated.

If the indicator light is not on, additional function will not be activated. PROGRAM KNOB With the program knob, you can select the program with which you desire to wash your clothes. You can adjust the program selection process by turning the program knob in both directions. You must be careful that the adjustment sign of the program knob is exactly on the program you want to select. When you bring the program knob to O(off) position, while your machine is running, your program will remain incomplete.

10 O Stop 1 Cotton 90° 2 Cotton 60°(Prewash) 3 Cotton 60° 4 Cotton 40° 5 Eco wash 6 Cotton 30° 7 Quick wash 8 Cotton cold 9 Mix wash 10 Synthetic 60° 11 Baby wash 12 Synthetic 40° 13 Sport clothes 14 Synthetic cold 15 Curtain wash 16 Delicate 30° 17 Delicate cold 18 Hand wash 19 Wool 30° 20 Wool cold 21 Rinsing 22 Spinning 23 Draining SECTION 5: WASHING YOUR LAUNDRY · Plug the machine. Open the tap water. First wash cycle There may be water left inside your machine after factory tests and trials. It is recommended that the first wash cycle should be made without any laundry so that carry out this water; pour half a measuring cup of normal allpurpose detergent into compartment 2 and select cotton program at 90°C. BEFORE WASHING Discrimination of your laundry · · · · · Discriminate your clothes according to their types (cotton, synthetic, sensitive, woolen, etc.), washing temperatures and level of dirtiness. Never wash your white and coloured clothes together. Since your new coloured clothes may shed dye on the first wash, wash them separately. Be careful that no metal pieces are found on or in the pockets of your clothes, remove if there is any. Zip and button your clothes.

Remove the plastic or metal hooks of the curtains and laces or place them inside a washing bag and tie. 11 · Pull the textiles like trousers, knitted fabric, t-shirt and sweat shirt inside out. Wash your small clothes like socks and handkerchiefs in a washing bag. Wash up to 90 °C Wash up to 60 °C Wash up to 30 °C Not washable in washing machine Placement of the clothes into the machine · · · · Open the door of your machine. Fill your clothes in your machine in a well-spread manner. Place each cloth separately. When you shut the door of your machine, be careful that no cloth is jammed between the cover and the gasket. Shut the door of your machine tightly otherwise your machine will not start the washing process. Filling detergent in the machine The quantity of the detergent that you will fill in your machine depends on the following criteria: · Your detergent consumption will change according to the dirtiness level of your clothes. For your slightly dirty clothes, do not pre-wash and put a small amount of detergent in the compartment no.

2 of the detergent drawer. · For your excessively dirty clothes, select a program with prewashing, fill ¼ portion of the detergent you will put in compartment 1 in the detergent drawer and the remaining portion in compartment 2. · In your machine, use the detergents developed especially for automatic washing machines. The quantities that will be used for your clothes are written on the packing of the detergents. · As the hard DETERGENT COMPART.

ADDITIONAL FUNCTION BUTTON MAX DRY LOAD CAPACITY (kg) ZWF185W TYPE OF LAUNDRY Dirty, boil, cotton and linen textile Very dirty, cotton, coloured and linen textile Dirty, cotton, coloured and linen textile Slightly dirty, paint to get out, cotton, coloured and linen textile Dirty, cotton, coloured and linen textile Slightly dirty, cotton, coloured and linen textile Slightly dirty, cotton, coloured and linen textile Slightly dirty cotton, coloured and linen textile. Washed without heating the tap water. Dirty or very dirty, stain, cotton, coloured and linen textile Dirty, synthetic or synthetic mixture textile Baby laundry Slightly dirty, synthetic or synthetic mixture textile EXPLANATIONS 1-COTTON 90° 2-COTTON 60° (PREWASH) 3-COTTON 60° 4-COTTON 40° 5-ECO WASH 6-COTTON 30° 7-QUICK WASH 2 1+2 2 2 2 2 2 2 2 2 5 5 5 5 5 5 2,5 5 Underwears, sheet, table cloth, t-shirt, shirt, towel 15 8-COTTON COLD 9-MIX WASH 10-SYNTHETIC 60° 11-BABY WASH 12-SYNTHETIC 40° 2 2 2 2 5 3 3 3 Nylon socks, blouse All baby laundry Nylon socks, blouse TABLE-1 PROGRAM DETERGENT COMPART. ADDITIONAL FUNCTION BUTTON MAX DRY LOAD CAPACITY (kg) ZWF185W TYPE OF LAUNDRY EXPLANATIONS All sport clothes and jeans Nylon socks, blouse Tulle, curtain, diolen, dralon 13-SPORT CLOTHES 14-SYNTHETIC COLD 15-CURTAIN WASH 16-DELICATE 30° 2 2 1+2 2 3 3 2 2 Sport clothes Slightly dirty, synthetic or synthetic mixture sensitive laundry. Washed without heating the tap water.

Tulle and curtain as sensitive laundry Slightly dirty, cotton, coloured, synthetic or synthetic mixture sensitive laundry Very slightly dirty, cold water with to wash cotton, coloured, synthetic or synthetic mixture sensitive laundry Slightly dirty, wash in hand cotton, coloured, synthetic or synthetic mixture laundry Dirty, hand and machine to wash wool laundry Very slightly dirty, cold water, hand and machine to wash wool laundry 17-DELICATE COLD 2 2 Silk mixture, shirt, blouse, polyester, poliamid, mixture textile 16 18-HAND WASH 19-WOOL 30° 20-WOOL COLD 21-RINSING 22-SPINNING 23-DRAINING 2 2 2 2 2 2 Hand wash to all laundry All wool laundry When you need an additional rinsing to be done to your clothes after the washing process, you can use this program for all kinds of clothes. When you need an additional spinning to be done to your clothes after the washing process, you can use this program for all kinds of clothes. This program is used to drain the dirty water inside after the washing process of your machine. If you want the water inside your machine to be drained before the program ends, you can use this program.



[You're reading an excerpt. Click here to read official ZANUSSI](#)

[ZWF185W user guide](#)

<http://yourpdfguides.com/dref/651860>

TABLE-1 CONTINUE (*) You can use softeners in all programs (except spinning and draining programs) optionally. @@@@It prevents lint to enter the pump. Cleaning of your pump filter in every 2-3 months is recommended. @@@@. Remove the foreign materials from the filter. · Check for the rotation of the pump manually. @@ · Put the kickplate cover into the place.

@@@@Fit the cleaned siphon plug in its location. @@@@@. Adjust the program knob to "Draining" program. · The program ready light will be on. · Run the program by pressing the start/pause button. @@@@@THE DRUM Do not leave metal parts like needles, staples or coins inside your machine. These pieces cause formation of rust stains in the drum. To eliminate these stains of rust, use a cleaning substance without chlorium and follow the warnings of the cleaning substance producer. For cleaning of the rust stains, never use dish-washing wires or similar rough objects. REMOVE OF LIME FROM YOUR MACHINE If you arrange the amount of the detergent you use in your machine properly, there will be no need for lime removal.

However, if you desire to apply the removal procedure, use the lime protectors in the market and pay attention to their warnings.

WARNING! The lime eliminating substances contain acids and this may cause colour modifications in your clothes along with an adverse effect on your machine. 19 SECTION 7:PRACTICAL INFORMATION Alcoholic beverages: The stain point, should first be washed with cold water, than should be wiped with glycerine and water and be rinsed with water mixed with vinegar. Shoe Polish: The stain should be slightly scratched without ruining the cloth, rubbed with detergent and rinsed. In case it is not eliminated, it should be rubbed with 1 unit of pure alcohol (96 degrees) mixed in 2 units of water and then washed with lukewarm water. Tea and coffee: Stretch the stained area of your cloth on the top of a container and pour water as hot as the type of your cloth can endure on it.

If the type of your cloth is suitable, wash it with lye. Chocolate and cocoa: By leaving your clothes in cold water and rubbing with soap or detergent, wash it in the highest temperature that the type of your cloth can endure. If there is still a stain of oil left, wipe with oxygenated water (in proportion of 3%). Tomato paste: After scraping the dried pieces without ruining the cloth, leave in cold water for about 30 minutes and wash by rubbing with detergent. Meat broth-egg: Eliminate the dried stain residues and wipe with a sponge or soft cloth wetted in cold water.

Rub with detergent and wash with diluted lye. Grease and oil stains: First wipe the residues. Rub the stain with detergent and then wash with lukewarm soapy water. Mustard: First apply glycerine to the stained area. Rub with detergent and then wash. If the stain still does not disappear, wipe with alcohol (On synthetic and coloured cloth, a mixture of 1 unit alcohol, 2 units water should be used) Blood stain: Lay your clothes in cold water for 30 minutes. If the stain still does not disappear, lay in mixture of water and ammonia (3 table-spoons of ammonia in 4 liters of water) for 30 minutes. Cream, ice-cream and milk: Lay your clothes in cold water and rub the stained area with detergent. If the stain has still not disappeared, apply lye on the fabric of your clothes in proper proportion. (Do not use lye on coloured clothes.

) 20 Mould: Mould stains should be cleaned as soon as possible. The stain should be washed with detergent, and if it does not disappear, it should be wiped with oxygenated water (in proportion of 3%). Ink: Hold the stained area under cold water and wait until the inky water completely runs off. Then rub with water diluted with lemon juice and detergent, wash after waiting for 5 minutes. Fruit: Stretch the stained area of your clothes on the top of a container and pour cold water on it. Do not pour hot water on the stain. Wipe with cold water and apply glycerine. Wait for 1-2 hours and rinse after wiping with a few drops of white vinegar. Grass stain: Rub the stained part with detergent. If the type of fabric is suitable for use of lye, wash it with lye.

Rub your woolen clothes with alcohol. (For coloured ones, a mixture of 1 unit pure alcohol and 2 units of water). Oil Paint: The stain should be eliminated before it dries by applying thinner on it. Then it should be rubbed with detergent and washed. Burnt stain: If your cloth is suitable for use of lye, you can add lye into your washing water.

For woolen fabric, a cloth damped in oxygenated water should be covered on the stain and it should be ironed with a dry cloth on it. It should be washed after rinsing well. SECTION 8: AVOIDING MINOR FAULTS All repairing which must be done on the machine should be done by authorized service. When a repairing is required for your machine or you are unable to eliminate the failure with the help of the information given below: · · · Unplug the machine. Close the water tap.

Apply to the nearest authorized service station. 21 FAILURE PROBABLE CAUSE It is unplugged. Your fuse is defected. The electric power is off. Start/pause button has not been pressed. The program knob is in O(off) status. The door is not shut properly. Water tap is closed. The water inlet hose may be bent. The water inlet hose is obstructed.

The valve inlet filter is obstructed. The door is not shut properly. The drain hose is obstructed or bent. The pump filter is obstructed. The clothes are not placed inside the machine in a wellbalanced manner. The feet of your machine are not adjusted. Transportation screws are not removed. Your machine does not operate. Your machine does not receive water. METHODS OF ELIMINATION Insert the plug into the socket.

Change your fuse. Check the electric power. Press the start/pause button. Bring the program knob on the desired status. Shut the door properly.

You should hear the click. Open water tap. Check the water inlet hose. Clean the filters of water inlet hose. (*) Clean the valve inlet filters.

(*) Shut the door properly. You should hear the click. Check the drain hose. Clean the pump filter. (*) Spread the clothes inside the machine in an orderly and wellbalanced manner. Adjust the feet. (**) Remove transportation screws. (**) Your machine is not draining water. Your machine is vibrating. (*) See the section concerning the maintenance and cleaning of your machine.

(**) See the section concerning installations your machine. 22 FAILURE PROBABLE CAUSE There is a small amount of clothes in the device. Excessive amount of clothes are filled in the machine or the clothes are not placed in a well-balanced manner. @@@@Prevent your machine's leaning on a tough place. @@Use only the detergents produced for full automatic machines. Select a suitable program. (see Table-1) Use more detergent according to the detergent. Wrong detergent has been used. The washing result is bad. Your laundry too dirty for the program you have selected.



[You're reading an excerpt. Click here to read official ZANUSSI](#)

[ZWF185W user guide](#)

<http://yourpdfguides.com/dref/651860>

The amount of detergent used is not sufficient. 23 FAILURE PROBABLE CAUSE Clothes exceeding the maximum capacity has been filled in your machine. The washing result is not good. Your water may be hard. Distribution of the clothes in your machine is not wellbalanced. The end of the water drain hose is in a position too low according to the machine. No failure. The water is at the lower part of the drum. The pieces of some detergents which do not dissolve in water may stick to your clothes as white stains. METHODS OF ELIMINATION Put the clothes in your machine in a manner not to exceed its maximum capacity.

Use the amount of detergent according to the declaration of the detergent producer. Spread the clothes inside the machine in an orderly and wellbalanced manner. Place the water drain hose in an appropriate height. (**) The water is drained from the machine as soon as it is filled. No water is seen in the drum during washing. By calibrating your machine for "Rinsing" program, make an additional rinsing or eliminate the stains After drying with the help of a brush. In the next washing operation, use the maximum detergent amount declared by the detergent producer. There are residues of detergent on the clothes. There are gray stains on the clothes. These stains may be caused by oil, cream or ointment.

(**) See the section concerning instalations your machine. 24 FAILURE PROBABLE CAUSE The spinning process is not done or starts with delay. No failure. The unbalanced load control may work in that way. METHODS OF ELIMINATION The unbalanced load control system will try to distribute your clothes in a homogenous manner. After your clothes are distributed, passage to spinning process will be realized. In the next washing process, place your clothes into the machine in a wellbalanced manner. SECTION 9: AUTOMATIC FAILURE DETECTION SYSTEM Your machine is equipped with systems which will both take the necessary precautions and warn you in case of any failure by controlling it self constantly during the washing processes. FAILURE CODE FAILURE INDICATOR PROBABLE FAILURE Err 01 The start/pause light blinks. The door is not shut properly.

THE PROCESS TO BE DONE Shut the door properly so that you hear the click. If the problem persists, turn off the machine unplug and apply to the nearest authorized service immediately. 25 FAILURE CODE FAILURE INDICATOR PROBABLE FAILURE Err 02 The program ready light blinks. The water level in your machine is below heater. The pressure of your water supply may be low or locking.

Err 03 The start/pause light and program ready light blinks. The pump has failed or the pump filter is obstructed. THE PROCESS TO BE DONE Turn on the tap to the end. Water may be cut, check it. If the problem is still continuing, your machine will automatically stop after a while.

Unplug your machine, turn off the tap and apply to the nearest authorized service. Clean the pump filter. If the problem persists, apply to the nearest authorized service. (*) (*) See the section regarding the maintenance and cleaning of your machine. 26 FAILURE CODE FAILURE INDICATOR The start/pause light and program end light blink. PROBABLE FAILURE The heater of your machine or the heat sensor has failed. THE PROCESS TO BE DONE Shut down your machine and unplug. Turn off your tap and apply to the nearest authorized service. Shut down your machine and unplug. Turn off the tap and apply to the nearest authorized service.

Shut down your machine and unplug. Turn off the tap and apply to the nearest authorized service. Shut down your machine and unplug. Turn off the tap and apply to the nearest authorized service. If the network voltage is lower than 150V or higher than 260V, your machine will automatically stop. When the network voltage is recovered, your machine will continue its operation. Err 05 Err 06 The program ready light and program end light blink. The program start/pause light, ready light and program end light stays on permanently. The start/pause light, program ready light and program end light blink. The motor has failed.

Err 07 Configuration error. Err 08 The motor has failed. Err 09 The program ready light and program end light stays on permanently. The network voltage is too high or too low. 27 SECTION 10: INTERNATIONAL WASHING SIGNS Washing temperature. Do not wash (hand wash) Lukewarm iron. Medium hot iron. Hot iron. Do not iron. Do not tumble dry.

Hang to dry. Drip dry. Dry flat. Do not bleach. Handy to bleach. All of these are dry cleaning symbols. The letters are to instruct the cleaner what type of solvent to be used. Garments bearing these symbols should not be washed in your machine unless the label says otherwise. 52012078 28.



[You're reading an excerpt. Click here to read official ZANUSSI ZWF185W user guide](http://yourpdfguides.com/dref/651860)
<http://yourpdfguides.com/dref/651860>