



Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for ZANUSSI ZWF3145. You'll find the answers to all your questions on the ZANUSSI ZWF3145 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual ZANUSSI ZWF3145
User guide ZANUSSI ZWF3145
Operating instructions ZANUSSI ZWF3145
Instructions for use ZANUSSI ZWF3145
Instruction manual ZANUSSI ZWF3145



User Manual			
	Washing machine		



ZWF 3145



[You're reading an excerpt. Click here to read official ZANUSSI ZWF3145 user guide](http://yourpdfguides.com/dref/652390)
<http://yourpdfguides.com/dref/652390>

Manual abstract:

Save these instructions and make sure that they remain with the appliance if it is moved or sold, so that everyone using it through its life will be properly informed on appliance use and safety. Always unplug the appliance and turn off the water supply after use, clean and maintenance. Under no circumstances should you attempt to repair the machine yourself. Repairs carried out by inexperienced persons may cause injury or serious malfunctioning. Contact your local Service Centre. @@During high temperature wash programmes the door glass may get hot. Do not touch it! Make sure that small pets do not climb into the drum. To avoid this, please check into the drum before using. @@Only use the advised quantities of fabric softener and detergent. Damage to the fabric can ensue if you over-fill.

Refer to the manufacturer's recommendations of quantities. @@@@Care should be taken when moving it. When unpacking the appliance, check that it is not damaged. If in doubt, do not use it and contact the Service Centre. All packing and transit bolts must be removed before use.

Serious damage can occur to the product and to property if this is not adhered to. See relevant section in the user manual. After having installed the appliance, check that it is not standing on the inlet and drain hose and the worktop is not pressing the electrical supply cable. If the machine is situated on a carpeted floor, please adjust the feet in order to allow air to circulate freely Always be sure, that there is no water leakage from hoses and their connections after the installation. If the appliance is installed in a location subject to frost, please read the «dangers of freezing» chapter.

Any plumbing work required to install this appliance should be carried out by a qualified plumber or competent person. Any electrical work required to install this appliance should be carried out by a qualified electrician or competent person. 3 Use This appliance is designed for domestic use. It must not be used for purposes other than those for which it was designed. Only wash fabrics which are designed to be machine washed. Follow the instructions on each garment label. Do not overload the appliance. See the relevant section in the user manual. Before washing, ensure that all pockets are empty and buttons and zips are fastened. Avoid washing frayed or torn articles and treat stains such as paint, ink, rust, and grass before washing.

Underwired bras must NOT be machine washed. Garments which have been in contact with volatile petroleum products should not be machine washed. If volatile cleaning fluids are used, care should be taken to ensure that the fluid is removed from the garment before placing in the machine. Never pull the power supply cable to remove the plug from the socket; always take hold of the plug itself. Never use the washing machine if the power supply cable, the control panel, the working surface or the base are damaged so that the inside of the washing machine is accessible. The packaging components (e.g. plastic film, polystyrene) can be dangerous to children danger of suffocation! Keep them out of children's reach Keep all detergents in a safe place out of children's reach. Make sure that children or pets do not climb into the drum. To avoid this the machine incorporates special feature.

To activate this device, rotate the button (without pressing it) inside the door clockwise until the groove is horizontal. If necessary use a coin. To disable this device and restore the possibility of closing the door, rotate the button anticlockwise until the groove is vertical. Child safety This appliance is not intended for use by person (including children) with reduced physical sensory or mental capabilities or lack of experience and knowledge unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. This washing machine is not intended for use by young children or infirm persons without supervision.

Young children should be supervised to ensure that they do not play with the appliance. 4 Description of the appliance 1 2 3 4 5 Detergent dispenser drawer Control panel Door opening handle 3H 6H 9H 1 2 Drain pump Adjustable feet 3 4 5 Detergent dispenser drawer Prewash Wash Fabric Softener 5 Control panel and functions 1 Infos The programme selector dial, the different buttons and the programme progress display will be indicated in all the book with the relevant numbers given in this table. 2 3 4 5 6 7 Key symbols: = Rinse hold = Rinses = Drain = Spin = Prewash = Wash = End = Cottons = Synthetics = Delicates = Handwash = Wool 1 Programme selector dial and On/Off switch The programme selector dial allows to select a programme and/or to switch the machine on/off. Press this button repeatedly to change the spin speed, if you want your laundry to be spun at a speed different from the one proposed by the washing machine or to select Rinse Hold option. The relevant light will light up.

Spin reduction button 2 Rinse Hold option 3 Option button 4 Extra Rinse button By means of this button, you can select only one of the options. The relevant light will light up. By means of this button, the machine performs some additional rinses. 6 5 Start/Pause button This button allows to start the selected programme; the corresponding green pilot light stops flashing. This button interrupts also a programme which is running, the corresponding green pilot light starts to flash. 6 Programme progress display 7 Delay Start button The different pilot lights illuminate depending on the running programme phase. This button allows to delay the starting of the washing programme by 3, 6, and 9 hours. Functions Rinse hold - Button 2 By selecting this option the water of the last rinse is not emptied out to prevent the fabrics from creasing. When the programme has finished, the pilot light of button 5 is off and the door is blocked to indicate that the water must be emptied out. Options - Button 3 Prewash (Voorwas/Prélavage) Select this option if you wish your laundry to be prewashed at 30°C before the main wash.

The prewash ends with a short spin in programmes for Cotton and Synthetic fabrics, whereas in the programmes for Delicate fabrics the water is only drained. Super Quick (Supersnells/Rapide) Short cycle for lightly soiled items or for laundry which needs only freshening up. We recommend you to reduce the fabrics loading. Extra Rinse - Button 4 The machine performs some additional rinses during the washing cycle. This option is recommended for people who are allergic to detergents, and in areas where the water is very soft. Programme progress display (6) (A) (B) (C) The light A illuminates when the appliance is performing the washing or prewashing phase. The light B is on when the machine is rinsing or spinning.



[You're reading an excerpt. Click here to read official ZANUSSI ZWF3145 user guide](http://yourpdfguides.com/dref/652390)
<http://yourpdfguides.com/dref/652390>

The light C illuminates at the end of the washing cycle. 7 Programme table Programme/ Temperature WHITE COTTONS Type of laundry White (heavily soiled items) White and fast coloured cotton (normally soiled cotton items) ECONOMY White and coloured cotton (normally soiled cotton items) Synthetic or mixed fabrics Options Spin red./ Rinse Hold, Super Quick, Prewash, Extra Rinse Spin red.

/Rinse Hold, Prewash, Extra Rinse Spin red./Rinse Hold, Super Quick, Prewash, Extra Rinse Description of programme Main wash Rinses Long spin at the max spin speed Main wash Rinses Long spin at the max spin speed Main wash Rinses Long spin at the max spin speed 95° WHITE/COLOURED COTTONS 60°Eco WHITE/COLOURED COTTONS 60° - 40° - 30° SYNTHETICS 60° - 40° - 30° SYNTHETICS EASY IRON Spin red./Rinse Hold, Main wash Super Quick, Prewash, Rinses Short spin Extra Rinse Spin red./Rinse Hold, Prewash, Extra Rinse Main wash Rinses Short spin (Antikreuk/ Repassage Facile) 40° DELICATES Synthetic or mixed fabrics (delicate items) EASY IRON 40°- 30° Delicate items Special programme for delicate fabrics with the «hand washing» care symbol Programme for wool «Pure new wool, nonshrink, machine washable» label Spin red./Rinse Hold, Main wash Super Quick, Prewash, Rinses Short spin Extra Rinse Spin red.

/Rinse Hold Main wash Rinses Short spin Main wash Rinses Short spin HANDWASH 40°-30° WOOL 40° Spin red./Rinse Hold 8 Programme table Programme/ Temperature SPORT INTENSIVE Type of laundry Special programme for heavily soiled sportswear items Options Description of programme (Sport Intensief/ Sport intensif) 40° CURTAINS Prewash Spin red./ Rinse Hold, Main wash Extra Rinse Rinses Short spin Spin red./Rinse Hold, Extra Rinse Prewash Main wash Rinses Short spin Soak phase at 30°C Stop with water in the tub Rinses Spin red./ Rinse Hold, Long spin at the max Extra Rinse speed Draining of water Drain and long spin at the maximum speed (Gardinen / Rideaux) Special delicate washing cycle for curtains 40° SOAK (Weken / Trempage) Heavy soiled laundry (not 30° for wool and handwash) RINSES Separate rinses cycle with softener, if needed, for hand washed cotton items For emptying out the water Long spin at the max speed for hand washed cotton items DRAIN SPIN Spin reduction 0 Cancelling / Switching off of the machine To interrupt a running programme, to cancel an incorrect option selection or to switch the machine off, Max load: Cottons.

.....

.....

....

....

.....

.....

....5 kg Synthetics and Delicates.

....

.....

.....

..2 kg Easy Iron...

....

.....

.....

....

....

.....

....1 kg Wool and Handwash

.....

.....

.1 kg Sport Intensive

.....

..2 kg Curtains . . .

.....

.....

..... 2 kg Soak . .

.....

.....

.....

.....5 kg Max load: Cottons + Super Quick . . .

.....

.....

.2,5 kg Synthetics + Super Quick

.....

.....

...1 kg Delicates + Super Quick

.....

...1 kg 9 Programme information Eaong tapes. Remove persistent stains before washing.

Rub particularly soiled areas with a special detergent or detergent paste. Treat curtains with special care. Remove hooks or tie them up in a bag or net. Removing stains Stubborn stains may not be removed by just water and detergent. It is therefore advisable to treat them prior to washing. Blood: treat fresh stains with cold water. For dried stains, soak overnight in water with a special detergent then rub in the soap and water. 11 Oil based paint: moisten with benzine stain remover, lay the garment on a soft cloth and dab the stain; treat several times. Dried grease stains: moisten with turpentine, lay the garment on

a soft surface and dab the stain with the fingertips and a cotton cloth. Rust: oxalic acid dissolved in hot water or a rust removing product used cold.

Be careful with rust stains which are not recent since the cellulose structure will already have been damaged and the fabric tends to hole. Mould stains: treat with bleach, rinse well (whites and fast coloureds only). Grass: soap lightly and treat with bleach (whites and fast coloureds only). Ball point pen and glue: moisten with acetone (*), lay the garment on a soft cloth and dab the stain. Lipstick: moisten with acetone as above, then treat stains with methylated spirits. Remove any residual marks from white fabrics with bleach. Red wine: soak in water and detergent, rinse and treat with acetic or citric acid, then rinse. Treat any residual marks with bleach. Ink: depending on the type of ink, moisten the fabric first with acetone (*), then with acetic acid; treat any residual marks on white fabrics with bleach and then rinse thoroughly. Tar stains: first treat with stain remover, methylated spirits or benz5.

For the compatibility of the options with the washing programmes, refer to the section «Programme table». Start the programme by pressing button 5 To start the selected programme, press this button; the corresponding green pilot light stops flashing. On programme progress display the pilot light A illuminates to indicate that the appliance starts operating and the door is locked. IMPORTANT! If an option which is not compatible with the set wash programme is selected, the red light of this button flashes for 3 times. Pull out the dispenser drawer until it stops.

Measure out the amount of detergent required, pour it into the main wash compartment and, if you wish to carry out a programme with the prewash or soak phase, pour it into the compartment marked . If required, pour fabric softener into the compartment marked (the amount used must not exceed the «MAX» mark in the drawer). Close the drawer gently. Select the required programme by means of the programme selector dial (1) Turn the programme selector dial to the required programme. The green light of button 5 starts to flash.

It can be turned either clockwise or anticlockwise. On position «O» the programme is reset and the machine is switched OFF. At the end of the programme the selector dial must be turned to position «O», to switch the machine off. 14 Select the delayed start by pressing button 7 This option permits to delay the start of the wash programme by 3, 6, 9 hours. Press this button repeatedly to select the required delay. The relevant light illuminates. You must select this option after you have set the programme and before you press the button 5. Cancelling the delayed start: You can cancel the delay time at any moment, before you press the button 5. If you have already pressed the button 5, and you wish to cancel the delay time, proceed as follows: set the washing machine to PAUSE by pressing the button 5; press the button 7 once, the light relevant to the selected delay goes off. press the button 5 again to start the programme.

IMPORTANT! Altering an option or a running programme It is possible to change some option before the programme carries it out. Before you make any change, you must pause the washing machine by pressing the button 5.



[You're reading an excerpt. Click here to read official ZANUSSI ZWF3145 user guide](http://yourpdfguides.com/dref/652390)
<http://yourpdfguides.com/dref/652390>

Changing a running programme is possible only by resetting it. Turn the programme selector dial to «O» and then to the new programme position. Start the new programme by depressing the button 5 again. The washing water in the tub will not empty out. Press the button again to restart the programme. Now you can select a new programme. After some minutes, the door can be opened. The door will be locked throughout the delay time.

After you have closed the door, press the button 5 again. Note! The door can be opened. If you do not intend to carry out another wash, close the water tap. Descaling The water we use normally contains lime. This will help to prevent the formation of lime deposits.

We recommend that a maintenance wash be performed on a regular basis. To run a maintenance wash: The drum should be empty of laundry. Select the hottest cotton wash programme. Flush it out under a tap, to remove any traces of accumulated powder. blocking the pump.

Proceed as follows: Disconnect the appliance. If necessary wait until the water has cooled down. Open the pump door. Place a container close to the pump to collect any spillage. When no more water comes out, unscrew the pump cover and remove it. Screw the pump cover fully in. Turn off the water tap. Unscrew the inlet hose. IMPORTANT! Emergency emptying out If the water is not discharged, proceed as follows to empty out the machine: pull out the plug from the power socket; close the water tap; if necessary, wait until the water has cooled down; open the pump door; place a bowl on the floor and place the end of the emergency emptying hose into the bowl. Remove its cap.

The water should drain by gravity into the bowl. When the bowl is full, put the cap back on the hose. Empty the bowl. Repeat the procedure until water stops flowing out; clean the pump if necessary as previously described; replace the emergency emptying hose in its seat after having plugged it; screw the pump cover again and close the door. IMPORTANT! When the appliance is in use and depending on the programme selected there can be hot water in the pump. Never remove the pump cover during a wash cycle, always wait until the appliance has finished the cycle, and is empty. When replacing the cover, ensure it is securely retightened so as to stop leaks and young children being able to remove it. Cleaning the water inlet filter If your water is very hard or contains traces of lime deposit, the water inlet filter may become clogged. It is therefore a good idea to clean it from time to time. Turn off the water tap.

Unscrew the water inlet hose. Clean the filter using a hard bristle brush. Tighten up the inlet hose. 18 Something not working IMPORTANT! Certain problems are due to lack of simple maintenance or oversights, which can be solved easily without calling out an engineer. Before contacting your local Service Centre, please carry out the checks listed below.

During machine operation it is possible that the red pilot light of button 5 flashes to indicate that the machine is not working. Once the problem has been eliminated, press the button 5 to restart the programme. If after all checks, the problem persists, contact your local Service Centre. Malfunction Possible Cause / Solution The door has not been closed. (Red pilot light flashes) Close firmly the door.

The plug is not properly inserted in the power socket. Insert the plug into the power socket. There is no power at the socket. Please check your domestic electrical installation. The main fuse has blown. Replace the fuse. The selector dial is not correctly positioned and the button 5 has not been pressed. Please turn the selector dial and press the button 5 again. The button 7 has been selected. If the laundry are to be washed immediately, cancel the delay start The water tap is closed.

(Red pilot light flashes) Open the water tap. The inlet hose is squashed or kinked. (Red pilot light flashes) Check the inlet hose connection. The filter in the inlet hose is blocked. (Red pilot light flashes) Clean the water inlet hose filter. The door is not properly closed. (Red pilot light flashes) Close firmly the door. 19 The washing machine does not start: The machine does not fill; Malfunction The machine fills then empties immediately: Possible Cause / Solution The end of the drain hose is too low. Refer to relevant paragraph in «water drainage» section. The drain hose is squashed or kinked.

(Red pilot light flashes) Check the drain hose connection. The drain pump is clogged. (Red pilot light flashes) Clean the drain pump. The laundry is not evenly distributed in the drum. Redistribute the laundry.

The RINSE HOLD option or SOAK programme have been selected. Select Drain or Spin programme. Too much detergent or unsuitable detergent (creates too much foam) has been used. Reduce the detergent quantity or use another one. Check whether there are any leaks from one of the inlet hose fittings.

It is not always easy to see this as the water runs down the hose; check to see if it is damp. Check the water inlet hose connection. The inlet hose is damaged.

Change it with a new one. The cap on the emergency emptying hose has not been replaced after cleaning the pump. Too little detergent or unsuitable detergent has been used. Increase the detergent quantity or use another one. Stubborn stains have not been treated prior to washing. Use commercial products to treat the stubborn stains. The correct temperature was not selected.

Check if you have selected the correct temperature. Excessive laundry load. Introduce into the drum less laundry. The machine does not empty and/or does not spin: There is water on the floor: Unsatisfactory washing results: 20 Malfunction Possible Cause / Solution The programme is still running. Wait the end of washing cycle. The door lock has not been released. Wait until the door is released. There is water in the drum. Select drain or spin programme to empty out the water. The transit bolts and packing have not been removed.

Check the correct installation of the appliance. The door will not open: The machine vibrates or is noisy: The support feet have not been adjusted. Check the correct levelling of the appliance. The laundry is not evenly distributed in the drum. Redistribute the laundry.

Maybe there is very little laundry in the drum. Load more laundry. The electronic unbalance detection device has cut in because the laundry is not evenly distributed in the drum. The laundry is redistributed by reverse rotation of the drum. This may happen several times before the unbalance disappears and normal spinning can resume.

Prod.

No.

Ser. No. ...

... Prod ..

.. No.

... 5. After removing all the packaging, carefully lay machine on it's back to remove the polystyrene base from the bottom. 2.

Remove the power supply cable and the draining hose from the hose holders on the rear of the appliance. 6. Open the porthole, take out the inlet hose from the drum and remove the polystyrene block fitted with the adhesive tape on the door seal.



[You're reading an excerpt. Click here to read official ZANUSSI ZWF3145 user guide](#)

Open the porthole, take out the inlet hose from the drum and remove the polystyrene block fitted with the adhesive tape on the door seal. 7. Fill the smaller upper hole and the two large ones with the corresponding plastic plug caps supplied in the bag containing the instruction booklet. Positioning Install the machine on a flat hard floor. Make sure that air circulation around the machine is not impeded by carpets, rugs etc. Check that the machine does not touch the wall or other kitchen units. Level the washing machine by raising or lowering the feet. The feet may be tight to adjust as they incorporate a self locking nut, but the machine MUST be level and stable. Any necessary adjustment can be made with a spanner. Accurate levelling prevents vibration, noise and displacement of the machine during operation. Never place cardboard, wood or similar materials under the machine to compensate for any unevenness in the floor. A C B C B 3. With a suitable spanner unscrew and remove the central rear bolt A. 4. Unscrew and remove the two large rear bolts B and the six smaller bolts C. E C C D 24 If necessary, check the setting with a spirit level. The inlet hose must not be lengthened.

If it is too short and you do not wish to move the tap, you will have to purchase a new, longer hose specially designed for this type of use. Water drainage The end of the drain hose can be positioned in three ways: Hooked over the edge of a sink using the plastic hose guide supplied with the machine. In this case, make sure the end cannot come unhooked when the machine is emptying. This could be done by tying it to the tap with a piece of string or attaching it to the wall. In a sink drain pipe branch. This branch must be above the trap so that the bend is at least 60 cm above the ground. Directly into a drain pipe at a height of not less than 60 cm and not more than 90 cm. The end of the drain hose must always be ventilated, i.e. the inside diameter of the drain pipe must be larger than the outside diameter of the drain hose.

The drain hose must not be kinked. Water inlet An inlet hose is supplied and can be found inside the machine drum. Do not use the hose from your previous machine to connect to the water supply. 1. Open the porthole and extract the inlet hose.

2. Connect the hose with the angled connection to the machine. 45° Do not place the inlet hose downwards. Angle the hose to the left or right depending on the position of your water tap. 3.

Set the hose correctly by loosening the ring nut. After positioning the inlet hose, be sure to tighten the ring nut again to prevent leaks. 4. Connect the hose to a tap with a 3/4" thread. Always use the hose supplied with the appliance. 35° Attention ! 25 Electrical connection This machine is designed to operate on a 220230 V, single-phase, 50 Hz supply. Check that your domestic electrical installation can take the maximum load required (2.2 kW), also taking into account any other appliances in use. Attention! Connect the machine to an earthed socket. The manufacturer declines any responsibility for damage or injury through failure to comply with the above safety precaution.

Attention! Should the appliance power supply cable need to be replaced, this MUST be carried out by our Service Centre. NOTE Please ensure that when the appliance is installed it is easily accessible for the engineer in the event of a breakdown. 26 Environmental concerns Packaging materials The materials marked with the symbol are recyclable. >PE<=polyethylene >PS<=polystyrene >PP<=polypropylene This means that they can be recycled by disposing of them properly in appropriate collection containers. Old machine Use authorised disposal sites for your old appliance. Help to keep your country tidy! The symbol on the product or on its packaging indicates that this product may not be treated as household waste. Instead it shall be handed over to the applicable collection point for the recycling of electrical and electronic equipment. By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling of this product. For more detailed information about recycling of this product, please contact your local city office, your household waste disposal service or the shop where you purchased the product. Ecological hints To save water, energy and to help protect the environment, we recommend that you follow these tips: Normally soiled laundry may be washed without prewashing in order to save detergent, water and time (the environment is protected too!).

The machine works more economically if it is fully loaded. With adequate pre-treatment, stains and limited soiling can be removed; the laundry can then be washed at a lower temperature. Measure out detergent according to the water hardness, the degree of soiling and the quantity of laundry being washed. 27

Guar ee/ om erSer ce ant Cust vi Bel um gi DECLARATION OF GUARANTEE TERMS. Our appliances are produced with the greatest of care. However, a defect may still occur. Our consumer services department will repair this upon request, either during or after the guarantee period. The service life of the appliance will not, however, be reduced as a result. This declaration of guarantee terms is based on European Union Directive 99/44/EC and the provisions of the Civil Code. The statutory rights that the consumer has under this legislation are not affected by this declaration of guarantee terms.

This declaration does not affect the vendor's statutory warranty to the end user. @@@@2. @@Defective parts are replaced or repaired. Parts replaced free of charge become our property. 3. So as to avoid more severe damage, the defect must be brought to our attention immediately. Applying the guarantee is subject to the consumer providing proof of purchase showing the purchase and/or delivery date. 5. The guarantee will not apply if damage caused to delicate parts, such as glass (vitreous ceramic), synthetic materials and rubber, is the result of inappropriate use. 6.

The guarantee cannot be called on for minor faults that do not affect the value or the overall reliability of the appliance. 7. The statutory warranty does not apply when defects are caused by: a chemical or electrochemical reaction caused by water, abnormal environmental conditions in general, unsuitable operating conditions, contact with harsh substances. 8. @@@@9. @@@10. @@Home repairs are 4. 28 11. 12. 13.

14. only anticipated for bulky appliances or built-in appliances. If the appliances are built-in, built-under, fixed or suspended in such a way that removing and replacing them in the place where they are fitted takes more than half an hour, the costs that result there from will be charged for. Connected damage caused by these removal and replacement operations will be the responsibility of the user.



[You're reading an excerpt. Click here to read official ZANUSSI](#)

[ZWF3145 user guide](#)

<http://yourpdfguides.com/dref/652390>

If, during the guarantee period, repairing the same defect repeatedly is not conclusive, or if the repair costs are considered disproportionate, in agreement with the consumer, the defective appliance may be replaced with another appliance of the same value.

In this event, we reserve the right to ask for a financial contribution calculated according to the length of time it has been used. A repair under guarantee does not mean that the normal guarantee period will be extended nor that a new guarantee period begins. We give a twelve month guarantee for repairs, limited to the same defect. 15. Except in the event where liability is legally imposed, this declaration of guarantee terms excludes any compensation for damage outside the appliance for which the consumer wishes to assert his rights.

In the event of legally admitted liability, compensation will not exceed the purchase price paid for the appliance. These guarantee terms are only valid for appliances purchased and used in Belgium. For exported appliances, the user must first make sure that they satisfy the technical conditions (e.g.: voltage, frequency, installation instructions, type of gas, etc.) for the country concerned and that they can withstand the local climatic and environmental conditions. For appliances purchased abroad, the user must first ensure that they meet the qualifications required in Belgium. Non-essential or requested adjustments are not covered by the guarantee and are not possible in all cases. Our consumer services department is always at your disposal, even after the guarantee period has expired. Adress: rue de la Consommation 15, 1329 Luxembourg Tel. : +352 263 04 44

: Electrolux Home Products Consumer services Belgium ELECTROLUX SERVICE Bergensesteenweg 719 1502 Lembeek E-mail: consumer.services@electrolux.be 02/363.04.44 Fax.: 02/363.04.00 02/363.04.60 Luxembourg Tel.

: Fax.: 29 Grand-Duché de Luxembourg ELECTROLUX HOME PRODUCTS Rue de Bitbourg. 7 L-1273 Luxembourg-Hamm Consumer services 00 352 42 431-1 00 352 42 431-360 E-mail: consumer-service.luxembourg@electrolux.lu European guarantee This appliance is guaranteed by Electrolux in each of the countries listed at the back of this user manual, for the period specified in the appliance guarantee or otherwise by law.

If you move from one of these countries to another of the countries listed, the appliance guarantee will move with you subject to the following qualifications:

The appliance is installed and used in accordance with instructions issued by Electrolux and is only used within the home, i.e. is not used for commercial purposes. The appliance is installed in accordance with all relevant regulations in force within your new country of residence. The appliance guarantee starts from the date you first purchased the appliance which will be evidenced by production of a valid purchase document issued by the seller of the appliance.

The appliance guarantee is for the same period and to the same extent for labour and parts as exists in your new country of residence for this particular model or range of appliances. The appliance guarantee is personal to the original purchaser of the appliance and cannot be transferred to another user. The provisions of this European Guarantee do not affect any of the rights granted to you by law. 31 www.electrolux.com www.zanussi.be 132 966 960 - 00 - 062008 Subject to change without notice .



[You're reading an excerpt. Click here to read official ZANUSSI ZWF3145 user guide](http://yourpdfguides.com/dref/652390)
<http://yourpdfguides.com/dref/652390>