



Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for ZANUSSI ZWH6125. You'll find the answers to all your questions on the ZANUSSI ZWH6125 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual ZANUSSI ZWH6125
User guide ZANUSSI ZWH6125
Operating instructions ZANUSSI ZWH6125
Instructions for use ZANUSSI ZWH6125
Instruction manual ZANUSSI ZWH6125



User Manual			
	Washing machine		



ZWH 6125



[You're reading an excerpt. Click here to read official ZANUSSI ZWH6125 user guide](http://yourpdfguides.com/dref/956000)
<http://yourpdfguides.com/dref/956000>

Manual abstract:

Save these instructions and make sure that they remain with the appliance if it is moved or sold, so that everyone using it through its life will be properly informed on appliance use and safety. Always unplug the appliance and turn off the water supply after use, clean and maintenance. Under no circumstances should you attempt to repair the machine yourself. Repairs carried out by inexperienced persons may cause injury or serious malfunctioning. Contact your local Service Centre. @@During high temperature wash programmes the door glass may get hot. Do not touch it! Make sure that small pets do not climb into the drum. To avoid this, please check into the drum before using. @@Only use the advised quantities of fabric softener and detergent. Damage to the fabric can ensue if you over-fill.

Refer to the manufacturer's recommendations of quantities. @@@@Care should be taken when moving it. When unpacking the appliance, check that it is not damaged. If in doubt, do not use it and contact the Service Centre. All packing and transit bolts must be removed before use.

Serious damage can occur to the product and to property if this is not adhered to. See relevant section in the user manual. After having installed the appliance, check that it is not standing on the inlet and drain hose and the worktop is not pressing the electrical supply cable. If the machine is situated on a carpeted floor, please adjust the feet in order to allow air to circulate freely Always be sure, that there is no water leakage from hoses and their connections after the installation. If the appliance is installed in a location subject to frost, please read the «dangers of freezing» chapter.

Any plumbing work required to install this appliance should be carried out by a qualified plumber or competent person. Any electrical work required to install this appliance should be carried out by a qualified electrician or competent person. 3 Use This appliance is designed for domestic use. It must not be used for purposes other than those for which it was designed. Only wash fabrics which are designed to be machine washed. Follow the instructions on each garment label. Do not overload the appliance. See the relevant section in the user manual. Before washing, ensure that all pockets are empty and buttons and zips are fastened. Avoid washing frayed or torn articles and treat stains such as paint, ink, rust, and grass before washing.

Underwired bras must NOT be machine washed. Garments which have been in contact with volatile petroleum products should not be machine washed. If volatile cleaning fluids are used, care should be taken to ensure that the fluid is removed from the garment before placing in the machine. Never pull the power supply cable to remove the plug from the socket; always take hold of the plug itself. Never use the washing machine if the power supply cable, the control panel, the working surface or the base are damaged so that the inside of the washing machine is accessible. Make sure that children or pets do not climb into the drum. To avoid this the machine incorporates special feature. To activate this device, rotate the button (without pressing it) inside the door clockwise until the groove is horizontal. If necessary use a coin. To disable this device and restore the possibility of closing the door, rotate the button anticlockwise until the groove is vertical.

Child safety This washing machine is not intended for use by young children or infirm persons without supervision. Young children should be supervised to ensure that they do not play with the appliance. The packaging components (e.g. plastic film, polystyrene) can be dangerous to children danger of suffocation!

Keep them out of children's reach Keep all detergents in a safe place out of children's reach.

4 Description of the appliance 1 2 3 4 5 Detergent dispenser drawer Control panel Door opening handle Drain pump Adjustable feet 1 2 3 4 5 Detergent dispenser drawer Prewash Wash Fabric Softener 5 Control panel 95° 60° 40° 30° 30° 40° 40° 40° 30° 40° 30° 60° 40° 30° 40° ZWH 6125 1200 900 700 1 Infos 2 3 4 5 6 7 8 9 10 Henceforth, the programme selector dial, the different buttons and the programme progress display will be indicated in all the book with the relevant numbers given in this table: The programme selector dial allows to select a programme and/or to switch the machine on/off «O». It can be turned either clockwise or anticlockwise. After having selected the programme, the green light of the button 8 starts to flash. 1 Programme selector dial and On/Off switch Spin reduction button 2 Night Cycle option Rinse Hold Press this button repeatedly to change the spin speed, if you want your laundry to be spun at a speed different from the one proposed by the washing machine or to select «Night Cyc» or «Rinse Hold» option. The relevant light will light up.

Option button 3 Economy Super Quick By means of this button, you can select only one of the following options: ECONOMY or SUPER QUICK. The relevant light will light up. 4 Prewash button By means of this button, the machine performs a prewash phase. 6 5 Easy iron button 6 Extra rinse button 7 Selecting this option the laundry is gently washed and spun to avoid any creasing. In this way ironing is easier. Furthermore the machine will perform additional rinses. By means of this button, the machine performs some additional rinses. The display shows the following information: duration of the selected programme, delayed start, incorrect option selection, alarm codes and end of programme. This button allows to start the selected programme; the corresponding green pilot light stops flashing. This button interrupts also a programme which is running, the corresponding green pilot light starts to flash.

Display 8 Start/Pause button 9 Light Door This light illuminates when the appliance is working (after having pressed button 8) and indicates that the door is locked. By means of this buttons, the wash programme can be delayed from 30 min - 60 min - 90 min, 2 hours and then by 1 hour up to a maximum of 20 hours . 10 Delay Start buttons Key symbols programme selector dial: Programme Selector dial = Cotton = Synthetics = Delicates = Handwash = Cold = Wool = Jeans = Curtains = Soak = Miniprogramme = Rinses = Drain = Spin = Special 7 Functions Night Cycle (Button 2) By selecting this option, the machine will eliminate all spinning phases and not drain the water of the last rinse to prevent the fabrics from creasing. When the programme has finished, the pilot light of button 8 is off and the door is blocked to indicate that the water must be emptied out. Easy Iron (Button 5) Selecting this option the laundry is gently washed and spun to avoid any creasing.



[You're reading an excerpt. Click here to read official ZANUSSI ZWH6125 user guide](http://yourpdfguides.com/dref/956000)
<http://yourpdfguides.com/dref/956000>

In this way ironing is easier. Furthermore the machine will perform some additional rinses depending on the fabrics. Extra Rinse (Button 6) The machine performs some additional rinses during the washing cycle. This option is recommended for people who are allergic to detergents, and in areas where the water is very soft. Rinse hold (Button 2) By selecting this option the water of the last rinse is not emptied out to prevent the fabrics from creasing.

When the programme has finished, the pilot light of button 5 is off and the door is blocked to indicate that the water must be emptied out. Programme progress display (9) After having depressed the button 8, this light illuminates and stays on. The light DOOR indicates when the door can be opened: light on: the door is locked and cannot be opened. The appliance is working. light off: the door can be opened.

The washing programme has finished. Options (Button 3) Economy Only for cottons and synthetics items lightly or normally soiled at a temperature of 40°C or higher. The washing time will be prolonged and the washing temperature will be reduced. Super Quick Short cycle for lightly soiled items or for laundry which needs only freshening up. We recommend you to reduce the fabrics loading.

Prewash (Button 4) Select this option if you wish your laundry to be prewashed at 30°C before the main wash. The prewash ends with a short spin in programmes for Cotton and Synthetic fabrics, whereas in the programmes for Delicate fabrics the water is only drained. 8 Programme table Programme/ Temperature COTTON Type of laundry White and coloured cotton (heavily soiled items). Options Spin Red., Night Cycle, Rinse Hold, Super Quick, Economy, Prewash, Easy Iron, Extra Rinse Spin Red., Night Cycle, Rinse Hold, Super Quick, Economy**, Prewash, Easy Iron, Extra Rinse Description of programme Main wash rinses Long spin at the max speed Main wash rinses Long spin at the max speed 95° COTTON 60° - 40° - 30° White and coloured cotton (normally soiled cotton items). SYNTHETICS 60° - 40° - 30° Synthetic or mixed fabrics Spin Red., Night Cycle, Rinse Hold, Super Main wash Quick, Economy**, rinses Prewash, Easy Iron, Short spin at 900 rpm Extra Rinse Night Cycle, Rinse Hold, Main wash Super Quick, Prewash, rinses Short spin at 700 rpm Extra Rinse Spin Red., Night Cycle, Main wash rinses Rinse Hold, Short spin at 900 rpm Spin Red., Night Cycle, Main wash rinses Rinse Hold, Short spin at 900 rpm Spin Red.

, Night Cycle, Rinse Hold, Economy, Main wash rinses Prewash, Easy Iron, Short spin at 900 rpm Extra Rinse DELICATES 40° - 30° HANDWASH Delicate items 40° - 30° - COLD Special programme for hand washed fabrics. Programme for wool «Pure new wool, nonshrink, machine washable» label. Special programme for jeans or dark colours cotton items WOOL 40° JEANS 40° CURTAINS 40° Special delicate washing Night Cycle, Rinse Hold, Prewash, Main wash rinses cycle for curtains Extra Rinse Short spin at 700 rpm ** This option is not active at a temperature lower than 40°C. 9 Programme table - Special programmes Progr039;s washing instructions. Sort the laundry as follows: whites, coloureds, synthetics, delicates, woollens. Maximum loads Recommended loads are indicated in the programme charts. General rules: Cotton, linen: drum full but not too tightly packed; Synthetics: drum no more than half full; Delicate fabrics and woollens: drum no more than one third full. Washing a maximum load makes the most efficient use of water and energy. For heavily soiled laundry, reduce the load size. Temperatures 90° or 95° for normally soiled white cottons and linen (e.

g. tea cloths, towels, tablecloths, sheets...) for normally soiled, colour fast garments (e.

g. shirts, night dresses, pyjamas...

) in linen, cotton or synthetic fibres and for lightly soiled white cotton (e.g. underwear). for delicate items (e.g. net curtains), mixed laundry including synthetic fibres and woollens bearing the label «pure new wool, machine washable, non-shrink». 50°/60° Laundry weights The following weights are indicative: bathrobe napkin quilt cover sheet pillow case tablecloth towelling towel tea cloth night dress ladies' briefs man's work shirt man's shirt man's pyjamas blouse men's underpants 1200 g 100 g 700 g 500 g 200 g 250 g 200 g 100 g 200 g 100 g 600 g 200 g 500 g 100 g 100 g 30°-40° Before loading the laundry Never wash whites and coloureds together. Whites may lose their «whiteness» in the wash. New coloured items may run in the first wash; they should therefore be washed separately the first time. Make sure that no metal objects are left in the laundry (e.

g. hair clips, safety pins, pins). Button up pillowcases, close zip fasteners, hooks and poppers. Tie any belts or long tapge amounts of foam form during washing. Level 1 2 3 4 Characteristic soft medium hard very hard Degrees German °dH 0-7 8-14 15-21 > 21 French °T.H. 0-15 16-25 26-37 > 37 Before the first use WARNING! Ensure that the electrical and water connections comply with the installation instructions. IMPORTANT! Remove the polystyrene block and any material from the drum. IMPORTANT! We recommend you to pour 2 litres of water into the main wash compartment of the detergent drawer in order to activate the ECO valve. Than run a cotton cycle at 95°C, without any laundry in the machine, to remove any manufacturing residue from the drum and tub.

Pour 1/2 a measure of detergent into the dispenser drawer and start the machine. Acoustic signals The machine is provided of an acoustic device, which sounds in the following cases: at the end of the cycle in the event of operating problems By pressing the buttons 3 and 4 simultaneously for about 6 seconds, the acoustic signal is deactivated (except for the events of operating problems). 14 By pressing these 2 buttons again, the the acoustic signal is reactivated.

Child safety lock This device permits you to leave the appliance unattended during its functioning, so avoiding that children might accidentally start the machine or modify a running programme. This function remains able also when the washing machine is not working.

To enable (disable) this option press simultaneously for about 6 seconds buttons 5 and 6 buttons until the icon appears (disappears) on (from) the display. There are two different ways to set this option: before pressing the button 8: it will be impossible to start the machine. after pressing the button 8: it will be impossible to change any other programme or option. Operating sequence 1. Load the laundry Open the door by carefully pulling the door handle outwards. Place the laundry in the drum, one item at a time, shaking them out as much as possible. Close the door. 2. Measure out the detergent and the fabric softener ATTENTION! If you turn the programme selector dial to another programme when the machine is working, tthe red pilot light of button 8 will flash 3 times and the message Err is displayed on the display to indicate a wrong selection.



[You're reading an excerpt. Click here to read official ZANUSSI](#)

[ZWH6125 user guide](#)

<http://yourpdfguides.com/dref/956000>

The machine will not perform the new selected programme. Select the spin speed, the Night Cycle or the Rinse Hold option by pressing button 2 The relevant light will light up. When selecting a programme, the light corresponding to the maximum speed allowed for that programme will illuminate. (refer to the section «Programme table» for the maximum allowed spin speed). Select the desired option by means of buttons 3, 4, 5 and 6 Depending on the programme, different functions can be combined. @@@@**IMPORTANT!** @@15 Pull out the dispenser drawer until it stops.

@@@Close the drawer gently. @@@@On the display will appear the symbol «0'». · press button 8 again to start the programme. **IMPORTANT!** @@· The door will be locked throughout the delay time. @@After you have closed the door, press the same again. Note!

@@@Changing a running programme is possible only by resetting it. @@Start the new programme by depressing button 8 again. The washing water in the tub will not empty out. @@Depress the button again to restart the programme. @@Now you can select a new programme.

@@If the light DOOR goes off, the door can be opened. @@In this cases the door cannot be opened. @@@@At the end of the programme The machine stops automatically. @@The button 8 light and the light DOOR go off. The door can be opened.

@@turn the programme selector dial to «O» 2. select the Drain»or «Spin» programme 3. reduce the spin speed, if needed, by means of the button 2 4. depress button 8 5. @@At the end of the cycle, turn the programme selector dial to «O» to switch the machine off.

Remove the laundry from the drum and carefully check that the drum is empty. If you do not intend to carry out another wash, close the water tap. Leave the door open to prevent the formation of mildew and unpleasant smells. 17 Care and cleaning **IMPORTANT!** You must DISCONNECT the appliance from the electricity supply, before you can carry out any cleaning or maintenance work. Descaling The water we use normally contains lime. It is a good idea to periodically use a water softening powder in the machine. Do this separately from any laundry washing, and according to the softening powder manufacturer's instructions. This will help to prevent the formation of lime deposits. Maintenance Wash With the use of low temperature washes it is possible to get a build up of residues inside the drum. We recommend that a maintenance wash be performed on a regular basis.

To run a maintenance wash: The drum should be empty of laundry. Select the hottest cotton wash programme. Use a normal measure of detergent, must be a powder with biological properties. External cleaning Clean the exterior cabinet of the appliance with soap and water only, and then dry thoroughly. Cleaning the dispenser drawer The washing powder and additive dispenser drawer should be cleaned regularly. Remove the drawer by pressing the catch downwards and by pulling it out. Flush it out under a tap, to remove any traces of accumulated powder. Cleaning the drawer recess Having removed the drawer, use a small brush to clean the recess, ensuring that all washing powder residue is removed from the upper and lower part of the recess. Replace the drawer and run the rinse programme without any clothes in the drum. To aid cleaning, the top part of the additive compartment should be removed.

18 Cleaning the pump The pump should be inspected if the machine does not empty and/or spin the machine makes an unusual noise during draining due to objects such as safety pins, coins etc. blocking the pump. Proceed as follows: Disconnect the appliance. If necessary wait until the water has cooled down.

Open the pump door.

Place a container close to the pump to collect any spillage. Pull out the emergency emptying hose, place it in the container and remove its cap. When no more water comes out, unscrew the pump cover and remove it. Always keep a rag nearby to dry up spillage of water when removing the cover. Remove any objects from the pump impeller by rotating it.

Put the cap back on the emergency emptying hose and place the latter back in its seat. Screw the pump cover fully in. Close the pump door. The dangers of freezing If the machine is exposed to temperatures below 0°C, certain precautions should be taken. Turn off the water tap. Unscrew the inlet hose. Place the end of the emergency emptying hose and that of the inlet hose in a bowl placed on the floor and let water drain out. Screw the water inlet hose back on and reposition the emergency emptying hose after having put the cap on again. When you intend to start the machine up again, make sure that the room temperature is above 0°C. **IMPORTANT!** Every time you drain the water through the emergency emptying hose you must pour 2 litres of water into the main wash compartment of the detergent drawer and then run the drain programme.

@@@Remove its cap. The water should drain by gravity into the bowl. When the bowl is full, put the cap back on the hose. Empty the bowl. @@19 **IMPORTANT!** @@@@It is therefore a good idea to clean it from time to time. Turn off the water tap. Unscrew the water inlet hose. Clean the filter using a hard bristle brush. Tighten up the inlet hose. Something not working **IMPORTANT!** @@@@If after all checks, the problem persists, contact your local Service Centre.

Malfunction Possible Cause / Solution The door has not been closed. E40 · Close firmly the door. The plug is not properly inserted in the power socket. · Insert the plug into the power socket. There is no power at the socket.

· Please check your domestic electrical installation. The main fuse has blown. · Replace the fuse. The selector dial is not correctly positioned and the button 8 has not been depressed. · Please turn the selector dial and press the button 8 again.

The button 10 has been selected. · If the laundry are to be washed immediately, cancel the delay start The water tap is closed. E10 · Open the water tap. The inlet hose is squashed or kinked. E10 · Check the inlet hose connection. The filter in the inlet hose is blocked. E10 · Clean the water inlet hose filter. The door is not properly closed. E40 · Close firmly the door. The washing machine does not start: The machine does not fill: 20 Malfunction The machine fills then empties immediately: Possible Cause / Solution The end of the drain hose is too low.

· Refer to relevant paragraph in «water drainage» section. The drain hose is squashed or kinked. E20) · Check the drain hose connection. The drain pump is clogged. E20 · Clean the drain pump. The option «Night Cycle» or «Rinse hold» has been selected. · Select the Drain or Spin programmes The laundry is not evenly distributed in the drum. · Redistribute the laundry. Too much detergent or unsuitable detergent (creates too much foam) has been used.



[You're reading an excerpt. Click here to read official ZANUSSI](http://yourpdfguides.com/dref/956000)

[ZWH6125 user guide](http://yourpdfguides.com/dref/956000)

<http://yourpdfguides.com/dref/956000>

· Reduce the detergent quantity or use another one.

Check whether there are any leaks from one of the inlet hose fittings. It is not always easy to see this as the water runs down the hose; check to see if it is damp. · Check the water inlet hose connection. The inlet hose is damaged. · Change it with a new one.

The cap on the emergency emptying hose has not been replaced after cleaning the pump. · Put the cap back on the emergency emptying and place the latter back in its seat. Too little detergent or unsuitable detergent has been used. · Increase the detergent quantity or use another one. Stubborn stains have not been treated prior to washing.

· Use commercial products to treat the stubborn stains. The correct temperature was not selected. · Check if you have selected the correct temperature.

Excessive laundry load. · Introduce into the drum less laundry. 21 The machine does not empty and/or does not spin: There is water on the floor:

Unsatisfactory washing results: Malfunction Possible Cause / Solution The programme is still running. · Wait the end of washing cycle. The door lock has not been released. · Wait until the pilot light 9 has gone out. There is water in the drum.

· Select drain or spin programme to empty out the water. The transit bolts and packing have not been removed. · Check the correct installation of the appliance. The door will not open: The machine vibrates or is noisy: The support feet have not been adjusted. · Check the correct levelling of the appliance.

The laundry is not evenly distributed in the drum. · Redistribute the laundry. Maybe there is very little laundry in the drum. · Load more laundry. The electronic unbalance detection device has cut in because the laundry is not evenly distributed in the drum.

The laundry is redistributed by reverse rotation of the drum. This may happen several times before the unbalance disappears and normal spinning can start. Spinning starts late or the machine resume. If, after 10 minutes, the laundry is still not evenly distributed in the drum, the machine will not spin.

In this case, redistribute the load manually and select the spin programme. Redistribute the laundry.

The machine is fitted with a type of motor which makes an unusual noise compared with other traditional motors. This new motor ensures a softer The machine makes an unusual noise start and more even distribution of the laundry in the drum when spinning, as well as increased stability of the machine. Machines based on modern technology operate very No water is visible in the drum economically using very little water without affecting performance. 22 If you are unable to identify or solve the problem, contact our service centre. Before telephoning, make a note of the model, serial number and purchase date of your machine: the Service Centre will require this information.

Mod.

Prod. No.

. Ser. No. ..

.

.. Technical data Dimensions Width Height Depth (including the porthole) Electrical connection Voltage Overall power - Fuse Water supply pressure 60 cm 85 cm 63 cm Information on the electrical connection is given on the rating plate on the inner edge of the appliance door Minimum Maximum 0,05 MPa 0,8 MPa 7 3.5 3.5 2.0 0 kg kg kg kg Maximum Load Cotton Synthetics Delicates Woollens and handwash Maximum Spin Speed Mod. Prod

No.

... ..

Ser. No. ...

... .. 1200 rpm 23 Consumption values Programme Programme duration Water consumption (in litres) 2.1 Energy consumption (in kWh) 61 60 49 60 57 63 55 55 58 75 23 55 46 - Cotton 95°C Cotton 60°C Cotton 60°+ Economy selected Cotton 40°C Synthetics 60°C Delicates 40°C Handwash 40° Wool 40° Jeans 40° Curtains 40° Soak 30° Miniprogramme 30° Rinses Drain Spin For the duration of the programmes, please refer to the display on the control panel 1.4 1.19 0.

77 1.05 0.6 0.4 0.4 0.55 0.75 0.45 0.3 0.1 - Infos The consumption data shown on this chart is to be considered purely indicative, as it may vary depending on the quantity and type of laundry, on the inlet water temperature and on the ambient temperature.

It refers to the highest temperature for each wash programme. (*) The «Cotton» 60° + the option Economy selected with a load of 7 kg is the reference programme for the data entered in the energy label, in compliance with EEC 92/75 standards. 24 Installation instruction Unpacking All transit bolts and packing must be removed before using the appliance. You are advised to keep all transit devices so that they can be refitted if the machine ever has to be transported again. 5.

Remove the bracket D, refit the six smaller bolts C and slide out the relevant plastic spacer E. 1. After removing all the packaging, carefully lay machine on its back to remove the polystyrene base from the bottom. 2. Remove the power supply cable and the draining hose from the hose holders on the rear of the appliance.

6. Open the porthole, take out the inlet hose from the drum and remove the polystyrene block fitted with the adhesive tape on the door seal. Open the porthole, take out the inlet hose from the drum and remove the polystyrene block fitted with the adhesive tape on the door seal. 7. Fill the smaller upper hole and the two large ones with the corresponding plastic plug caps supplied in the bag containing the instruction booklet. Positioning Install the machine on a flat hard floor. Make sure that air circulation around the machine is not impeded by carpets, rugs etc. Check that the machine does not touch the wall or other kitchen units. Level the washing machine by raising or lowering the feet. The feet may be tight to adjust as they incorporate a self locking nut, but the machine MUST be level and stable.

Any necessary adjustment can be made with a spanner. Accurate levelling prevents vibration, noise and displacement of the machine during operation. Never place cardboard, wood or similar materials under the machine to compensate for any unevenness in the floor. A C B C B 3. With a suitable spanner unscrew and remove the central rear bolt A. 4. Unscrew and remove the two large rear bolts B and the six smaller bolts C. E C C D 25 If necessary, check the setting with a spirit level. The inlet hose must not be lengthened. If it is too short and you do not wish to move the tap, you will have to purchase a new, longer hose specially designed for this type of use.

Water drainage The end of the drain hose can be positioned in three ways: Hooked over the edge of a sink using the plastic hose guide supplied with the machine. In this case, make sure the end cannot come unhooked when the machine is emptying. This could be done by tying it to the tap with a piece of string or attaching it to the wall. Water inlet An inlet hose is supplied and can be found inside the machine drum. @@1.

Open the porthole and extract the inlet hose.

[You're reading an excerpt. Click here to read official ZANUSSI](#)



[ZWH6125 user guide](#)

<http://yourpdfguides.com/dref/956000>

@@Do not place the inlet hose downwards. @@3. Set the hose correctly by loosening the ring nut. @@4.

Connect the hose to a tap with a 3/4" thread. Always use the hose supplied with the appliance. 26 35° In a sink drain pipe branch. This branch must be above the trap so that the bend is at least 60 cm above the ground. Directly into a drain pipe at a height of not less than 60 cm and not more than 90 cm. The end of the drain hose must always be ventilated, i.e. the inside diameter of the drain pipe must be larger than the outside diameter of the drain hose.

@@@Attention! Connect the machine to an earthed socket. @@@NOTE Please ensure that when the appliance is installed it is easily accessible for the engineer in the event of a breakdown.

27 Environmental concerns Packaging materials The materials marked with the symbol are recyclable. >PE<=polyethylene >PS<=polystyrene >PP<=polypropylene This means that they can be recycled by disposing of them properly in appropriate collection containers. Old machine Use authorised disposal sites for your old appliance. Help to keep your country tidy! The symbol on the product or on its packaging indicates that this product may not be treated as household waste. Instead it shall be handed over to the applicable collection point for the recycling of electrical and electronic equipment. By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling of this product. For more detailed information about recycling of this product, please contact your local city office, your household waste disposal service or the shop where you purchased the product. Ecological hints To save water, energy and to help protect the environment, we recommend that you follow these tips: Normally soiled laundry may be washed without prewashing in order to save detergent, water and time (the environment is protected too!). The machine works more economically if it is fully loaded. With adequate pre-treatment, stains and limited soiling can be removed; the laundry can then be washed at a lower temperature.

Measure out detergent according to the water hardness, the degree of soiling and the quantity of laundry being washed. 28 Guarantee conditions (Local guarantee) 29 European guarantee This appliance is guaranteed by Electrolux, in each of the countries listed in the following page, for the period specified in the appliance guarantee or otherwise by law. If you move from one of these countries to another of these countries the appliance guarantee will move with you subject to the following qualifications: The appliance guarantee starts from the date you first purchased the appliance which will be evidenced by production of a valid purchase document issued by seller of the appliance. The appliance guarantee is for the same period and to the same extent for labour and parts as exists in your country of residence for this particular model or range of appliances. The appliance guarantee is personal to the original purchaser of the appliance and cannot be transferred to another user.

The appliance is installed and used in accordance with instructions issued by Electrolux and is only used within the home, i.e. is not used for commercial purposes. The appliance is installed in accordance with all relevant regulations in force within your new country of residence. The provisions of this European Guarantee do not affect any of the rights granted to you by law.

30 www.electrolux.com Albania Belgique/België/Belgien Česká republika Danmark Deutschland Eesti España France Great Britain Hellas Hrvatska Ireland Italia Latvija Lituania Luxembourg Magyarország Nederland Norge Österreich Polska Portugal Romania Schweiz-Suisse-Svizzera Slovenija Slovensko Suomi Sverige Türkiye +35 5 4 261 450 +32 2 363 04 44 +420 2 61 12 61 12 +45 70 11 74 00 +49 180 32 26 622 +37 2 66 50 030 +34 902 11 63 88 www.electrolux.fr +44 8705 929 929 +30 23 10 56 19 70 +38 51 63 23 338 +353 1 40 90 753 +39 (0) 434 558500 +37 17 84 59 34 +370 5 27 80 609 +35 2 42 43 13 01 +36 1 252 1773 +31 17 24 68 300 +47 81 5 30 222 +43 18 66 400 +48 22 43 47 300 +35 12 14 40 39 39 +40 21 451 20 30 +41 62 88 99 111 +38 61 24 25 731 +421 2 43 33 43 22 www.electrolux.fi +46 (0)771 76 76 76 +90 21 22 93 10 25 +7 095 937 7837 Rr. Pjeter Bogdani Nr. 7 Tirane Bergensesteenweg 719, 1502 Lembeek Budjovická 3, Praha 4, 140 21 Sjællandsgade 2, 7000 Fredericia Muggenhofer Str. 135, 90429 Nürnberg Mustamäe tee 24, 10621 Tallinn Carretera M-300, Km.

29,900 Alcalá de Henares Madrid Addington Way, Luton, Bedfordshire LU4 9QQ 4, Limnou Str., 54627 Thessaloniki Slavonska avenija 3, 10000 Zagreb Longmile Road Dublin 12 C.so Lino Zanussi, 26 - 33080 Porcia (PN) Kr. Barona iela 130/2, LV-1012, Riga Verkiu,2 9, 09108 Vilnius, Lithuania Rue de Bitbourg, 7, L-1273 Hamm H-1142 Budapest XIV, Erzsébet királyné útja 87 Vennootsweg 1, 2404 CG - Alphen aan den Rijn Risløkkvn. 2 , 0508 Oslo Herziggasse 9, 1230 Wien ul. Kolejowa 5/7, Warsaw Quinta da Fonte - Edifício Gonçalves Zarco - Q35 -2774-518 Paço de Arcos Str. Garii Progresului 2, S4, 040671 RO Industriestrasse 10, CH-5506 Mägenwil Traska 132, 1000 Ljubljana Electrolux Slovakia s.r.o., Electrolux Domáce spotrebiče SK, Seberíniho 1, 821 03 Bratislava Electrolux Service, S:t Göransgatan 143, S-105 45 Stockholm Tarlabai caddesi no : 35 Taksim Istanbul 129090 , , 16, "" 31 www.electrolux.com 192 997 110 Subject to change without notice .



[You're reading an excerpt. Click here to read official ZANUSSI](#)

[ZWH6125 user guide](#)

<http://yourpdfguides.com/dref/956000>