




# Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for ZANUSSI ZYB594X. You'll find the answers to all your questions on the ZANUSSI ZYB594X in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

**User manual ZANUSSI ZYB594X**  
**User guide ZANUSSI ZYB594X**  
**Operating instructions ZANUSSI ZYB594X**  
**Instructions for use ZANUSSI ZYB594X**  
**Instruction manual ZANUSSI ZYB594X**

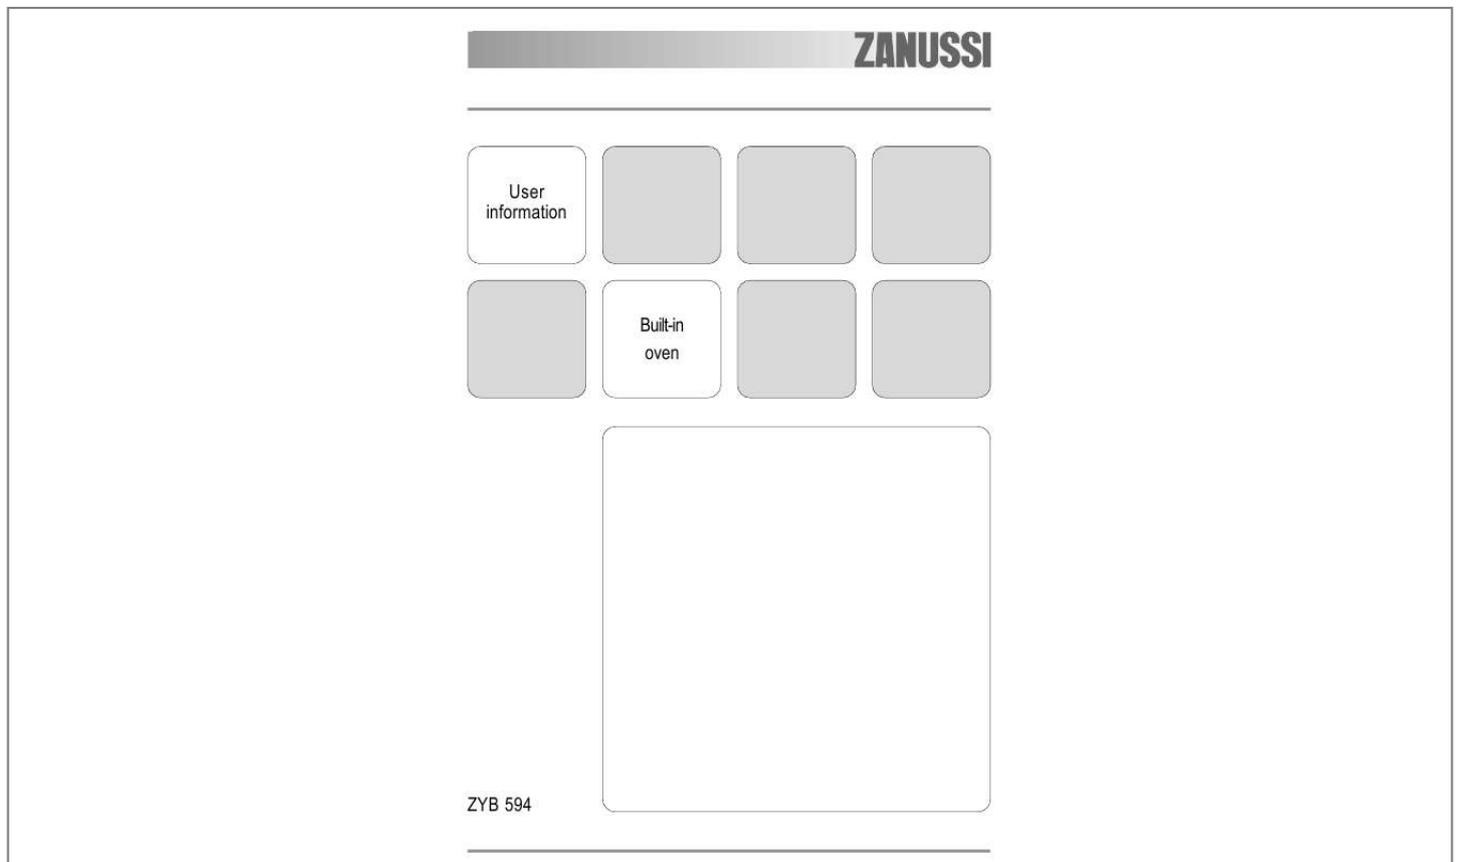

[You're reading an excerpt. Click here to read official ZANUSSI ZYB594X user guide](http://yourpdfguides.com/dref/954657)  
<http://yourpdfguides.com/dref/954657>

**Manual abstract:**

.....  
.....  
.....  
.....

.....  
.....  
.....  
.....

.....  
.....  
.....  
.....

.....  
.....  
.....  
.....

..... 7 The oven safety devices ...

.....  
.....  
.....

.....  
.....  
.....  
.....

.....  
.....  
.....  
.....

.....  
.....  
.....

..... 8 When the oven is first installed ..

.....  
.....  
.....  
.....

.....  
.....  
.....  
.....

.....  
.....  
.....  
.....

..... 9 Before first use....

.....  
.....  
.....

.....  
.....  
.....  
.....

.....  
.....  
.....  
.....

.....  
.....  
.....  
.....

.....  
.....

.. @@@@ @@@@ 19 Baking Table ...

.....

.....  
.....  
.....  
.....

.....  
.....  
.....  
.....

.....  
.....  
.....  
.....

.....  
.....  
.....

... 24 Roasting Table .....

.....  
.....  
.....  
.....

.....  
.....  
.....  
.....

.....  
.....  
.....  
.....

.....  
.....  
.....

..... 25 Cleaning and Maintenance ....

.....  
.....  
.....  
.....

.....  
.....  
.....  
.....

.....  
.....

.....  
.....

.....  
.....  
*. 27 Pyrolytic cleaning ....*

.....  
.....  
.....  
.....  
.....

.....  
.....  
.....  
.....

.....  
.....  
.....  
.....

.....  
*28 Something not working .....*

.....  
.....

.....  
.....  
.....  
.....

.....  
.....  
.....  
.....

.....  
.....  
.....  
.....

*. 36 Technical data .....*

.....  
.....  
.....

.....  
.....  
.....  
.....

.....  
.....  
.....  
.....

.....  
.....  
.....  
.....

*..... 37 Electrical Connection .....*

.....  
.....  
.....

.....  
.....  
.....  
.....

.....  
.....  
.....  
.....

.....  
.....  
.....

..... 38 Instructions fo Building In .

.....  
.....  
.....  
.....

.....  
.....  
.....  
.....

.....  
.....  
.....  
.....

.....  
.....

... 39 Guarantee/Customer Service ..

.....  
.....  
.....  
.....  
.....

.....  
.....  
.....  
.....

.....  
.....  
.....

..... 41 European guarantee .

.....  
.....  
.....  
.....

.....  
.....  
.....  
.....

.....  
.....  
.....  
.....

.....

.....  
.....

... 42 Guide to using the user instructions Safety instructions Step by step instructions Hints and Tips Environmental Informations This appliance conforms with the following ECC Directives: 2006/95 (Low Voltage Directive); 89/336 (EMC Directive); 93/68 (General Directive); and subsequent modifications. 3 4 electrolux Important Safety Information These warnings are provided for the safety of the users and those living with them. So read them carefully before installing and using the appliance. This will allow you to obtain best performance, avoid improper actions, use the appliance in complete safety and also respect the environment. If you need assistance, contact our Customer Care Department on 08705 727 727 Installation . . . . @This oven is heavy. Take care when moving it. Remove all packaging, both inside and outside the oven, before using the oven.

Do not attempt to modify the oven in any way. This oven is intended for domestic cooking only. It is not designed for commercial or industrial purposes. Always stand back from the oven when opening the oven door during cooking or at the end of it to allow any build up of steam or heat to release. Appliances become very hot with use, and retain their heat for long periods after use. Care should be taken to avoid touching heating elements inside the oven. Never line any part of the oven with aluminium foil. Do not allow heatproof cooking material, e.g. roasting bags, to come into contact with oven elements.

Never place plastic or any other material which may melt in or on the oven. Do not place sealed cans or aerosols inside the oven. They may explode if they are heated. . . . . During use . . . . Do not hang towels, dishcloths or clothes from the oven or its handle. Do not use this oven if it is in contact with water and never operate it with wet hands.

Take great care when heating fats and oils as they will ignite if they become too hot. Always use oven gloves to remove and replace food in the oven. Before cleaning the oven, either turn the power off or pull the mains plug out. Ensure that all controls are in the OFF position when not in use. Do not leave cookware containing foodstuffs, e.

g. fat or oil in or on the oven in case it is inadvertently switched ON. When using other electrical appliances, ensure the cable does not come into contact with the hot surfaces of the oven. . . . . 4 electrolux 5 People Safety . . . This oven is designed to be operated by adults. Do not allow children to play near or with the oven. The oven gets hot when it is in use. Children should be kept away until it has cooled. This appliance is not intended for use by children or other persons whose physical, sensory or mental capabilities or lack of experience and knowledge prevents them from using the appliance safely without supervision or instruction by a responsible person to ensure that they can use the appliance safely. Environmental Information . . After installation, please dispose of the packaging with due regard to safety and the environment. When disposing of an old appliance, make it unusable, by cutting off the cable.

Remove any door catches, to prevent small children being trapped inside. The symbol on the product or on its packaging Maintenance and Cleaning . . . .

Only clean this oven in accordance with the instructions. Always allow the oven to cool down and switch off the electrical supply before carrying out any cleaning or maintenance work. The oven should be kept clean at all times. A build-up of fats or other foodstuffs could result in a fire, especially in the grill pan. Never use steam or high pressure steam cleaners to clean the appliance. Do not use abrasive cleaners or sharp metal scrapers. These can scratch the glass in the oven door, which may result in the shattering of the glass. indicates that this product may not be treated as household waste. Instead it shall be handed over to the applicable collection point for the recycling of electrical and electronic equipment.

By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling of this product. For more detailed information about recycling of this product, please contact your local city office, your household waste disposal service or the shop where you purchased the product. Always keep these user instructions with the appliance.

Should the appliance be passed on to third persons or sold, or if you leave this appliance behind when you move house, it is very important that the new user has access to these user instructions and the accompanying information. Service . This oven should only be repaired or serviced by an authorised Service Engineer and only genuine approved spare parts should be used.

5 6 electrolux Description of the appliance 1 2 3 4 5 6 7 1. 2. 3. 4. Control Panel Electronic programmer Air Vents for Cooling Fan Grill 5.

Oven light 6. Oven Fan 7. Rating plate Oven accessories Grill/roasting pan Grill trivet Anti-tip shelves Removable handles 6 electrolux 7 Control panel Cooking function Temperature display Time display 1 Push buttons 1. 2. 3. 4. 5. 6. 7. 2 3 4 5 6 7 ON / OFF Oven Function Control Fast Heat Up Function Pyrolytic Function Decreasing Control " " (Time or Temperature) Increasing Control " " (Time or Temperature) Minute minder / Cooking duration function / End of cooking function All the oven functions are controlled by an electronic programmer.

You can select any combination of cooking function, cooking temperature and automatic timing. NOTE In the event of a power failure, the programmer will keep all the settings (time of day, programme setting or programme in operation) for about 3 minutes. If power fails for a longer time, all the settings will be cancelled. When the power is restored, the numbers in the display will flash, and the clock/timer has to be reset. 7 8 electrolux The oven safety devices Safety thermostat To prevent dangerous overheating (through incorrect use of the appliance or defective components), the oven is fitted with a safety thermostat, which interrupts the power supply. The oven switches back on again automatically, when the temperature drops. Should the safety thermostat trigger due to incorrect use of the appliance, it is enough to remedy the error after the oven has cooled down; if on the other hand, the thermostat triggers because of a defective component, please contact the local customer service.



[You're reading an excerpt. Click here to read official ZANUSSI ZYB594X user guide](http://yourpdfguides.com/dref/954657)  
<http://yourpdfguides.com/dref/954657>

The cooling fan The cooling fan is designed to cool the oven and the control panel. The fan switches on automatically after a few minutes of cooking. Warm air is blown out through the aperture near the oven door handle.

When the oven is switched off, the fan may run on after the oven is switched off to keep the controls cool. This is quite normal. The action of the cooling fan will depend on how long the oven has been used and at what temperature. It may not switch in at all at lower temperature settings nor run on where the oven has only been used for a short time. 8 electrolux 9 When the oven is first installed Remove all packaging, both inside and outside the oven, before using the oven.

When the oven is first connected to the electrical supply, the display will automatically show 12:00 will flash. and the symbol Ensure the correct time of day is set before using the oven. To set the correct time of day: a) while the symbol is flashing, set the correct time of day by pressing buttons " " or " " (Fig. 1). The time arrow symbol will disappear about 5 seconds after the correct time is displayed.

b) if the symbol is not flashing anymore, press button twice. Then, proceed as described in point a). Fig. 1 Before first use The oven should be heated without food. To do that, proceed as follows: -- press button to switch on the oven. -- press button twice and select the "Conventional Cooking" function (Fig. 2). -- set the temperature to 250 °C using the increasing push button " ". -- Allow the oven to run empty for approximately 45 minutes. -- open a window for ventilation.

This procedure should be repeated with the "Fan Cooking" and "Full Grill" function for approximately 5-10 minutes. Fig. 2 9 10 electrolux During this time, an unpleasant odour may be emitted. This is absolutely normal, and is caused by residues of manufacturing. Once this operation is carried out, let the oven cool down, then clean the oven cavity with a soft cloth soaked in warm water to which a little mild washingup liquid has been added. Before cooking for the first time, carefully wash the shelves and the baking tray. To open the oven door, always hold the handle in the centre (Fig. 3). Fig.3 "On/Off" Push Button The oven must be switched on before setting any cooking function or programme.

When button is pressed, the oven symbol will appear in the display, and the oven light will switch on (Fig. 4). To switch off the oven, you can press button at any time. Any cooking function or programme will stop, the oven light will switch off and the time display will show the time of day only. It is possible to switch ofuot; is displayed (Fig.

8). Fig. 7 Fig. 8 To programme the Oven to switch off 1) Place food in the oven, switch on the oven, select a cooking function and adjust the cooking temperature, if required. 2) Press button to select the "Cooking Duration" function (Fig.

9). The "Cooking Duration" symbol will flash and the control panel will display "0.00". (Fig 9). Fig. 9 13 14 electrolux 3) While the symbol is flashing, press button " " to select the required time. Maximum time is 23 hours 59 minutes. The programmer will wait 3 seconds and then start running. 4) When cooking time is over, the oven will be switched off automatically and an acoustic alarm will be heard while thed on when the appliance is first connected. If there is a power failure, when the power supply is restored again, the Demo function can only be switched on if in the display 12:00 and the symbol are flashing automatically.

1. Press the button for approximately 2 seconds. An acoustic alarm will sound for a short time. 2. Press the and " " buttons at the same time. A short acoustic alarm will be heard and the time 12:00 will appear in the display (Fig. 15). When the oven is switched on the symbol appears in the display. This means that the Demo function is activated. All oven functions can be selected.

The oven is not really working and the heating elements do not switch on. Switch off the oven and follow the procedure described above to switch off the demo mode again. The Demo function remains saved in the programme in the event of a power failure. Fig. 15 Error code The electronic programmer does a continuous diagnostic check of the system.

If some parameters are not correct, the control unit will stop the activated functions and it will show on the display the corresponding error code (Fig. 16). For further details, refer to chapter "Something not working". Fig. 16 17 18 electrolux Beep mode You can choose to make The Electronic Control beep each time that a control is touched.

To enable this function, the oven must be off. Press controls and " " at the same time for about 3 seconds. The Electronic Control beeps once. To disable the "Beep" Function: 1. If the oven is on, press control off. to switch it and " " at the same time 2. Press controls for about 3 seconds. The Electronic Control beeps once. 18 electrolux 19 Using the oven The oven is supplied with an exclusive system which produces a natural circulation of air and the constant recycling of steam. This system makes it possible to cook in a steamy environment and keep the dishes soft inside and crusty outside.

Moreover, the cooking time and energy consumption are reduced to a minimum. During cooking steam may be produced which can be released when opening the oven door. This is absolutely normal. However, always stand back from the oven when opening the oven door during cooking or at the end of it to allow any build up of steam or heat to release. Attention! - Do not place objects on the oven base and do not cover any part of the oven with aluminium foil while cooking, as this could cause a heat build-up which would affect the baking results and damage the oven enamel. Always place pans, heat-resisting pans and aluminium trays on the shelf which has been inserted in the shelf runners. When food is heated, steam is created, like in a kettle. When the steam comes into contact with the glass in the oven door, it condenses and creates water droplets. To reduce condensation, always preheat the empty oven for 10 minutes. We recommend you wipe the water droplets away after every cooking process.

Always cook with the oven door closed. Stand clear when opening the drop down oven door. Do not allow it to fall open - support the door using the door handle, until it is fully open. 4 3 2 1 The oven has four shelf levels. The shelf positions are counted from the bottom of the oven as shown in the diagram. It is important that these shelves are correctly positioned as shown in the diagram. Do not place cookware directly on the oven base. 19 20 electrolux Fan cooking The air inside the oven is heated by the element around the fan situated behind the back panel. The fan circulates hot air to maintain an even temperature inside the oven.



[You're reading an excerpt. Click here to read official ZANUSSI ZYB594X user guide](http://yourpdfguides.com/dref/954657)  
<http://yourpdfguides.com/dref/954657>





Pyrolytic 2 (P 2) time : 2 h 30 min. = 30 min heatup + 1 h 30 min at 480°C + 30 min cooling down.

The pyro duration time cannot be changed. To activate the pyrolytic cleaning function proceed as follows: 1. Press button to switch on the oven. Press (level 1 - P 1) Fig. 18 Fig. 17 button as often as necessary, until the "Pyro" function symbol will appear in the display (Fig. 17). Simultaneously, the symbol and the "P I" writing will flash in the display and an acoustic signal will be emitted (Fig. 18). 29 30 electrolux This means that, before activating the pyrolytic cleaning function, you have to remove all the oven accessories.

2. The Cooking Duration symbol will flash for 5 seconds; during this time push ' ' or ' ' buttons to select the pyrolytic 1 (P 1) or pyrolytic 2 (P 2) function (Fig. 19). 3. Once you have chosen the desired pyrolytic function, the "P1" or "P2" writing will flash in the display, alternating with the symbol, waiting for confirmation to start the pyro cleaning function.

4. To confirm which pyrolytic function you desire, press button. The writing will stop flashing will disappear, the and the symbol acoustic signal will stop, the oven lamp will switch off and the pyrolytic cleaning cycle starts (Fig. 20). As soon as the oven heats up, the thermometer symbol rises slowly, indicating that the temperature inside the oven is increasing.

5. When temperature inside the oven reaches 300°C, the door lock will be activated and the will be displayed (Fig.21). related symbol At the end of the pyrolytic cleaning process, the display shows the time of day. The oven door is locked. Once the oven has cooled down, an acoustic signal will be emitted and the door will unlock. To stop the pyrolytic cleaning cycle at any time, press button. NOTE: The time indication includes the cooling down time. If you select a cooking function while the pyrolytic function is active, the cleaning cycle will be interrupted. If the oven door lock is activated, it is impossible to select any cooking function until the door lock is off.

30 Fig. 19 Fig. 20 Fig. 21 electrolux 31 To programme the pyrolytic cleaning 5. When temperature inside the oven reaches 300°C, the door lock will be activated and the cycle (delayed start, automatic stop) If you desire, you can programme the starting and ending time of the pyrolytic cleaning cycle. 1. Press button to switch on the oven. Press (level 1 - P 2) button as often as necessary, until the related symbol will be displayed. At the end of the pyrolytic cleaning process, the display shows the time of day. The oven door is locked.

Once the oven has cooled down, an acoustic signal will be emitted and the door will unlock. To stop the pyrolytic cleaning cycle at any time, press button. "Pyro" function symbol appears in the display. Simultaneously the "P I" writing and the symbol will flash in the display and an acoustic signal will be emitted. This means that, before activating the pyrolytic cleaning function, you have to remove all the oven accessories.

2. The Cooking Duration symbol will flash for some seconds; during this time push ' ' or ' ' buttons to select the pyrolytic 1 (P 1) or pyrolytic 2 (P 2) function.

3. Once you have chosen the desired pyrolytic function, the "P1" or "P2" writing will flash in the display, alternating with the symbol, waiting for confirmation to start the pyrolytic cleaning function. At this time, push the time function button (Fig.

22). The "End of Cooking" symbol and the arrow symbol will flash. The control panel will display the end of the cleaning cycle (that is, the actual time + cooking duration time). Push ' ' or ' ' buttons to select the required end of cycle time (Fig. 22). After a few seconds, the "Pyro" writing and the symbol will stop flashing, the acoustic signal will stop will while the Cooking Duration symbol flash until the pyrolytic cleaning cycle start. 4. At the programmed time, the pyrolytic cleaning cycle will automatically start. Fig. 22 31 32 electrolux Cleaning the oven door The oven door is made up of four glasses.

It is possible to remove them for easier cleaning. Warning - The oven door may bang shut if you try to extract the inner glasses when the oven door is still fitted to the oven. Before cleaning the oven door, we recommend you to remove it from the oven. Proceed as follows: 1. open the oven door completely and locate the two hinges which link the door to the oven (Fig. 23). 2. Unlock and turn the small levers located on the two hinges (Fig. 24). Fig.

23 Fig. 24 3. Handle the door by its left- and right-hand sides, then slowly turn it towards the oven until it is half-closed; at this point, gently pull the oven door away from the oven frame (Fig. 25). Fig.

25 4. Place the oven door on a solid surface, being careful to avoid the glass becoming scratched. Then remove the two screws located on the sides of the oven door (Fig. 26). Fig.

26 32 electrolux 33 5. Extract the inner glass support (Fig. 27). Fig. 27 6. Before extracting the inner glasses, remove the rubber distance holder as shown in the picture (Fig. 28). Fig. 28 7. Gently extract the three inner glasses, starting with the uppermost one first (Fig.

29). Clean the oven door glass with warm water and a soft cloth only. Never use harsh abrasives as they could damage the special heat-resistant surface of the inner glasses. 8. Once the cleaning is carried out, refit the oven door, following the procedure in reverse (Fig. 30). Fig. 29 Fig. 30 33 34 electrolux The two glasses in the middle are special glasses that have been treated to resist heat. They are marked with a small dot located on a corner and a black frame respectively.

It is important that, when refitting the oven door, the inner glasses are fixed in the right position. 9. To check if this operation has been carried out correctly, when inserting the glass, make sure that the surface of the glass marked with a black frame looks upwards and that the dot is located on the upper left corner of the glass (see Fig. 31). 10.

As soon as the inner glasses are inserted in the oven door, fix the rubber distance holder (see Fig. 32). 11. Insert the inner glass support (Fig. 33).

12. Fix the two screws located on the sides of the oven door (Fig. 34). 13. To re-fit the oven door to the oven, carry out the operations described at points 1 to 3 in reverse. Appliances in stainless steel or aluminium We recommend you only clean the oven door with a wet sponge and then dry it afterwards with a soft cloth. Never use scourers, acids or harsh abrasives, as these can damage the surface. Clean the panel with the same care. If necessary, the door hinges can be reversed. This procedure must only be performed by the Technical Service Department.

DO NOT clean the oven door while the glass panels are warm. If this precaution is not observed the glass panels may shatter.



[You're reading an excerpt. Click here to read official ZANUSSI](http://yourpdfguides.com/dref/954657)

[ZYB594X user guide](http://yourpdfguides.com/dref/954657)

<http://yourpdfguides.com/dref/954657>

If the door glass panels become chipped or have deep scratches, the glasses will be weakened and must be replaced to prevent the possibility of the panel shattering. Contact your local Service Force Centre who will be pleased to advise further. 34 Fig. 31 Fig. 32 Fig. 33 Fig. 34 electrolux 35 Oven Shelves and Shelf Supports To clean the oven shelves, soak in warm soapy water and remove stubborn marks with a well wetted soap impregnated pad. Rinse well and dry with a soft cloth.

The shelf supports can be removed for easy cleaning. Proceed as follows: 1. remove the front screw while keeping the shelf support in position with the other hand; 2. disengage the rear hook and take off the shelf support; 3. once the cleaning is carried out, refit the shelf supports following the procedure in reverse.

Please, ensure the retaining nuts are secure when refitting the shelf support. Remove the shelf supports and all oven accessories before activating the pyrolytic cleaning cycle. Replacing the oven light Disconnect the appliance If the oven bulb needs replacing, it must comply with the following specifications:

- Electric power: 40 W, - Electric rate: 230 V (50 Hz), - Resistant to temperatures of 300°C, - Connection type: E14. These bulbs are available from your local Service Force Centre. To replace the faulty bulb: 1.

Ensure the oven is isolated from the electrical supply. 2. Push in and turn the glass cover anticlockwise. 3. Remove the faulty bulb and replace with the new one. 4. Refit the glass cover and restore the electrical supply. 35 36 electrolux Something not working If the appliance is not working correctly, please check the following before contacting an authorised Service Centre. **PROBLEM** The oven is not heating up. **SOLUTION** Press the control, then select a cooking function.

or Has the fuse in the domestic electrical installation been tripped? or Is the child safety device or the automatic On/Off cutoff function switched on? or Was the Demo function accidentally activated? Follow the instructions given in the relevant paragraph to deactivate it. or Check whether the appliance is correctly connected and the socket switch or the mains supply to the oven is ON. Switch on the oven using control . or Check the light bulb, and replace it , if necessary (see chapter "Cleaning and Maintenance"). Following the advice contained in these instructions, especially the section "Using the oven". When the cooking process is completed, do not leave the dishes standing in the oven for longer than 15-20 minutes. Check that shelves and bakeware are not vibrating in contact with the oven back panel. Set the time of day (see chapter "How the set the time of day"). Please take note of the error code and contact an authorised Service Centre. The oven light does not come on.

It takes too long to cook the dishes or they cook too quickly. Steam and condensation settle on the food and in the oven cavity. The oven fan is noisy. The display shows "12.00".

The error code (letter "F followed by digits) appears in the display. 36 electrolux 37 Technical data Heating element ratings Bottom Top Conventional cooking (top+bottom) Inner Grill Full grill Fan cooking Pizza Thermal Grilling Pyrolytic Cleaning Function Oven light Convection fan Cooling fan Total rating Operating voltage (50 Hz) 1000 W 800 W 1800 W 1650 W 2450 W 2000 W 1000/2000 W 1675 W 2450 W 40 W 25 W 25 W 2515 W 230 V Dimensions of the recess Height Width Depth under top in column 593 mm 580 mm 560 mm 550 mm Dimensions of the oven cavity Height Width Depth Oven capacity 335 mm 395 mm 400 mm 53 l 37 38 electrolux Electrical Connection The oven must be installed according to the instructions supplied. @@@@ the yellow and green earth cable should be 2-3 cm longer than the other cables. Important After installation and connecting, the cable must be placed so that it cannot at any point reach a temperature of more than 50°C above the ambient temperature. Before the oven is connected, check that the main fuse and the domestic installation can support the load and that the power supply is properly earthed.

The manufacturer declines any responsibility should these safety measures not be carried out. or E - THIS OVEN MUST BE EARTHED The cable used to connect the oven to the electrical supply must comply to the specifications given below. Connection via 13 A socket outlet 13 A spur box Oven Control Circuit 2.5 mm<sup>2</sup> Min. @20 A max. For Europe use only Min. @@@@D - B) provided. Fig. @@· The appliance has been used for normal domestic purposes only, and in accordance with the manufacturer's instructions. · The appliance has not been serviced, maintained, repaired, taken apart or tampered with by any person not authorised by us.

· Electrolux Service Force Centre must undertake all service work under this guarantee · Any appliance or defective part replaced shall become the Company's property. · This guarantee is in addition to your statutory and other legal rights. Exclusions · Damage or calls resulting from transportation, improper use or neglect, the replacement of any light bulbs or removable parts of glass or plastic. · Costs incurred for calls to put right an appliance which is improperly installed or calls to appliances outside the United Kingdom. · Appliances found to be in use within a commercial environment, plus those which are subject to rental agreements. · Products of Electrolux manufacturer that are not marketed by Electrolux Service and Spare Parts In the event of your appliance requiring service, or if you wish to purchase spare parts, please contact your local Service Force Centre by telephoning 0870 5 929 929 Your telephone call will be automatically routed to the Service Force Centre covering your postcode area. For the address of your local Service Force Centre and further information about Service Force, please visit the website at [www.serviceforce.co.uk](http://www.serviceforce.co.uk) Before calling out an engineer, please ensure you have read the details under the heading "Something not working".

41 42 electrolux When you contact the Service Force Centre you will need to give the following details: 1. Your name, address and postcode. 2. Your telephone number. 3.

Clear concise details of the fault. 4. The model and Serial number of the appliance (found on the rating plate). 5. The purchase date.

Please note a valid purchase receipt or guarantee documentation is required for in guarantee service calls. Customer Care For general enquiries concerning your Electrolux appliance, or for further information on Electrolux products please contact our Customer Care Department by letter or telephone at the address below or visit our website at [www.electrolux.co.uk](http://www.electrolux.co.uk) Customer Care Department Electrolux Major Appliances Addington Way Luton Bedfordshire, LU4 9QQ Tel: 08705 727 727 (\*) (\*) Calls may be recorded for training purposes European Guarantee This appliance is guaranteed by Electrolux in each of the countries listed at the back of this user manual, for the period specified in the appliance guarantee or otherwise by law.



[You're reading an excerpt. Click here to read official ZANUSSI](#)

[ZYB594X user guide](#)

<http://yourpdfguides.com/dref/954657>

*If you move from one of these countries to another of the countries listed below the appliance guarantee will move with you subject to the following qualifications: · The appliance guarantee starts from the date you first purchased the appliance which will be evidenced by production of a valid purchase document issued by the seller of the appliance. · The appliance guarantee is for the same period and to the same extent for labour and parts as exists in your new country of residence for this particular model or range of appliances. · The appliance guarantee is personal to the original purchaser of the appliance and cannot be transferred to another user. · The appliance is installed and used in accordance with instructions issued by Electrolux and is only used within the home, i.e.*

*is not used for commercial purposes. · The appliance is installed in accordance with all relevant regulations in force within your new country of residence. The provisions of this European Guarantee do not affect any of the rights granted to you by law. 42 electrolux 43 43 44 electrolux ZYB 594 0.79 kWh 0.78 kWh 53 43 min. 41 min. 1130 cm<sup>2</sup>44 electrolux 45 45 46 electrolux 46 electrolux 47 47 48 electrolux www.zanussi-electrolux.co.uk 48 35699-2001 12/07 R.A .*



[You're reading an excerpt. Click here to read official ZANUSSI ZYB594X user guide](http://yourpdfguides.com/dref/954657)  
<http://yourpdfguides.com/dref/954657>