



Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for ZENITH A25A11D. You'll find the answers to all your questions on the ZENITH A25A11D in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual ZENITH A25A11D
User guide ZENITH A25A11D
Operating instructions ZENITH A25A11D
Instructions for use ZENITH A25A11D
Instruction manual ZENITH A25A11D



[You're reading an excerpt. Click here to read official ZENITH A25A11D user guide](http://yourpdfguides.com/dref/340895)
<http://yourpdfguides.com/dref/340895>

Manual abstract:

REFER TO QUALIFIED SERVICE PERSONNEL. @@@@ATTENTION: POUR ÉVITER LES CHOCS ÉLECTRIQUES, INTRODUIRE LA LAME LA PLUS LARGE DE LA FICHE DANS LA BORNE CORRESPONDANTE DE LA PRISE ET POUSSER JUSQU'AU FOND. NOTE TO CABLE/TV SYSTEM

INSTALLER: This reminder is provided to call the cable TV system installer's attention to Article 820-40 of the National Electric Code (U.S.A.). The code provides guidelines for proper grounding and, in particular, specifies that the cable ground shall be connected to the grounding system of the building, as close to the point of the cable entry as practical. REGULATORY INFORMATION: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures: · Reorient or relocate the receiving antenna. · Increase the separation between the equipment and receiver. · Connect the equipment into an outlet on a circuit different from that to which the receiver is connected. · Consult the dealer or an experienced radio/TV technician for help.

CAUTION: Do not attempt to modify this product in any way without written authorization from Zenith Electronics Corporation. Unauthorized modification could void the user's authority to operate this product. **I N S T A L L A T I O N G E T T I N G S T A R T E D PAGE 3** Hook-Up Directory **IMPORTANT!!** Use this page to decide where you need to begin your Setup. First, find the line below that best describes what you want to do, then go to that page number. This page will direct you to which page to go to for proper hook-up of your Entertainment Machine.

Antenna only If you are using an antenna and no other equipment, go to

. page 4 Cable only Cable TV wall jack If you have cable and no other equipment, go to

.
.
.

. . . page 5 In Out Cable box Antenna with VCR If you are using an antenna and have a VCR, go to

.
.

. page 6 Cable and VCR If you have cable and a VCR, go to

.
.
.
.

@@@@@@Do not plug it into a switched outlet. Your Entertainment Machine is designed to operate on household current, 120-volt 60 Hertz AC do not attempt to operate it on DC Current. 300/75 ohm Adapter Antenna to TV Coaxial wire Antenna TV back 5 Go to page 8 to Auto Program your Entertainment

Machine. If you have a 75 ohm RF cable, then you don't need any adapters! Remember, when screwing RF cables onto jacks, clockwise tightens, and counterclockwise loosens. A 300 to 75 ohm adapter is not included with your Entertainment Machine. RF coaxial wire (75ohm) TV back panel (expanded view) Audio In Video Antenna Cable Mini glossary 75 OHM RF CABLE The wire that comes from an off-air antenna or cable service provider. Each end looks like a hex shaped nut with a wire sticking through the middle, and it screws onto the threaded jack on the back of your TV. A small device that connects a two-wire 300 ohm antenna to a 75 ohm RF jack. They are usually about an inch long with two screws on one end and a round opening with a wire sticking out on the other end. 300 TO 75 OHM ADAPTER 206-3370-A I N S T A L L A T I O N S T A N D A R D PAGE 5 Hook Up Your Cable (CATV) to the TV 1 2

Locate the Antenna/Cable jack on the back of your Entertainment Machine.

@@Remove the back of the remote and put in two AA batteries. Cable to TV Connect cable to your Entertainment Machine. Cable TV wall jack TV back 3 back of remote RF coaxial wire (75ohm) TV back panel (expanded view) Audio In Video 4 Plug in your TV. Do not plug it into a switched outlet. Your Entertainment Machine is designed to operate on household current, 120-volt 60 Hertz AC do not attempt to operate it on DC Current.

Antenna Cable Cable TV wall jack Cable with Cable Box to TV 5 Go to page 8 to Auto Program your Entertainment Machine. If you're using a cable box, leave your TV on channel 3 or 4 and use your cable box to change channels. Remember, when screwing RF cables onto jacks, clockwise tightens, and counterclockwise loosens. @@@@Do not plug it into a switched outlet. @@No A/V cables are included with your Entertainment Machine.

@@@@@@Do not plug it into a switched outlet. @@Remember, when screwing in RF cables onto jacks, clockwise tightens, and counterclockwise loosens. No A/V cables are included with your Zenith Entertainment Machine. Without A/V cables, most VCRs will not play videocassettes in stereo sound. VCR back AV panel output In switch 3 4 Out Video Audio TV back RF coaxial wire (75 ohm) not included with TV TV back panel (expanded view) Audio In Video A/V cables not included with TV Antenna Cable 206-3370-A PAGE 8 I N S T A L L A T I O N Q U I C K S T A R T Use Auto Program to automatically find and store all the stations available in your area. Auto Program 1 2 3 4 5 6 7 With the remote control in hand, press the POWER key to turn on your Entertainment Machine. Press the MENU key so the Setup menu appears. Using the UP/DOWN arrows on the remote control, select Auto Program on your screen. Press a RIGHT or LEFT arrow to reach the Auto Program screen. Using the UP/DOWN arrows, choose either Cable TV or Off-air Antenna on your screen.

Press a RIGHT or LEFT arrow to begin Auto Program. Press ENTER to return to TV viewing. POWER 1 TIM ER FLSHB K MUTE VO LUM E CHAN NEL 1 2 3 4 5 6 7 8 9 0 ENTER 7 MENU 2 3/5 ADJ SELECT ADJ 4/6 Mini glossary AUTO PROGRAM Auto Program is how your Entertainment Machine finds all the channels available in your area and stores them into memory. 206-3370-A I N S T A L L A T I O N Q U I C K S T A R T PAGE 9 The Buttons on Your Remote A quick list of all the buttons on your remote and what they do. FLSHB ER Power Turns controlled device on and off. CC Selects closed captions. POWER K MUTE TIM Mute Turns sound off and on. Timer Displays Sleep Timer menu. See "Timer Setup" on page 17 for more information. VO LUM E CHAN NEL Flashback Returns to last channel viewed.

1 2 3 Volume Adjusts the sound on your Entertainment Machine. 4 5 6 Channel Cycles through available channels.

[You're reading an excerpt. Click here to read official ZENITH](#)



[A25A11D user guide](#)

<http://yourpdfguides.com/dref/340895>

7 8 9 0 ENTER Number Key Pad Use for direct channel entry or for on-screen programming. MENU Enter Displays current TV channel and time, removes on-screen menus. Press after channel numbers for instant selection.

Select Up/Down Arrows Selects on screen menu options. Menu Displays on-screen menus available. ADJ ADJ SELECT Adj Left/Right Arrows Adjust on-screen menu options. remote control part number SC3492 206-3370-A PAGE 10 O P E R A T I O N B U T T O N F U N C T I O N S How to use your six-button panel to operate the menus. Fro input.

If you used an RF coaxial cable in step 3, then tune the "next device" to match the output channel of your tuner (usually channel 3 or 4). Repeat steps 3 and 4 until you reach your Entertainment Machine. Then enjoy! 3 4 5 Mini glossary TUNER A/V CABLES A/V DEVICE The television, VCR, or cable box that you choose to change channels with. Audio/Video cables. Three cables bunched together--right audio (red), left audio (white), and video (yellow). Any device that produces video or sound (VCR, DVD, cable box, or television). DESCRAMBLE Programs are often broadcast scrambled. Your cable box sorts out the channels you pay for. 206-3370-A O P E R A T I O N MENUS PAGE 13 Setup Menu Descriptions of the menu options found in the Setup menu. Function What it does Go to page Setup Menu Auto Program Automatically finds and stores active channels to flip through using Channel Up/Down.

Manually pick and choose which active channels will appear when flipping through using Channel Up/Down. Sets the current time on your Entertainment Machine. @@ · Selects an automatic On Time for your Entertainment Machine. · Selects an automatic Off Time for shut-down. · On/Off timer controls automatic pn the power off and pull out the plug before you begin any cleaning. Caring for your Entertainment Machine. Screen Cleaning 1. Here's a great way to keep the dust off your screen for a while. Wet a soft cloth in a mixture of lukewarm water and a little fabric softener or dish washing detergent. Wring the cloth until it's almost dry, and then use it to wipe the screen.

2. @@ Cabinet Cleaning 1. @@2. Rinse the cloth and wipe the cabinet again. 3.

Let the cabinet air-dry before turning the Entertainment Machine on. Wood Cabinet Use a quality wood cleaner and polish. @@@@Interference: Sharp lines across the screen and lousy sound. @@Or shut one of them off. · Check volume control.

· Make sure the TV is not Muted. · Try another channel. The problem may be the broadcast, not your Entertainment Machine. · Are the Audio A/V cables properly installed? @@@@ · Check that all connections are tight. · Is the AC power plugged in? · Check that your AC power outlet works. @@ · Try another channel. @@ · Check the color control in the Video menu. · Try another channel. The problem may be with the broadcast. · The CC (closed caption) option may be in Text mode.

Select OFF in the Captions/Text menu (see page 16). · Your program is in letterbox. @@Think of the bars as empty space the program doesn't fill; not picture that's blocked out. Because this format is a direct representation of film as you see it in the movies, you are actually seeing MORE of the program when you see those bars. Trust us. · Make sure the batteries are fresh and installed properly. · Check to see that the MBR (Multi Brand Remote available on some models) is in the right mode for your equipment. · Try unplugging the TV, waiting about five minutes, and then plugging it back in and trying again. Normal picture but no sound. No picture and lousy sound.

No picture and no sound No color, but the sound is O.K. Picture has a big black box on it, but the sound is O.K. Picture has two horizontal black bars, one on top and one on bottom.

Remote control doesn't work. Menu options won't change. 206-3370-A REFERENCE PAGE 23 Glossary A complete list of definitions for words found in this guide. 75 OHM RF CABLE The wire that comes from an off-air antenna or cable service provider. Each end looks like a hex shaped nut with a wire sticking through the middle.

It screws onto the threaded jack on the back of your TV. A small device that connects a two-wire 300 ohm antenna to a 75 ohm RF jack. They are usually about an inch long with two screws on one end and a round opening with a wire sticking out on the other end. Audio/Video cables. Three cables bunched together--Right audio(red), Left audio (white), and Video (yellow). @@@@The physical receiver of television signals sent over the air. @@Auto Program has your Entertainment Machine automatically find all the channels available in your area. This function lets you remove channels that you don't watch from the list you'll scroll through using your remote. Refers to the jack that receives a signal from a TV, VCR or other A/V device. A connection on the back of a TV, VCR, or any other A/V device.

Mono (monaural) sound is one channel of sound. On more than one speaker, all the speakers play the same audio. Refers to the jack that sends a signal out of a VCR, DVD, or other A/V device. 300 TO 75 OHM ADAPTER A/V CABLES ADD ANTENNA AUTO PROGRAM DELETE INPUT JACK MONO SOUND OUTPUT SECOND AUDIO Second Audio Programming (SAP) is another, separate, audio channel PROGRAMMING/SAP available with some programming. Choosing SAP often refers to listening to audio in another language, such as Spanish or French. SIGNAL Picture and sound traveling through cable, or on the air, to your television screen. Stereo (Stereophonic) sound refers to audio that's divided into right and left sides. Device that picks up the signal and turns them into picture and sound. STEREO SOUND TUNER 206-3370-A PAGE 24 REFERENCE INDEX Find what you want quickly. Index FEATURE PAGE Antenna .

.....
.....
.....
.....
.....
.....
.....
.....
.....
4, 6 Audio Mode.....
.....
.....
.....
.....
.....

..... 18 Auto Program .

.....
.....
.....
.....
.....
.....

..... 8 Basic Television Operation . .

.....
.....
.....
.....
.....

... 11, 12 Button Functions

.....
.....
.....
.....
.....
.....

9 Cable

.....
.....
.....
.....
.....
.....

... 5, 7 Captions and Text Menu

.....
.....
.....
.....

... 17 Ch. Add/Del .

.....
.....
.....
.....
.....

... 14 Clock Set . .

.....
.....
.....
.....
.....
.....

.... 15 Front Panel Diagram .

.....
.....

.....
.....
.....
.....

..... 10 Glossary ...

.....
.....
.....

.....
.....
.....
.....

..... 23 Hook-Up Directory .

.....
.....
.....

.....
.....
.....
.....

.... 3 Language Menu

.....
.....
.....

.....
.....
.....
.....

. 19 Maintenance .



[You're reading an excerpt. Click here to read official ZENITH A25A11D user guide](http://yourpdfguides.com/dref/340895)
<http://yourpdfguides.com/dref/340895>

.....
.....
.....
.....

.....
.....
.....
.....

21 Safety Information

.....
.....
.....

.....
.....
.....

2 Setup Menu

.....
.....
.....
.....

.....
.....
.....

13 Timer

.....
.....
.....
.....

.....
.....
.....

17 Troubleshooting

.....
.....
.....
.....

.....
.....
.....

22 VCR

.....
.....
.....
.....

.....
.....
.....

6, 7 Video Menu

.....
.....
.....
.....

.....
.....

.....
..... 20 Warranty ..

.....
.....
.....
.....

.....
.....
.....
.....

26 206-3370-A.



[You're reading an excerpt. Click here to read official ZENITH
A25A11D user guide](http://yourpdfguides.com/dref/340895)

<http://yourpdfguides.com/dref/340895>