



Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for ZENITH A27A23W. You'll find the answers to all your questions on the ZENITH A27A23W in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual ZENITH A27A23W
User guide ZENITH A27A23W
Operating instructions ZENITH A27A23W
Instructions for use ZENITH A27A23W
Instruction manual ZENITH A27A23W



operating guide / warranty



[You're reading an excerpt. Click here to read official ZENITH A27A23W user guide](http://yourpdfguides.com/dref/340901)
<http://yourpdfguides.com/dref/340901>

Manual abstract:

REFER TO QUALIFIED SERVICE PERSONNEL. @@@@POWER CORD POLARIZATION: CAUTION: To Prevent Electric Shock, Match wide blade of plug to wide slot, fully insert. ATTENTION: Pour éviter les chocs électriques, introduire la lame la plus large de la fiche dans la borne correspondante de la prise et pousser jusqu'au fond. NOTE TO CABLE/TV INSTALLER: This reminder is provided to call the cable TV system installer's attention to Article 820-40 of the National Electric Code (U.S.A.). The code provides guidelines for proper grounding and, in particular, specifies that the cable ground shall be connected to the grounding system of the building, as close to the point of the cable entry as practical. REGULATORY INFORMATION: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a residential installation.

@@@@@· Increase the separation between the equipment and receiver. @@· Consult the dealer or an experienced radio/TV technician for help. CAUTION: Do not attempt to modify this product in any way without written authorization from Zenith Electronics Corporation. Unauthorized modification could void the user's authority to operate this product. I N S T A L L A T I O N G E T T I N G S T A R T E D PAGE 3 Hook-Up Directory IMPORTANT Use this page to decide where you need to begin your setup.

First, find the setup option below that best describes what you want to do, then go to that page number. This page will direct you to which page to go to for proper hook-up of your Entertainment Machine. Antenna only If you are using an antenna and no other equipment, go to . . .

. page 4 Cable only Cable TV wall jack If you have cable and no other equipment, go to

page 5 In Out Cable box Antenna with VCR If you are using an antenna and have a VCR, go to

. . . page 6 Cable and VCR If you have cable and a VCR, go to

. page 7 Cable TV wall jack In Out Cable box 3373-O PAGE 4 I N S T A L L A T I O N S T A N D A R D Hook Up Your Antenna to the TV Connect an off-air antenna to your Entertainment Machine. 1 2 Hook up your Entertainment Machine. Remove the back of the remote and insert two AAA batteries.

Antenna TV back back of remote Flat wire (300 ohm) Antenna /Cable Variable Audio Out R L 3 Plug in your TV into a standard 120V, 60 Hz power outlet. Do not plug it into a switched outlet. S-Video Video TV back panel (expanded view) R-Audio L/Mono 300/75 ohm Adapter 4 Go to page 11 to Auto Program your Entertainment Machine. If you have a 75 ohm RF cable, then you don't need any adapters! Remember, when screwing RF cables into jacks, clockwise tightens, and counterclockwise loosens. Antenna TV back RF coaxial wire (75ohm) Antenna /Cable Variable Audio Out R L A 300 to 75 ohm adapter is not included with your Zenith Entertainment Machine, but can be purchased in most consumer electronics stores. S-Video Video R-Audio L/Mono TV back panel (expanded view) Mini glossary 75 OHM RF CABLE The wire that comes from an off-air antenna or cable service provider. Each end looks like a hex shaped nut with a wire sticking through the middle, and it screws onto the threaded jack on the back of your TV. A small device that connects a two-wire 300 ohm antenna to a 75 ohm RF jack. They are usually about an inch long with two screws on one end and a round opening with a wire sticking out on the other end.

300 TO 75 OHM ADAPTER 3373-O I N S T A L L A T I O N S T A N D A R D PAGE 5 Hook Up Your Cable (CATV) to the TV Connect cable to your Entertainment Machine.

Cable TV wall jack TV back 1 2 Hook up your Entertainment Machine. Remove the back of the remote and insert two AAA batteries. back of remote Antenna /Cable Variable Audio Out R L 3 Plug in your TV into a standard 120V, 60 Hz power outlet. Do not plug it into a switched outlet. RF coaxial wire (75ohm) S-Video Video Cable TV wall jack R-Audio L/Mono TV back panel (expanded view) 4 Go to page 11 to Auto Program your Entertainment Machine.

If you're using a cable box, leave your TV on channel 3 or 4 and use your cable box to change channels. Remember, when screwing RF cables into jacks, clockwise tightens, and counterclockwise loosens. If you're using a cable box, Auto Program might only find the channel your cable service is on (usually channel 3 or 4). Don't worry, that's all you need! In Out Cable box output switch 3 4 TV back Antenna /Cable Variable Audio Out R L RF coaxial wire (75ohm) S-Video Video R-Audio L/Mono TV back panel (expanded view) Mini glossary CABLE SERVICE The wire that supplies all your cable TV (CATV) stations. 3373-O PAGE 6 I N S T A L L A T I O N S T A N D A R D Hook Up Your Antenna and VCR to TV Connect an off-air antenna and VCR to your Entertainment Machine.

Antenna 1 2 Hook up your Entertainment Machine. Remove the back of the remote and insert two AAA batteries. Flat wire (300 ohm) VCR back VCR back AV panel 300/75 ohm Adapter back of remote In Out L Output Audio Video R output switch 3 4 TV back 3 Plug in your TV into a standard 120V, 60 Hz power outlet. Do not plug it into a switched outlet. Antenna /Cable Variable Audio Out R L RF coaxial wire (75ohm) not included with TV S-Video Video R-Audio L/Mono TV back panel (expanded view) A/V cables not included with TV 4 Go to page 11 to Auto Program your Entertainment Machine. Remember, when screwing RF cables into jacks, clockwise tightens, and counterclockwise loosens. No A/V cables are included with your Zenith Entertainment Machine, but can be purchased in most consumer electronics stores. Without A/V cables, most VCRs will not play videocassettes in stereo sound. VCR back Antenna VCR back AV panel In Out L output switch 3 4 Round wire (75ohm) Output Audio Video R TV back RF coaxial wire (75ohm) not included with TV Antenna /Cable Variable Audio Out R L S-Video Video R-Audio L/Mono TV back panel (expanded view) A/V cables not included 3373-O I N S T A L L A T I O N S T A N D A R D PAGE 7 Hook Up Your VCR and Cable (CATV) Cable TV wall jack VCR back 1 2 Hook up your Entertainment Machine. Round wire (75 ohm) Connect your VCR and Cable to your Entertainment Machine.

VCR back AV panel In Out L output switch 3 4 Remove the back of the remote and insert two AAA batteries. Output Audio Video R back of remote TV back RF coaxial wire (75 ohm) not included with TV 3 Plug in your TV into a standard 120V, 60 Hz power outlet.

[You're reading an excerpt. Click here to read official ZENITH](#)



[A27A23W user guide](#)

<http://yourpdfguides.com/dref/340901>

Do not plug it into a switched outlet. Antenna /Cable Variable Audio Out R L S-Video Video R-Audio L/Mono TV back panel (expanded view) A/V cables not included with TV 4 Go to page 11 to Auto Program your Entertainment Machine. Cable TV wall jack Leave your VCR and your television tuned to channel 3 and use the cable box to change channels. Remember, when screwing in RF cables into jacks, clockwise tightens, and counterclockwise loosens. No A/V cables are included with your Zenith Entertainment Machine, but can be purchased in most consumer electronics stores. Without A/V cables, most VCRs will not play videocassettes in stereo sound. In Out Cable box output switch 3 4 VCR back VCR back AV panel Round wire (75 ohm) In Out L output switch 3 4 Output Audio Video R TV back RF coaxial wire (75 ohm) not included with TV Antenna /Cable Variable Audio Out R L S-Video Video R-Audio L/Mono TV back panel (expanded view) A/V cables not included with TV 3373-O PAGE 8 I N S T A L L A T I O N C U S T O M Connecting an S-VHS player to your Entertainment Machine. Hook Up Your TV to a Super VHS VCR 1 Locate the S-Video Out to TV jack on the back of your S-VHS VCR.

Connect the S-VHS cable directly to this jack. Connect this cable from the Out to TV jack to the S-Video jack on the back of your TV. Find the audio and S-Video jacks on the back of your S-VHS player, and connect them following the instructions provided with your equipment. VCR back 2 3 VCR back AV panel output switch 3 4 S-Video cable S-Video Out Audio Out not included RL with TV TV back Antenna /Cable Variable Audio Out R L S-Video Video R-Audio L/Mono TV back panel (expanded view) A/V cables not included with TV No S-Video cables are included with your Zenith Entertainment Machine, but can be purchased in most consumer electronics stores..

Without an S-Video cable, you will not receive the Super VHS quality picture. 3373-O I N S T A L L A T I O N C U S T O M PAGE 9 Hook Up Your TV to Stereo Amplifier For added audio depth and clarity, you can connect your Entertainment Machine to a stereo amplifier! Stereo back Connecting your Entertainment Machine to a stereo amplifier. Stereo Amplifier back panel Audio Input 1 Locate the Left/Right Audio Input jacks on the back of your stereo amplifier. Connect the Audio cables directly to these jacks. Connect these cables from the Left/Right Variable Audio Input jacks to the corresponding Left/Right Audio Out jacks on the back of your TV.

R L TV back 2 Antenna /Cable Variable Audio Out R L TV back panel (expanded view) S-Video Video R-Audio L/Mono A/V cables not included with TV No Audio cables are included with your Zenith Entertainment Machine, but can be purchased in most consumer electronics stores. 3373-O PAGE 10 O P E R A T I O N B U T T O N F U N C T I O N S A quick list of all the buttons on your remote and what they do. Remote Control Button Functions PRG(PROGRAM) Used to begin programming procedure. PRG POWER FLASHBK(FLASHBACK) Return to the last channel viewed. SURF Activates custom channel select mode on your Entertainment Machine. When Surf mode is active, CHANNEL UP/DOWN keys "Surf" through the channels you've selected. VOLUME (LEFT/RIGHT ARROWS) Adjusts the sound level on your Entertainment Machine. MENU Displays on-screen menus. Press repeatedly to cycle through other menus. POWER Turns TV On and Off.

(MODES) CABLE/VCR/AUX/TV Selects mode of operation for Remote Control MUTE Turns sound down (Soft) or off (Mute) while the picture remains. CHANNEL (UP/DOWN) Cycles through available channels. NUMBER KEY PAD Key-in numbers for direct channel tuning. ENTER Shows the Channel/Time display. Press after channel numbers forl have to use the Channel Up/Down buttons to access it. The Time/Channel display will read "Video" in place of a channel number. Cable/Antenna Input: This setting allows you to change cable or antenna channels and to view videocassettes on channel 3 (or 4) in mono sound. Video Input: This setting allows stereo playback of videocassettes. The television cannot change channels in the Video mode, but the VCR can. DEC/11/98 CH 12-FOX 10:55 STEREO Channel or Video (Indicates Source) Time Audio Mode Date To view the current input source, press ENTER on your remote.

The Time/Channel display should appear in the upper right-hand corner of the screen. If the display reads 'Video,' then the source is an A/V input. If the display reads a channel number, then the source is your Cable or Antenna. This is an example of the Time/Channel display that appears in the top right and left corners of your screen. Channel Changing CHANNEL UP/DOWN arrows: Use these arrows to change the channels.

Auto Program will have found all channels available to you. NUMBER Key Pad: To skip to any channel, enter the number of the channel using the NUMBER key pad, then press ENTER. FLASHBACK: To iy. A U D I O M E N U Customize the sound to suit your room and your taste. Your options are: Bass, Treble, Balance, Audio Mode, Front Surround, SoundRite, Speakers.

VIDEO MENU Adjust your picture for any viewing situation. Your options are: Contrast, Brightness, Color, Tint, Sharpness, Color Temp, Picture Preference.

Choose from the available sources for the main picture. 25 26 SOURCE MENU 27 3373-O PAGE 16 SETUP MENUS Customize your channel selection. Setting Add/Del/Surf 1 2 3 4 Press the menu button. Select the Add/Del/Surf menu (on your TV screen) using the Up/Down select arrows. Using either the number pad or the CHANNEL UP/DOWN arrows on the remote, select a channel. Using the RIGHT/LEFT select arrows, pick whether that channel is Added, Deleted, or on the Surf list. To continue, select another channel. If you are finished, press ENTER or QUIT to return to TV viewing.

PRG POWER CABLE VCR AUX TV SURF FLASHBK MUTE 3 VOLUME CHANNEL VOLUME CHANNEL 5 1 4 7 0 2 5 8 ENTER 3 6 9 5 QUIT 2 The menu will disappear after five seconds if no buttons are pressed. To get it back, press menu again. If you delete a channel, it isn't gone for good. Just select the channel again using the number keypad on the remote, or add it later. Once Auto Program has been activated, CHANNEL UP/DOWN will only cycle through selected channels. 1 MENU 4 A B PAUSE C CC TV/VCR SOURCE RECORD TIMER PLAY REWIND STOP FFWD Mini glossary ADD DELETE SURF This function lets you add new channels to the list that you'll scroll through when using your remote. This function lets you remove channels that you don't watch from the list you'll scroll through. The surf function creates a special list of your favorite channels. You can access this group of channels by pushing the surf button on the remote. 3373-O SETUP MENUS PAGE 17 Clock Set 1 2 3 4 5 6 7 8 9 10 11 Press the MENU key on the remote control so the Setup menu appears.



[You're reading an excerpt. Click here to read official ZENITH](http://yourpdfguides.com/dref/340901)

[A27A23W user guide](http://yourpdfguides.com/dref/340901)

<http://yourpdfguides.com/dref/340901>

Using the UP/DOWN arrows on the remote control, select Clock Set on your screen. Press a RIGHT or LEFT arrow to access the Clock Menu. PRG POWER Set the clock and date on your Zenith Entertainment Machine. CABLE VCR AUX TV SURF FLASHBK MUTE CHANNEL Using the UP/DOWN arrows, select Time Set. Press a RIGHT or LEFT arrow key to adjust the time.

Press the TIMER button to select AM or PM. Once you have set the correct time, press ENTER exit the Time Set mode. Now press an UP/DOWN arrow key to select Date Set. Using the LEFT or RIGHT arrows, SELECT the Month, Date or Year. Use the UP/DOWN arrow keys to SET either Month, Date, or Year. Press ENTER or QUIT to return to TV viewing. VOLUME VOLUME CHANNEL 1 4 7 0 2 5 8 ENTER 3 6 9 7/11 QUIT 2/4/8/10 1 MENU 3/5/9 A B PAUSE C CC TV/VCR SOURCE RECORD TIMER PLAY 6 REWIND STOP FFWD You can use the NUMBER key pad to simply type in the time and date (AM and PM are still selected with the Timer key). 3373-O PAGE 18 SETUP MENUS Turn on closed captioning that appears at the bottom of your screen. Caption 1 2 3 Press the MENU key on the remote control so the Setup menu appears. Using the UP/DOWN arrows on the remote control, select Caption on your screen. Press a RIGHT/LEFT arrow to choose any of the following options: On, Caption When Muted, or Off. Press ENTER or QUIT to return to TV viewing. PRG POWER CABLE VCR AUX TV SURF FLASHBK MUTE CHANNEL VOLUME VOLUME CHANNEL 4 1 4 Captions come in handy when the television is on Mute or Soft. 2 5 8 ENTER 3 6 9 7 0 1 4 2 QUIT MENU 3 B PAUSE C A CC TV/VCR SOURCE RECORD TIMER PLAY REWIND STOP FFWD 3373-O SETUP MENUS PAGE 19 Caption/Text Caption/Text is a feature which allows your Entertainment Machine to receive various closed caption and text options provided by your broadcaster. Availability and functionality of Caption/Text feature is determined only by your broadcaster and may not be available in your area.

PRG POWER Turn on closed captioning or text that appears on your screen. CABLE VCR AUX TV 1 2 3 Press the MENU key on the remote control so the Setup menu appears. Using the UP/DOWN arrows on the remote control, select Caption/Text on your screen. Press a RIGHT/LEFT arrow to choose any of the following options: Caption 1, Caption 2, Caption 3, Caption 4, Text 1, Text 2, Text 3 or Text 4. Press ENTER or QUIT to return to TV viewing. SURF FLASHBK MUTE CHANNEL VOLUME VOLUME CHANNEL 1 4 7 0 2 5 8 ENTER 3 6 9 4 1 Standard closed captioning is available using the Caption 1 option. Not all programming has closed captioning or text available. 4 2 QUIT MENU 3 B PAUSE C A CC TV/VCR SOURCE RECORD TIMER PLAY REWIND STOP FFWD 3373-O PAGE 20 SETUP MENUS Choose the language you want all the menus to appear in. Language Options 1 2 3 Press the MENU key on the remote control so the Setup menu appears. @@@@Press a RIGHT/LEFT arrow.

The Timer Menu screen will appear. @@@@Press the LEFT or RIGHT arrow to turn on the On/Off Timer. @@@@Using the UP/DOWN select arrows on the remote control, select Ch. Labels on your screen. @@Choose another channel to label using the process described in steps 1 and 4, or press ENTER or QUIT to return to TV viewing.

PRG POWER VCR CABLE AUX TV MUTE SURF FLASHBK CHANNEL VOLUME CHANNEL VOLUME 1 1 4 7 0 2 5 8 ENTER 3 6 9 2 5 3 QUIT MENU 4 A B PAUSE C TIMER PLAY CC TV/VCR SOURCE RECORD REWIND STOP FFWD 3373-O MENUS S P E C I A L F E AT U R E S PAGE 23 Parental Controls 1 2 3 4 @@Using the UP/DOWN arrows, select Parental Ctl. Press the RIGHT/LEFT arrows and the Parental Ctl. @@Press the RIGHT/LEFT arrows to block or unblock the channel. @@@@Password: Press the DOWN arrow to select Password. Enter a four digit code using the NUMBER key pad on your remote.

Enter it again to confirm password. @@Use the RIGHT/LEFT arrows to turn parental control on or off. @@The Lockout time will always reset itself when the TV is plugged in. Remember your password! @@@@Turn Auto Demo on or off using the RIGHT/LEFT adjust arrows. @@It will even attempt to show you what it does. @@@@Choose from: · Bass: Increases/decreases lower-end sounds. · Treble: Increases/decreases higher-end sounds. @@@@Mono (monaural) sound is one channel of sound. On more than one speaker all the speakers play the same audio. @@@@The more contrast, the brighter the picture appears.

· Brightness: Increases or decreases the amount of white in the TV picture. · Color: Adjusts levels of all colors in the TV picture. · Tint: Balances between amounts of red and green in the TV picture. · Sharpness: Raises or lowers the definition of the TV picture. The lower the level, the softer the images will appear. · Color Temp: Adjust the color qualities of the entire picture at once: Cool or Warm. · Picture Preference: Choose either Custom or Preset. Custom allows you to set the picture the way you want. Preset moves all the above options back to their original levels. PRG POWER VCR CABLE AUX TV MUTE SURF FLASHBK CHANNEL VOLUME CHANNEL VOLUME 1 4 7 0 2 5 8 ENTER 3 6 9 4 QUIT 2/5 1 MENU A 3/6 B C TIMER PLAY CC TV/VCR SOURCE RECORD PAUSE 2 3 4 Using the UP/DOWN arrows on the remote control, select Contrast on your screen.

Using the RIGHT/LEFT arrows, adjust the contrast level to your preference. Press ENTER, QUIT or MENU one more time to return to TV viewing, or repeat from step four to set the other menu options. Using the UP/DOWN arrows, select Picture Preference on your screen. Using the RIGHT/LEFT arrows, choose either the original settings with Preset, or use your own settings with Custom. Just choose the Preset option in Picture Preference to quickly reset the levels. REWIND STOP FFWD 5 6 3373-O MENUS SOURCE MENUS PAGE 27 Source Menu Select the signal source for your Entertainment Machine. PRG 1 2 3 Press the MENU key on the remote control repeatedly so the Source menu appears. Using the UP/DOWN arrows on the remote control, select Main Source on your screen. Press a RIGHT or LEFT arrow to choose one of the following options: "Antenna/Cable" or "Video or S-VHS". Press ENTER or QUIT to return to TV viewing.

POWER CABLE VCR AUX TV SURF FLASHBK MUTE CHANNEL VOLUME VOLUME CHANNEL 4 1 4 7 0 2 5 8 ENTER 3 6 9 4 QUIT 2 1 MENU 3 A B PAUSE C CC TV/VCR SOURCE RECORD TIMER PLAY REWIND STOP FFWD 3373-O PAGE 28 O P E R A T I O N R E M O T E F U N C T I O N S Program your remote to work with a vast range of A/V devices.



[You're reading an excerpt. Click here to read official ZENITH](#)

[A27A23W user guide](#)

<http://yourpdfguides.com/dref/340901>

Programming the Remote 1 2 The device you want to program should be ON. On the chart in this manual, find the type of device you're programming and then find the brand name. Make a note of the threedigit code--you'll need it soon. Press and hold the PRG key. It's recessed so it doesn't get pushed accidentally. When the indicator light turns on, you can release the button. Push the button with the name of the device you're programming (VCR, CABLE, AUX, TV). Using the number pad, enter the three digit code found on the chart in the Reference section. Press ENTER to save the code The indicator light will flash three times and turn off if the code was accepted.

. Aim the remote at the device and push the POWER button. It should turn off. If not, try the other codes listed and continue from step three. 3 Indicator Light PRG POWER 7 4 CABLE VCR AUX TV SURF FLASHBK MUTE CHANNEL VOLUME VOLUME 3 CHANNEL 4 5 6 5 1 4 7 0 2 5 8 ENTER 3 6 9 6 QUIT MENU A B PAUSE 7 C CC TV/VCR SOURCE RECORD TIMER PLAY REWIND STOP FFWD Programming your Zenith remote will allow you to use one remote to work up to 7 different devices! Not all devices will work with your Zenith remote control. 3373-O P E R A T I O N R E M O T E F U N C T I O N S PAGE 29 Amplifier Volume Override 1 Program the code that operates your amplifier into the CABLE or AUX mode, as described on the "Programming Your Remote" page. Select the mode in which you want volume to appear (e.g. TV). Press and hold PRG on your remote until the indicator light stays lit. Press 4-9-9; then ENTER on the remote. The indicator light will flash three times if code is accepted. Audio system volume/mute now appears in the mode selected. 4 Indicator Light PRG POWER Control the volume on your sound amplifier without leaving TV mode. CABLE VCR AUX TV 2 3 4 2 3 SURF FLASHBK MUTE CHANNEL VOLUME VOLUME CHANNEL 1 4 7 0 2 5 8 ENTER 3 6 9 5 5 MENU QUIT A B PAUSE C CC TV/VCR SOURCE RECORD TIMER PLAY Your volume and mute keys now control your amplifier, while all the other keys still operate the Entertainment Machine.

To put everything back to normal, reprogram all buttons with their original codes (see the "Programming Your Remote" section). If you can't find the code for your amplifier, use the Auto Find feature. REWIND STOP FFWD Mini glossary AMPLIFIER An external machine that amplifies sound from a television, CD player, VCR, or other A/V device. 3373-O PAGE 30 O P E R A T I O N R E M O T E F U N C T I O N S Control up to seven different devices with your remote! AUX+1, AUX+2, AUX+3 1 2 3 4 5 6 7 Refer to the chart in this manual to find the type and brand name of the device you're programming. Press and hold the PRG key until the indicator light turns on.

@@Press Enter to save the code. Aim the remote at the device and press POWER. It should turn on. @@@@Press and hold the PRG key until the indicator light turns on. @@Aim the remote at the correct device and press the POWER button. Allow a second to pass, then push the POWER button again. Repeat until the device turns off. @@@@Press ENTER to display XDS data; if available. XDS Channel Labels XDS can provide a channel label automatically. For the programs to display an XDS channel label, select the dashes (- - -) for that channel from the Channel ID option in the Setup Menu.

Example of an XDS Data Display At this time, XDS data is only being provided by some broadcasters; it is only available on some channels. You must set the Clock in the Setup Menu before the time will appear on the Channel/Time Display or on the XDS display. Mini glossary BROADCASTER Channel or network providing the television program. 3373-O REFERENCE PROGRAMMING CODES PAGE 33 Programming Codes TVs Admiral

116 121 130 133 Adventura TV/VCR. 154 Akai

.
. 104 Amark 103 146 AOC .

. 104 Bell & Howell .

. . 121 Broksonic . . .

. . . 131 136 Candle . .

. 139 Centurion

. . 119 Citizen

121 139 Contec

. . . 141 Coronado . .

. . . . 103 Crown

. . 103 Curtis Mathes 116 119 121 Daewoo

. . . 149 159 Daewoo TV/VCR . .

148 Daytron

. . 119 Elektra

121 Emerson 103 104 123 124 131 136 145 Emerson TV/VCR . . 158 Fisher .

.
. . . 109 118 Funai TV/VCR . .

. . 154 General Electric . . 106 107 114 116 117 161 Goldstar

. 103 104 119 147 Goldstar TV/VCR . . 153 Hitachi

. 102 103 129 163 J.C. Penney . .

. . . 104 110 114 117 119 JVC . .

. 125 132 164 KMC . .

. 103 KTV . .

.

. . . 103 104 138 Kurazai . .

. 121 Lodgenet

. . . 121 Logik

. . 121 LXI . . .

.

.. 133 137 Magnavox 103 112 113 117 119 127 128 139 165 Magnavox TV/VCR . 173 Majestic .

. 121 Marantz
... 104 120 155 Megatron . .

.
146 Memorex 121 MGA/Mitsubishi . .

104 119 120 130 140 155 Montgomery Ward . 103 104 105 113 114 119 121 130 133 NEC

. 104 119 Panasonic

.. 106 107 160 166 Panasonic TV/VCR . 174 Philco . .

. 103 104 112 113 139 Philips . . .

. 112 113 Pioneer

. . . 135 Portland . .

.

103 ProScan 116 157 162 167 Quasar . . .

. 106 107 RCA

.

104 116 126 157 161 162 167 168 Realistic

.. 105 123 124 Sampo

119 Samsung 103 119 134 141 Sanyo . . .

.

. 108 109 118 Scott

. 119 124 Sears

. 103 108 109 110 111 118 134 Sharp

.. 103 105 122 133 137 156 169 Signature 2000 . .

. 103 104 105 113 114 119 121 130 133 Sony

. 115 143 151 170 Soundesign

139 Sylvania 112 113 117 119 127 128 139 Symphonic TV/VCR 154 Tatung . . .

.

106 Teknika

... 103 112 121 124 139 Telerent

103 121 Toshiba 110 111 134 171 XR 1000 . . .

. 121 Yorx .

.

. 119 Zenith

.. 101 149 175 Zenith TV/VCR . . . 153 154 172 Find the codes you need to program your remote. On this page: TVs and VCRs. VCRs Admiral . . .

. 208 261 Adventura .

.

231 Aiwa 231 Akai .

. 223 238 241 Audio Dynamics .

. 202 218 Bell & Howell

206 247 Broksonic

. 221 226 250 255 Canon 214 Citizen .

. 209 Craig . . .

.

. 212 Curtis Mathes . . . 214 259 Daewoo .

. 244 246 248 254 Daytron

. . . 236 246 DBX

. . . 202 218 Emerson . .

.

203 209 221 223 226 233 235 243 250 Fisher 211 212 213 247 Funai .

. 231 General Electric . .

214 216 220 Goldstar

. . 209 Go Video . . .

. 256 262 263 Hitachi

.. 215 257 *Instant Replay* . . . 214 227 *J.C. Penny* . . .
... 214 215 218 227 *JVC* . .
.....
... 202 224 225 258 *Kenwood*

202 *Logik* 239 *LXI* .
.....
... 209 231 *Magnavox* .
..... 207 214 231 *Marantz*

.. 207 218 *Marta*
. 209 *Memorex*
... 206 212 214 231 *Mitsubishi* . .
... 204 222 252 264 *Montgomery Ward* . 208 214 216 219 231 249 *Multi Tech*

. 239 *NEC*
. 202 218 *Orion*
.....
250 *Panasonic* 214 251 259 *Pentax*

... 215 *Philco* .



[You're reading an excerpt. Click here to read official ZENITH
A27A23W user guide
http://yourpdfguides.com/dref/340901](http://yourpdfguides.com/dref/340901)

.
 . . . 207 214 Philips

 . 207 214 227 Pioneer 210 215 Portland
 246 ProScan
 . . 216 260 Quasar

 214 259 RCA
 215 216 220 227 240 242 249 260 Realistic 206 208 212 214 231 Samsung
 220 230 238 Sansui

 . . 239 Sanyo
 206 212 247 Scott 204 205 233 243 Sears

 . . . 206 209 211 212 215 Sharp
 208 261 Shintom
 239 Signature 2000 . . . 208 214 216 219 231 249 Sony

 . 217 232 237 Sylvania
 . . . 207 214 227 Symphonic 231 Tashiko
 209 Tatung
 202 Teac

 202 231 Teknika
 . . . 209 234 Toshiba
 205 215 XR 1000
 . . 239 Vector Research . . 204 218 Yamaha
 202 218 Zenith
 201 224 225 229 237 3373-O PAGE 34 REFERENCE PROGRAMMING CODES Programming Codes Find the codes you need to program your
 remote. On this page: Cable, Satellite, Video Disc Players, CD Players and Tape Decks Cable Satellite Allegro
 358 362 Allegro A/B Switch 361 Gemini

 . . 305 331 338 General Electric . . 367 General Instrument 304 305 306 307 308 309 310 318 Hamlin
 302 303 345 365 366 Jerrold
 . 304 307 308 309 310 318 360 363 Kale Vision
 . 335 Macom
 314 321 Magnavox
 334 NSC
 335 339 368 369 370 Oak

 311 332 342 Panasonic 313 320 Paragon
 333 Philips
 . 347 350 352 354 355 Pioneer
 315 343 RCA DSS
 373 Regency
 . . . 329 Samsung
 335 Scientific Atlanta . 316 323 336 364 Sprucer
 313 Standard Comp
 . . 335 Stargate 379 Texscan
 339 356 371 Tocom
 317 318 346 Unika

 . . . 348 362 United Satellite . . 344 Universal

 . 358 362 Vid Tech 340 Video Way

. . . . 349 Viewstar .

 . 354 355 372 Zenith 301 353 374 Zenith Satellite .
 . 312 328 330 351 378 Video Disc Players Pioneer 402 403 Sanyo . .

 . . 401 Sony . . .
 404 Zenith
 401 Audio CD Players Akai
 409 424 Crown .

 . . . 410 Denon
 . 411 Fisher
 412 438 Goldstar
 . . 460 Harman/Kardon . . 413 JVC .
 415 Kenwood .
 412 416 417 441 Magnavox
 . 421 422 433 434 Mitsubishi
 . . 423 424 NAD . . .
 425 426 447 Nakamichi . . .
 . . . 427 428 NEC
 . . . 429 Onkyo . . .

 . 430 Panasonic 431 432 Philips . . .
 421 433 434 Pioneer
 . . . 431 435 Quasar . . .

 . 432 Radio Shack 431 436 439 440 441 RCA
 437 Sanyo

 438 439 Scott
 . . . 440 Sharp
 . . . 441 442 Sony
 . . . 443 444 445 Soundesign . . .
 . . . 461 498 501 502 Sylvania . . .
 433 Teac
 . . . 446 Technics
 . 432 459 Toshiba
 . . . 447 Yamaha
 448 Zenith
 460 461 498 501 502 Audio Tape Decks Denon
 . . . 455 Harman/Kardon . . .
 . 456 JVC
 457 Kenwood
 . . . 450 Onkyo
 . . 458 Philips DCC
 . . 454 Pioneer
 451 478 Sony
 452 Audio Tuners/Amps Denon
 . . . 462 463 Fisher

 . . . 464 Goldstar
 460 Harman/Kardon . . 465 JVC
 . . 466 Kenwood
 . . . 468 469 Marantz

..... 472 503 Onkyo

..... 473 Philips

.. 475 476 Pioneer ...

.....

477 478 479 Radio Shack 487 488 Realistic

.. 480 Sanyo

. 481 Scott

.....

482 Sharp 483 Sony.

..... 489 490 491 492 Soundesign .

.... 461 498 501 502 Teac .

.....

... 494 495 Technics

497 Yamaha 496 Zenith ...

.....

460 461 498 501 502 3373-O REFERENCE PROGRAMMING CODES PAGE 35 Zenith Product Codes TV Mode Zenith Code 101 TV On/Off Selects Cable Selects VCR Selects Aux Selects TV Surf On/Off TV Flashback TV Mute TV Channel Up TV Channel Dn TV Volume Up TV Volume Dn TV Digit 1 TV Digit 2 TV Digit 3 TV Digit 4 TV Digit 5 TV Digit 6 TV Digit 7 TV Digit 8 TV Digit 9 TV Digit 0 TV Enter TV Menu TV Select Up TV Select Dn TV Adjust Left TV Adjust Right TV Seq Sound TV PIP TV PIP Swap TV PIP Freeze TV Closed Captions TV Timer TV Sources VCR Record VCR Pause VCR Rewind VCR Play VCR Stop VCR Fast Forward KEY NAME POWER CABLE VCR AUX TV SURF FLASHBK MUTE CHANNEL UP CHANNEL DN VOLUME (RIGHT)

VOLUME (LEFT) 1 2 3 4 5 6 7 8 9 0 ENTER MENU UP ARROW DOWN ARROW LEFT ARROW RIGHT ARROW QUIT/ A B C CC TIMER

TV/VCR/SOURCE RECORD PAUSE REWIND PLAY STOP FFWD References: VCR Mode Zenith Code 201 VCR On/Off Selects Cable Selects VCR Selects AUX Selects TV VCR AM/PM VCR Flashback TV Mute VCR Channel Up VCR Channel Dn TV Volume Up TV Volume Dn VCR Digit 1 VCR Digit 2 VCR Digit 3 VCR Digit 4 VCR Digit 5 VCR Digit 6 VCR Digit 7 VCR Digit 8 VCR Digit 9 VCR Digit 0 VCR Enter VCR Menu VCR Select Up VCR Select Dn VCR Adjust Left VCR Adjust Right VCR Quit VCR+ VCR Channel Map VCR Search VCR Memory VCR Timer TV Tuner or VCR Tuner VCR Record VCR Pause VCR Rewind VCR Play VCR Stop VCR Fast Forward Cable Mode Zenith Code 353 Cable Box On/Off Selects Cable Selects VCR Selects Aux Selects TV Cable FC/Fav Ch Cable Flashback TV Mute Cable Channel Up Cable Channel Dn TV Volume Up TV Volume Dn Cable Digit 1 Cable Digit 2 Cable Digit 3 Cable Digit 4 Cable Digit 5 Cable Digit 6 Cable Digit 7 Cable Digit 8 Cable Digit 9 Cable Digit 0 Cable Enter Cable Menu Cable Up Arrow Cable Dn Arrow Cable Left Arrow Cable Right Arrow Cable Quit Day Up Day Down Cable Pg Up Cable Pg Down Cable Timer Cable Info Cable Buy Cable Guide VCR Rewind VCR Play VCR Stop VCR Fast Forward AUX Mode Zenith Code 401 AUX TV/Disc Selects Cable Selects VCR Selects AUX Selects TV AUX Audio AUX Frame/Time TV Mute AUX Skip >> AUX Skip << TV Volume Up TV Volume Dn AUX Digit 1 AUX Digit 2 AUX Digit 3 AUX Digit 4 AUX Digit 5 AUX Digit 6 AUX Digit 7 AUX Digit 8 AUX Digit 9 AUX Digit 0 Aux Display AUX Program AUX Part AUX Random AUX x3 FAST < AUX x3 FAST > AUX Clear AUX Repeat-Side AUX Repeat-A-B AUX Repeat-Chap AUX Memory AUX Still AUX TV/Disc AUX Edit AUX Pause AUX Scan << AUX Play AUX Stop/Eject AUX Scan >> A complete list of the button functions on your remote control. 124-212-37 and µP 221-952-02A Some of the functions shown above may not be available on your TV (such as PIP). 3373-O PAGE 36 REFERENCE MAINTENANCE Maintenance Caring for your Entertainment Machine.

Early malfunctions can be prevented. Careful and regular cleaning can extend the amount of time you will have with your new Entertainment Machine.

Be sure to turn the power off and pull out the plug before you begin any cleaning. Screen Cleaning 1. Here's a great way to keep the dust off your screen for a while. Wet a soft cloth in a mixture of lukewarm water and a little fabric softener or dish washing detergent. Wring the cloth until it's almost dry, and then use it to wipe the screen. 2. Make sure the excess water is off the screen, and then let it air-dry before you turn on your Entertainment Machine. Cabinet Cleaning 1. Use a soft cloth with a mild soap solution to wipe the cabinet (avoid using any cleaner that says "industrial strength" or "will wash the white off of rice" on the label). 2.

Rinse the cloth and wipe the cabinet again. 3. Let the cabinet air-dry before turning the Entertainment Machine on.



[You're reading an excerpt. Click here to read official ZENITH](#)

[A27A23W user guide](#)

<http://yourpdfguides.com/dref/340901>

Wood Cabinets Use a quality wood cleaner and polish. This will protect the Entertainment Machine from dirt and dust, as well as keep the cabinet looking new. Extended Absence If you leave your Entertainment Machine dormant for a long time (such as a vacation), it's a good idea to unplug the power to protect against possible damage from lightning or power surges. If you use an off-air antenna, you may also want to disconnect it from the back of your TV before leaving. If you unplug your Zenith Entertainment Machine, you may have to reset the clock using the Clock Set menu described earlier. 3373-O REFERENCE

MAINTENANCE PAGE 37 Troubleshooting Some quick and easy tips to fixing problems yourself. SYMPTOMS Snowy picture and lousy sound. SOLUTIONS · Check your antenna connection or location. Multiple images or 'ghost shadows.' · Check your antenna direction and/or location. · Make sure the wire from your antenna to your Entertainment Machine is properly connected. Interference: Sharp lines across the screen and lousy sound.

The following may cause image problems or distortion: Electrical appliances, powerful lights, cars, trucks; computers or portable phones; Medical equipment · If possible increase the distance between your Entertainment Machine and the offending appliance. Or shut one of them off. · Check volume control. · Make sure the TV is not Muted. · Try another channel.

The problem may be the broadcast, not your Entertainment Machine. · Are the Audio A/V cables properly installed? · Are the wires for external speakers (if you have external speakers) properly installed? · Are you in TV or Cable tuning mode (See Auto Program on page 11), and should be in the other? · Make sure output channels on all A/V equipment are on the same channel (3 or 4). · Check that all connections are tight. · Is the AC power plugged in? · Check that your AC power outlet works. (Test it by plugging in something else or try another plug.) · Make sure your brightness and audio controls are set properly. · Try another channel. The problem may be with the broadcast, not your Entertainment Machine. · Check the color control in the Video menu. · Try another channel.

The problem may be with the broadcast. · The CC (closed caption) option may be in Text mode. Select OFF in the Captions/Text menu. See page 16. · Your program is in letterbox. This means that the shape of your TV is square, but the program is a rectangle. Think of the bars as empty space the program doesn't fill; not picture that's blocked out. Because this format is a direct representation of film as you see it in the movies, you are actually seeing MORE of the program when you see those bars. Trust us. · Make sure the batteries are fresh and installed properly.

· Check to see that the MBR (Multi Brand Remote available on some models) is in the right mode for your equipment. · Try unplugging the TV, waiting about five minutes, and then plugging it back in and trying again. Normal picture but no sound. No picture and lousy sound. No picture and no sound -- The thing is just DEAD! No color, but the sound is O.

K. Picture has a big black box on it, but the sound is O.K. Picture has two horizontal black bars, one on top and one on bottom. Remote control doesn't work. Menu options won't change. If all else fails, call 1 (847) 391-8752, extension 5, between 8:30 a.m. and 4:30 p.m. Central Standard Time. 3373-O PAGE 38 REFERENCE Glossary A complete list of definitions for words found in this guide. 75 OHM RF CABLE The wire that comes from an off-air antenna or cable service provider. Each end looks like a hex shaped nut with a wire sticking through the middle. It screws onto the threaded jack on the back of your TV.

A small device that connects a two-wire 300 ohm antenna to a 75 ohm RF jack. They are usually about an inch long with two screws on one end and a round opening with a wire sticking out on the other end. Audio/Video cables. Three cables bunched together--right audio (red), left audio (white), and video (yellow). A/V cables are used for stereo playback of videocassettes and for higher quality picture and sound from other A/V devices. Any device that produces video or sound (VCR, cable box, or television). This function lets you add new channels to list that you'll scroll through when using your remote. An external machine that amplifies sound from a television, CD player, VCR, or other A/V device. The physical receiver of television signals sent over the air. A large metal piece of equipment does not always have to be visible for your home to be using an antenna.

Auto Program enables your Entertainment Machine to automatically find channels available in your area. Restrict or censor a channel for a set length of time. This function lets you remove channels that you don't watch from the list you'll scroll through using your remote. Refers to the jack that receives a signal from a TV, VCR or other A/V device. 300 TO 75 OHM ADAPTER A/V CABLES A/V DEVICE ADD AMPLIFIER ANTENNA AUTO PROGRAM all the BLOCK DELETE INPUT 3373-O REFERENCE PAGE 39 Glossary (cont'd) A complete list of definitions for words found in this guide.

JACK MONO SOUND A connection on the back of a TV, VCR, or any other A/V device. Mono (monaural) sound is one channel of sound. On more than one speaker, all the speakers play the same audio. Refers to the jack that sends a signal out of a VCR, or other A/V device. OUTPUT SECOND AUDIO Second Audio Programming (SAP) is another separate, audio channel PROGRAMMING/SAP available with some programming.

Choosing SAP often refers to listening to audio in another language, such as Spanish or French. SIGNAL Picture and sound traveling through cable, or on the air, to your television screen. Stereo (stereophonic) sound refers to audio that's divided into right and left sides. Device that picks up the signal and turns them into picture and sound. STEREO SOUND TUNER 3373-O PAGE 40 REFERENCE Index Find what you want quickly. FEATURE

.
.
.

.PAGE Amplifier Volume Override

.
.
.

. . .29 Antenna

.
.
.

.4, 6 Audio Menu

.
.
.

.



[You're reading an excerpt. Click here to read official ZENITH
A27A23W user guide
http://yourpdfguides.com/dref/340901](http://yourpdfguides.com/dref/340901)

.....
.....
.....
.....28 Remote Control Auto-Find.....

.....
.....
.....
.....31 S-VHS Hookup..

.....
.....
.....
.....

.....8 Safety Information..
.....
.....

.....
.....
2 Serial Number.....
.....

.....
.....
.....
.....2 Surf.....

.....
.....
.....
.....

.....
.....13 Timer.....
.....
.....

.....
.....
.....
.....21 Troubleshooting.....

.....
.....
.....
.....

.....37 VCR.....
.....
.....
.....

.....
.....
.....6, 7 Video Menu..
.....

.....
.....
.....
.....

26 Warranty.....

.....
.....
.....

.....
.. @@@@ @@@@ Perhaps you would just like the convenience of having a second remote on hand. Order your replacement remote control direct from Zenith! To ensure that you receive the correct remote, have your television's model number ready when you call. ONLY \$39. 95 PLUS \$4.95 SHIPPING & HANDLING ORDER TODAY! CALL TOLL-FREE 1.800.255.6790 3373-O zenith Use Your Visa or MasterCard to Order PLEASE ALLOW 3 - 4 WEEKS FOR DELIVERY Your Zenith Limited Warranty Direct-View Color TV Welcome into the Zenith family! We believe that you will be pleased with your new Zenith Entertainment Machine.

@@@@ @@@@ Warranty service for 21" diagonal (U.S.A.) or larger screen size models is provided in the home in most cases. (Some repairs may require the unit to be taken by the servicer to the repair facility and returned, at no additional charge.) This warranty covers manufacturing defects and does not cover installation, adjustment of customer controls in the home, installation or repair of home antenna systems, cable converters or cable company-supplied equipment; it also does not cover damage due to misuse, abuse, negligence, acts of God or other causes beyond the control of Zenith. Any alteration of the product after manufacture voids this warranty in its entirety. Parts Home Service Not Covered OWNER'S RESPONSIBILITY Effective Warranty Date Warranty begins on the date of original consumer purchase. For your convenience, keep the dealer's dated bill of sale or delivery ticket as evidence of the purchase date. Read your Operating Guide carefully so that you will understand the operation of your set and how to adjust the customer controls.

Models under 21" diagonal (U.S.A.) screen size must be taken to a Zenith authorized service center for warranty service and must be picked up by the owner. Reception problems caused by inadequate home antenna or faulty antenna connections are the owner's responsibility. Product Registration--Please fill out and mail your Product Registration Card. It is imperative that Zenith know how to reach you promptly if we should discover a safety problem that could affect you. For warranty service information, contact any Zenith authorized service center. Parts and service labor that are Zenith's responsibility (see above) will be provided without charge. Other service is at the owner's expense.

If you have any problem in obtaining satisfactory warranty service, call or write the Zenith Response Center. You must provide the model number, serial number and date of purchase or date of original installation. Before you ask for warranty service, read "Maintenance And Troubleshooting" in your operating guide. You might avoid a service call. Operating Guide Carry-In Service Antenna Important Warranty Service THIS WARRANTY IS IN LIEU OF ANY OTHER WARRANTY, EXPRESS OR IMPLIED, INCLUDING WITHOUT LIMITATION, ANY WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE, AND ZENITH SHALL NOT BE LIABLE FOR ANY CONSEQUENTIAL, INDIRECT, OR INCIDENTAL DAMAGES OF ANY KIND, INCLUDING LOST REVENUES OR PROFITS IN CONNECTION WITH THE PRODUCT.

ZENITH CONSUMER SERVICES Factory Owned Service Center Home & Carry-in Service Television/VCR Parts and Accessories PTV/Computer ZENITH ELECTRONICS CORPORATION Zenith Response Center 1000 Milwaukee Avenue Glenview, IL 60025-2493 Telephone (847)391-8752 Mon-Fri, 7:00 a.m.-8:00 p.m. CST www.

zenith.com Service Hours: M-F 8-6, Sat 9-2 Will accept UPS Shipments 801 E. Roosevelt Rd Lombard, IL 60148 (630)705-2830 201 James Record Rd. Building 4 Huntsville, AL 35824 (205) 461-8583 Additional Zenith Picture Tube Protection Plan Available Zenith offers you the opportunity to obtain additional long-term protection against failure of the picture tube in your new Entertainment Machine. Our Picture Tube Protection Plan enables you to avoid any unexpected picture tube repair expenses and keep your Entertainment Machine in top condition. It guarantees you a genuine Zenith replacement picture tube and service from a Zenith authorized service center. Be sure to send in the Product Registration Card. We will send you and application for the Protection Plan near the expiration of the two year manufacturer's warranty on the picture tube. For additional information call (847) 391-8757. 3372-O .



[You're reading an excerpt. Click here to read official ZENITH A27A23W user guide](http://yourpdfguides.com/dref/340901)
<http://yourpdfguides.com/dref/340901>