



# Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for ZENITH A32B84R. You'll find the answers to all your questions on the ZENITH A32B84R in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

**User manual ZENITH A32B84R**  
**User guide ZENITH A32B84R**  
**Operating instructions ZENITH A32B84R**  
**Instructions for use ZENITH A32B84R**  
**Instruction manual ZENITH A32B84R**

machine numbers | A27B41 | A32B41 | A32B84 | A36B41



operating guide / warranty



[You're reading an excerpt. Click here to read official ZENITH A32B84R user guide](http://yourpdfguides.com/dref/340907)  
<http://yourpdfguides.com/dref/340907>

**Manual abstract:**

**REFER SERVICING TO QUALIFIED SERVICE PERSONNEL. @@@@POWER CORD POLARIZATION: CAUTION:** To Prevent Electric Shock, Match wide blade of plug to wide slot, fully insert. **ATTENTION:** Pour éviter les chocs électriques, introduire la lame la plus large de la fiche dans la borne correspondante de la prise et pousser jusqu'au fond. **NOTE TO CABLE/TV INSTALLER:** This reminder is provided to call the cable TV system installer's attention to Article 820-40 of the National Electric Code (U.S.A.). The code provides guidelines for proper grounding and, in particular, specifies that the cable ground shall be connected to the grounding system of the building, as close to the point of the cable entry as practical. **REGULATORY INFORMATION:** This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a residential installation.

@@@@@· Increase the separation between the equipment and receiver. @@· Consult the dealer or an experienced radio/TV technician for help. **CAUTION:** Do not attempt to modify this product in any way without written authorization from Zenith Electronics Corporation. Unauthorized modification could void the user's authority to operate this product. **I N S T A L L A T I O N G E T T I N G S T A R T E D PAGE 3 Hook-Up Directory IMPORTANT!! Use this page to decide where you need to begin your setup.**

First, find the line below that best describes what you want to do, then go to that page number. Note: Design and specifications are subject to change without prior notification. Antenna only If you are using an antenna and no other equipment, go to . . .

.....

. . . . . page 4 This page will direct you to which page to go to for proper hookup of your Entertainment Machine. Cable only Cable TV wall jack If you have cable and no other equipment, go to . . . . .

.....  
.....  
.....

. page 5 In Out Cable box Antenna with VCR If you are using an antenna and have a VCR, go to . . . . .

.....  
.....

. . . . . page 6 Cable and VCR Cable TV wall jack In Out If you have cable and a VCR, go to . . . . .

.....  
.....  
.....

. . . . . page 7 Cable box Other If you have a Super VHS VCR, a DVD Player, or Audio equipment, go to . . . . .

. . . . . pages 8-9 3374-O PAGE 4 I N S T A L L A T I O N S T A N D A R D Hook Up Your Antenna to the TV Connect an antenna to your Entertainment Machine.

1 2 Hook up your Entertainment Machine, see diagrams at right. Remove the back of the remote and put in two AAA batteries. Antenna TV back back of remote Flat wire (300 ohm) TV back panel (expanded view) Antenna / Cable 3 Plug in your TV. Do not plug it into a switched outlet. 300/75 ohm Adapter 4 Go to page 10 to Auto Program your Entertainment Machine.

If you have a 75 ohm RF cable, then you don't need any adapters! Remember, when screwing RF cables onto jacks, clockwise tightens, and counterclockwise loosens. A 300 to 75 ohm adapter is not included with your Zenith Entertainment Machine. Antenna TV back RF coaxial wire (75ohm) TV back panel (expanded view) Antenna / Cable Mini glossary 75 OHM RF CABLE The wire that comes from an off-air antenna or cable service provider. Each end looks like a hex shaped nut with a wire sticking through the middle, and it screws onto the threaded jack on the back of your TV. A small device that connects a two-wire 300 ohm antenna to a 75 ohm RF jack.

They are usually about an inch long with two screws on one end and a round opening with a wire sticking out on the other end. 300 TO 75 OHM ADAPTER 3374-O I N S T A L L A T I O N S T A N D A R D PAGE 5 Hook Up Your Cable (CATV) to the TV Without Cable Box Connect cable to your Entertainment Machine. 1 2 Hook up your Entertainment Machine, see diagrams at right. Remove the back of the remote and put in two AAA batteries. Cable TV wall jack TV back back of remote TV back panel (expanded view) RF coaxial wire (75ohm) Antenna / Cable 3 Plug in your TV. Do not plug it into a switched outlet. With Cable Box Cable TV wall jack 4 Go to page 10 to Auto Program your Entertainment Machine. If you're using a cable box, leave your TV on channel 3 or 4 and use your cable box to change channels. Remember, when screwing RF cables onto jacks, clockwise tightens, and counterclockwise loosens. If you're using a cable box, AutoProgram (page 10) might only find the channel your cable service is on (usually channel 3 or 4).

Don't worry, that's all you need! In Out Cable box output switch 3 4 TV back RF coaxial wire (75ohm) TV back panel (expanded view) Antenna / Cable Mini glossary CABLE SERVICE The wire that supplies all your cable TV (CATV) stations. 3374-O PAGE 6 I N S T A L L A T I O N S T A N D A R D Hook Up Antenna and VCR to the TV Connect your off-air antenna and VCR to your Entertainment Machine. (VCR with Flat Wire Antenna Adapter) Antenna 1 2 Hook up your Entertainment Machine, see diagrams at right. Remove the back of the remote and put in two AAA batteries. Flat wire (300 ohm) VCR back VCR back AV panel 300/75 ohm Adapter In Out output switch 3 4 Audio Video R-L Out Out back of remote TV back RF coaxial wire (75ohm) not included with TV 3 Plug in your TV. Do not plug it into a switched outlet. 4 Go to page 10 to Auto Program your Entertainment Machine. A/V cables not included with TV TV back panel (expanded view) Remember, when screwing RF cables onto jacks, clockwise tightens, and counterclockwise loosens. Use Video sources for better picture and sound. Without A/V cables, VCRs will not play videocassettes in stereo sound.

(VCR with Round Antenna Wire) VCR back Antenna VCR back AV panel In Out output switch 3 4 Audio R-L Out Video Out Round wire (75 ohm) TV back RF coaxial wire (75ohm) not included with TV A/V cables not included with TV TV back panel (expanded view) 3374-O I N S T A L L A T I O N S T A N D A R D PAGE 7 Hook Up Your Cable (CATV) and VCR Without Cable Box Cable TV wall jack VCR back 1 2 Hook up your Entertainment Machine, see diagrams at right. Remove the back of the remote and put in two AAA batteries. Round wire (75 ohm) In Out Connect your VCR and Cable to your Entertainment Machine. VCR back AV panel output switch 3 4 Audio Video R-L Out Out back of remote TV back RF coaxial wire (75 ohm) not included with TV 3 Plug in your TV. Do not plug it into a switched outlet.

A/V cables not included with TV TV back panel (expanded view) 4 Go to page 10 to Auto Program your Entertainment Machine. With Cable Box Leave your VCR and your television tuned to channel three and use the cable box to change channels. Remember, when screwing in RF cables onto jacks, clockwise

*tightens, and counterclockwise loosens.*



[You're reading an excerpt. Click here to read official ZENITH](#)

[A32B84R user guide](#)

<http://yourpdfguides.com/dref/340907>

Use Video sources for better picture and sound. No A/V cables are included with your Zenith Entertainment Machine.

Without A/V cables, VCRs will not play videocassettes in stereo sound. Cable TV wall jack In Out Cable box output switch 3 4 Round wire (75 ohm) VCR back VCR back AV panel output In switch 3 4 Out Audio Video R-L Out Out TV back RF coaxial wire (75 ohm) not included with TV A/V cables not included with TV TV back panel (expanded view) 3374-O PAGE 8 I N S T A L L A T I O N S - V H S V C R / D V D P L A Y E R Super VHS VCR/DVD Player Connecting a S-VHS VCR or DVD Player to your Entertainment Machine. Super VHS VCR 1 Locate the Ant In jack on the back of your S-VHS VCR. Connect the cable line coming from your wall directly to this jack. Now locate the Out to TV jack. Connect a cable from the Out to TV jack to the Antenna/Cable jack on the back of your TV. Find the audio and S-Video jacks on the back of your S-VHS VCR, and connect them following the instructions provided with your equipment. Super VHS VCR Attach to cable wall jack, cable box, or antenna 2 Back AV panel In 34 S-Video Out DVD Player Jacks Audio Out R-L Out 3 DVD\* Player Simply connect the S-Video/Audio out on the DVD to the S-VHS 1, R-L Audio or S-VHS 2, R-L Audio In on the TV. Cables not included with TV TV back Use Video sources for better picture and sound. To use with PIP: go to the Source Menu (page 30) and choose the jack you've connected your S-VHS (S-VHS 1,-2) as the Main or PIP source.

\* Digital Video Disk Player 3374-O 3375-O I N S T A L L A T I O N S T E R E O S Y S T E M PAGE 9 Audio Hook-ups Before you begin plugging in your stereo system, it's a good idea to put it in its approximate place first. That way you know how much wire you have or will need. Get the best sound possible from your Entertainment Machine. 1 Locate the jacks marked Variable Out. These are for the stereo system. Connect the stereo system's cables, according to their color (red is the right channel, white the left) to these jacks. TV back A/V cables not included with TV These wires should be included with your stereo system. R-L Audio Input Stereo System 3375-O PAGE 10 I N S T A L L A T I O N A U T O P R O G R A M Auto Program Use Auto Program to automatically find and store all of the stations available in your area in the TV's memory. 1 2 3 4 5 With the remote control in hand, press the POWER key to turn on your Entertainment Machine. Press the MENU key so the Setup menu appears.

Using the UP/DOWN arrows on the remote control, select Auto Program on your screen. Press a RIGHT or LEFT arrow to reach the Auto Program screen. Using the UP/DOWN arrows, choose either Cable TV or Off-Air Antenna on your screen. Note: The option that is blinking and appears in white is selected. Press a RIGHT or LEFT arrow to begin Auto Program.

Press ENTER or QUIT to return to TV viewing. PRG POWER 1 CABLE VCR AUX TV SURF FLASHBK MUTE CHANNEL VOLUME VOLUME CHANNEL 1 4 7 0 2 5 8 ENTER 3 6 9 6 7 7 QUIT Note: Auto Program finds channels being received by the TV Tuner. See information on page 14 for using the Cable Box or VCR Tuners. To customize your channel selection, see page 18. 2 3/5 MENU 4/6 PIP PIP ch FREEZ CC TV/VCR SOURCE RECORD PAUSE TIMER PLAY REWIND STOP FFWD Mini glossary AUTO PROGRAM Auto Program is how your Entertainment Machine finds all the channels available in your area and stores them in memory.

3375-O O P E R A T I O N R E M O T E K E Y F U N C T I O N S TV MODE PAGE 11 TV Mode Remote Key Functiondisplay reads a channel number, then the source is your Cable or Antenna. XDS Data Feature XDS = Extended Data Service Some broadcasters are including on the signal they provide additional information (data) about the program. This data (see example) appears on your TV screen when you press ENTER; if the channel has XDS. Date Channel/Time/Audio Display (shown with PIP display, if PIP is on) Title of Program Length of Program (in hours and minutes) Time Remaining (in hours and minutes) Jan/30/98 Ch 25-MTV 7:55 Stereo PIP Ch 30-ABC NOVA Length 00:44 Time Left 00:37 Showing XDS Data Select a channel. Press ENTER to display XDS data; if available. XDS Channel Labels XDS can provide a channel label automatically. For the programs to display an XDS channel label, select the dashes (- - -) for that channel from the Channel ID option in the Setup Menu. Example of an XDS Data Display At this printing, XDS data is only being provided by some public broadcasting stations; and as a result, it is only available on some channels. You must set the Clock in the Setup Menu before the time will appear on the Channel/Time Display or on the XDS display. 3375-O PAGE 14 O P E R A T I O N T V F U N D A M E N T A L S Basic Tele names (ABC, CBS, HBO, etc.

). Allows parents to block any channel or A/V source for up to 99 hours, with the use of a password. Demonstrates the on-screen menus that control TV setup and operational features. Go to page 10 Add/Del/Surf 18 Clock Set Captions 19 20 21 22 23 Caption/Text Language Background SPECIAL FEATURES Timer Setup 24 25 26 Channel Labels Parental Control Auto Demo 27 Continued on next page. Mini glossary ADD DELETE SURF The add function adds channels to the list that will be scrolled through when using your remote. The delete function removes channels from the list that will be scrolled through when using your remote. The surf function creates a special list of your favorite channels. You can access this group of channels by pushing the surf button on the remote. 3374-O O P E R A T I O N M E N U S PAGE 17 On-Screen Menus Overview, cont'd Using the Menu button on your remote, you can access all the menus below. Descriptions of all the menus on your Entertainment Machine.

Go to page Menu Name A U D I O M E N U Customizes the sound to suit your room and your taste. Your options are: Bass, Treble, Balance, Audio Mode, Front Surround, SoundRite, Speakers. VIDEO MENU Adjusts your picture for any viewing situation. Your options are: Contrast, Brightness, Color, Tint, Sharpness, Color Temp, Picture Pref. Controls the size and appearance of the PIP inset.

Your options are: Color, Tint, Size. Chooses from the available sources for both the main picture and PIP. 28 29 PIP MENU 30 31 SOURCE MENU Channel/Time/Audio Display PIP/Channel Audio Source Shows the current time, channel, video and audio source, and the Surf status. If present, indicates PIP is on. Shows (with PIP on), the source sound is coming from, main or PIP.

Shows the current sound level. If available on currently selected channel, gives program name, length of program and time left in program in hours and minutes. Also shows Channel/Time/Audio display.



[You're reading an excerpt. Click here to read official ZENITH](#)

[A32B84R user guide](#)

<http://yourpdfguides.com/dref/340907>

If the clock has been set, displays the time also. 13 13 Volume Display XDS Display 14 13 3374-O PAGE 18 O P E R A T I O N M E N U S S E T U P M E N U  
Customize your channel selection. Setting Add/Del/Surf 1 2 3 Press the MENU key on the remote so the Setup menu appears. Select Add/Delete/Surf menu  
using the UP/DOWN arrows. Using either the NUMBER key pad or the CHANNEL UP/DOWN arrows on the remote, select a channel. (If adding a deleted  
channel, you will need to use the number pad.) Using the RIGHT/LEFT arrows, pick whether that channel is Added, Deleted, or a Surf channel.

To continue, select another channel and repeat step 4. If you are finished, press ENTER or QUIT to return to TV viewing. PRG POWER CABLE VCR AUX  
TV SURF FLASHBK MUTE 3 VOLUME CHANNEL VOLUME 4 5 CHANNEL 1 4 7 0 2 5 8 ENTER 3 6 9 2 1 If you delete a channel, it isn't gone for good.  
Just select it using the NUMBER key pad on the remote, or add it later. Press SURF, with Surf active, you can use channel up/down to scroll the Surf channel  
list. Press SURF again to return to normal channel scan. MENU 5 QUIT 4 PIP PIP ch FREEZ CC TV/VCR SOURCE RECORD PAUSE TIMER PLAY  
REWIND STOP FFWD Mini glossary ADD DELETE SURF This function lets you add new channels to the list that you'll scroll through when using your  
remote. This function lets you remove channels that you don't watch from the list you'll scroll through. This function lets you add your favorite channels to the  
Surf list. 3374-O O P E R A T I O N M E N U S S E T U P M E N U PAGE 19 Clock Set Set the clock and date on your Zenith Entertainment Machine.  
1 2 3 4 5 6 7 Press the MENU key on the remote control so the Setup menu appears. Using the UP/DOWN arrows on the remote control, select Clock Set on  
your screen. Press a RIGHT or LEFT arrow to access the Clock Menu. PRG POWER CABLE VCR AUX TV SURF FLASHBK MUTE CHANNEL Using the  
UP/DOWN arrows, select Date Set. Using the LEFT or RIGHT arrows, SELECT the Month, Date, or Year.

Use the UP/DOWN arrows to change the Month, Date, or Year. Once you have set the correct year, press the RIGHT arrow, then use an UP/DOWN arrow  
key to select Clock Set. Press a RIGHT or LEFT arrow key to adjust the time. Press the TIMER key to select AM or PM. Press ENTER or QUIT to return to  
TV viewing.

VOLUME CHANNEL 1 4 7 0 2 5 8 ENTER 3 6 9 10 QUIT 8 9 10 2/4/6/7 1 MENU 3/5/7/8 PIP PIP ch PAUSE FREEZ CC TV/VCR SOURCE  
RECORD TIMER 9 PLAY REWIND STOP FFWD You can use the NUMBER key pad to simply type in the time and date (AM and PM are still selected with  
the Timer key). 3375-O PAGE 20 O P E R A T I O N M E N U S S E T U P M E N U Turn on closed captioning or Captions When Muted. Captions PRG POWER 1 2  
3 Press the MENU key on the remote control so the Setup menu appears. Using the UP/DOWN arrows on the remote control, select Captions. Press a  
RIGHT/LEFT arrow to choose any of the following options: On, Off, or Captions When Muted. Press ENTER or QUIT to return to TV viewing. Press "CC"  
turns captions On, Off, or select Captions When Muted. Captions come in handy when the television is on mute. Not all programming has closed captioning  
or text available. CABLE VCR AUX TV SURF FLASHBK MUTE CHANNEL VOLUME CHANNEL 4 1 4 7 0 2 5 8 ENTER 3 6 9 4 2 QUIT 1 MENU  
3 PIP PIP ch FREEZ CC TV/VCR SOURCE RECORD PAUSE TIMER PLAY REWIND STOP FFWD 3375-O O P E R A T I O N M E N U S S E T U P M E N U  
PAGE 21 Caption/Text Caption/Text is a feature which allows your Entertainment Machine to receive various closed caption and text options provided by  
your broadcaster.

Availability and functionality of Caption/Text feature is determined only by your broadcaster and may not be available in our area. Turn on closed captioning  
or text that appears at the bottom of your screen. PRG POWER 1 2 3 Press the MENU key on the remote control so the Setup menu appears. Using the  
UP/DOWN arrows on the remote control. Select Caption/Text on your screen. CABLE VCR AUX TV SURF FLASHBK MUTE CHANNEL VOLUME  
VOLUME Press a RIGHT/LEFT arrow to choose any of the following options: Caption 1, Caption 2, Caption 3, Caption 4, Text 1, Text 2, Text 3, or Text 4.  
Press ENTER or QUIT to return to TV viewing. Captions come in handy when the television is on mute. Standard closed captioning is available using the  
Caption 1 option. Not all programming has closed captioning or text available; even though Captions 1, 2, 3, 4, and Text 1, 2, 3, and 4 are available for use  
to the broadcaster.

CHANNEL 1 4 7 0 2 5 8 ENTER 3 6 9 4 4 2 QUIT 1 MENU 3 PIP PIP ch FREEZ CC TV/VCR SOURCE RECORD PAUSE TIMER PLAY REWIND STOP  
FFWD Mini glossary CAPTIONS The term for the words that scroll across the bottom of your TV screen; usually the audio portion of the program provided  
for the hearing impaired. TEXT The term for the words that appear in a large black frame and almost cover the entire screen; usually messages provided by  
the broadcaster. 3375-O PAGE 22 O P E R A T I O N M E N U S S E T U P M E N U Choose the language you want the menus to appear in. Language Options 1 2 3  
Press the MENU key on the remote control so the Setup menu appears. Using the UP/DOWN arrows on the remote control, select Language on your screen.

Press a RIGHT/LEFT arrow to choose any of the following options: English, Spanish or French. Press ENTER or QUIT to return to TV viewing. PRG  
POWER CABLE VCR AUX TV SURF FLASHBK MUTE CHANNEL VOLUME CHANNEL 4 1 4 7 0 2 5 8 ENTER 3 6 9 4 2 QUIT 1 MENU 3 PIP  
PIP ch FREEZ CC TV/VCR SOURCE RECORD PAUSE TIMER PLAY REWIND STOP FFWD 3375-O O P E R A T I O N M E N U S S E T U P M E N U PAGE 23  
Background 1 2 3 4 Press the MENU key on the remote control so the Setup menu appears. Using the UP/DOWN arrows on the remote control, select  
Background on your screen. Press a RIGHT/LEFT arrow to choose On or Off.

Press ENTER or QUIT to return to regular TV viewing. PRG POWER Add a background to the on-screen menus. CABLE VCR AUX TV SURF FLASHBK  
MUTE CHANNEL VOLUME CHANNEL 1 4 7 0 2 5 8 ENTER 3 6 9 4 2 QUIT 1 MENU 3 PIP ch FREEZ PIP CC TV/VCR SOURCE RECORD  
PAUSE TIMER PLAY REWIND STOP FFWD 3375-O PAGE 24 O P E R A T I O N M E N U S S E T U P M E N U S P E C I A L F E A T U R E S Automatically turns your  
Entertainment Machine on or off. Timer Setup 1 2 3 4 Press the MENU key on the remote control so the Special Features menu appears. Using the  
UP/DOWN arrows on the remote control, select Timer Setup on your screen.



[You're reading an excerpt. Click here to read official ZENITH  
A32B84R user guide  
http://yourpdfguides.com/dref/340907](http://yourpdfguides.com/dref/340907)

Press a RIGHT/LEFT arrow. The Timer Setup screen will appear. Sleep Timer: Use the RIGHT/LEFT arrows to adjust the length of time until the TV shuts down (select a countdown from ten minutes to four hours). Note: At this point, continue to step five to set the On Time, or press ENTER or QUIT to return to TV viewing. On Time: Using the UP/DOWN arrows on the remote control, select On Time on your screen.

Press a RIGHT or LEFT arrow or use the NUMBER key pad to enter the time your TV will automatically turn on. Press the TIMER button to select AM or PM. PRG POWER CABLE VCR AUX TV SURF FLASHBK MUTE CHANNEL VOLUME VOLUME CHANNEL 1 4 7 2 5 8 ENTER 3 6 9 5 6 7 8 9 10 10 1 2 0 MENU QUIT 6 3/4/9 5/8 7 PIP PIP ch FREEZ CC TV/VCR SOURCE RECORD PAUSE TIMER PLAY REWIND FFWD STOP Press the UP/DOWN arrows to select On/Off Timer. Press the LEFT or RIGHT arrow to turn on the On/Off Timer. Press ENTER or QUIT to return to TV viewing or continue programming by repeating the above steps for Off Time. Use the number keypad to type in time settings. The On/Off timer will not work until the Clock on your television has been set. 3375-O P E R A T I O N M E N U S P E C I A L F E A T U R E S PAGE 25 Channel Labels 1 2 3 4 5 With the CHANNEL UP/DOWN key, set your Entertainment Machine to the channel you want to label. Press the MENU key repeatedly until the Special Features menu appears. Using the UP/DOWN keys, select Ch.

Labels in the menu. Use a RIGHT/LEFT arrow to select a channel label. (Each press will bring up a different label.) Press ENTER to accept the label and return to regular TV viewing. @@ Using the UP/DOWN arrows, select Parental Ctrl.

in the menu. Press a RIGHT/LEFT arrow to enter the Parental Control menu. @@ Press a RIGHT/LEFT arrow to choose Blocked or Unblocked.

@@@ Choose Set Hours. @@ Choose Set Password.

A display will appear on the screen, prompting you to enter a code. Use the Number Keypad, enter a four-number code. You will be asked to reenter the same code. Choose Lock On Off. @@ Use the NUMBERS key pad to choose channel numbers. @@@@ Press a RIGHT/LEFT arrow to choose On or Off.

@@@@ Choose from: · Bass: Increase/decrease lower-end sounds. · Treble: Increase/decrease higher-end sounds. @@@@@@ Custom allows you to set the picture the way you want. @@@@@@ Use a RIGHT/LEFT arrow to change the option.

@@@@ The names will correspond to the jacks on the back of your TV. @@@@@@ PIP is always available, no matter what equipment you have.

Don't want to miss any of the big game, but hate commercials? @@@@ This can be adjusted under the Source menu (see page 31). PIP can be used in any picture mode. Put Antenna/Cable in the inset while you watch a tape. @@@@@@. @@ Other equipment connected to the TV source inputs on the TV back connections panel; Video 1, or Video 2 for example. 3375-O P E R A T I O N P I C T U R E - I N - P I C T U R E P I P O P E R A T I O N PAGE 33 Header PIP Operation 1 2 Press PIP to place the PIP inset on the main screen. Press PIP again to remove inset. With PIP inset on, press PIP ch to switch to PIP inset channel scan, press PIP ch to return channel scan to the main screen.

With PIP inset on, press FREEZ to freeze the image in the PIP inset, press FREEZ again to resume motion. PIP On Operations Audio Swap With no other on-screen menus active, use the QUIT key to switch sound between main picture and the PIP inset; the musical note shows which audio is being heard. PIP Swap

Use Up/Down arrows to flip PIP image with main picture. Channels Press CHANNEL Up/Down to change channels in the PIP inset - - if the source for the PIP inset is Antenna/Cable. If the source is other equipment connected to the Video 1, or Video 2 jacks, tune channels on that equipment.

PIP Inset Video Source Press TV/VCR SOURCE to switch video sources for the PIP inset between, Antenna/Cable, Video 1, or Video 2. Move PIP Inset around Screen Use the left/right arrows to move the PIP inset to a different location on the main screen. PRG POWER Learn to use the PIP features on your entertainment machine. CABLE VCR AUX TV SURF FLASHBK MUTE CHANNEL 3 VOLUME VOLUME CHANNEL 1 4 7 0 2 5 8 ENTER 3 6 9 MENU QUIT 2 3 1 PIP PIP ch FREEZ CC TV/VCR SOURCE RECORD PAUSE TIMER PLAY REWIND STOP FFWD Mini glossary PIP This is the most common way to refer to the Picture-In-Picture (PIP) option. 3375-O PAGE 34 O P E R A T I O N P I C T U R E - I N - P I C T U R E S E L E C T I N G V I E W I N G S O U R C E S P I P -

Selecting Viewing Sources Choosing which source to watch for main screen and PIP inset.

1 Press PIP to place the PIP inset on the main screen. Press TV/VCR Source to switch input source for the PIP inset. 2 Or, go to the Source menu, highlight PIP Source and use RIGHT/LEFT arrows to select PIP inset source. Highlight Main Source and use RIGHT/LEFT arrows to select main picture source. Main Screen or PIP Inset Sources You can use: Antenna/Cable Video 1/S-Video 1 Video 2/S-Video 2 Camcorder Where sources are connected You can use any input source for the PIP inset that is connected to the TV connections panel. (Antenna/Cable, Video 1, or Video 2.) Note: If you used the S-Video 1, or the S-Video 2 input, S-VHS 1, or S-VHS 2 will appear as available sources instead of Video 1, or Video 2. If no equipment is connected to a source you select for the PIP inset, or if it is turned Off, the PIP inset will be black. R -AUD AUDIO/ IO-L VIDE VIDEO O OUT VCR R -AUD IO-L AUDIO/ VIDE VIDEO O OUT S-Video VCR R -AUD AUDIO/ IO-L VIDE VIDEO O DVD Player OUT R -AUD IO-L AUDIO IN Other Examples of the types of equipment you can connect to your TV Mini glossary SOURCE MAIN SOURCE PIP SOURCE Equipment connected to the back connections panel jacks on the TV. Connection or equipment providing the picture and sound for the main picture.

Equipment providing the picture for the PIP inset. 3374-O R E M O T E P R O G R A M M I N G R E M O T E PAGE 35 Programming the Remote 1 2 The device you want to program should be on. On the chart on page 39/40, find the type of device you're programming, and then find the brand name. Make a note of the three-digit code, you'll need it soon. Press and hold the PRG key. It's recessed so it doesn't get pushed accidentally. Use a small object. When the indicator light turns on, you can release the key. Push the key name with the type of device you're programming (VCR, CABLE, AUX, TV). Using the number pad, enter the three digit code you found on page 39/40.

Press ENTER to save the code. (The indicator light will flash 3 times, then turn off to indicate the code is valid.) Aim the remote at the device and push the POWER key. It should turn off. If not, try the other codes listed and continue from step three.



[You're reading an excerpt. Click here to read official ZENITH](#)

[A32B84R user guide](#)

<http://yourpdfguides.com/dref/340907>

Note: To reset remote to factory settings, enter 9-1-1, in step 5. 3 PRG POWER 7 4 Program your remote to work with a vast range of brand name devices. CABLE VCR AUX TV SURF FLASHBK MUTE 3 CHANNEL VOLUME VOLUME CHANNEL 4 5 6 7 5 1 4 7 0 2 5 8 ENTER 3 6 9 6 QUIT MENU PIP PIP ch FREEZ CC TV/VCR SOURCE RECORD PAUSE TIMER PLAY REWIND FFWD STOP Programming your Zenith remote will allow you to use one remote to work up to 7 different devices. Not all devices will work with your Zenith remote control. Mini glossary PROGRAMMING PRG DEVICE Procedure to set up remote to operate other equipment.

Programming key. Infra-red remote controllable electronic accessory. 3375-O PAGE 36 R E M O T E R E M O T E P R O G R A M M I N G Amplifier Volume Override Control the volume on your home audio system without changing modes. 1 Find the code that operates your amplifier. @@@@Select the mode you want amplifier volume to appear (e.g. TV). @@Press 4-9-9; then ENTER on the remote. The indicator light will flash three times if code is accepted. Audio system volume/mute now appears in the mode selected.

@@@@@See Audio Tuners/Amp list on page 40. @@@@@@Press ENTER to save the code. With the device turned on, point the remote at it and press POWER. It should turn off. @@@@Can be any equipment which does not have a dedicated key on the remote like cable or VCR. Typically a second VCR, stereo system, audio tape deck, etc. 3375-O PAGE 38 R E M O T E R E M O T E P R O G R A M M I N G A U T O - F I N D Remote Control Auto-Find Use the remote control to search all possible codes. 1 2 3 4 5 Turn on the device you want the remote to control. @@Press the key for the device you are trying to program (CABLE, VCR, AUX, TV). Press 0-0-0 (zero-zero-zero), then press the ENTER key right away.

Aim the remote at the correct device and push the POWER key (The indicator light will turn off while the POWER key is pressed). Allow a second to pass, then push the POWER key again. Repeat until the device turns off. Push ENTER to save the code (The indicator light will flash 3 times and then turn off). Press POWER to turn the device back on.

You can quickly get out of Auto Find by pressing PRG. If the indicator light stays on while you push Power instead of turning off, all the codes have been tried and your device can't be programmed. 2 Indicator Light PRG POWER 5/7 3 CABLE VCR AUX TV SURF FLASHBK MUTE CHANNEL VOLUME VOLUME CHANNEL 1 4 7 2 5 8 ENTER 3 6 9 6 7 4 0 6 QUIT MENU PIP PIP ch FREEZ CC TV/VCR SOURCE RECORD PAUSE TIMER PLAY REWIND STOP FFWD 3375-O REFERENCE PROGRAMMING CODES PAGE 39 Programming Codes TVs Admiral . . .

. . . . 116 121 130 133 Adventura TV/VCR 154 Akai . . . . .

. . . . 104 Amark . . . . .

. . 103 146 AOC . . .

. . . . .

. . 104 Bell & Howell . . . 121 Broksonic . . . . .

. 131 136 Candle . . . . . 139 Centurion .

. . . . .

119 Citizen . . . . .

. . . 121 139 Contec . . . . .

. 141 Coronado . . . . . 103 Crown . . .

. . . . .

103 Curtis Mathes . . . . 116 119 121 Daewoo .

. . . . . 149 159 Daewoo TV/VCR . . 148 Daytron . .

. . . . . 119 Elektra . . . . .

. . . 121 Emerson . .

. . . . .

103 104 123 124 131 136 145 Emerson TV/VCR . . 158 Fisher . . . . .

. 109 118 Funai TV/VCR . . . . 154 General Electric . . 106 107 114 116 117 161 Goldstar . . .

. . . . 103 104 119 147 Goldstar TV/VCR .

. 153 Hitachi . . . .

. . . . 102 103 129 163 J.C. Penney . . . .

. 104 110 114 117 119 JVC . . . . .

. 125 132 164 KMC . . . . .

. . . . .

. 103 KTV . . . . .

. 103 104 138 Kurazai . . . . . 121 Lodgenet .

. . . . .

. 121 Logik . . . . .

. . . . . 121 LXI . . . . .

. . . . . 133 137 Magnavox . . . . .

. 103 112 113 117 119 127 128 139 165 Magnavox TV/VCR 173 MGA/Mitsubishi . . 104 119 120 130 140 155 Montgomery Ward 103 104 105 113 114 119 121 130 133 Sears .

. . . . .

. . . 103 108 109 110 111 118 134 Sharp . . . . .

. . 103 105 122 133 137 156 169 Signature 2000 . . . 103 104 105 113 114 119 121 130 133 Sony . . . . .

. . . . . 115 143 151 170 Soundesign .

.... 139 Sylvania .  
..... 112 113 117 119 127 128 139 Symphonic TV/VCR 154 Tatung ....

.... 106 Teknika .....  
.. 103 112 121 124 139 Telerent ...  
.... 103 121 Toshiba .  
..... 110 111 134 171 XR 1000 ....

... 121 Yorx .....  
... 119 Zenith ..

.....  
. 101 149 175 Zenith TV/VCR ... 153 154 172 Find the codes you need to program your remote. On this page: TVs and VCRs. NEC ....

..... 104 119 Panasonic .....  
.. 106 107 160 166 Panasonic TV/VCR 174 Philco ...  
.....  
. 103 104 112 113 139 Philips ..... 112 113 Pioneer .

..... 135 Portland ...  
.... 103 ProScan .

.....  
. 116 157 162 167 Quasar ..... 106 107 RCA .

..... 104 116 126 157 161 162 167 168 Realistic .

.....  
. 105 123 124 Sampo ....  
.... 119 Samsung .....

. 103 119 134 141 Sanyo .....  
108 109 118 Scott .....  
.... 119 124 Majestic .  
..... 121 Marantz ....

... 104 120 155 Megatron .....  
146 Memorex .....  
.. 121 VCRs Admiral ...  
.... 208 261 Adventura .....

231 Aiwa ..... 231 Akai .

.....  
... 223 238 241 Audio Dynamics .  
. 202 218 Bell & Howell ... 206 247 Broksonic .....

. 221 226 250 255 Canon ..... 214 Citizen .

.....  
.. 209 Craig ...  
..... 212 Curtis Mathes ... 214 259 Daewoo .

..... 244 246 248 254 Daytron ....  
... 236 246 DBX ..

.....  
... 202 218 Emerson .....

203 209 221 223 226 233 235 243 250 Fisher ..... 211 212 213 247 Funai .

.....  
... 231 General Electric ..  
214 216 220 Goldstar ..... 209 Go Video ...

.... 256 262 263 Hitachi .....  
.. 215 257 Instant Replay ...  
214 227 J.C. Penny ...  
... 214 215 218 227 JVC .....

... 202 224 225 258 Kenwood .....

202 Logik .....

... 239 LXI .

..... 209 231 Magnavox .



..... 207 214 231 Marantz .....  
 .. 207 218 Marta ...  
 .....  
 . 209 Memorex ..... 206 212 214 231 Mitsubishi ..  
 .... 204 222 252 264 Montgomery Ward 208 214 216 219 231 249 NEC .....  
 .... 202 218 Orion .  
 .....  
 ... 250 Panasonic ..... 214 251 259 Pentax .  
 ..... 215 Philco ...  
 .....  
 . 207 214 Philips ....  
 .... 207 214 227 Pioneer .....  
 . 210 215 Portland ..... 246 ProScan ..  
 .....  
 216 260 Quasar .....  
 ... 214 259 RCA .....  
 ... 215 216 220 227 240 242 249 260 Realistic .....  
 206 208 212 214 231 Samsung .....  
 .. 220 230 238 Sansui ...  
 ..... 239 Sanyo .....  
 ... 206 212 247 Scott .....  
 .. 204 205 233 243 Sears ...  
 .....  
 . 206 209 211 212 215 Sharp .....  
 208 261 Shintom ..... 239 Signature 2000 ...  
 208 214 216 219 231 249 Sony .....  
 .... 217 232 237 Sylvania .  
 ..... 207 214 227 Symphonic ....  
 . 231 Tashiko ..... 209 Tatung .  
 .....  
 .. 202 Teac ...  
 ..... 202 231 Teknika ...  
 ..... 209 234 Toshiba .....  
 ... 205 215 XR 1000 ..  
 .....  
 239 Vector Research .. 204 218 Yamaha .....  
 202 218 Zenith ..... 201 224 225 229 237 Multi Tech ..  
 .... 239 3369-o PAGE 40 R E M O T E R E M O T E P R O G R A M M I N G PROGRAMMING CODES Find the codes you need to program your remote.  
 On this page: Cable, Satellite, CD Players, Tape Decks and Audio Tuners and Amplifiers. Programming Codes Cable Satellite Allegro ....  
 .... 358 362 Allegro A/B Switch 361 Gemini .....  
 .. 305 331 338 General Electric... 367 General Instrument 304 305 306 307 308 309 310 318 Hamlin ....



**[You're reading an excerpt. Click here to read official ZENITH  
 A32B84R user guide  
 http://yourpdfguides.com/dref/340907](http://yourpdfguides.com/dref/340907)**

. . . 302 303 345 365 366 Jerrold . .  
 . . . . .  
 . 304 307 308 309 310 318 360 363 Kale Vision . . . . . 335 Macom . . . . .  
 . . . . . 314 321 Magnavox . . . . .  
 334 NSC . . . . .  
 . . . . .  
 335 339 368 369 370 Oak . . . . .  
 311 332 342 Panasonic . . . . . 313 320 Paragon . . . . .  
 . . . 333 Philips . . . . .  
 . . . . .  
 . 347 350 352 354 355 Pioneer . . . . . 315 343 RCA DSS . . . . .  
 . . . . . 373 Regency . . . . .  
 . . . 329 Samsung . . . . .  
 . . . . .  
 335 Scientific Atlanta 316 323 336 364 Unika . . . . . 348 362 United Satellite . . . . .  
 . 344 Universal . . . . . 358 362 Vid Tech . . . . .  
 . . . . 340 Video Way . . . . .  
 . . . . .  
 349 Viewstar . . . . . 354 355 372 Zenith . . . . .  
 . . . . . 301 353 374 Zenith Satellite . . 312 328 330 351 378 Sprucer . . . . .  
 . . . . .  
 313 Standard Comp . . . 335 Stargate . . . . .  
 . . . . . 379 Texscan . . . . .  
 . . 339 356 371 Tocom . . . . .  
 317 318 346 Video Disc Players Pioneer . . . . .  
 . . 402 403 Sanyo . . . . .  
 . . . . . 401 Sony . . . . .  
 . . . . . 404 Zenith . . . . .  
 . . . 401 Audio CD Players Akai . . . . .  
 . . . . .  
 . . . 409 424 Crown . . . . .  
 . . 410 Denon . . . . .  
 411 Fisher . . . . .  
 . . . . 412 438 Goldstar . . . . .  
 . . . . . 460 Harman/Kardon . . 413 JVC . . . . .  
 . . . . . 415 Kenwood . . . . .  
 . . . . 412 416 417 441 Magnavox . . . . .  
 . . . . .  
 421 422 433 434 Mitsubishi . . . . . 423 424 NAD . . . . .  
 . . . . . 425 426 447 Nakamichi . . . . .  
 . . 427 428 NEC . . . . .  
 . . . . .  
 . . 429 Onkyo . . . . .  
 430 Panasonic . . . . . 431 432 Philips . . . . .  
 . . . . 421 433 434 Pioneer . . . . .  
 . . . . .  
 . . 431 435 Quasar . . . . .  
 432 Radio Shack . . . . . 431 436 439 440 441 RCA . . . . .  
 . . . . .  
 437 Sanyo . . . . .  
 . . . . 438 439 Scott . . . . .  
 . . . . . 440 Sharp . . . . .  
 . . 441 442 Sony . . . . .

.....  
.. 443 444 445 Soundesign ..... 461 498 501 502 Sylvania ...

.... 433 Teac .....

... 446 Technics ..

.....  
432 459 Toshiba ..... 447 Yamaha ..

..... 448 Zenith .....

... 460 461 498 501 502 Audio Tape Decks Denon .

.....  
.. 455 Harman/Kardon. ... 456 JVC .....

..... 457 Kenwood .....

.. 450 Onkyo ...

.....  
. 458 Philips DCC ..... 454 Pioneer ....

.... 451 478 Sony. ....

.... 452 Audio Tuners/Amps Denon.

.....  
... 462 463 Fisher .....

.. 464 Goldstar ..... 460 Harman/Kardon .

. 465 JVC .....

.....  
. 466 Kenwood ..... 468 469 Marantz ...

..... 472 503 Onkyo .....

... 473 Philips ..

.....  
. 475 476 Pioneer ..... 477 478 479 Radio Shack .

.... 487 488 Realistic .....

. 480 Sanyo .....

.....  
481 Scott ..... 482 Sharp .

..... 483 Sony. .

.....  
... 489 490 491 492 Soundesign ..

... 461 498 501 502 Teac .....

.. 494 495 Technics ..... 497 Yamaha .

.....  
. 496 Zenith .....

.... 460 461 498 501 502 3369-o R E M O T E R E M O T E P R O G R A M M I N G PROGRAMMING CODES PAGE 41 Remote Key Functions by Mode  
Preset or default key functions by mode for Zenith products TV Mode Zenith Code 101 TV On/Off Selects Cable Selects VCR Selects Aux Selects TV Surf  
On/Off TV Flashback TV Mute TV Channel Up TV Channel Dn TV Volume Up TV Volume Dn TV Digit 1 TV Digit 2 TV Digit 3 TV Digit 4 TV Digit 5 TV  
Digit 6 TV Digit 7 TV Digit 8 TV Digit 9 TV Digit 0 TV Enter TV Menu TV Select Up TV Select Dn TV Adjust Left TV Adjust Right TV Seq Sound TV PIP TV  
PIP Swap TV PIP Freeze TV Closed Captions TV Timer TV Sources VCR Record VCR Pause VCR Rewind VCR Play VCR Stop VCR Fast Forward KEY  
NAME POWER CABLE VCR AUX TV SURF FLASHBK MUTE CHANNEL UP CHANNEL DN VOLUME (RIGHT) VOLUME (LEFT) 1 2 3 4 5 6 7 8 9 0  
ENTER MENU UP ARROW DOWN ARROW LEFT ARROW RIGHT ARROW QUIT/ PIP SWAP FREEZ CC TIMER TV/VCR/SOURCE RECORD PAUSE  
REWIND PLAY STOP FFWD VCR Mode Zenith Code 201 VCR On/Off Selects Cable Selects VCR Selects AUX Selects TV VCR AM/PM VCR Flashback TV  
Mute VCR Channel Up VCR Channel Dn TV Volume Up TV Volume Dn VCR Digit 1 VCR Digit 2 VCR Digit 3 VCR Digit 4 VCR Digit 5 VCR Digit 6 VCR  
Digit 7 VCR Digit 8 VCR Digit 9 VCR Digit 0 VCR Enter VCR Menu VCR Select Up VCR Select Dn VCR Adjust Left VCR Adjust Right VCR Quit VCR+ VCR  
Channel Map VCR Search VCR Memory VCR Timer TV Tuner or VCR Tuner VCR Record VCR Pause VCR Rewind VCR Play VCR Stop VCR Fast Forward  
Cable Mode Zenith Code 353 Cable Box On/Off Selects Cable Selects VCR Selects Aux Selects TV CABLE FC Fav Ch Cable Flashback TV Mute Cable  
Channel Up Cable Channel Dn TV Volume Up TV Volume Dn Cable Digit 1 Cable Digit 2 Cable Digit 3 Cable Digit 4 Cable Digit 5 Cable Digit 6 Cable  
Digit 7 Cable Digit 8 Cable Digit 9 Cable Digit 0 Cable Enter Cable Menu Cable Up Arrow Cable Dn Arrow Cable Left Arrow Cable Right Arrow Cable  
Quit Day Up Day Down Cable Pg Up Cable Pg Down Cable Timer Cable Info Cable Buy Cable Guide VCR Rewind VCR Play VCR Stop VCR Fast Forward  
AUX Mode Zenith Code 401 AUX TV/DISC Selects Cable Selects VCR Selects AUX Selects TV AUX Audio AUX Frame/Time TV Mute AUX Skip >> AUX  
Skip << TV Volume Up TV Volume Dn AUX Digit 1 AUX Digit 2 AUX Digit 3 AUX Digit 4 AUX Digit 5 AUX Digit 6 AUX Digit 7 AUX Digit 8 AUX Digit 9  
AUX Digit 0 Aux Display AUX Program AUX Part AUX Random AUX x3 FAST < AUX x3 FAST > AUX Clear AUX Repeat-Side AUX Repeat-A-B AUX  
Repeat-Chap AUX Memory AUX Still AUX TV/Disc AUX Edit AUX Pause AUX Scan << AUX Play AUX Stop/Eject AUX Scan >> A complete list of key  
functions for your remote control. Some of the functions shown above may not be available on your equipment. Remote Control Part No. 124-212-51 and µP  
221-952-02A 3375-O PAGE 42 REFERENCE MAINTENANCE Caring for your Entertainment Machine. Maintenance Early malfunctions can be prevented.

Careful and regular cleaning can extend the amount of time you will have with your new Entertainment Machine.

Be sure to turn the power off and pull out the plug before you begin any cleaning. *Screen Cleaning* 1. Here's a great way to keep the dust off your screen for a while. Wet a soft cloth in a mixture of lukewarm water and a little fabric softener or dish washing detergent. Wring the cloth until it's almost dry, and then use it to wipe the screen. 2. Make sure the excess water is off the screen, and then let it air-dry before you turn on your Entertainment Machine. *Cabinet Cleaning* 1. Use a soft cloth with a mild soap solution to wipe the cabinet (avoid using any cleaner that says "industrial strength" or "will wash the white off of rice" on the label). 2.

Rinse the cloth and wipe the cabinet again. 3. Let the cabinet air-dry before turning the Entertainment Machine on. *Wood Cabinet* Use a quality wood cleaner and polish. This will protect the Entertainment Machine from dirt and dust, as well as keep the cabinet looking new.

*Extended Absence* If you leave your Entertainment Machine dormant for a long time (such as a vacation), it's a good idea to unplug the power to protect against possible damage from lightning or power surges. If you use an off-air antenna, you may also want to disconnect it from the back of your TV before leaving. If you unplug your Zenith Entertainment Machine, you may have to reset the clock using the Clock Set menu described earlier. See page 19. 3374-O

REFERENCE MAINTENANCE PAGE 43 Troubleshooting Some quick and easy tips to fixing problems yourself.

SYMPTOMS Snowy picture and lousy sound. SOLUTIONS · Check your antenna connection or location. Multiple images or 'ghost shadows.' · Check your antenna direction and/or location.



[You're reading an excerpt. Click here to read official ZENITH](#)

[A32B84R user guide](#)

<http://yourpdfguides.com/dref/340907>

· Make sure the wire from your antenna to your Entertainment Machine is properly connected. Interference: Sharp lines across the screen and lousy sound. The following may cause image problems or distortion: Electrical appliances, powerful lights, cars, trucks; computers or portable phones; medical equipment  
· If possible increase the distance between your Entertainment Machine and the offending appliance. Or shut one of them off. · Check volume levels. · Make sure the TV is not Muted.

· Try another channel. The problem may be the broadcast, not your Entertainment Machine. · Are the Audio A/V cables properly installed? Normal picture but no sound. No picture and lousy sound. · Are you in TV or cable tuning mode, and should be in the other? · Make sure output channels on all A/V equipment are on the same channel (3 or 4). · Check that all connections are tight. · Is the AC power plugged in? · Check that your AC power outlet works. (Test it by plugging in something else or try another plug.) · Make sure your brightness and audio controls are set properly. · Try another channel.

The problem may be with the broadcast. · Check the color control in the Video menu. · Try another channel. The problem may be with the broadcast. · The CC (closed caption) option may be in Text mode.

Select OFF in the Captions menu (see page 20). · Your program is in letterbox. This means that the shape of your TV is a square, but the program is a rectangle. Think of the bars as empty space the program doesn't fill; not picture that's blocked out. Because this format is a direct representation of film as you see it in the movies, you are actually seeing MORE of the program when you see those bars.

Trust us. · Make sure the batteries are fresh and installed properly. Does indicator light work? · Is remote in TV mode? Press TV for TV mode. No picture and no sound -- The thing is just DEAD! No color, but the sound is O.K. Picture has a big black box on it, but the sound is O.K. Picture has two horizontal black bars, one on top and one on bottom. Remote control doesn't work. 3374-O PAGE 44 REFERENCE MAINTENANCE Troubleshooting cont'd Some quick and easy tips to fixing problems yourself.

Menu options can't be changed or selected. No picture or sound when any non-cable source is selected. Weak or no Stereo Sound when using a stereo VCR.

The PIP inset is black or lacks contrast when VIDEO 1 is the PIP source. The PIP inset is "snow" when the source is Antenna/Cable, Video 1, or Video 2.

There is no picture in the PIP inset when using VIDEO 1 for the PIP and Antenna/Cable for the main picture. · Try unplugging your Entertainment Machine for a few minutes, then plug it back in. (Don't forget to reset the clock.) · Check to see if the source equipment has been turned on. · Make sure that the connections are secure on the back of your TV and on the source equipment.

· Check to see if all the connections are secure. · Look in the Audio mode menu to see if all the settings are correct. · You might want to adjust the PIP picture settings under the PIP menu. · Check that all the wires are connected properly. · PIP source turned on? · Look to see if the TV/VCR button on your VCR has the TV selected.

· Look to see if the TV/VCR button on your VCR has the TV selected. If all else fails, try unplugging your entertainment machine for about 5 minutes, then plugging it back in. (Don't forget to reset the clock.) If that doesn't work, call 1-847-391-8752, extension 5, between 8:30 am and 4:30 pm Central Standard Time. 3375-O REFERENCE G L O S S A R Y PAGE 45 Glossary A/V CABLES Audio/Video cables.

Three cables bunched together--Right audio (red), Left audio (white), and Video (yellow). A/V cables are used for stereo playback of videocassettes and for higher quality picture and sound from other A/V devices. Any device that produces video or sound (VCR, DVD, cable box, or television). This function lets you add new channels to list that you'll scroll through when using your remote. An external machine that amplifies sound from a television, CD player, VCR, DVD or other A/V device. The physical receiver of television signals sent over the air. A large metal piece of equipment does not always have to be visible for your home to be using an antenna. A form of subtitling that writes out the dialog for your program. A jack for hooking up optional equipment that gives you access to the Internet through your TV. This function lets you remove channels that you don't watch from the list you'll scroll through.

A small picture on your screen that represents a function or menu item. Refers to the jack that receives a signal into the TV, VCR or other A/V device. A connection on the back of a TV, VCR, or any other A/V device. This includes the RF jack that is threaded with a place for a small wire in the center, and the Audio/Video jacks that have a bigger opening and are color-coded. The device that the remote control is currently controlling (TV, VCR, Cable, etc.) is its "mode." Mono (monaural) sound is one channel of sound. On more than one speaker all the speakers play the same audio. The wire that comes from an off-air antenna or cable service provider. Each end looks like a hex shaped nut with a wire sticking through the middle, and it screws onto the threaded jack on the back of your TV.

Refers to the jack that sends a signal out of a VCR, DVD, or other A/V device. A complete list of definitions for words found in this guide. A/V DEVICE ADD AMPLIFIER ANTENNA CAPTIONS/TEXT DATA SOURCE DELETE ICON INPUT JACK MODE MONO SOUND OHM RF CABLE OUTPUT 3374-O PAGE 46 REFERENCE G L O S S A R Y A complete list of definitions for words found in this guide. Glossary (cont'd) PIP This is the most common way to refer to the Picture-In-Picture (PIP) option. SECOND AUDIO Second Audio Programming (SAP) is another, separate, audio channel PROGRAMMING/SAP available with some programming.

Choosing SAP often refers to listening to audio in another language, such as Spanish or French. SIGNAL Picture and sound traveling through cable, or on the air, to your television screen. The term for the equipment that provides audio and video information to your Entertainment Machine. VCR, DVD players, or Cable Boxes are examples of sources. Stereo (Stereophonic) sound refers to audio that's divided into right and left sides.

The surf function creates a special list of your favorite channels. You can access this group of channels by pushing the surf button on the remote. Any device that picks up broadcast signals and turns them into picture and sound. SOURCE STEREO SOUND SURF TUNER 3357-o 3369-o REFERENCE INDEX PAGE 47 Index Header Find what you want quickly.



[You're reading an excerpt. Click here to read official ZENITH](http://yourpdfguides.com/dref/340907)

[A32B84R user guide](http://yourpdfguides.com/dref/340907)

<http://yourpdfguides.com/dref/340907>

. . . . .  
. . . . .  
. . . . .  
... 18 Amplifier Volume Override . . . . .

. . . . .  
... 36 Audio Hook-ups .  
. . . . .  
. . . . .

. . . . .  
.. 9 Audio Menu . . .  
. . . . .  
. . . . .

. . . . .  
.. 28 Auto Demo. . .  
. . . . .  
. . . . .

. . . . .  
... 27 Auto Find . . .  
. . . . .  
. . . . .

. . . . .  
... 38 Auto Program .  
. . . . .  
. . . . .

. . . . .  
... 10 Background Menu . .  
. . . . .  
. . . . .

. . . . . 23 Basic Television Operation.  
. . . . .  
. . . . .  
. . . . .

13 Batteries . . . . .  
. . . . .  
. . . . .  
. . . . .

. . . 4 Button Functions. . . . .  
. . . . .  
. . . . .  
. . . . .

11 Cable . . . . .  
. . . . .  
. . . . .  
. . . . .

. . . 5, 7 Captions/Text Menu . . . . .  
. . . . .  
. . . . .  
... 20, 21 Channel Labels . . . . .

. . . . .  
. . . . .  
. . . . .  
... 25 Channel Search (Auto Program) . . . . .

.....	10 Clock Set.....
.....	.....
.....	.....
.....	.. 19 DVD Player...
.....	.....
.....	.....
.....	... 8 External Stereo...
.....	.....
.....	.....
.....	.. 9 Front Panel Diagram...
.....	.....
.....	.....
.....	..... 12 Glossary...
.....	.....
.....	.....
.....	..... 45, 46 Hook-Up Directory...
.....	.....
.....	.....
.....	.....
.....	.... 3 Jack Pack.....
.....	.....
.....	.....
.....	.....
.....	..... 6 Language Menu.....
.....	.....
.....	.....
.....	.....
.....	.... 22 Maintenance.....
.....	.....
.....	.....
.....	.....
.....	. 43, 44 On-Screen Menus.....
.....	.....
.....	.....
.....	..... 16 Picture-in-Picture...
.....	.....
.....	.....
.....	.. 32-34 PIP.....
.....	.....
.....	.....
.....	.....
.....	.... 33-34 PIP Menu.....
.....	.....
.....	.....
.....	.....
.....	..... 30 Programming Codes...
.....	.....
.....	.....

.....  
39-40 Remote Control Diagram .....

.....  
..11 Safety Information ...

.....  
.....2 Serial Number ..

.....  
.....2 Super VHS VCR ..

.....  
.....8 Surf ...

.....  
..18 Timer ...

.....  
..24 Troubleshooting ....

.....  
..43-44 VCR .....

.....  
6, 7 Video Menu .....

.....  
29 Warranty .....

.....  
..48 XDS ...

.....  
.....  
.....  
..13 3374-O Your Zenith Warranty Direct-View Color TV Welcome to the Zenith family! We believe that you will be pleased with your new Zenith Entertainment Machine. Please read this warranty carefully, it is a "LIMITED WARRANTY" as defined under Federal Law. This warranty gives you specific legal rights, and you may also have other rights that vary from state to state within the U.S.A. ZENITH RESPONSIBILITY Service Labor During a period of 90 days from effective warranty date, Zenith will provide service labor by a Zenith authorized service center when needed, as determined by the Zenith service center, as a result of manufacturing defects. @@@@Any alteration of the product after manufacture voids this warranty in its entirety. THIS WARRANTY IS IN LIEU OF ANY OTHER WARRANTY, EXPRESSED OR IMPLIED, INCLUDING WITHOUT LIMITATION, ANY WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE, AND ZENITH SHALL NOT BE LIABLE FOR ANY CONSEQUENTIAL, INDIRECT, OR INCIDENTAL DAMAGES OF ANY KIND, INCLUDING LOST REVENUES OR PROFITS IN CONNECTION WITH THIS PRODUCT.

Parts Home Service Not Covered OWNER'S RESPONSIBILITY Effective Warranty Date Warranty begins on the date of original consumer purchase. For your convenience, keep the dealer's dated bill of sale or delivery ticket as evidence of the purchase date. Read your Operating Guide carefully so that you will



understand the operation of your set and how to adjust the customer controls. @@@@ For warranty service information, contact any Zenith authorized service center. Parts and service labor that are Zenith's responsibility (see above) will be provided without charge. Other service is at the owner's expense. If you have any problem in obtaining satisfactory warranty service, call or write the Zenith Response Center. You must provide the model number, serial number and date of purchase or date of original installation. Before you ask for warranty service, read "Maintenance And Troubleshooting" in your operating guide. You might avoid a service call.

Operating Guide Carry-In Service Antenna Important Warranty Service ZENITH CONSUMER SERVICES Factory Owned Service Center Home & Carry-in Service Television/VCR Parts and Accessories PTV/Computer Service Contracts Hours: M-F 8-6, Sat 9-2 801 E. Roosevelt Rd Lombard, IL 630-705-2830 ZENITH ELECTRONICS CORPORATION Zenith Response Center 1000 Milwaukee Avenue Glenview, IL 60025-2493 Telephone (847)391-8752 Mon-Fri, 7:00 a.m.-8:00 p.m.

CST IN CANADA, WRITE OR CALL US AT: LG Electronics 235 Superior Blvd. Mississauga, Ontario, Canada L5T-2L6 tel: (905)795-6240, fax:(905) 670-2379 IN MEXICO, WRITE OR CALL US LG Electronics Av. San Andres Atoto, No 8 Col. San Andres Atoto, Naucalpan Estado de Mexico, C.P.

53500 tel; 01 (800) 50 481 y en el D.F. 359 43 55 fax 01 (800) 50 733 y en el D.F. 357 17 56 Additional Zenith Picture Tube Protection Plan Available Zenith offers you the opportunity to obtain additional long-term protection against failure of the picture tube in your new television. Our Picture Tube Protection Plan enables you to avoid any unexpected picture tube repair expenses and keep your television in top condition. It guarantees you a genuine Zenith replacement picture tube and service from a Zenith authorized service center. Be sure to send in the Product Registration Card. We will send you an application for the Protection Plan near the expiration of the two-year manufacturer's warranty on the picture tube. For additional information call (847) 391-8757.

206-3375-O Issue\* Recommended Audio/Video Accessories STEREO SURROUND SOUND SPEAKERS For use with any Surround Sound compatible TV. These speakers create a sound so real, it's as if you were part of the action. The convenient, space-saving shelf design make these speakers an ideal addition to any Home Theater System. The contemporary black finish complements any room. CV5000 ONLY \$224.95 PLUS \$17.95 SHIPPING & HANDLING REPLACEMENT REMOTE Broken or lost remote? Perhaps you would just like the convenience of having a second remote on hand. Order your replacement remote control direct from Zenith! To ensure that you receive the correct remote, have your television's model number ready when you call. ONLY \$39.95 PLUS \$4.

95 SHIPPING & HANDLING ORDER TODAY! CALL TOLL-FREE 1.800.255.6790 zenith Use Your Visa or MasterCard to Order PLEASE ALLOW 3 - 4 WEEKS FOR DELIVERY .



[You're reading an excerpt. Click here to read official ZENITH](#)

[A32B84R user guide](#)

<http://yourpdfguides.com/dref/340907>