




# Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for ZENITH A50M84W. You'll find the answers to all your questions on the ZENITH A50M84W in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

**User manual ZENITH A50M84W**  
**User guide ZENITH A50M84W**  
**Operating instructions ZENITH A50M84W**  
**Instructions for use ZENITH A50M84W**  
**Instruction manual ZENITH A50M84W**

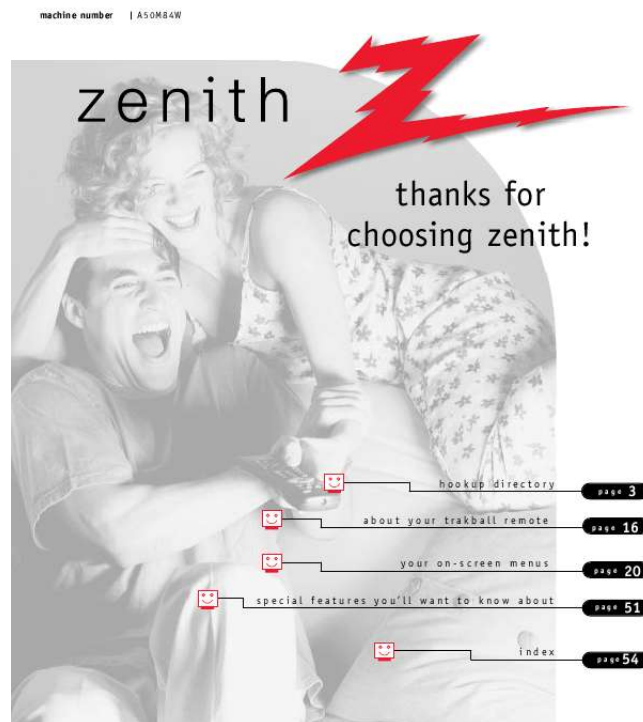

operating guide / warranty



[You're reading an excerpt. Click here to read official ZENITH A50M84W user guide](http://yourpdfguides.com/dref/340911)  
<http://yourpdfguides.com/dref/340911>

**Manual abstract:**

REFER TO QUALIFIED SERVICE PERSONNEL. @@@@POWER CORD POLARIZATION: CAUTION: To Prevent Electric Shock, match wide blade of plug to wide slot, fully insert. ATTENTION: Pour éviter les chocs électriques, introduire la lame la plus large de la fiche dans la borne correspondante de la prise et pousser jusqu'au fond. NOTE TO CABLE/TV INSTALLER: This reminder is provided to call the cable TV system installer's attention to Article 820-40 of the National Electric Code (U.S.A.). The code provides guidelines for proper grounding and, in particular, specifies that the cable ground shall be connected to the grounding system of the building, as close to the point of the cable entry as practical. REGULATORY INFORMATION: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a residential installation.

@@@@@. Increase the separation between the equipment and receiver. @@. Consult the dealer or an experienced radio/TV technician for help.

CAUTION: Do not attempt to modify this product in any way without written authorization from Zenith Electronics Corporation. Unauthorized modification could void the user's authority to operate this product. I N S T A L L A T I O N G E T T I N G S T A R T E D PAGE 3 Hookup Directory IMPORTANT!! Use this page to decide where you need to begin your setup.

First, find the line below that best describes what you want to do, then go to that page number. For a complete index go to page 54. This page will help you hook up your Entertainment Machine properly. GENERAL HOOKUP INFORMATION About your Jacks For general information about the jacks on your Entertainment Machine, go to . .

. . pages 4 and 5 INPUT HOOKUP OPTIONS Antenna/Cable If you are using an antenna or have direct cable service, go to . . . . .

. . . . .

. page 6 Cable Box If you are using a cable box, go to . . . .

. . . . .

. . . . .

. . . . .

. . . . .

. . . . page 7 VCR If you are using a VCR, go to . .

. . . . .

. . . . .

. . . . .

. . . . .

page 8 DVD Player If you are using a DVD Player, go to . . . . .

. . . . .

. . . . .

. . . . .

. . . . . page 9 AUDIO EQUIPMENT OPTIONS Speaker Placement For general speaker placement advice, go to . . . .

. . . . .

. . . . .

. . . . .

. . . . . page 10 Audio Speakers To hook up your surround sound speakers, mini tower speaker or sub-woofer, go to . . .

. . page 11 External Stereo To hook up your entertainment machine to an external stereo, go to . . .

. . . . .

. . . . . page 12 For a complete Index, see page 54-55. 206-3359-O PAGE 4 I N S T A L L A T I O N G E T T I N G S T A R T E D Audio Video Jacks Your jack-pack and its various uses. Right/Left Audio Used for stereo sound from various types of equipment.

Video I/2 Connects the video signals from any piece of equipment. RF Connectors: Antenna/Cable Used to connect antenna or cable to the television, either directly or through your cable box. ANTENNA CABLE R- AUDIO- L/MONO VIDEO 1 S-VIDEO 1 R- AUDIO- L/MONO VIDEO 2 S-VIDEO 2 DATA PORT VARIABLE OUT Data Port Reserved for future use. R -AUDIO- L Variable Out Used to connect either an external amplifier, or add a sub-woofer to your surround sound system. S-VIDEO 1/2 A feature available with some very high-end equipment that provides even better picture quality. Mini glossary JACK A connection on the back of a TV, VCR, or any other A/V device. This includes the RF jack and the Audio/Video jacks that are colorcoded. Picture and sound traveling through cable, or on the air, to your television screen. SIGNAL 206-3359-O I N S T A L L A T I O N G E T T I N G S T A R T E D PAGE 5 Hook Up Direct Cable TV or Antenna Hooking up to Direct Cable and Antenna Hooking up to Direct Cable or outdoor Antenna Cable TV wall jack TV back Connecting cable to your Entertainment Machine. 1 Locate the Antenna/Cable jack on the back of your Entertainment Machine.

Rf coaxial wire (75ohm) ANTENNA CABLE 1 2 Connect the cable that runs from the wall or from your outdoor antenna directly to this jack. Antenna If you receive antenna through a wire that is several years old and connects with two small prongs, you will need to purchase a 300 Ohm adapter. It should be available from your local electronics dealer. Hooking up to your Cable Box Some cable services require the use of a cable box to decode premium channels and pay-per-view. Using the programming feature of your remote, you can connect your cable box so that you only need your MBR Trakball remote to control all the channels.

By connecting cable directly to your Entertainment Machine, then running it out to the cable box and back, you make the cable box another source to choose from in the Source menu (see page 22). RF coaxial wire (75ohm) VARIABLE OUT Hooking up to Direct Cable with a cable box Cable TV wall jack 1 2 3 Locate the input jack on the back of your cable provider's decoder box. Connect the cable that runs from the wall to this jack. Locate the output jack on the back of your cable provider's decoder box. Connect a cable to this jack.

Locate the Antenna/Cable jack on the back of your Entertainment Machine. Connect the other end of the cable that runs from the decoder box to this jack. In

*Out Cable box TV back Rf coaxial wire (75 ohm) ANTENNA CABLE 1 4 VARIABLE OUT 206-3359-O PAGE 6 I N S T A L L A T I O N S T A N D A R D Hook Up Your VCR and Cable Connecting a VCR to your Entertainment Machine. 1 Locate the RF or VHF/UHF/CATV In jack on the back of your VCR. Connect the cable line coming from your wall directly to this jack. Find the composite video and audio jacks on the back of your VCR, and connect them following the instructions provided with your equipment. Cable TV wall jack Antenna OR Round wire (75ohm) RF coaxial wire (75 ohm) 2 TV back VCR Back AV panel In ANTENNA CABLE 1 R- AUDIO- L VIDEO 1 The cords should be included with your VCR. To use with PIP: go to the source menu (see page 23) and choose the jack that you've connected your VCR to (Video 1) as the Main or PIP source. If you want to receive your signals on channel 3 or 4, locate the Out to TV jack. Connect a cable from that jack to the Antenna/Cable jack on the back of your Entertainment Machine.*

*34 Output Audio L R Video Out VARIABLE OUT A/V cables not included with TV 206-3359-O I N S T A L L A T I O N S T A N D A R D PAGE 7 Hook Up Your Super VHS VCR Player Connecting a DVD player or S-VHS player to your Entertainment Machine. 1 Locate the VHF In jack on the back of your DVD or S-VHS VCR. Connect the cable line coming from your wall directly to this jack. Now locate the Out to TV jack. Connect a cable from the Out to TV jack to the Antenna 1/Cable 1 jack on the back of your TV.*



[You're reading an excerpt. Click here to read official ZENITH A50M84W user guide](http://yourpdfguides.com/dref/340911)  
<http://yourpdfguides.com/dref/340911>

Find the audio and S-Video jacks on the back of your DVD or S-VHS player, and connect them following the instructions provided with your equipment. 2 TV back Attach to cable wall jack, cable box, or antenna Super VHS VCR or DVD player 3 Back AV panel In 34 Output Audio L R Video Out ANTENNA CABLE 1 R- AUDIO- L S-VIDEO 1 For several pieces of equipment, edit the names under Source ID so you don't forget which is which. See page 31. Some high-end DVD players use a picture reproduction system called "component video." Please refer to your DVD manual for proper installation.

To use with PIP: go to the Source Menu (page 23) and choose the jack you've connected your S-VHS or DVD player (Video 1-3, DVD) as the Main or PIP source. A/V cables not included with TV VARIABLE OUT Mini glossary COMPONENT VIDEO Some video equipment uses three separate lines (Y, R-Y, B-Y) to more precisely reproduce images. Your manual will explain how this relates to your equipment. 206-3359-O PAGE 8 I N S T A L L A T I O N S T A N D A R D Combine your new Entertainment Machine with your home stereo system. External Stereo You'll want to make sure your Entertainment Machine and stereo are located where you want them.

Moving connected equipment can be dangerous for you and for it. TV back 1 Locate the Variable Out jacks on the back of your TV, and the Input jacks on the back of your stereo's amplifier. Connect the two jacks, making sure that the right and left channels are placed correctly. Set up your speakers through your stereo, according to those directions. ANTENNA CABLE 2 3 VARIABLE OUT you can adjust the volume level on your external stereo system even if your remote is in TV mode.

See Amplifier Volume Override on page 46. A/V cables not included with TV External stereo amplifier Mini glossary AMPLIFIER An external machine that amplifies sound from a television, CD player, VCR, DVD or other A/V device. 206-3359-O I N S T A L L A T I O N S T A N D A R D PAGE 9 Room Set-ups for Home Theater General help on designing your home theater set-up. This is just a general room design. Any number of set-ups are possible, and some changes may be needed to maximize your sound. A left and right speaker on either side of the Entertainment Machine will create a "center channel," making the dialog sound as though it's coming directly from the Entertainment Machine. The rear surround sound speakers provide the majority of other sounds, like those from special effects in movies. Your sub-woofer generates ultra-low frequency sound, for rumbling low-end audio. surround sound speaker left speaker right speaker sub-woofer surround sound speaker Sound is affected by speaker placement, so make sure nothing is in front of the speakers, and that they are aimed in appropriate directions. If your surround sound system is on, but there's no sound from the speakers, the program you're watching might not be broadcast in surround sound.

206-3359-O PAGE 10 I N S T A L L A T I O N Q U I C K S T A R T M E N U Quick Start Powering the remote and your Entertainment Machine. 1 Use pages 6-12 to hook up your Entertainment Machine. Plug in your Entertainment Machine and press the Power button on the front panel. The Quick Start screen will instantly appear, with three steps you should follow if you have not yet done so. PRG POWER CABLE VCR AUX TV SURF FLASHBK MUTE CHANNEL VOLUME VOLUME 2 Remove the back of the remote and put in three AAA batteries. MENU 2 5 8 ENTER 3 6 9 NUMBER KEYPAD For direct channel selection and programming functions. ENTER Push to accept menu choices or after channel numbers for faster transfer. QUIT QUIT Leaves programming menus and clears screen of displays. MENU Displays on-screen menus. PIP SWAP FREEZ CC TV/VCR SOURCE SOURCE Push to switch between available sources connected to your Entertainment Machine.

RECORD PAUSE TIMER PLAY REWIND STOP FFWD Remote Control Part Number MBR 3457 Mini glossary MODE The device that the remote control is currently controlling (TV, VCR, DVD, etc.) is its "mode." 206-3359-O PAGE 14 O P E R A T I O N T V F U N D A M E N T A L S Introducing you to the basics of your Entertainment Machine Basic TV Operation Source The source button (TV/VCR/Source) on the remote switches between Video input and Cable/Antenna input. The Time/Channel display will read "Video" in place of a channel number if A/V inputs are selected as the picture source.

Cable/Antenna Input: This setting allows you to change cable or antenna channels and view videocassettes on channel 3 (or 4) in mono sound. Video Input: This setting allows stereo playback of videocassettes. The television cannot ch using Channel Up/Down. Manually pick and choose which active channels will appear when flipping through using Channel Up/Down Set the time yourself, or program your clock to automatically detect the time, and to adjust to Daylight Savings when you program in your time zone. Turn closed captioning on, off, or set it to come on automatically when the television is muted. Choose the captioning or text method for your Entertainment Machine.

Pick the language you want your on-screen menus to appear in. Turns the background for on-screen menus transparent or opaque. Allows you to adjust the color convergence of your Entertainment Machine. Go beyond basics and customize your Entertainment Machine's functions. Program a time for your Entertainment Machine to turn itself on or off, or to turn itself off after a certain amount of time. Label your channels with their network names (ABC, CBS, HBO, etc.). Customize the names of your sources by either selecting a label or making your own. Design a custom channel surf selection for up to four people, and put their names on them. Go to page 23 14 Add/Del/Surf 24 Clock Set 25 Captions 26 Captions/Text 26 Language Background Projo Setup 27 28 16 FEATURES MENU Timer Setup 29 Channel Labels Source ID 30 31 Surf ID 32 206-3359-O PAGE 18 O P E R A T I O N M E N U S On-Screen Menus Overview, cont'd Descriptions of all the menus on your Entertainment Machine.

Menu Name (cont'd) Parental Control Allows parents to block any channel for up to 99 hours, with the use of a password. Program the TV Guide+. Your Entertainment Machine will show you what it's capable of by running through many of its options and menus automatically. Go to page 33 Guide Setup Auto Demo 34 34 35 A U D I O M E N U Customize the sound to suit your room and your taste. Your options are: Bass, Treble, Balance, Audio Mode, SoundRite, Front Surround, Rear Surround, BBE Audio, Speakers. VIDEO MENU Adjust your picture for any viewing situation. Your options are: Contrast, Brightness, Color, Tint, Sharpness, Color Temp, Video Filter, Skin Tone, Video Preset.



[You're reading an excerpt. Click here to read official ZENITH A50M84W user guide](http://yourpdfguides.com/dref/340911)  
<http://yourpdfguides.com/dref/340911>

Control the size and appearance of the PIP inset. Your options are: Contrast, Tint, Size. 36 37 PIP MENU 38 Channel/ Time Display Volume Display Shows the current time, channel, video and audio source, and the Surf status.

Shows the current sound level. 206-3359-O O P E R A T I O N M E N U S S O U R C E M E N U P A G E 19 Source Menu This menu is where you switch input source devices so you can watch your antenna, cable TV, VCR, DVD, or anything else that you have hooked up to your Entertainment Machine. Regular antenna or cable will come through Antenna/Cable 1. All other devices will correspond to the names of the jacks to which they're connected. Source Menu Main Ant/Cable 1 Video 1 Video 2 S-Video 1 S-Video 2 PIP Main Source Menu PIP Ant/Cable 1 Video 1 Video 2 S-Video 1 S-Video 2 Choose the sources for your main picture and PIP.

1 2 3 Push the MENU button repeatedly until the Source Menu appears on your screen. PRG POWER VCR Using the LEFT/RIGHT arrows, choose to set the source for Main or PIP. Press the UP/DOWN arrows to select the entry that describes what source you're using to receive a signal. The names will correspond to the jacks on the back of your TV. If you connected a VCR to the Video 1 jacks, then select Video 1 to watch that VCR. Press ENTER or QUIT to return to regular TV viewing, or repeat from step 2 to set the source for the PIP. You can watch home movies and still scan for the big game. CABLE AUX TV MUTE SURF FLASHBK CHANNEL VOLUME CHANNEL VOLUME 1 4 7 0 2 5 8 ENTER 3 6 9 4 1 MENU QUIT PIP SWAP PAUSE FREEZ TIMER PLAY CC TV/VCR SOURCE 4 2 3 RECORD REWIND STOP FFWD Mini glossary SOURCE The term for the equipment that provides audio and video information to your Entertainment Machine. VCR, DVD players, or Cable Boxes are examples of sources. 206-3359-O PAGE 20 O P E R A T I O N M E N U S A D D / D E L / S U R F Add/Del/Surf Create your own channel selection for cooler surfing. 1 2 7 12 17 22 27 32 37 42 47 52 57 62 3 8 13 18 23 28 33 38 43 48 53 58 63 4 9 14 19 24 29 34 39 44 49 54 59 64 5 10 15 20 25 30 35 40 45 50 55 60 65 EXIT 1 2 Press the MENU button repeatedly until the Setup Menu appears. Using the UP/DOWN arrows, select Add/Del/Surf in the menu. Then press a RIGHT/LEFT arrow to enter the Add/Del/Surf screen. Your screen will be filled with channel numbers, the added channels in white and the deleted channels in gray. The channel picture will be in the upper-right corner.

With the four ARROW buttons, highlight the channel you want to add/delete to your channel list. Press FLSHBK to Add or Delete channels. Press the SURF button to choose which list you're changing (No Surfing or Surf 14). The list name will be on the right, under the inset picture. Press the FLSHBK button to cycle through the options (added or surf). Use the arrow keys to move to the next channel. Note: The status of the channel will appear on the right side of the screen. Also, a Surfed channel will have a pink surfer icon next to it, active channels will be in white, and deleted channels will appear in a gray color. 6 11 16 21 26 31 36 41 46 51 56 61 Ch 32 Added Press FLSHBK 3 No Surfing 3 More Channels 5 PRG POWER 4 5 CABLE VCR AUX TV 4 SURF FLASHBK MUTE 5 CHANNEL VOLUME CHANNEL VOLUME 1 4 7 0 2 5 8 ENTER 3 6 9 6 QUIT 1 2/3 MENU 6 Press ENTER and QUIT to return to TV viewing. PIP SWAP PAUSE FREEZ TIMER PLAY CC TV/VCR SOURCE RECORD REWIND STOP FFWD If the Add/Delete/Surf screen reverts to normal TV viewing, simply press the MENU key and then a RIGHT/LEFT arrow key to get back to the Add/Delete/Surf screen Instead of "Surf 1" or "Surf 2," customize the name of your program listings.

See Surf ID on page 32. 206-3359-O O P E R A T I O N M E N U S S E T U P M E N U P A G E 21 Clock Set Automatically set the clock and date on your Entertainment Machine. 1 2 Press MENU key repeatedly until the Setup Menu appears. Select Clock Set in the menu using the UP/DOWN keys. Press the LEFT/RIGHT arrow keys to set the clock.

Clock Mode should be the default feature selected in the menu. Press a LEFT/RIGHT arrow key to choose either Auto or Manual for clock mode. Manual will let you set the time yourself while Auto will set it for you while your Entertainment Machine is off. Manual: Choose Manual, then press the DOWN arrow key and you will activate a display where you can set the clock by entering the time using the NUMBER keypad. Use FLSHBK to select AM/PM. or Clock Menu Clock Mode PBS Channel Time Zone Day. Saving Clock Mode Manual Auto Clock Menu Clock Mode PBS Channel Time Zone Day. Saving 3 Clock Menu Clock Mode Time Set Clock Mode Manual Auto Clock Menu Clock Mode Time Set 4 PRG POWER VCR CABLE AUX TV MUTE SURF FLASHBK 5 Auto: Choose Auto, then press the DOWN arrow key to select PBS channel. Use the NUMBER Keypad to enter the PBS Channel or cycle through the list using the LEFT/RIGHT arrow keys. Your current channel will change to that station. Turn off your Entertainment Machine for ten seconds to activate the correct time. CHANNEL VOLUME CHANNEL VOLUME 1 4 2 5 8 ENTER 3 6 9 6 4 2 3 7 0 1 4/5 Embedded in the PBS broadcast signal is the information for the correct time and date. Your Entertainment Machine will read that information and automatically display the right time. If you follow these steps and your time is still one hour off, check your Time Zone and Daylight Savings Time within your Entertainment Machine to make sure they are properly set. MENU QUIT PIP SWAP PAUSE FREEZ TIMER PLAY CC TV/VCR SOURCE RECORD REWIND STOP FFWD 206-3359-O PAGE 22 O P E R A T I O N M E N U S S E T U P M E N U Captions and Caption/Text Turn closed captioning or text on, off, or have it appear automatically.

Caption/Text is a feature which allows your Entertainment Machine to receive various closed caption and text options provided by your broadcaster. Availability and functionality of Caption/Text feature is determined only by your broadcaster and may not be available in your area. PRG POWER CABLE VCR AUX TV 1 2 3 Push the MENU Button until the Setup menu appears on your screen. Using the UP/DOWN buttons, select Captions in the menu. Use the RIGHT/LEFT arrows to choose whether you want the captions On, Off, or Caption When Muted, which sets captioning to come on automatically when you're Entertainment machine is Soft Muted or Muted. Press the MENU button again, and use the Down arrow key to select Caption/Text in the menu. Using the RIGHT/LEFT arrows, select from Caption 1 through 4 or Text 1 through 4 as the captioning used. Press ENTER or QUIT to return to normal viewing. SURF FLASHBK MUTE CHANNEL VOLUME CHANNEL VOLUME 1 4 7 0 2 5 8 ENTER 3 6 9 4 5 6 6 QUIT 1/4 2/4 MENU 3/5 PIP SWAP PAUSE FREEZ TIMER PLAY CC TV/VCR SOURCE RECORD Choose Caption 1 to view the traditional Closed Captioning.



[You're reading an excerpt. Click here to read official ZENITH](#)

[A50M84W user guide](#)

<http://yourpdfguides.com/dref/340911>

REWIND STOP FFWD Mini glossary CAPTIONS/TEXT TEXT CAPTIONS WHEN MUTED A form of subtitling that writes out the dialog for your program. Arbitrary text not related to the program. Sets captioning to come on automatically when your volume is soft muted or muted. 206-3359-O O P E R A T I O N MENUS SETUP MENU PAGE 23 Language Menu Choose what language your on-screen menus appear in. 1 2 3 4 Press the MENU button until the Setup menu appears. PRG POWER Using the UP/DOWN arrows, select Language in the menu.

Press a RIGHT/LEFT arrow to choose which language you prefer, English, Spanish, or French. Press ENTER or QUIT to return to normal TV viewing. CABLE VCR AUX TV SURF FLASHBK MUTE CHANNEL VOLUME VOLUME CHANNEL 1 4 7 0 2 5 8 ENTER 3 6 9 4 QUIT 1 2 MENU 3 PIP SWAP PAUSE FREEZ TIMER PLAY CC TV/VCR SOURCE RECORD REWIND STOP FFWD 206-3359-O PAGE 24 O P E R A T I O N MENUS SETUP MENU Background Customize the look of your on-screen menus. 1 2 3 4 Press the MENU button until the Setup menu appears. Using the UP/DOWN arrow buttons, select Background in the menu.

Press a RIGHT/LEFT arrow to choose whether you want an opaque background On or Off. Press ENTER to return to normal TV viewing. PRG POWER CABLE VCR AUX TV SURF FLASHBK MUTE CHANNEL VOLUME VOLUME CHANNEL 1 4 7 0 Turning your Background on makes reading your menus easier. 2 5 8 ENTER 3 6 9 4 QUIT 1 2 MENU 3 PIP SWAP PAUSE FREEZ TIMER PLAY CC TV/VCR SOURCE RECORD REWIND STOP FFWD 206-3359-O O P E R A T I O N MENUS F E A T U R E S M E N U PAGE 25 Timer 1 2 3 4 Press the MENU key on the remote control repeatedly until the Special Features Menu appears. Using the UP/DOWN arrows on the remote control, select Timer Setup on your screen. Press a RIGHT/LEFT arrow. The Timer Menu screen will appear. Sleep Timer: Use the RIGHT/LEFT arrows to adjust the length of time (fifteen and thirty minute increments) until the TV shuts down. Timer Menu S l e e p T i e r m O n T i e m O f T i e f m O n / f T i e r O f m 0: 15 Timer Menu S l e e p T i e r m O n T i e m O f T i e f m O n / f T i e r O f m 11: A M 00 FLSHBK Automatically turn your Zenith Entertainment Machine on or off. PRG POWER Note: If you wish to use the On/Off Timer to set specific times for your Entertainment Machine to turn on and off, continue to step five to set the On Time, Off Time and On/Off Timer; or press ENTER or QUIT to return to TV viewing.

CABLE VCR AUX TV SURF FLASHBK MUTE 7 CHANNEL VOLUME VOLUME 5 6 7 8 On Time: Using the UP/DOWN arrows on the remote control, select On Time on your screen. CHANNEL 1 Press a RIGHT or LEFT arrows or use the NUMBER key pad to enter the time your TV will automatically turn on. Press the FLSHBK button to select AM or PM. Press the UP/DOWN arrow keys to select Off Timer in the Timer menu and repeat steps six and seven to set the Off Time. Press the UP/DOWN arrow keys to select On/Off Timer in the Timer menu Press the LEFT or RIGHT arrows to turn on the On/Off Timer. REWIND 2 5 8 ENTER 3 6 9 4 7 10 1 2 0 MENU QUIT 3/4/6 5/8/9 9 10 11 PIP SWAP PAUSE FREEZ TIMER PLAY CC TV/VCR SOURCE RECORD FFWD STOP Press ENTER or QUIT to return to TV viewing. The On/Off timer will not work until the Clock on your television has been set. 206-3359-O PAGE 26 O P E R A T I O N MENUS F E A T U R E S M E N U Channel Labels Choose preset labels for channels or create your own. ---ACTS BCC CBC NONE AD&E BET CBN CDM DIS ESP2 FNN FX HBO2 A&E ADC BRAV CBS CSPE DISC ET FOOD GALA HBO3 ABC AMC CA CATV CSP2 E! EWTN FOX GOLF HC ACTN AT CAAT CNBC CTN ENC FAM F&V H&G HIST Press FLASHBK Ch 32 AMC 1 With the CHANNEL UP/DOWN key or NUMBER KEYPAD, set your Entertainment Machine to the channel you want to label. Press the MENU button repeatedly until the Special Features menu appears.

Using the UP/DOWN buttons, select Ch. Labels in the menu. Press a RIGHT/LEFT arrow to enter the channel label menu. The current channel will appear in the upper-right corner, and the screen will fill with a list of possible channel labels. @@@@You can use up to four letters in the label.

@@@@Using the UP/DOWN arrows, select Source ID in the menu. Press a RIGHT/LEFT arrow to enter the Source ID screen. @@@@The titles under Label are what you will edit. @/@&#+ ! @@@@Choose one that best describes the equipment connected to the jack. @@@@Using the UP/DOWN arrows, select Surf ID in the menu.

Press a RIGHT/LEFT arrow to enter the Surf ID screen. @@With the UP/DOWN arrows, select which surf list you want to edit. Press FLSHBK to enter the Edit menu. An alphabet, including some symbols will appear. @/@&#+ ! @@Using the UP/DOWN arrows, select Parental Ctl. within the menu. Press a RIGHT/LEFT arrow to enter the parental controls (Par. Ctl.) menu. With the UP/DOWN arrows, select Block Ch.

Press a RIGHT/LEFT arrow to enter the channel selection menu. @@@@The screen lists the channel as Unblocked. Press the FLSHBK key Block the channel. @@Press the MENU button to return to the Par. Ctl. menu. Press an UP/DOWN arrow to select Set Hours in the menu. @@Use the RIGHT/LEFT arrows to increase/decrease the amount of time. @@Ctl. menu.

123 Special Features Parental Ctl. Block Ch. Block Video Set Hours Set Password Lock On/Off Timer Setup Ch. @@@@You will be asked to reenter the same code. @@@@To cancel the demo, you must turn off the Auto Demo.

1 2 MENU 3 PIP SWAP FREEZ TIMER PLAY CC TV/VCR SOURCE RECORD PAUSE REWIND STOP FFWD 206-3359-O O P E R A T I O N A U D I O M E N U PAGE 31 Audio Menu Customize the sound on your Entertainment Machine. PRG 1 2 Press the MENU key on the remote control until the Audio menu appears. Using the UP/DOWN arrows on the remote control, select the setting you want to change. Choose from: · Bass: Increase/decrease lower-end sounds. · Treble: Increase/decrease higher-end sounds.

· Balance: Allows you to put the sound more to SURF FLASHBK MUTE POWER VCR CABLE AUX TV the left or right channel. · Audio Mode: Choose from stereo sound, CHANNEL VOLUME CHANNEL VOLUME mono, or SAP. · SoundRite: Scans for changes in sound level during commercials, then adjusts the sound to match your current level. · Front Surr: Turn the front surround sound speakers on or off. · Speakers: Turn the regular speakers on or off. 1 4 2 5 8 ENTER 3 6 9 3 4 Use the RIGHT/LEFT arrows to adjust the sound setting to whatever you prefer. Press ENTER or QUIT to return to TV viewing, or press the UP arrow to return to the Audio Menu to adjust another option. Not all programming is broadcast in stereo sound, or has Second Audio Programming/SAP.



[You're reading an excerpt. Click here to read official ZENITH](#)

[A50M84W user guide](#)

<http://yourpdfguides.com/dref/340911>

Programming that doesn't broadcast SAP may be silent when you set your Entertainment Machine on this setting. 7 0 4 QUIT 1 2 MENU 3 PIP SWAP PAUSE FREEZ TIMER PLAY CC TV/VCR SOURCE RECORD REWIND STOP FFWD Mini glossary STEREO SOUND MONO SOUND 2ND AUDIO/SAP Stereo (Stereophonic) sound refers to audio that's divided into right and left sides.

Mono (monaural) sound is one channel of sound. On more than one speaker all the speakers play the same audio. Second Audio Programming (SAP) is another, separate, audio channel available with some programming. Choosing SAP often refers to listening to audio in another language, such as Spanish or French. 206-3359-O PAGE 32 O P E R A T I O N VIDEO MENU Customize the picture quality on your Entertainment Machine. Video Menu 1 2 Press the MENU button until the Video menu appears. Using the UP/DOWN arrows, select the menu option that you want to change. Your options are: · Contrast: Changes the amount of difference PRG POWER CABLE VCR AUX TV between black levels and white levels in your picture. · Brightness: Increases or decreases the SURF FLASHBK MUTE amount of white in your picture. · Color: Adjust levels of all colors. · Tint: Adjust the relative amounts of the CHANNEL VOLUME VOLUME color red and green in your picture. · Sharpness: Raise or lower the definition of the picture. The lower the level, the softer the image will appear. · Color Temp: Adjust the color qualities of CHANNEL the entire picture at once: warm, medium, and cool. · Video Filter: Reduces outside interference 1 4 7 0 2 5 8 ENTER 3 6 9 to enhance picture clarity. · Skin Tone: Automatically adjusts the appearance of skin color, making it more natural. · Video Preset: Choose from a range of 4 QUIT options depending on your viewing situation. Custom uses the settings you have manually chosen, while Preset restores the levels to their original settings. 1 2 MENU 3 3 4 Press a RIGHT/LEFT arrow to adjust the option you have selected. Press ENTER or QUIT to return to regular TV viewing.

PIP SWAP PAUSE FREEZ TIMER PLAY CC TV/VCR SOURCE RECORD REWIND STOP FFWD Someone left the picture looking terrible? Just choose Preset under Video Preset to get the regular picture back quickly. Your modified video selections can be different for each source. Modifying the settings in one source will not change settings in another source. 206-3359-O O P E R A T I O N PICTURE-IN-PICTURE PAGE 33 PIP Overview Picture-in-picture explained. YOUR PICTURE-IN-PICTURE FEATURE The Picture-In-Picture (PIP) function allows you to put a smaller picture, called the "inset," on the bigger screen, or the "main" picture. Don't want to miss any of the big game, but hate commercials? Just put the game in the inset, and surf with the main picture. WORKING WITH PIP Just like your Entertainment Machine's main screen, PIP will need a source from which to take its image. This featured can be adjusted under the Source menu (see page 23). PIP BUTTON FUNCTIONS PIP: Press PIP to display your Picture-In-Picture. Press again to remove PIP.

SWAP: Press SWAP to swap the main and the PIP pictures. Press again to return to the original display. FREEZ: Press FREEZ to freeze the motion in the PIP window. Press FREEZ again to return to a live PIP window. SOURCE: When PIP is shown, SOURCE selects the source for the PIP picture. Picture-in-Picture Main Picture POSSIBLE REASONS FOR ADJUSTING PIP SOURCE 1. You use a cable box to receive premium channels, and have "looped out" on the back of the TV. Set the PIP source to the cable box source, and the Inset will display the premium channels, which can then be swapped with the main picture. 2. You want to watch a video tape, but keep scanning for another movie or game.

@@@ Using the UP/DOWN arrows, select Contrast, or Tint. Use the RIGHT/LEFT arrow to adjust the selection you have chosen. @@@@ Use the UP/DOWN arrows to select which size you want your PIP to be. @@@@ Make a note of the threedigit code--you'll need it soon. Press and hold the PRG key.

It's recessed so it doesn't get pushed accidentally. When the indicator light turns on, you can release the button. @@@@ Aim the remote at the device and push the POWER button. It should turn off. @@@@.

..... 116 121 130 133 Adventura TV/VCR 154 Akai .....

..... 104 Amark .....

... 103 146 AOC ..

.....

... 104 Bell & Howell ... 121 Broksonic ....

.. 131 136 Candle .....

139 Centurion .....

. 119 Citizen .....

.... 121 139 Contec .....

.. 141 Coronado .....

.....

. 103 Curtis Mathes .....

116 119 121 Daewoo .....

..... 119 Elektra .....

.... 121 Emerson ..

.....

. 103 104 123 124 131 136 145 Emerson TV/VCR .. 158 Fisher .....

.. 109 118 Funai TV/VCR .....

.....

103 104 119 147 Goldstar TV/VCR .. 153 Hitachi ...

..... 102 103 129 163 J.C. Penney ...

.. 104 110 114 117 119 JVC .....

.. 125 132 164 KMC ...

.....

.. 103 KTV .....

.. 103 104 138 Kurazai .....

121 Lodgenet .....

.. 121 Logik ...  
 ..... 121 LXI .....  
 ..... 133 137 Magnavox .....  
 .. @@ .. 104 119 120 130 140 155 Montgomery Ward 103 104 105 113 114 119 121 130 133 Sears .  
 .....  
 ... 103 108 109 110 111 118 134 Sharp .....  
 .. 103 105 122 133 137 156 169 Signature 2000 ... 103 104 105 113 114 119 121 130 133 Sony .....  
 .... 115 143 151 170 Soundesign .  
 .... 139 Sylvania .  
 ..... 112 113 117 119 127 128 139 Symphonic TV/VCR 154 Tatung ....  
 .... 106 Teknika .....  
 .. 103 112 121 124 139 Telerent ...  
 .... 103 121 Toshiba .  
 ..... 110 111 134 171 XR 1000 .....  
 ... 121 Yorx .....  
 ... 119 Zenith ..  
 .....  
 . 101 149 175 Zenith TV/VCR ... 153 154 172 NEC .....  
 ..... 104 119 Panasonic .....  
 106 107 160 166 Panasonic TV/VCR 174 Philco .....  
 .... 103 104 112 113 139 Philips .  
 ..... 112 113 Pioneer ...  
 ..... 135 Portland .....  
 .. 103 ProScan ...  
 .... 116 157 162 167 Quasar .  
 ..... 106 107 RCA ...  
 ..... 104 116 126 157 161 162 167 168 Realistic ...  
 .... 105 123 124 Sampo .  
 .....  
 .. 119 Samsung ..... 103 119 134 141 Sanyo .  
 ..... 108 109 118 Scott ..  
 .....  
 .. 119 124 Majestic ...  
 .... 121 Marantz .....  
 . 104 120 155 Megatron ..... 146 Memorex ..  
 .....  
 121 VCRs Admiral .....  
 .. 208 261 Adventura ..... 231 261 Aiwa ..  
 ..... 231 Akai ...  
 .....  
 .. 223 238 241 Audio Dynamics .. 202 218 Bell & Howell .  
 ... 206 247 Broksonic ..... 221 226 233 250 255 Canon .  
 ..... 214 Citizen ...  
 .....  
 209 Craig .....  
 .... 212 Criterion .....  
 . 239 Curtis Mathes ... 214 259 Daewoo .....  
 . 244 246 248 254 Daytron ....  
 ... 236 246 DBX ..  
 ..... 202 218 Emerson ..  
 ..... 203 209 221 223 226 233 235 243 250 Fisher .....  
 .... 211 212 213 247 Funai .  
 .....  
 ... 231 General Electric .. 214 216 220 Goldstar .....



.. 209 Go Video . . . . . 256 262 263 275 Hitachi .

.....  
.. 215 231 257 Instant Replay . . .  
214 227 Inteq . . . . . 273 J.

C. Penney .



[You're reading an excerpt. Click here to read official ZENITH](#)

[A50M84W user guide](#)

<http://yourpdfguides.com/dref/340911>

. . . . 214 215 218 227 JVC . . . .  
 . . . . .  
 . 202 224 225 258 268 Kenwood . . . .  
 . . . 202 Logik . . . . .  
 . . . 239 LXI . . . . .  
 . . 209 231 Magnavox . . . .  
 . . . 207 214 231 Marantz . . . .  
 . . . . 207 218 Marta . . . . .  
 . . . . 209 Memorex . . . . .  
 . 206 212 214 231 Mitsubishi . . . .  
 . . 204 222 252 264 Montgomery Ward 208 214 216 219 231 249 Optimus . . . .  
 . . . . 208 209 259 Orion . . . . .  
 . . . 250 283 Panasonic . . . . . 214 251 259 Pentax . . . . .  
 . . . . .  
 . . 215 Philco . . . . .  
 . . . . . 207 214 Philips . . . . .  
 . . . . 207 214 227 Pioneer . . . . .  
 . 210 215 Portland . . . . .  
 . . . 246 ProScan . . . . .  
 . . . . 216 260 Quasar . . . . .  
 . . . 214 259 RCA . . . . .  
 . . . 215 216 220 227 240 242 249 260 267 Realistic . . . . .  
 . . . . .  
 206 208 212 214 231 Samsung . . . . . 220 230 238 Sansui . . . . .  
 . . . . . 239 Sanyo . . . . .  
 . . . 206 212 247 Scott . . . . .  
 . . . . .  
 . . 204 205 233 243 Sears . . . . .  
 . 206 209 211 212 215 Sharp . . . . .  
 208 261 272 Shintom . . . . .  
 . . 239 Signature 2000 . . . . .  
 208 214 216 219 231 249 261 Sony . . . . . 217 232 237 274 Sony Beta/VHS . . . . .  
 . . 237 Sony Video 8 . . . . 217 Sylvania . . . . .  
 . . . 207 214 227 Symphonic . . . . .  
 . . . 231 Tashiko . . . . .  
 . . . . . 209 Tatung . . . . .  
 . . . . 202 Teac . . . . .  
 . . . . 202 231 Teknika . . . . .  
 . . . . .  
 . . 209 234 Toshiba . . . . .  
 205 215 271 Vector Research . . 204 218 XR 1000 . . . . . 239 Yamaha . . . . .  
 . . . . .  
 . . 202 218 Zenith . . . . .  
 . . . . . 201 224 225 229 237 Zenith Beta . . . . .  
 273 Multi Tech . . . . . 239 NEC . . . . .  
 . . . . .  
 . 202 218 206-3359-*O P E R A T I O N PROGRAMMING CODES PAGE 37 Programming Codes Cable Satellite Allegro* . . . . .  
 . . . . 358 362 Allegro A/B Switch 361 Gemini . . . . .  
 . . 305 331 338 General Electric . . 367 General Instrument 304 305 306 307 308 309 310 318 Hamlin . . . . .  
 . . . 302 303 345 365 366 Jerrold . . . . .  
 . . . . .  
 . 304 307 308 309 310 318 360 363 Kale Vision . . . . . 335 Macom . . . . .  
 . . . . 314 321 Magnavox . . . . .  
 334 NSC . . . . .

.....  
 335 339 368 369 370 Oak .....  
  
 311 332 342 Panasonic ..... 313 320 Paragon ....  
 ... 333 Philips ..  
 .....  
 . 347 350 352 354 355 Pioneer ..... 315 343 RCA DSS .  
  
 ..... 373 Regency ....  
 ... 329 Samsung ..  
 .....  
 335 Scientific Atlanta 316 323 336 364 Tocom ..... 317 318 346 Unika ..  
  
 ..... 348 362 United Satellite .. 344 Universal .  
 .....  
 358 362 Vid Tech .....  
 .. 340 Video Way ..... 349 Viewstar ..  
  
 ..... 354 355 372 Zenith .....  
 ... 301 353 374 Zenith Satellite ..  
 312 328 330 351 378 Find the codes you need to program your remote. Sprucer ....  
 .... 313 Standard Comp ... 335 Texscan ...  
  
 .... 339 356 371 DVD Players Pioneer .....  
 . 402 403 527 Sanyo .....  
 .....  
 401 Sony ..... 404 522 Toshiba .  
  
 ..... 521 Zenith ...  
 .....  
 401 521 Denon. ....  
 .... 402 403 Mitsubishi .....  
  
 403 Panasonic ..... 405 Pioneer ....  
 .... 402 403 Sanyo .  
 .....  
 ... 401 Sony .....  
  
 ... 404 Zenith .....  
 . 401 Audio CD Players Akai .....  
 .....  
 . 409 424 Carver .....  
  
 510 Crown ..... 410 Denon .  
 .....  
 .. 411 Fisher ...  
 ..... 412 438 Goldstar .....  
  
 ... 460 Harman/Kardon .. 413 JVC .....  
 .....  
 415 Kenwood .....  
 . 412 416 417 441 Magnavox ..... 421 422 433 434 Mitsubishi ...  
  
 ... 423 424 NAD .....  
 ... 425 426 447 Nakamichi ..  
 .... 427 428 NEC .  
 ..... 429 Onkyo .  
  
 ..... 430 Panasonic ...  
 ... 431 432 Philips ..  
 .....  
 . 421 433 434 Pioneer ..... 431 435 Quasar .  
  
 ..... 432 Radio Shack ...  
 .. 431 436 439 440 441 RCA ...  
 .....  
 .. 437 Sanyo .....

. 438 439 Scott . . . . .  
 440 Sharp . . . . .  
 . . . . . 441 442 Sony.  
 . . . . . 443 444 445 Soundesign .  
  
 . . . . . 461 498 501 502 Sylvania . . . . .  
 . 433 Teac . . . . .  
 . . . . .  
 446 Technics . . . . . 432 459 Toshiba . . . . .  
  
 . . . . . 447 Yamaha . . . . .  
 . . 448 Zenith . . . . .  
 . . . . .  
 460 461 498 501 502 Audio Tape Decks Denon. . . . . 455 Harman/Kardon.  
  
 . . 456 JVC . . . . .  
 . . 457 Kenwood . . . . .  
 . . . . . 450 Onkyo . . . . .  
 . . . . . 458 Philips DCC . . . . .  
  
 . . . 454 Pioneer . . . . .  
 . 451 478 Sony . . . . .  
 . . . . .  
 . 452 Audio Tuner and Amplifiers Denon. . . . .  
  
 462 463 Fisher . . . . . 464 505 Goldstar . . . . .  
 . . . . .  
 460 Harman/Kardon . . . 465 JVC . . . . .  
 . . . . . 466 Kenwood . . . . .  
  
 . . . . . 468 469 506 Marantz . . . . .  
 . . . 472 503 Onkyo . . . . .  
 . . . . .  
 . . 473 Panasonic . . . . . 507 Philips . . . . .  
  
 . . . . . 475 476 Philips/Magnavox 505 Sherwood . . . . .  
 . . 487 488 Sony . . . . .  
 . . . . .  
 . . 489 490 491 492 Soundesign . . . . . 461 498 501 502 Teac . . . . .  
  
 . . . . . 494 495 Technics . . . . .  
 . . . . . 497 507 509 Yamaha . . . . .  
 . . . . .  
 . . 496 Pioneer . . . . . 477 478 479 Radio Shack . . . . .  
  
 . . . . . 487 488 RCA . . . . .  
 . . . . . 508 Realistic . . . . .  
 . . . . .  
 . 480 Sanyo . . . . .  
  
 481 Scott . . . . . 482 Sharp . . . . .  
 . . . . .

. . . 483 206-3359-O PAGE 38 O P E R A T I O N PROGRAMMING CODES A complete list of button functions for your remote control. Zenith Button Functions TV Mode Zenith Code 101 TV On/Off Selects Cable Selects VCR Selects Aux Selects TV Surf On/Off TV Flashback TV Mute TV Channel Up TV Channel Dn TV Volume Up TV Volume Dn TV Digit 1 TV Digit 2 TV Digit 3 TV Digit 4 TV Digit 5 TV Digit 6 TV Digit 7 TV Digit 8 TV Digit 9 TV Digit 0 TV Enter TV Menu TV Select Up TV Select Dn TV Adjust Left TV Adjust Right TV Seq Sound TV PIP TV PIP Swap TV PIP Freeze TV Closed Captions TV Timer TV Sources VCR Record VCR Pause VCR Rewind VCR Play VCR Stop VCR Fast Forward KEY NAME POWER CABLE VCR AUX TV SURF FLASHBK MUTE CHANNEL UP CHANNEL DN VOLUME (RIGHT) VOLUME (LEFT) 1 2 3 4 5 6 7 8 9 0 ENTER MENU UP ARROW DOWN ARROW LEFT ARROW RIGHT ARROW QUIT/A B C CC TIMER TV/VCR/SOURCE RECORD PAUSE REWIND PLAY STOP FFWD References: VCR Mode Zenith Code 201 VCR On/Off Selects Cable Selects VCR Selects AUX Selects TV VCR AM/PM VCR Flashback TV Mute VCR Channel Up VCR Channel Dn TV Volume Up TV Volume Dn VCR Digit 1 VCR Digit 2 VCR Digit 3 VCR Digit 4 VCR Digit 5 VCR Digit 6 VCR Digit 7 VCR Digit 8 VCR Digit 9 VCR Digit 0 VCR Enter VCR Menu VCR Select Up VCR Select Dn VCR Adjust Left VCR Adjust Right VCR Quit VCR+ VCR Channel Map VCR Search VCR Memory VCR Timer TV Tuner or VCR Tuner VCR Record VCR Pause VCR Rewind VCR Play VCR Stop VCR Fast Forward Cable Mode Zenith Code 353 Cable Box On/Off Selects Cable Selects VCR Selects Aux Selects TV Cable FC/Fav Ch Cable Flashback TV Mute Cable Channel Up Cable Channel Dn TV Volume Up TV Volume Dn Cable Digit 1 Cable Digit 2 Cable Digit 3 Cable Digit 4 Cable Digit 5 Cable Digit 6 Cable Digit 7 Cable Digit 8 Cable Digit 9 Cable Digit 0 Cable Enter Cable Menu Cable Up Arrow Cable Dn Arrow Cable Left Arrow Cable Right Arrow Cable Quit Day Up Day Down Cable Pg Up Cable Pg Down Cable Timer

*Cable Info Cable Buy Cable Guide VCR Rewind VCR Play VCR Stop VCR Fast Forward AUX Mode Zenith Code 401 AUX TV/Disc Selects Cable Selects VCR Selects AUX Selects TV AUX Audio AUX Frame/Time TV Mute AUX Skip >> AUX Skip << TV Volume Up TV Volume Dn AUX Digit 1 AUX Digit 2 AUX Digit 3 AUX Digit 4 AUX Digit 5 AUX Digit 6 AUX Digit 7 AUX Digit 8 AUX Digit 9 AUX Digit 0 Aux Display AUX Program AUX Part AUX Random AUX x3 FAST < AUX x3 FAST > AUX Clear AUX Repeat-Side AUX Repeat-A-B AUX Repeat-Chap AUX Memory AUX Still AUX TV/Disc AUX Edit AUX Pause AUX Scan << AUX Play AUX Stop/Eject AUX Scan >> 124-212-37 and  $\mu$ P 221-952-02A 206-3359-O O P E R A T I O N PROGRAMMING CODES PAGE 39 Amplifier Volume Override 1 Program the code that operates your amplifier into the CABLE or AUX mode, as described on the "Programming Your Remote" page.*

*Select the mode in which you want amplifier volume to appear (e.g. TV). Press and hold PRG on your remote until the indicator light stays lit.*



**[You're reading an excerpt. Click here to read official ZENITH](#)**

**[A50M84W user guide](#)**

**<http://yourpdfguides.com/dref/340911>**

Press 4-9-9; then ENTER on the remote. The indicator light will flash three times and then turn off. Audio system volume/mute now appears in the mode selected. 3 Indicator Light PRG POWER Control the volume on your sound amplifier while in TV mode. CABLE VCR AUX TV 2 3 4 2 SURF FLASHBK MUTE CHANNEL VOLUME CHANNEL 1 4 7 0 2 5 8 ENTER 3 6 9 4 5 MENU QUIT PIP SWAP PAUSE FREEZ TIMER PLAY CC TV/VCR SOURCE RECORD Your volume and mute keys now control your amplifier.

To put everything back to normal, reprogram all buttons with their original codes (see the "Programming Your Remote" section). If you can't find the code for your amplifier, use the Auto Find feature. REWIND STOP FFWD Mini glossary AMPLIFIER: An external machine that amplifies sound from a television, CD player, VCR, DVD or other A/V device. 206-3359-O PAGE 40 O P E R A T I O N S P E C I A L F E A T U R E S Use the remote control to search all possible codes. Remote Control Auto-Find If Programming the Remote did not find your code, try this procedure to automatically find the code for your device. If your remote becomes inoperable, go back to "Programming your Remote" and enter the Zenith TV code for step five. 2 Indicator Light PRG POWER 5/7 3 CABLE VCR AUX TV 1 2 3 4 5 Turn on the device you're programming for the remote control. Press and hold the PRG key until the indicator light turns on. Press the key for the device you're trying to program (CABLE, VCR, AUX, TV). SURF FLASHBK MUTE CHANNEL VOLUME CHANNEL 1 Enter the code 0-0-0 (zero-zerozero), then press the ENTER key right away.

Aim the remote at the correct device and press the POWER button. Allow a second to pass, then push the POWER button again. Repeat until the device turns off. (This is a trial and error process, so it may be necessary to repeat these steps until the remote finds your code.) Push ENTER to save the code.

The indicator light will flash 3 times and then turn off. Press POWER to turn the device back on. 2 5 8 ENTER 3 6 9 4 7 4 0 6 QUIT MENU PIP SWAP PAUSE FREEZ TIMER PLAY CC TV/VCR SOURCE 6 7 RECORD REWIND STOP FFWD You can quickly get out of Auto Find by pressing the PRG button. If the indicator light stays on while you push Power, instead of turning off, all the codes have been tried and your device can't be programmed. 206-3359-O REFERENCE MAINTENANCE PAGE 41 Maintenance Early malfunctions can be prevented.

Careful and regular cleaning can extend the amount of time you will have with your new Entertainment Machine. Be sure to turn the power off and pull out the plug before you begin any cleaning. Caring for your Entertainment Machine. SCREEN CLEANING 1. Here's a great way to keep the dust off your screen for a while. Wet a soft cloth in a mixture of lukewarm water and a little fabric softener or dish washing detergent. Wring the cloth until it's almost dry, and then use it to wipe the screen. 2. Make sure the excess water is off the screen, and then let it air-dry before you turn on your Entertainment Machine. CABINET CLEANING 1.

Use a soft cloth with a mild soap solution to wipe the cabinet (avoid using any cleaner that says "industrial strength" or "will wash the white off of rice" on the label). 2. Rinse the cloth and wipe the cabinet again. 3. Let the cabinet air-dry before turning the Entertainment Machine on. WOOD CABINETS Use a quality wood cleaner and polish. This will protect the Entertainment Machine from dirt and dust, as well as keep the cabinet looking new. EXTENDED ABSENCE If you leave your Entertainment Machine dormant for a long time (such as a vacation), it's a good idea to unplug the power to protect against possible damage from lightning or power surges. If you use an off-air antenna, you may also want to disconnect it from the back of your Entertainment Machine before leaving. 206-3359-O PAGE 42 REFERENCE MAINTENANCE Caring for your Entertainment Machine.

Maintenance cont'd PICTURE INTERFERENCE Even though you may be getting cable, the signal may be weak, which means the quality of your picture may suffer due to other factors. If there are problems with the image on your Entertainment Machine, consult the Troubleshooting guide on the following pages. VIDEO GAMES AND OTHER FIXED-PATTERN DISPLAYS If you use your Entertainment Machine to play video games or for other uses that have single, fixed images, such as a photo-CD player, you should avoid setting the Brightness level too high. If static images, like network identification patterns, are left sitting for too long, they can leave a permanent impression on the picture tube. You can reduce the chance of this happening by limiting the amount of time you use the fixed-image display, and by reducing the contrast and brightness levels.

If you unplug your Entertainment Machine, you may have to reset the clock using the Clock Set menu described earlier. 206-3359-O REFERENCE MAINTENANCE PAGE 43 Troubleshooting Some quick and easy tips to fixing problems yourself. SYMPTOMS Snowy picture and unclear sound. SOLUTIONS . . . . . Check your antenna connection or location Check your cable input. Check to see if the TV/

VCR button on your VCR has the TV selected. Check your antenna direction and/or location. Check your cable input Make sure the cable from your antenna to your Entertainment Machine is properly connected. Multiple images or 'ghost shadows.' Interference: Sharp lines across the screen and unclear sound. The following may cause image problems or distortion: Electrical appliances, powerful lights, cars, trucks; computers or portable phones; medical equipment . If possible increase the distance between your Entertainment Machine and the offending appliance. Or shut one of them off. . Check volume levels. . Make sure the TV is not Muted. . Try another channel.

The problem may be the broadcast, not your Entertainment Machine. . Are the Audio A/V cables properly installed? . Are the wires for external speakers (if you have external speakers) properly installed? . Make sure your speakers turned on under the Audio menu. . If your audio mode is set to SAP, that channel may not have a SAP program. . Are you in TV or cable tuning mode, and should be in the other? . Make sure output channels on all A/V equipment are on the same channel (3 or 4). . Check that all connections are tight. . Is the AC power plugged in? . Check that your AC power outlet works. (Test it by plugging in something else or try another plug.) . Make sure your brightness and audio controls are set properly. . Try another channel.



[You're reading an excerpt. Click here to read official ZENITH A50M84W user guide](http://yourpdfguides.com/dref/340911)  
<http://yourpdfguides.com/dref/340911>

The problem may be with the broadcast.

· Check the color control in the Video menu. · Try another channel. The problem may be with the broadcast. · The CC (closed caption) option may be in Text mode. Select Caption 1, or OFF in the Captions/Text menu.

(See page 25). · Your program is in letterbox. This means that the shape of your TV is a square, but the program is a rectangle. Think of the bars as empty space the program doesn't fill; not picture that's blocked out. Because this format is a direct representation of film as you see it in the movies, you are actually seeing MORE of the program when you see those bars.

Trust us. Normal picture but no sound. No picture and unclear sound. No picture and no sound. No color, but the sound is O.K. Picture has a big black box on it, but the sound is O.K. Picture has two horizontal black bars, one on top and one on bottom. 206-3359-O PAGE 44 REFERENCE MAINTENANCE Some quick and easy tips to fixing problems yourself.

Troubleshooting, cont'd Remote control doesn't work. Menu options can't be changed or selected. No picture or sound when any non-cable source is selected. Weak or no Stereo Sound when using a stereo VCR. · Make sure the batteries are fresh and installed properly. · Try unplugging your Entertainment Machine for a few minutes, then plug it back in. · Check to see if the source equipment has been turned on. · Make sure that the connections are secure on the back of your Entertainment Machine and on the source equipment. · Check to see if all the connections are secure. · Look in the Audio mode menu to see if all the settings are correct.

· You are using channel 3 or 4 to view your VCR. No stereo sound is present under that decision. · You might want to adjust the PIP picture settings under the PIP menu. · Check that all the wires are connected properly. · Check to see if your input source for PIP is set correctly.

· Look to see if the TV/VCR button on your VCR has the TV selected. · Automatic: Check to see if PBS Channel is correct and then check Time Zone/Daylight Savings time settings under Clock menu. · Manual: Make sure the time was set initially. Probably power was lost. The PIP inset is black or lacks contrast.

The PIP inset is "snow" when the source is Ant/Cable 1. Time is incorrect. If all else fails, call 1-800-365-1690, Mon.-Fri. 7:00 am and 8:00 pm Sat. 7:00 a.m.-5:00 p.m., CST 206-3359-O REFERENCE G L O S S A R Y PAGE 45 Glossary A complete list of definitions for words found in this guide.

75 OHM RF CABLE The round cable that comes from an off-air antenna or cable service provider. Each end looks like a hex shaped nut with a wire sticking through the middle, and it screws onto the threaded jack on the back of your TV. Audio/Video cables. Three cables bunched together--Right audio (red), Left audio (white), and Video (yellow). A/V cables are used for stereo playback of videocassettes and for higher quality picture and sound from other A/V devices. Any device that produces video or sound (VCR, DVD, cable box, or television). This function lets you add new channels to the list that you'll scroll through when using your remote. An external machine that amplifies sound from a television, CD player, VCR, DVD or other A/V device. The physical receiver of television signals sent over the air. A large metal piece of equipment does not always have to be visible for your home to be using an antenna.

A form of subtitling that writes out the dialog for your program. Sets captioning to come on automatically when your volume is soft muted or muted. A/V CABLES A/V DEVICE ADD AMPLIFIER ANTENNA CAPTIONS CAPTIONS WHEN MUTED CONVERGENCE DATA PORT This option lets you correct for color separation in your picture. A jack for hooking up optional equipment that gives you access to the Internet through your TV. "Observed" means that your Entertainment Machine will adjust your time setting at the appropriate times of the year.

"Not Observed" will not. Set this depending on whether your viewing area uses Daylight Savings or not. This function lets you remove channels that you don't watch from the list you'll scroll through. DAYLIGHT SAVINGS DELETE 206-3359-O PAGE 46 REFERENCE G L O S S A R Y A complete list of definitions for words found in this guide. Glossary (cont'd) INPUT Refers to the jack that receives a signal into the TV, VCR or other A/V device.

A connection on the back of a TV, VCR, or any other A/V device. This includes the RF jacks and the Audio/Video jacks that are color-coded. The mode determines the type of device (TV, VCR, Cable, Aux) that the remote is controlling. Mono (monaural) sound is one channel of sound. On more than one speaker all the speakers play the same audio. Refers to the jack that sends a signal out of a VCR, DVD, or other A/V device. This is the most common way to refer to the Picture-In-Picture (PIP) option. JACK MODE MONO SOUND OUTPUT PIP SECOND AUDIO Second Audio Programming (SAP) is another, separate, audio channel PROGRAMMING/SAP available with some programming. Choosing SAP often refers to listening to audio in another language, such as Spanish or French. SIGNAL Picture and sound traveling through cable, or on the air, to your television screen.

The term for the equipment that provides audio and video information to your Entertainment Machine. Antenna, VCR, DVD players, or Cable Boxes are examples of sources. Stereo (stereophonic) sound refers to audio that's divided into right and left sides. This function creates a customized list of your favorite channels. You can access this group of channels by pushing the surf button on the remote. Arbitrary text not related to the program. Any device that picks up broadcast signals and turns them into picture and sound. SOURCE STEREO SOUND SURF TEXT TUNER 206-3359-O REFERENCE INDEX PAGE 47

Index Find what you want quickly. FEATURE . .

.....  
.....  
.....

. PAGE Add/Del/Surf-Advanced Surf . . . . .

.....  
.....  
.....

. . . . . 20 Amplifier Volume Override . .

.....  
.....  
.....

. . . . . 39 Audio Menu. . . . .

.....  
.....  
.....  
.....

. . . . . 31 Auto Demo . . . . .

.....  
.....  
.....

.....  
.. 30 Auto Find ...

.....  
.....

.....  
.....  
.....  
. 40 Background Menu .....

.....  
.....  
.....  
..... 24 Basic Television Operation .....

.....  
.....  
.....  
. 14-15 Batteries .....

.....  
.....  
.....  
.....

10 Button Functions .....

.....  
.....  
.....

.... 13 Cable .....

.....  
.....  
.....

.....  
.....  
5-7 Captions/Text Menu .....

.....  
.....

.. 22 Channel Search ...

.....  
.....

.. 11 Clock Set .....

.....  
.....  
.....

. 21 Convergence .....

.....  
.....  
.....

..... 12 External Stereo ...

.....  
.....



.....  
.....  
... 8 Front Panel Diagram .  
.....  
.....



[You're reading an excerpt. Click here to read official ZENITH  
A50M84W user guide  
http://yourpdfguides.com/dref/340911](http://yourpdfguides.com/dref/340911)

.....  
.....  
.. 16 Glossary .....

.....  
.....  
.....  
.... 47-48 Home Theater Set-up .....

.....  
.....  
.....  
..... 9 Hookup Directory .....

.....  
.....  
.....  
.....

.. 3 Jack Pack .....

.....  
.....  
.....  
.. 4 Language Menu .....

.....  
.....  
.....  
.. 23 Maintenance .....

.....  
.....  
.....  
.. 44-45 Picture-in-Picture .....

.....  
.....  
.....  
... 34-35 PIP Menu .....

.....  
.....  
.....  
.....

.. 34 Programming Codes .....

.....  
.....  
.....  
.. 37-38 Quick Start Menu .....

.....  
.....  
.....  
..... 10 Safety Information .....

.....  
.....  
.....  
2 Serial Number .....

.....  
.....  
.....  
.....  
.. 2 Source ID ..  
.....

.....  
.....  
.....  
.....  
..... 27 Super VHS VCR .....

.....  
.....  
.....  
.....  
.....  
.. 7 Surf ID.....  
.....  
.....  
.....

.....  
... 28 206-3359-O PAGE 48 REFERENCE INDEX Index Find what you want quickly. FEATURE .  
.....  
.....

.....  
.....  
.....  
.....  
..... PAGE Surround Sound Speakers. . .

.....  
.....  
.....  
.....  
..... 9 Timer. . .

.....  
.....  
.....  
.....  
..... 25 Troubleshooting.  
.....

.....  
.....  
.....  
.....  
..... 44-45 VCR. ....

.....  
.....  
.....  
.....  
.....

.....  
.....  
.....  
.....  
..... 6 Video Menu .....

.....  
.....  
.....  
.....  
..... 30 Warranty.  
.....

.....  
.....  
.....

... @@@@ @@@@ Perhaps you would just like the convenience of having a second remote on hand. Order your replacement remote control direct from

Zenith! To ensure that you receive the correct remote, have your television's model number ready when you call. ONLY \$39.95 PLUS \$4.95 SHIPPING & HANDLING ORDER TODAY! CALL TOLL-FREE 1.800.

255.6790 zenith Use Your Visa or MasterCard to Order PLEASE ALLOW 3 - 4 WEEKS FOR DELIVERY 3357-o Your Zenith Limited Warranty Direct-View Color TV Welcome into the Zenith family! We believe that you will be pleased with your new Zenith Entertainment Machine. @@@@Warranty service for 21" diagonal (U.S.A.) or larger screen size models is provided in the home in most cases. (Some repairs may require the unit to be taken by the servicer to the repair facility and returned, at no additional charge.) This warranty covers manufacturing defects and does not cover installation, adjustment of customer controls in the home, installation or repair of home antenna systems, cable converters or cable company-supplied equipment; it also does not cover damage due to misuse, abuse, negligence, acts of God or other causes beyond the control of Zenith. Any alteration of the product after manufacture voids this warranty in its entirety. Parts Home Service Not Covered OWNER'S RESPONSIBILITY Effective Warranty Date Warranty begins on the date of original consumer purchase.

For your convenience, keep the dealer's dated bill of sale or delivery ticket as evidence of the purchase date. Read your Operating Guide carefully so that you will understand the operation of your set and how to adjust the customer controls. Models under 21" diagonal (U.S.A.

) screen size must be taken to a Zenith authorized service center for warranty service and must be picked up by the owner. Reception problems caused by inadequate home antenna or faulty antenna connections are the owner's responsibility. Product Registration--Please fill out and mail your Product Registration Card. It is imperative that Zenith know how to reach you promptly if we should discover a safety problem that could affect you. For warranty service information, contact any Zenith authorized service center.

Parts and service labor that are Zenith's responsibility (see above) will be provided without charge. Other service is at the owner's expense. If you have any problem in obtaining satisfactory warranty service, call or write the Zenith Response Center. You must provide the model number, serial number and date of purchase or date of original installation. Before you ask for warranty service, read "Maintenance And Troubleshooting" in your operating guide. You might avoid a service call. Operating Guide Carry-In Service Antenna Important Warranty Service THIS WARRANTY IS IN LIEU OF ANY OTHER WARRANTY, EXPRESS OR IMPLIED, INCLUDING WITHOUT LIMITATION, ANY WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE, AND ZENITH SHALL NOT BE LIABLE FOR ANY CONSEQUENTIAL, INDIRECT, OR INCIDENTAL DAMAGES OF ANY KIND, INCLUDING LOST REVENUES OR PROFITS IN CONNECTION WITH THE PRODUCT. ZENITH CONSUMER SERVICES Factory Owned Service Center Home & Carry-in Service Television/VCR Parts and Accessories PTV/Computer ZENITH ELECTRONICS CORPORATION Zenith Response Center 1000 Milwaukee Avenue Glenview, IL 60025-2493 Telephone (847)391-8752 Mon-Fri, 7:00 a.m.-8:00 p.

m. Sat, 7:00 a.m.-8:00 p.m. CST www.zenith.com Service Hours: M-F 8-6, Sat 9-2 Will accept UPS Shipments 801 E. Roosevelt Rd Lombard, IL 60148 (630)705-2830 201 James Record Rd. Building 4 Huntsville, AL 35824 (205) 461-8583 Additional Zenith Picture Tube Protection Plan Available Zenith offers you the opportunity to obtain additional long-term protection against failure of the picture tube in your new Entertainment Machine.

Our Picture Tube Protection Plan enables you to avoid any unexpected picture tube repair expenses and keep your Entertainment Machine in top condition. It guarantees you a genuine Zenith replacement picture tube and service from a Zenith authorized service center. Be sure to send in the Product Registration Card. We will send you an application for the Protection Plan near the expiration of the two-year manufacturer's warranty on the picture tube. For additional information call (847) 391-8757.

206-3359-0 .



[You're reading an excerpt. Click here to read official ZENITH A50M84W user guide](http://yourpdfguides.com/dref/340911)  
<http://yourpdfguides.com/dref/340911>