




Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for ZENITH B27A11Z. You'll find the answers to all your questions on the ZENITH B27A11Z in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual ZENITH B27A11Z
User guide ZENITH B27A11Z
Operating instructions ZENITH B27A11Z
Instructions for use ZENITH B27A11Z
Instruction manual ZENITH B27A11Z

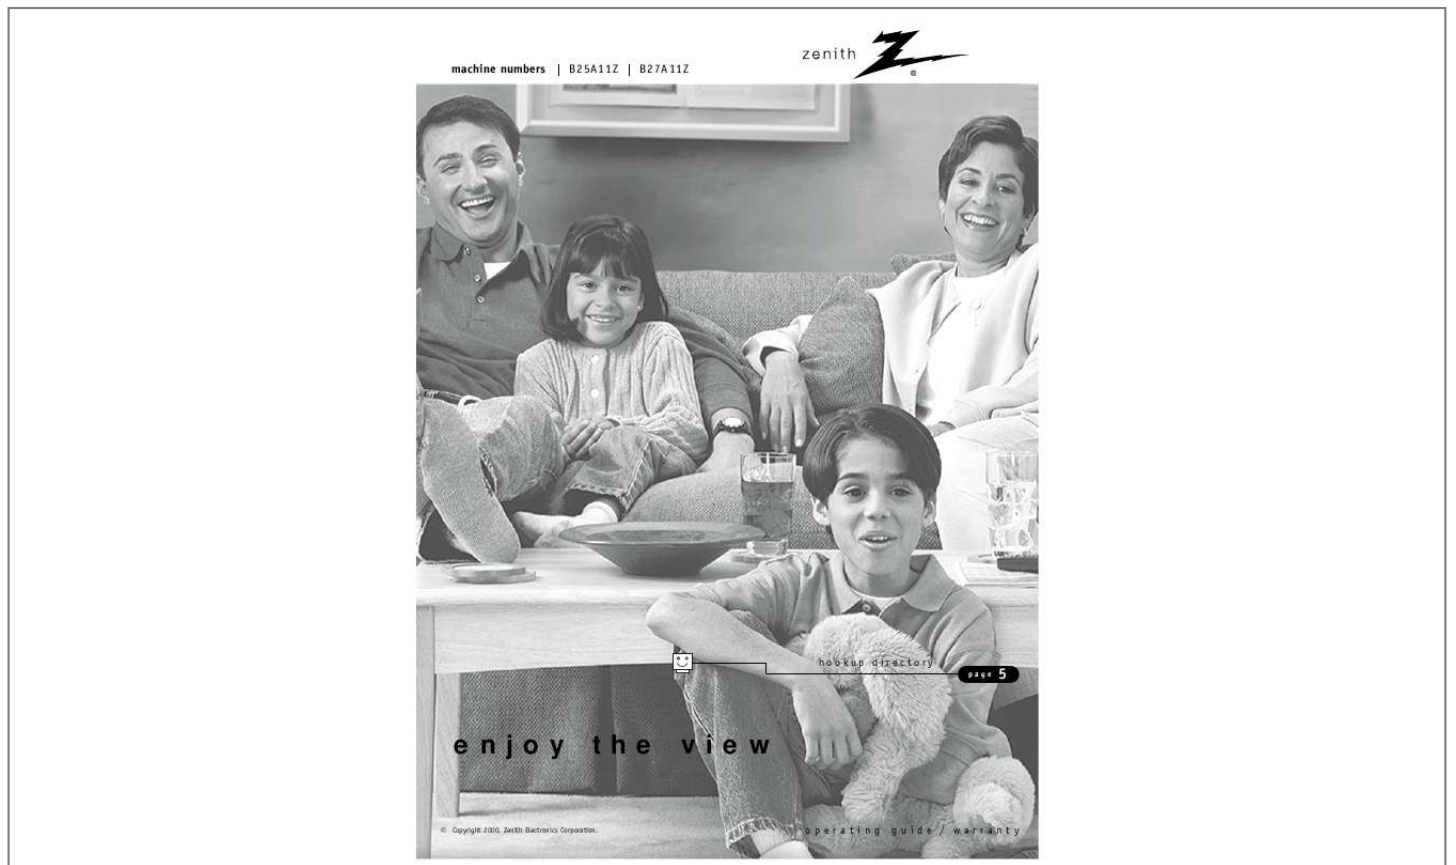

[You're reading an excerpt. Click here to read official ZENITH B27A11Z user guide](http://yourpdfguides.com/dref/340933)
<http://yourpdfguides.com/dref/340933>

Manual abstract:

REFER SERVICING TO QUALIFIED SERVICE PERSONNEL. @@@@POWER CORD POLARIZATION: CAUTION: TO PREVENT ELECTRIC SHOCK, MATCH WIDE BLADE OF PLUG TO WIDE SLOT, FULLY INSERT. ATTENTION: POUR ÉVITER LES CHOCs ÉLECTRIQUES, INTRODUIRE LA LAME LA PLUS LARGE DE LA FICHE DANS LA BORNE CORRESPONDANTE DE LA PRISE ET POUSSER JUSQU'AU FOND. NOTE TO CABLE/TV INSTALLER: This reminder is provided to call the cable TV system installer's attention to Article 820-40 of the National Electric Code (U.S.A.). The code provides guidelines for proper grounding and, in particular, specifies that the cable ground shall be connected to the grounding system of the building, as close to the point of the cable entry as practical. REGULATORY INFORMATION: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a residential installation.

@@@ @@@· Increase the separation between the equipment and receiver. @@· Consult the dealer or an experienced radio/TV technician for help. CAUTION: Do not attempt to modify this product in any way without written authorization from Zenith Electronics Corporation. Unauthorized modification could void the user's authority to operate this product. "Entertainment Machine" is a trademark of Zenith Electronics Corporation IMPORTANT SAFETY INSTRUCTIONS Important safeguards for you and your new product Your product has been manufactured and tested with your safety in mind. However, improper use can result in potential electrical shock or fire hazards. To avoid defeating the safeguards that have been built into your new product, please read and observe the following safety points when installing and using your new product, and save them for future reference. Observing the simple precautions discussed in this booklet can help you get many years of enjoyment and safe operation that are built into your new product. This product complies with all applicable U.S.

Federal safety requirements, and those of the Canadian Standards Association. 1. Read Instructions All the safety and operating instructions should be read before the product is operated. 9. Attachments Do not use attachments not recommended by the product manufacturer as they may cause hazards. 2. Follow Instructions All operating and use instructions should be followed. 10. Ventilation Slots and openings in the cabinet are provided for ventilation and to ensure reliable operation of the product and to protect it from overheating, and these openings must not be blocked or covered. The openings should never be blocked by placing the product on a bed, sofa, rug, or other similar surface.

This product should not be placed in a built-in installation such as a bookcase or rack unless proper ventilation is provided or the manufacturer's instructions have been adhered to. 3. Retain Instructions The safety and operating instructions should be retained for future reference. 4. Heed Warnings All warnings on the product and in the operating instructions should be adhered to. 5. Cleaning Unplug this product from the wall outlet before cleaning. Do not use liquid cleaners or aerosol cleaners. Use a damp cloth for cleaning. 11.

Power Sources This product should be operated only from the type of power source indicated on the marking label. If you are not sure of the type of power supply to your home, consult your product dealer or local power company. For products intended to operate from battery power, or other sources, refer to the operating instructions. 6. Water and Moisture Do not use this product near water, for example, near a bath tub, wash bowl, kitchen sink, or laundry tub, in a wet basement, or near a swimming pool.

12. Line-Cord Polarization This product is equipped with a polarized alternating-current line plug (a plug having one blade wider than the other). This plug will fit into the power outlet only one way. This is a safety feature. If you are unable to insert the plug fully into the outlet, try reversing the plug. If the plug should still fail to fit, contact your electrician to replace your obsolete outlet. Do not defeat the safety purpose of the polarized plug. 7. Accessories Do not place this product on an unstable cart, stand, tripod, bracket, or table. The product may fall, causing serious injury to a child or adult, and serious damage to the product. Use only with a cart, stand, tripod, bracket, or table recommended by the manufacturer, or sold with the product. Any mounting of the product should follow the manufacturer's instructions, and should use a mounting accessory recommended by the manufacturer. 13. Power-Cord Protection Power-supply cords should be routed so that they are not likely to be walked on or pinched by items placed upon or against them, paying particular attention to cords at plugs, convenience receptacles, and the point where they exit from the product. 8.

Transporting Product A product and cart combination should be moved with care. Quick stops, excessive force, and uneven surfaces may cause the product and cart combination to overturn. (Continued on next page) PORTABLE CART WARNING 206-3477 PAGE 3 IMPORTANT SAFETY INSTRUCTIONS (Continued from previous page) 18. Object and Liquid Entry Never push objects of any kind into this product through openings as they may touch dangerous voltage points or short-out parts that could result in a fire or electric shock. Never spill liquid of any kind on the product. 14. Outdoor Antenna Grounding If an outside antenna or cable system is connected to the product, be sure the antenna or cable system is grounded so as to provide some protection against voltage surges and built-up static charges. Article 810 of the National Electrical Code (U.S.A.

), ANSI/NFPA 70 provides information with regard to proper grounding of the mast and supporting structure, grounding of the lead-in wire to an antenna discharge unit, size of grounding conductors, location of antenna-discharge unit, connection to grounding electrodes, and requirements for the grounding electrode. Example of Grounding According to National Electrical Code Instructions 19. Servicing Do not attempt to service this product yourself as opening or removing covers may expose you to dangerous voltage or other hazards. Refer all servicing to qualified service personnel. 20.

Damage Requiring Service Unplug this product from the wall outlet and refer servicing to qualified service personnel under the following conditions: a. If the power-supply cord or plug is damaged. b. If liquid has been spilled, or objects have fallen into the product. c.

If the product has been exposed to rain or water. d. If the product does not operate normally by following the operating instructions. Adjust only those controls that are covered by the operating instructions as an improper adjustment of other controls may result in damage and will often require extensive work by a qualified technician to restore the product to its normal operation.



[You're reading an excerpt. Click here to read official ZENITH B27A11Z user guide](http://yourpdfguides.com/dref/340933)
<http://yourpdfguides.com/dref/340933>

e. If the product has been dropped or the cabinet has been damaged. f. If the product exhibits a distinct change in performance. Ground Clamp Antenna Lead in Wire Antenna Discharge Unit (NEC Section 810-20) Grounding Conductor (NEC Section 810-21) Ground Clamps Power Service Grounding Electrode System (NEC Art 250, Part H) Electric Service Equipment NEC - National Electrical Code 15. Lightning For added protection for this product (receiver) during a lightning storm, or when it is left unattended and unused for long periods of time, unplug it from the wall outlet and disconnect the antenna or cable system.

This will prevent damage to the product due to lightning and power-line surges. 21. Replacement Parts When replacement parts are required, be sure the service technician has used replacement parts specified by the manufacturer or have the same characteristics as the original part. Unauthorized substitutions may result in fire, electric shock, or other hazards. 16. Power Lines An outside antenna system should not be located in the vicinity of overhead power lines or other electric light or power circuits, or where it can fall into such power lines or circuits. When installing an outside antenna system, extreme care should be taken to keep from touching such power lines or circuits as contact with them might be fatal. 22. Safety Check Upon completion of any service or repairs to this product, ask the service technician to perform safety checks to determine that the product is in proper operating condition. 23. Wall or Ceiling Mounting The product should be mounted to a wall or ceiling only as recommended by the manufacturer. 17. Overloading Do not overload wall outlets and extension cords as this can result in a risk of fire or electric shock. 24. Heat The product should be situated away from heat sources such as radiators, heat registers, stoves, or other products (including amplifiers) that produce heat.

PAGE 4 206-3477 Hook-Up Directory IMPORTANT!! Use this page to decide where you need to begin your setup. First, find the line below that best describes what you want to do, then go to that page number. Antenna only If you are using an antenna and no other equipment, go to . . .

.....

..... page 6 Cable only Cable TV wall jack If you have cable service or a cable box and no other equipment, go to

.....

page 7 Cable box In Out Antenna with VCR If you are using an antenna and have a VCR, go to

.....

..... page 8 Cable and VCR If you have cable service or a cable box and a VCR, go to . .

.....

.....

..... page 9 Cable TV wall jack In Out Cable box 206-3477 PAGE 5 Hook Up Your Antenna to the TV Connect an antenna to your Entertainment Machine. 1 2 Locate the Antenna/Cable jack on the back of your Entertainment Machine.

Connect the cable that runs from the wall directly to this jack, according to the diagram to the right. Remove the back of the remote and put in two AAA batteries. Flat wire (300 ohm) back of remote Flat wire antenna to Entertainment Machine Antenna TV back 3 TV back panel (expanded view) Audio Video R L Antenna Cable 4 Plug in your Entertainment Machine.. Do not plug it into a switched outlet. Your Entertainment Machine is designed to operate on household current, 120-volt 60 Hertz AC do not attempt to operate it on DC Current. 300/75 ohm Adapter Antenna to Entertainment Machine Coaxial wire Antenna TV back 5 Go to page 10 to Auto Program your Entertainment Machine. If you have a 75 ohm RF cable, then you don't need any adapters! Remember, when screwing RF caput in two AAA batteries. VCR back AV panel RF coaxial cable (75ohm) In output switch 3 4 Out Video Audio TV back RF coaxial wire (75ohm) not included with TV 3 back of remote Antenna Cable TV back panel (expanded view) Video Audio R L A/V cables not included with TV 4 Plug in your TV. Do not plug it into a switched outlet.

Your Entertainment Machine is designed to operate on household current, 120-volt 60 Hertz AC do not attempt to operate it on DC Current. Cable TV wall jack Cable with Cable Box to Entertainment Machine with VCR In Out Cable box output switch 3 4 RF coaxial cable (75ohm) VCR back 5 Go to page 10 to Auto Program your Entertainment Machine. VCR back AV panel output In switch 3 4 Out Video Audio Leave your VCR and your television tuned to channel three and use the cable box to change channels. Remember, when screwing in RF cables onto jacks, clockwise tightens, and counterclockwise loosens.

Without A/V cables, most VCRs will not play videocassettes in stereo sound.

Antenna Cable TV back RF coaxial wire (75ohm) not included with TV TV back panel (expanded view) Video Audio R L A/V cables not included with TV 206-3477 PAGE 5 Eated as a channel that is one below the lowest/one above the highest. You'll have to use the Channel Up/Down buttons to access it. The Time/Channel display will read "Video" in place of a channel number. Cable/Antenna Input: This setting allows you to change cable or antenna channels and to view videocassettes on channel 3 (or 4) in mono sound. Video Input: This setting allows stereo playback of videocassettes.

The television cannot change channels in the Video mode, but the VCR can. CH 12 10:55 MONO Channel or Video (Indicates Source) Time Audio Mode This is an example of the Time/Channel display that appears in the top corner of your screen. To view the current input source, press ENTER on your remote. The Time/Channel display should appear in the upper right hand corner of the screen. If the display reads 'Video,' then the source is an A/V input. If the display reads a channel number, then the source is your Cable or Antenna. Channel Changing CHANNEL UP/DOWN arrows: Use these arrows to change the channels. Auto program will have found all channels available to you. NUMBER Key Pad: To skip to any channel, enter the number of the channel using the NUMBER key pad, then press ENTER. FLASHBACK: To instantly return to the last channel viewed, press FLASHBACK.

Audio Volume Right/Left: To adjust the volume level, use the volume Right/Left arrows. To silence your Entertainment Machine instantly, press MUTE once. To get the sound back, press MUTE again. 206-3477 PAGE 13 Setup Menu Here are descriptions of the menu options found in the Setup menu. Function

What it does Go to page Setup Menu Auto Program Automatically finds and stores active channels to flip through using Channel Up/Down. Manually pick and choose which active channels will appear when flipping through using Channel Up/Down. Sets the current time on your Entertainment Machine. Opens menu for the following functions: · Turns the Sleep Timer on or off. · Selects an automatic On Time for your Entertainment Machine. · Selects an automatic Off Time for shut-down.



[You're reading an excerpt. Click here to read official ZENITH](http://yourpdfguides.com/dref/340933)

[B27A11Z user guide](http://yourpdfguides.com/dref/340933)

<http://yourpdfguides.com/dref/340933>

· On/Off timer controls automatic power on and power off. Must be set to On for above functions to work. Allows you to block out any channels or sources for a designated period of time. Displays closed captions or text when available. Options are Off, Caption 1, Caption 2, Caption 3, Caption 4, Text 1, Text 2, Text 3, and Text 4.

Select between Stereo And Mono Selects language for on-screen menus. Your options are English, Spanish, or French. 10 Auto Program Ch. Add/Del Clock Set 4:34 PM FLASHBK Ch. Add/Del 15 Timer Setup Parental Ctrl Caption/Text Clock Set 16 Audio Mode Language Timer Setup 17 This is an example of what on-screen menus look like.

Parental Ctrl 18 Captions/Text 20 Audio Mode Language 21 22 PAGE 14 206-3477 Setting Ch. Add/Del Customize your channel selection. Setup Menu Auto Program Ch. Add/Del Ch 72 Added Clock Set Timer Setup Parental Ctrl Caption/Text Audio Mode Language Setup Menu AutoCh 72 Deleted Program Ch 74 Deleted Ch. Add/Del Clock Set Timer Setup Parental Ctrl Caption/Text Audio Mode Language 1 2 3 4 5 Press the MENU key on the remote so the Setup menu appears. Select the Ch. Add/Delete menu using the UP/DOWN arrows. Using either the NUMBER key pad or the CHANNEL UP/DOWN arrows on the remote, select a channel. (If adding a deleted channel, you will need to use the NUMBER key pad.) Using the RIGHT/LEFT arrows, pick whether that channel is Added or Deleted.

To continue, select another channel and repeat step 4. If you are finished, press ENTER to return to TV viewing. PRG POWER CABLE SURF VCR AUX TV MUTE FLASHBK CHANNEL VOLUME VOLUME CHANNEL 3 3 6 9 1 4 7 0 2 5 8 ENTER 5 QUIT You can add or delete a channel without the remote control by using the buttons and working the menus on the front of your Entertainment Machine. If you delete a channel, it isn't gone for good. Just select it using the NUMBER key pad on the remote or add it later. 1 MENU 2 A B C CC TV/VCR SOURCE RECORD PAUSE TIMER PLAY 4 REWIND STOP FFWD Mini glossary ADD DELETE This function lets you add new channels to the list that you'll scroll through when using your remote. This function lets you remove channels that you don't watch from the list you'll scroll through. 206-3477 PAGE 15 Clock Set Set the clock on your Entertainment Machine. Setup Menu Auto Program Ch. Add/Del 4:48 PM Clock Set Timer Setup Parental Ctrl Caption/Text Audio Mode Language FLSHBK 1 2 3 4 5 Press the MENU key on the remote control so that the Setup menu appears onscreen.

Using the UP/DOWN arrows on the remote control, select Clock Set on your screen. Press a RIGHT or LEFT arrow to adjust the time. PRG POWER CABLE SURF VCR AUX TV MUTE FLASHBK CHANNEL VOLUME VOLUME Press the FLASHBK button to select AM or PM. @@@@ Press a RIGHT/LEFT arrow. The Timer Setup screen will appear.

@@@@@The number of hours blocked can be specified. @@@@@Block: Allows you to block the signal sent by equipment connected to the TV Audio/Video input jacks such as a VCR, a DVD Player, Laser Disc Player, etc. So, if you do not wish somebody to watch a videotape, a Laser Disc, etc, just set the Aux. Block to Sources Blocked. MPAA: The Motion Picture Association of America's Rating system has been included for those people who may be more familiar with this rating system.

There are six levels of settings. They are: G and Above, PG and Above, PG-13 and Above, R and Above, NC-17 and Above, and X. Press to access.

@@@@@CHILDREN: These settings are: TV-Y and Above and TV-Y7. @@@@@@Block: Allows you to block the signal sent by equipment connected to the TV Audio/Video input jacks such as a VCR, a DVD Player, Laser Disc Player, etc. So, if you do not wish somebody to watch a videotape, a Laser Disc, etc, just set the Aux. Block to Sources Blocked. MPAA: The Motion Picture Association of America's Rating system has been included for those people who may be more familiar with this rating system.

Content is such that parents may not want their children to view the program. Program is inappropriate for preteens, with a greater degree of offensive material than a PG rated program. Not for children under age 17. Strong elements of sex and/or violence. Not for children under age 17 under any circumstances. Strong sexual content. Same as NC-17 rating. Note: Zenith Electronics Corporation is not liable for any program content that appears when using this rating system; as always, user discretion is advised. 206-3477 PAGE 19 Captions and Text Turn on closed captioning or text that appears at the bottom of your screen. Setup Menu Auto Program Ch.

Add/Del Clock Set Timer Setup Parental Ctrl Caption/Text Caption 1 Audio Mode Language Setup Menu Auto Program Ch. Add/Del Clock Set Timer Setup Parental Ctrl Caption/Text Text 1 Audio Mode Language 1 2 3 4 Press the MENU key on the remote control so that the Setup menu appears. Using the UP/DOWN arrows on the remote control, select Captions/Text on your screen. PRG POWER CABLE SURF VCR AUX TV MUTE FLASHBK CHANNEL VOLUME VOLUME Press a RIGHT/LEFT arrow to choose any of the following options: Off, Caption 1, Caption 2, Caption 3, Caption 4, Text 1, Text 2, Text 3 or Text 4. Press ENTER to return to TV viewing.

CHANNEL 1 4 7 0 2 5 8 ENTER 3 6 9 4 QUIT 1 Captions come in handy when the television is on mute. Standard Closed Captioning is available using the Caption 1 option. Not all programming has closed captioning or text available. MENU 2 A B C CC TV/VCR SOURCE RECORD PAUSE TIMER PLAY 3 REWIND STOP FFWD PAGE 20 206-3477 Audio Mode Choose between stereo sound and mono sound. Setup Menu Auto Program CH.

Add/Del Clock Set Timer Setup Parental Ctrl Caption/Text Audio Mode Mono Language Setup Menu Auto Program Ch. Add/Del Clock Set Timer Setup Parental Ctrl Caption/Text Stereo Audio Mode Language 1 2 3 4 Press the MENU key on the remote control so that the Setup menu appears. PRG POWER Using the UP/DOWN arrows on the remote control, select Audio Mode on your screen. Press a RIGHT/LEFT arrow to choose one of the following options: Stereo or Mono. CABLE SURF VCR AUX TV MUTE FLASHBK CHANNEL VOLUME VOLUME Press ENTER to return to TV viewing. 1 4 7 0 CHANNEL 2 5 8 ENTER 3 6 9 4 QUIT 2 Not all programming is broadcast in stereo sound 1 MENU A B C CC TV/VCR SOURCE RECORD PAUSE TIMER PLAY 3 REWIND STOP FFWD Mini glossary STEREO SOUND MONO SOUND STEREO (stereophonic) sound refers to audio that's divided into right and left sides.



[You're reading an excerpt. Click here to read official ZENITH B27A11Z user guide](http://yourpdfguides.com/dref/340933)
<http://yourpdfguides.com/dref/340933>

Mono (monaural) sound is one channel of sound. All the speakers play the same audio. 206-3477 PAGE 21 Language Options Choose the language you want of the menus to appear in. Setup Menu Auto Program Ch.

Add/Del Clock Set Timer Setup Parental Ctrl Caption/Text Audio Mode Language English Menu Config Autoprograma Agr/Borr Can Ajuste Reloj Apagador Aut B;oquear TV Subtit/Texto Modo Audio Language Menu Regl. Progr. Auto Ajou-Sup Ca. Reg. Pendule Regl. Minut. Blocage TV Sous/Titr/Tx Mode Audio Language Spanish French 1 2 3 4 Press the MENU key on the remote control so that the Setup menu appears. Using the UP/DOWN arrows on the remote control, select Language on your screen. @@@@The more contrast, the brighter the picture appears. @@@@Sharpness: Raise or lower the definition of the TV picture.

The lower the level, the softer the images will appear. Picture Preference: Choose either Custom or Preset. Custom allows you to set the picture the way you want. @@@@Using the Up/Down arrow, select Picture Pref. on your screen.

@@@Make a note of the threedigit code--you'll need it soon. Press and hold the PRG key. It's recessed so it doesn't get pushed accidentally. When the indicator light turns on, you can release the button. @@Using the number pad, enter the three digit code found on the chart in the Reference section.

Press ENTER to save the code The indicator light will flash three times and turn off if the code was accepted.. Aim the remote at the device and push the POWER button. It should turn off. If not, try the other codes listed and continue from step three. Note: After programming, to operate the device you have just programmed, press the proper Mode button first. 3 Indicator Light PRG POWER 7 4 CABLE SURF VCR AUX TV MUTE FLASHBK 3 CHANNEL VOLUME

VOLUME CHANNEL 4 5 6 5 1 4 7 0 2 5 8 ENTER 3 6 9 6 QUIT MENU 7 A B PAUSE C CC TV/VCR SOURCE RECORD TIMER PLAY REWIND STOP FFWD Programming your Zenith remote will allow you to use one remote to work up to 7 different devices! Not all devices will work with your Zenith remote control. PAGE 24 206-3375 AUX+1, AUX+2, AUX+3 Control up to seven different devices with your remote! 1 2 3 4 5 6 7 Refer to the chart in this manual to find the type and brand name of the device you're programming. Press and hold the PRG key until the indicator light turns on. Press the AUX key and the 1 on the number pad at the same time (for AUX +1).

2 3 PRG POWER 6 CABLE SURF VCR AUX TV MUTE FLASHBK CHANNEL VOLUME VOLUME Using the number pad, enter the three-digit code for the device you've selected. Press Enter to save the code. Aim the remote at the device and press POWER. It should turn on. Repeat the steps for AUX+2, and

AUX+3. CHANNEL 1 4 7 0 2 5 8 ENTER 3 6 9 4 5 QUIT MENU Programming your Zenith remote will allow you to use one remote to work up to 7 different devices! Not all devices will work with your Zenith remote control. A B PAUSE C CC TV/VCR SOURCE RECORD TIMER PLAY REWIND STOP FFWD

206-3375 PAGE 25 Remote Control Auto-Find If Programming the Remote did not find your code, try this procedure to automatically find the code for your device. If your remote becomes inoperable, go back to "Programming your Remote" and enter the Zenith TV code for step five. 1 2 3 4 5 Turn on the device you're programming for the remote control. Press and hold the PRG key until the indicator light turns on.

Press the key for the device you're trying to program (CABLE, VCR, AUX, TV). Enter the code 0-0-0 (zero-zerozero), then press the ENTER key right away. VOLUME 2 Indicator Light PRG POWER 5/7 3 CABLE SURF VCR AUX TV MUTE FLASHBK CHANNEL VOLUME Aim the remote at the correct device and press the POWER button. Allow a second to pass, then push the POWER button again. Repeat until the device turns off.

(This is a trial and error process, so it may be necessary to repeat these steps until the remote finds your code.) Push ENTER to save the code. Press POWER to turn the device back on. CHANNEL 1 4 7 2 5 8 ENTER 3 6 9 6 7 4 0 6 QUIT MENU A B PAUSE C CC TV/VCR SOURCE RECORD TIMER PLAY You can quickly get out of Auto Find by pressing the Quit button. If the indicator light stays on while you push Power, instead of turning off, all the codes have been tried and your device can't be programmed.

REWIND STOP FFWD PAGE 26 206-3375 Amplifier Volume Override Control the volume on your sound amplifier without leaving TV mode. 4 Indicator Light PRG POWER 1 Program the code that operates your amplifier into the CABLE or AUX mode, as described on the "Programming Your Remote" page. Select the mode in which you want volume to appear (e.g. TV). Press and hold PRG on your remote until the indicator light stays lit. Press 4-9-9; then ENTER on the remote. The indicator light will flash three times if code is accepted. Audio system volume/mute now appears in the mode selected. CABLE VCR AUX TV MUTE 2 3 SURF FLASHBK 2 3 4 CHANNEL VOLUME VOLUME CHANNEL 1 4 7 0 2 5 8 ENTER 3 6 9 5 5 MENU QUIT A B PAUSE C CC TV/VCR SOURCE RECORD TIMER PLAY REWIND FFWD STOP Your volume and mute keys now control your amplifier, while all the other keys still operate the Entertainment Machine.

To put everything back to normal, reprogram all buttons with their original codes (see the "Programming Your Remote" section). If you can't find the code for your amplifier, use the Auto Find feature. Mini glossary AMPLIFIER An external machine that amplifies sound from a television, CD player, VCR, or other A/V device. 206-3375 PAGE 27 Programming Codes TVs Admiral

116 121 130 133 Adventura TV/VCR. 154 Akai

.

. 104 Amark 103 146 AOC .

. 104 Bell & Howell .

.. 121 Broksonic

... 131 136 Candle

. 139 Centurion

.. 119 Citizen

121 139 Contec

... 141 Coronado

. 103 Crown

.. 103 Curtis Mathes 116 119 121 Daewoo

... 149 159 Daewoo TV/VCR

148 Daytron

.. 119 Elektra

121 Emerson 103 104 123 124 131 136 145 Emerson TV/VCR . . 158 Fisher .

.

... 109 118 Funai TV/VCR ..
.. 154 General Electric .. 106 107 114 116 117 161 Goldstar

. 103 104 119 147 Goldstar TV/VCR . . 153 Hitachi

. 102 103 129 163 J.C. Penney ..
... 104 110 114 117 119 JVC ..
..... 125 132 164 KMC ..

..... 103 KTV ..
.....
... 103 104 138 Kurazai ..
..... 121 Lodgenet

... 121 Logik

.. 121 LXI

.....
.. 133 137 Magnavox

103 112 113 117 119 127 128 139 165 Magnavox TV/VCR . 173 Majestic .

..... 121 Marantz

... 104 120 155 Megatron ..

.....
146 Memorex

121 MGA/Mitsubishi.



[You're reading an excerpt. Click here to read official ZENITH B27A11Z user guide](#)
<http://yourpdfguides.com/dref/340933>

..
 104 119 120 130 140 155 Montgomery Ward . 103 104 105 113 114 119 121 130 133 NEC
 . 104 119 Panasonic
 .. 106 107 160 166 Panasonic TV/VCR . 174 Philco . .
 103 104 112 113 139 Philips . . .
 112 113 Pioneer
 . . . 135 Portland . .

 103 ProScan 116 157 162 167 Quasar . . .
 106 107 RCA

 104 116 126 157 161 162 167 168 Realistic
 . . 105 123 124 Sampo
 119 Samsung 103 119 134 141 Sanyo . . .

 . 108 109 118 Scott
 119 124 Sears
 103 108 109 110 111 118 134 Sharp
 . . . 103 105 122 133 137 156 169 Signature 2000 . . .
 . 103 104 105 113 114 119 121 130 133 Sony
 115 143 151 170 Soundesign
 139 Sylvania 112 113 117 119 127 128 139 Symphonic TV/VCR 154 Tatung . . .

 106 Teknika
 . . . 103 112 121 124 139 Telerent
 103 121 Toshiba 110 111 134 171 XR 1000 . . .
 121 Yorx

 119 Zenith
 .. 101 149 175 Zenith TV/VCR . . . 153 154 172 VCRs Admiral
 . . 208 261 Adventura . . .
 . . . 231 Aiwa . . .
 231 Akai
 223 238 241 Audio Dynamics . . 202 218 Bell & Howell . . .
 . . . 206 247 Broksonic . . .
 221 226 250 255 Canon . . .
 214 Citizen
 209 Craig
 212 Curtis Mathes . . .
 . . 214 259 Daewoo
 244 246 248 254 Daytron
 . 236 246 DBX
 . 202 218 Emerson
 . . . 203 209 221 223 226 233 235 243 250 Fisher . . .
 211 212 213 247 Funai
 231 General Electric . . 214 216 220 Goldstar . . .

 209 Go Video
 . . 256 262 263 Hitachi
 215 257 Instant Replay . . . 214 227 J.C. Penny
 . 214 215 218 227 JVC

 . 202 224 225 258 Kenwood 202 Logik

..... 239 LXI ...

.....

.. 209 231 Magnavox ...

... 207 214 231 Marantz

207 218 Marta 209 Memorex .

.....

. 206 212 214 231 Mitsubishi ...

.. 204 222 252 264 Montgomery Ward . 208 214 216 219 231 249 Multi Tech 239 NEC .

..... 202 218 Orion .

.....

... 250 Panasonic ..

.... 214 251 259 Pentax

.. 215 Philco

. 207 214 Philips

.... 207 214 227 Pioneer .

..... 210 215 Portland

... 246 ProScan

216 260 Quasar

... 214 259 RCA ..

..... 215 216 220 227 240 242 249 260 Realistic ..

..... 206 208 212 214 231 Samsung

.. 220 230 238 Sansui ...

.....

239 Sanyo 206 212 247 Scott ..

..... 204 205 233 206-3375 243 Sears ...

.....

. 206 209 211 212 215 Sharp

..... 208 261 Shintom

.. 239 Signature 2000 ... 208 214 216 219 231 249 Sony

.... 217 232 237 Sylvania .

.....

. 207 214 227 Symphonic 231 Tashiko

.... 209 Tatung

.. 202 Teac ...

.....

.. 202 231 Teknika

209 234 Toshiba 205 215 XR 1000 ..

.....

239 Vector Research .. 204 218 Yamaha ...

..... 202 218 Zenith

... 201 224 225 229 237 PAGE 28 Programming Codes Find the codes you need to program your remote. On this page: Cable, Satellite, Video Disc Players, CD Players and Tape Decks Cable Satellite Allegro

.. 358 362 Allegro A/B Switch 361 Gemini ...

.....

305 331 338 General Electric. ... 367 General Instrument 304 305 306 307 308 309 310 318 Hamlin

. 302 303 345 365 366 Jerrold 304 307 308 309 310 318 360 363 Kale Vision .

.... 335 Macom .

.....

.. 314 321 Magnavox 334 NSC ..

..... 335 339 368 369 370 Oak ..

.....

... 311 332 342 Panasonic ..

.... 313 320 Paragon

. 333 Philips 347 350 352 354 355 Pioneer .

.. 315 343 RCA DSS ...
 373 Regency
 . 329 Samsung 335 Scientific Atlanta . 316 323 336 364 Sprucer .
 .. 313 Standard Comp ...
 335 Stargate 379 Texscan ...
 339 356 371 Tocom
 .. 317 318 346 Unika ...
 .. 348 362 United Satellite . . 344 Universal 358 362 Vid Tech .
 340 Video Way
 .. 349 Viewstar ...
 354 355 372 Zenith .
 301 353 374 Zenith Satellite . . 312 328 330 351 378 Video Disc Players Pioneer .
 402 403 Sanyo
 .. 401 Sony
 404 Zenith
 .. 401 Audio CD Players Akai
 .. 409 424 Crown ...
 . 410 Denon 411 Fisher .
 412 438 Goldstar ..
 460 Harman/Kardon . . 413 JVC ...
 415 Kenwood ...
 ... 412 416 417 441 Magnavox 421 422 433 434 Mitsubishi .
 423 424 NAD
 425 426 447 Nakamichi
 . 427 428 NEC
 . 429 Onkyo
 430 Panasonic .
 431 432 Philips
 ... 421 433 434 Pioneer
 . 431 435 Quasar
 432 Radio Shack .
 431 436 439 440 441 RCA
 437 Sanyo
 ... 438 439 Scott ..
 .. 440 Sharp
 . 441 442 Sony.
 . 443 444 445 Soundesign
 . 461 498 501 502 Sylvania
 ... 433 Teac
 .. 446 Technics 432 459 Toshiba .
 .. 447 Yamaha ...
 448 Zenith
 .. 460 461 498 501 502 Audio Tape Decks Denon.
 . 455 Harman/Kardon. . . 456 JVC .
 .. 449

. . . . 457 Kenwood

. 450 Onkyo
458 Philips DCC
454 Pioneer
. . . 451 478 Sony

. . . 452 Audio Tuners/Amps Denon
. . 462 463 Fisher

.
. 464 Goldstar 460 Harman/Kardon

465 JVC
466 Kenwood
. 468 469 Marantz
. . . . 472 503 Onkyo

. . 473 Philips
475 476 Pioneer
. . . 477 478 479 Radio Shack
. . . 487 488 Realistic

480 Sanyo 481 Scott

.
. . . 482 Sharp
. 483 Sony

. 489 490 491 492 Soundesign
. . 461 498 501 502 Teac

.
. 494 495 Technics 497 Yamaha

. 496 Zenith

. . . 460 461 498 501 502 206-3375 PAGE 29 Zenith Product Codes A complete list of the button functions on your remote control. KEY NAME POWER CABLE VCR AUX TV SURF FLASHBK MUTE CHANNEL UP CHANNEL DN VOLUME (RIGHT) VOLUME (LEFT) 1 2 3 4 5 6 7 8 9 0 ENTER MENU UP ARROW DOWN ARROW LEFT ARROW RIGHT ARROW QUIT/A B C CC TIMER TV/VCR/SOURCE RECORD PAUSE REWIND PLAY STOP FFWD
References: TV Mode Zenith Code 101 TV On/Off Selects Cable Selects VCR Selects Aux Selects TV N/A TV Flashback TV Mute TV Channel Up TV Channel Dn TV Volume Up TV Volume Dn TV Digit 1 TV Digit 2 TV Digit 3 TV Digit 4 TV Digit 5 TV Digit 6 TV Digit 7 TV Digit 8 TV Digit 9 TV Digit 0 TV Enter TV Menu TV Select Up TV Select Dn TV Adjust Left TV Adjust Right TV Seq Sound TV PIP TV PIP Swap TV PIP Freeze TV Closed Captions TV Timer TV Sources VCR Record VCR Pause VCR Rewind VCR Play VCR Stop VCR Fast Forward VCR Mode Zenith Code 201 VCR On/Off Selects Cable Selects VCR Selects AUX Selects TV VCR AM/PM VCR Flashback TV Mute VCR Channel Up VCR Channel Dn TV Volume Up TV Volume Dn VCR Digit 1 VCR Digit 2 VCR Digit 3 VCR Digit 4 VCR Digit 5 VCR Digit 6 VCR Digit 7 VCR Digit 8 VCR Digit 9 VCR Digit 0 VCR Enter VCR Menu VCR Select Up VCR Select Dn VCR Adjust Left VCR Adjust Right VCR Quit VCR+ VCR Channel Map VCR Search VCR Memory VCR Timer TV Tuner or VCR Tuner VCR Record VCR Pause VCR Rewind VCR Play VCR Stop VCR Fast Forward Cable Mode Zenith Code 353 Cable Box On/Off Selects Cable Selects VCR Selects Aux Selects TV Cable FC/Fav Ch Cable Flashback TV Mute Cable Channel Up Cable Channel Dn TV Volume Up TV Volume Dn Cable Digit 1 Cable Digit 2 Cable Digit 3 Cable Digit 4 Cable Digit 5 Cable Digit 6 Cable Digit 7 Cable Digit 8 Cable Digit 9 Cable Digit 0 Cable Enter Cable Menu Cable Up Arrow Cable Dn Arrow Cable Left Arrow Cable Right Arrow Cable Quit Day Up Day Down Cable Pg Up Cable Pg Down Cable Timer Cable Info Cable Buy Cable Guide VCR Rewind VCR Play VCR Stop VCR Fast Forward AUX Mode Zenith Code 401 AUX TV/Disc Selects Cable Selects VCR Selects AUX Selects TV AUX Audio AUX Frame/Time TV Mute AUX Skip >> AUX Skip << TV Volume Up TV Volume Dn AUX Digit 1 AUX Digit 2 AUX Digit 3 AUX Digit 4 AUX Digit 5 AUX Digit 6 AUX Digit 7 AUX Digit 8 AUX Digit 9 AUX Digit 0 Aux Display AUX Program AUX Part AUX Random AUX x3 FAST < AUX x3 FAST > AUX Clear AUX Repeat-Side AUX Repeat-A-B AUX Repeat-Chap AUX Memory AUX Still AUX TV/Disc AUX Edit AUX Pause AUX Scan << AUX Play AUX Stop/Eject AUX Scan >> 124-212-37 and µP 221-952-02A PAGE 30 206-3375 Troubleshooting Some quick and easy tips to fixing problems yourself.



[You're reading an excerpt. Click here to read official ZENITH](#)

[B27A11Z user guide](#)

<http://yourpdfguides.com/dref/340933>

SYMPTOMS Snowy picture and poor sound. Multiple images or 'ghost shadows.' SOLUTIONS · Check your antenna connection or location. · Check your antenna direction and/or location. · Make sure the wire from your antenna to your Entertainment Machine is properly connected.

The following may cause image problems or distortion: Electrical appliances, powerful lights, cars, trucks; computers or portable phones; medical equipment · If possible increase the distance between your Entertainment Machine™ and the offending appliance. Or shut one of them off. Interference: Sharp lines across the screen and poor sound. Normal picture but no sound. · Check volume control. · Make sure the TV is not Muted. · Try another channel. The problem may be the broadcast, not your Entertainment Machine™. · Are the Audio A/V cables properly installed? · Are the wires for external speakers (if you have external speakers) properly installed? · Are you in TV or cable tuning mode and should be in the other? · Make sure output channels on all A/V equipment are on the same channel (3 or 4). · Check that all connections are tight.

· Is the AC power plugged in? · Check that your AC power outlet works. (Test it by plugging in something else or try another plug.) · Make sure your brightness and audio controls are set properly. · Try another channel. The problem may be with the broadcast. · Check the color control in the Video menu. · Try another channel. The problem may be with the broadcast. · The CC (closed caption) option may be in Text mode. Select OFF in the Captions/ Text menu. · Your program is in letterbox. This means that the shape of your TV is a square, but the program is a rectangle. Think of the bars as empty space the program doesn't fill; not picture that's blocked out. Because this format is a direct representation of film as you see it in the movies, you are actually seeing MORE of the program when you see those bars. Trust us.

· Make sure the batteries are fresh and installed properly. No picture and poor sound. No picture and no sound No color, but the sound is O.K. Picture has a big black box on it, but the sound is O.

K. Picture has two horizontal black bars, one on top and one on bottom. Remote control doesn't work. Menu options won't change. · Try unplugging the TV, waiting about five minutes, and then plugging it back in and trying again. 206-3375 PAGE 31 Glossary A complete list of definitions for words found in this guide. 75 OHM RF CABLE The wire that comes from an off-air antenna or cable service provider. The end looks like a hex-shaped nut with a wire sticking through the middle. It screws onto the threaded jack on the back of your TV. A small device that connects a two-wire 300 ohm antenna to a 75 ohm RF jack.

They are usually about an inch long with two screws on one end and a round opening with a wire sticking out on the other end. Audio/Video cables. Three cables bunched together--right audio (red), left audio (white), and video (yellow). A/V cables are used for stereo playback of videocassettes and for higher quality picture and sound from other A/V devices. This function lets you add new channels to list that you'll scroll through when using your remote. The physical receiver of television signals sent over the air. A large metal piece of equipment does not always have to be visible for your home to be using an antenna. Auto Program has your Entertainment Machine automatically find all the channels available in your area. Restrict or censor a channel for a set length of time. This function lets you remove channels that you don't watch from the list you'll scroll through using your remote.

Refers to the jack that receives a signal from a TV, VCR or other A/V device. A connection on the back of a TV, VCR, or any other A/V device. Mono (monaural) sound is one channel of sound. On more than one speaker, all the speakers play the same audio. Refers to the jack that sends a signal out of a VCR, DVD, or other A/V device.

300 TO 75 OHM ADAPTER A/V CABLES ADD ANTENNA AUTO PROGRAM BLOCK DELETE INPUT JACK MONO SOUND OUTPUT SECOND AUDIO Second Audio Programming (SAP) is another, separate, audio channel PROGRAMMING/SAP available with some programming. Choosing SAP often refers to listening to audio in another language, such as Spanish or French. SIGNAL Picture and sound traveling through cable, or on the air, to your television screen. Stereo (stereophonic) sound refers to audio that's divided into right and left sides. Device that picks up the signal and turns them into picture and sound.

STEREO SOUND TUNER PAGE 32 206-3477 Maintenance Caring for your Entertainment Machine. Early malfunctions can be prevented. Careful and regular cleaning can extend the amount of time you will have with your new Entertainment Machine. Be sure to turn the power off and pull out the plug before you begin any cleaning. Screen Cleaning 1. Here's a great way to keep the dust off your screen for a while. Wet a soft cloth in a mixture of lukewarm water and a little fabric softener or dish washing detergent. Wring the cloth until it's almost dry, and then use it to wipe the screen. 2. Make sure the excess water is off the screen, and then let it air-dry before you turn on your Entertainment Machine.

Cabinet Cleaning 1. Use a soft cloth with a mild soap solution to wipe the cabinet (avoid using any cleaner that says "industrial strength" or "will wash the white off of rice" on the label). 2. Rinse the cloth and wipe the cabinet again. 3. Let the cabinet air-dry before turning the Entertainment Machine on. Wood Cabinets Use a quality wood cleaner and polish. This will protect the Entertainment Machine from dirt and dust, as well as keep the cabinet looking new.

Extended Absence If you leave your Entertainment Machine dormant for a long time (such as a vacation), it's a good idea to unplug the power to protect against possible damage from lightning or power surges. If you use an off-air antenna, you may also want to disconnect it from the back of your TV before leaving.

If you unplug your Entertainment Machine, you may have to reset the clock using the Clock Set menu described earlier. 206-3375 PAGE 33 Index Find what you want quickly. FEATURE . . .

.
.

. PAGE Antenna

.
.
.

. 6, 8 Auto Program

.
.
.

. 10 Audio Mode

.
.

. 21 Basic Television Operation.

.....
.....
.....
.....
.....
25 Hook-Up Directory

.....
.....
.....
5 Language Menu

.....
.....
.....
22 Maintenance

.....
.....
.....
.....
26 Parental Control

.....
.....
.....
.....
.....
18-19 Remote Control Diagram

.....
.....
.....
11 Safety Information

.....
.....
.....
2-4 Setup Menu

.....
.....
.....
14 Timer

.....
.....
.....
17 Troubleshooting

.....
.....
.....
24 VCR

.....
.....
.....
7, 9 Video Menu

.....
.....
.....
23 Warranty

.....
29 206-3477 PAGE 34 Recommended Video Accessories Type Text in here. Type Text in here. Type Text in here. Type Text in here. Type Text in here. Type Text in here. Type Text in here. Type Text in here. Type Text in here. Type Text in here.

INDOOR AMPLIFIED ANTENNA Receive Local programming NOT available on your Satellite system!!! Perfect backup antenna for cable outages. Enhanced quality picture and stereo sound in weak signal areas. · Amplified VHF/UHF/FM Antenna includes 4 feet of 75 ohm cable for easy hookup. ATS 775 ONLY \$34.95 PLUS \$6.95 SHIPPING & HANDLING TELEVISION WALL MOUNTS Set up your game room or spare room in style!! Sturdy black wall mounts keep the TV off your furniture and in easy view. All mounts have 90 degree and 10 degree tilt angles. · ALGW27 fits most 25" to 27" TVs - ONLY \$59.99 · ALGW20 fits most 19" and 20" TVs - ONLY \$49.99 · ALGw13 fits most 13" Televisions - ONLY \$39.

99 Available in White, just add "-WH" to part number (e.g. ALGW27-WH) FOR ALL ORDERS ADD \$6.95 SHIPPING & HANDLING 2 1 3 ZENITH 5

FUNCTION REMOTE Broken or lost remote? Need a second remote or more functions? Order direct from Zenith!! @@@@ Please read this warranty carefully, it is a "LIMITED WARRANTY" as defined under Federal Law. This warranty gives you specific legal rights, and you may also have other rights that vary from state to state within the U.S.A. ZENITH RESPONSIBILITY Service Labor During a period of 90 days from effective warranty date, Zenith will provide service labor by a Zenith authorized service center when needed as determined by Zenith, as a result of manufacturing defects. New or remanufactured replacements for factory-defective parts will be supplied by a Zenith authorized service center for one year from effective warranty date (color picture tube -- two years). Such replacement parts are warranted for the remaining portion of the original warranty period.

@@@@ OWNER'S RESPONSIBILITY Effective Warranty Date Warranty begins on the date of original consumer purchase. For your convenience, keep the dealer's dated bill of sale or delivery ticket as evidence of the purchase date. Read your Operating Guide carefully so that you will understand the operation of your set and how to adjust the customer controls. Models under 21" diagonal (U.S.

A.) screen size must be taken to a Zenith authorized service center for warranty service and must be picked up by the owner. Reception problems caused by inadequate home antenna or faulty antenna connections are the owner's responsibility. Product Registration--Please fill out and mail your Product Registration Card. It is imperative that Zenith know how to reach you promptly if we should discover a safety problem that could affect you.

For warranty service information, contact any Zenith authorized service center. Parts and service labor that are Zenith's responsibility (see above) will be provided without charge. Other service is at the owner's expense. If you have any problem in obtaining satisfactory warranty service, call or write the Zenith Response Center. You must provide the model number, serial number and date of purchase or date of original installation. Before you ask for warranty service, read "Maintenance and Troubleshooting" in your operating guide. You might avoid a service call. Operating Guide Carry-In Service Antenna Important Warranty Service ZENITH ELECTRONICS CORPORATION Zenith Response Center 201 James Record Rd., Building 3, Huntsville, AL 35824 Telephone (256) 772-1515 Mon-Fri, 7:00 a.m.

-8:00 p.m. CST Sat. 8:00 a.m.-5:00 p.m. CST www.zenith.com ZENITH CONSUMER SERVICES FACTORY OWNED SERVICE CENTERS 801 E. Roosevelt Rd Lombard, IL 60148 (630)705-2830 Home & Carry-in Service Television/VCR Parts and Accessories PTV/Camcorders 201 James Record Rd. Building 4 Huntsville, AL 35824 (256) 774-4025 Service Hours: M-F 8-6, Sat 9-2 Will accept UPS Shipments Additional Zenith Picture Tube Protection Plan Available Zenith offers you the opportunity to obtain additional long-term protection against failure of the picture tube in your new Entertainment Machine. Our Picture Tube Protection Plan enables you to avoid any unexpected picture tube repair expenses and keep your Entertainment Machine in top condition. It guarantees you a genuine Zenith replacement picture tube and service from a Zenith authorized service center. Be sure to send in the Product Registration Card.

We will send you an application for the Protection Plan near the expiration of the two-year manufacturer's warranty on the picture tube. For additional information call (256) 774-4088. PAGE 36 © Copyright 2000, Zenith Electronics Corporation. 206-3477 Rev. B .



[You're reading an excerpt. Click here to read official ZENITH B27A11Z user guide](http://yourpdfguides.com/dref/340933)
<http://yourpdfguides.com/dref/340933>