




Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for ZENITH C25A24T. You'll find the answers to all your questions on the ZENITH C25A24T in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual ZENITH C25A24T
User guide ZENITH C25A24T
Operating instructions ZENITH C25A24T
Instructions for use ZENITH C25A24T
Instruction manual ZENITH C25A24T

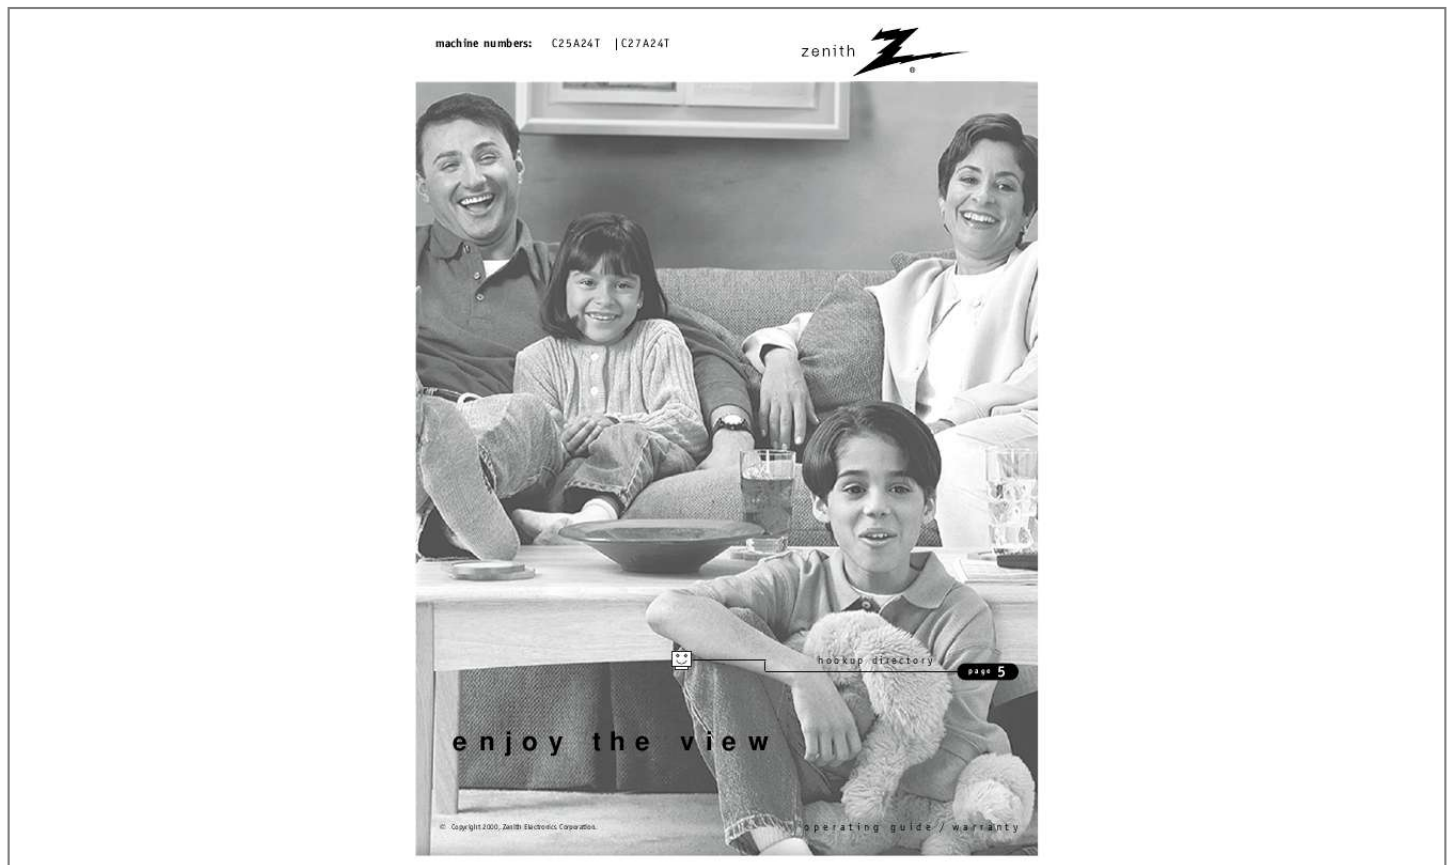

[You're reading an excerpt. Click here to read official ZENITH C25A24T user guide](http://yourpdfguides.com/dref/340956)
<http://yourpdfguides.com/dref/340956>

Manual abstract:

REFER SERVICING TO QUALIFIED SERVICE PERSONNEL. @@@@POWER CORD POLARIZATION: CAUTION: TO PREVENT ELECTRIC SHOCK, MATCH WIDE BLADE OF PLUG TO WIDE SLOT, FULLY INSERT. ATTENTION: POUR ÉVITER LES CHOCs ÉLECTRIQUES, INTRODUIRE LA LAME LA PLUS LARGE DE LA FICHE DANS LA BORNE CORRESPONDANTE DE LA PRISE ET POUSSER JUSQU'AU FOND. NOTE TO CABLE/TV INSTALLER: This reminder is provided to call the cable TV system installer's attention to Article 820-40 of the National Electric Code (U.S.A.). The code provides guidelines for proper grounding and, in particular, specifies that the cable ground shall be connected to the grounding system of the building, as close to the point of the cable entry as practical. **REGULATORY INFORMATION:** This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a residential installation.

@@@@@ · Increase the separation between the equipment and receiver. @@ · Consult the dealer or an experienced radio/TV technician for help.

CAUTION: Do not attempt to modify this product in any way without written authorization from Zenith Electronics Corporation. Unauthorized modification could void the user's authority to operate this product. Entertainment Machine is a trademark of Zenith Electronics Corporation.

206-3588 IMPORTANT SAFETY INSTRUCTIONS Important safeguards for you and your new product Your product has been manufactured and tested with your safety in mind. However, improper use can result in potential electrical shock or fire hazards. To avoid defeating the safeguards that have been built into your new product, please read and observe the following safety points when installing and using your new product, and save them for future reference.

Observing the simple precautions discussed in this booklet can help you get many years of enjoyment and safe operation that are built into your new product. This product complies with all applicable U.

S. Federal safety requirements, and those of the Canadian Standards Association. 1. Read Instructions All the safety and operating instructions should be read before the product is operated. 9. Attachments Do not use attachments not recommended by the product manufacturer as they may cause hazards. 2. Follow Instructions All operating and use instructions should be followed. 10. Ventilation Slots and openings in the cabinet are provided for ventilation and to ensure reliable operation of the product and to protect it from overheating, and these openings must not be blocked or covered.

The openings should never be blocked by placing the product on a bed, sofa, rug, or other similar surface. This product should not be placed in a built-in installation such as a bookcase or rack unless proper ventilation is provided or the manufacturer's instructions have been adhered to. 3. Retain Instructions The safety and operating instructions should be retained for future reference. 4. Heed Warnings All warnings on the product and in the operating instructions should be adhered to. 5. Cleaning Unplug this product from the wall outlet before cleaning. Do not use liquid cleaners or aerosol cleaners. Use a damp cloth for cleaning.

11. Power Sources This product should be operated only from the type of power source indicated on the marking label. If you are not sure of the type of power supply to your home, consult your product dealer or local power company. For products intended to operate from battery power, or other sources, refer to the operating instructions. 6.

Water and Moisture Do not use this product near water - for example, near a bath tub, wash bowl, kitchen sink, or laundry tub, in a wet basement, or near a swimming pool. 12. Line-Cord Polarization This product is equipped with a polarized alternating-current line plug (a plug having one blade wider than the other). This plug will fit into the power outlet only one way. This is a safety feature.

If you are unable to insert the plug fully into the outlet, try reversing the plug. If the plug should still fail to fit, contact your electrician to replace your obsolete outlet. Do not defeat the safety purpose of the polarized plug. 7. Accessories Do not place this product on an unstable cart, stand, tripod, bracket, or table. The product may fall, causing serious injury to a child or adult, and serious damage to the product. Use only with a cart, stand, tripod, bracket, or table recommended by the manufacturer, or sold with the product. Any mounting of the product should follow the manufacturer's instructions, and should use a mounting accessory recommended by the manufacturer. 13. Power-Cord Protection Power-supply cords should be routed so that they are not likely to be walked on or pinched by items placed upon or against them, paying particular attention to cords at plugs, convenience receptacles, and the point where they exit from the product.

8. Transporting Product A product and cart combination should be moved with care. Quick stops, excessive force, and uneven surfaces may cause the product and cart combination to overturn. (Continued on next page) **PORTABLE CART WARNING 206-3588 PAGE 3 IMPORTANT SAFETY INSTRUCTIONS** (Continued from previous page) 18. Object and Liquid Entry Never push objects of any kind into this product through openings as they may touch dangerous voltage points or short-out parts that could result in a fire or electric shock. Never spill liquid of any kind on the product. 14. Outdoor Antenna Grounding If an outside antenna or cable system is connected to the product, be sure the antenna or cable system is grounded so as to provide some protection against voltage surges and built-up static charges. Article 810 of the National Electrical Code (U.S.

A.), ANSI/NFPA 70 provides information with regard to proper grounding of the mast and supporting structure, grounding of the lead-in wire to an antenna discharge unit, size of grounding conductors, location of antenna-discharge unit, connection to grounding electrodes, and requirements for the grounding electrode. Example of Grounding According to National Electrical Code Instructions 19. Servicing Do not attempt to service this product yourself as opening or removing covers may expose you to dangerous voltage or other hazards. Refer all servicing to qualified service personnel.

20. Damage Requiring Service Unplug this product from the wall outlet and refer servicing to qualified service personnel under the following conditions: a. If the power-supply cord or plug is damaged. b. If liquid has been spilled, or objects have fallen into the product. c. If the product has been exposed to rain or water. d. If the product does not operate normally by following the operating instructions. Adjust only those controls that are covered by the operating instructions as an improper adjustment of other controls may result in damage and will often require extensive work by a qualified technician to restore the product to its normal operation.



[You're reading an excerpt. Click here to read official ZENITH](http://yourpdfguides.com/dref/340956)

[C25A24T user guide](http://yourpdfguides.com/dref/340956)

<http://yourpdfguides.com/dref/340956>

e. If the product has been dropped or the cabinet has been damaged. f. If the product exhibits a distinct change in performance. Ground Clamp Antenna Lead in Wire Antenna Discharge Unit (NEC Section 810-20) Grounding Conductor (NEC Section 810-21) Ground Clamps Power Service Grounding Electrode System (NEC Art 250, Part H) Electric Service Equipment NEC - National Electrical Code 15.

Lightning For added protection for this product (receiver) during a lightning storm, or when it is left unattended and unused for long periods of time, unplug it from the wall outlet and disconnect the antenna or cable system. This will prevent damage to the product due to lightning and power-line surges. 21.

Replacement Parts When replacement parts are required, be sure the service technician has used replacement parts specified by the manufacturer or have the same characteristics as the original part. Unauthorized substitutions may result in fire, electric shock, or other hazards. 16. Power Lines An outside antenna system should not be located in the vicinity of overhead power lines or other electric light or power circuits, or where it can fall into such power lines or circuits. When installing an outside antenna system, extreme care should be taken to keep from touching such power lines or circuits as contact with them might be fatal. 22. Safety Check Upon completion of any service or repairs to this product, ask the service technician to perform safety checks to determine that the product is in proper operating condition.

23. Wall or Ceiling Mounting The product should be mounted to a wall or ceiling only as recommended by the manufacturer. 17. Overloading Do not overload wall outlets and extension cords as this can result in a risk of fire or electric shock. 24.

Heat The product should be situated away from heat sources such as radiators, heat registers, stoves, or other products (including amplifiers) that produce heat. PAGE 4 206-3588 Hook-Up Directory IMPORTANT!! Use this page to decide where you need to begin your setup. First, find the line below that best describes what you want to do, then go to that page number. Antenna only If you are using an antenna and no other equipment, go to . . .

.....

..... page 6 Cable only Cable TV wall jack If you have cable service or a cable box and no other equipment, go to

.....

. page 7 Cable box In Out Antenna with VCR If you are using an antenna and have a VCR, go to

.....

..... page 8 Cable and VCR If you have cable service or a cable box and a VCR, go to .

.....

.....

..... page 9 Cable TV wall jack In Out Cable box 206-3588 PAGE 5 Hook Up Your Antenna to the TV Connect an antenna to your Entertainment Machine.

1 2 Locate the Antenna/Cable jack on the back of your Entertainment Machine. Connect the cable that runs from the wall directly to this jack, according to the diagram to the right. Remove the back of the remote and put in two AAA batteries. Flat wire antenna to Entertainment Machine Antenna TV back 3 Flat wire (300 ohm) back of remote Antenna /Cable Variable Audio Out R L S-Video Video R-Audio L/Mono 4 Plug in your Entertainment Machine. Do not plug it into a switched outlet. Your Entertainment Machine is designed to operate on household current, 120-volt 60 Hertz AC do not attempt to operate it on DC Current. 300/75 ohm Adapter TV back panel (expanded view) Antenna to Entertainment Machine Antenna TV back 5 Go to page 12 to EZ Program your Entertainment Machine. If you have a 75 ohm RF cable, then you don't need any adapBox VCR back VCR back AV panel Round wire (75ohm) 1 2 Locate the Antenna/Cable jack on the back of your Entertainment Machine. Connect the cable that runs from the wall directly to this jack, according to the diagram to the right. Remove the back of the remote and put in two AAA batteries.

In Out L output switch 3 4 Output Audio Video R TV back RF coaxial wire (75ohm) not included with TV 3 Antenna /Cable Variable Audio Out R L S-Video Video back of remote TV back panel (expanded view) R-Audio L/Mono A/V cables not included with TV 4 Plug in your TV. Do not plug it into a switched outlet. Your Entertainment Machine is designed to operate on household current, 120-volt 60 Hertz AC do not attempt to operate it on DC Current. Cable TV wall jack VCR With Cable Box In Out Cable box output switch 3 4 VCR back VCR back AV panel Round wire (75ohm) 5 Go to page 12 to Auto Program your Entertainment Machine. In Out L output switch 3 4 Output Audio Video R Leave your VCR and your television tuned to channel three and use the cable box to change channels.

Remember, when screwing in RF cables onto jacks, clockwise tightens and countainment Machine. CABLE SURF VCR AUX TV MUTE FLASHBK CHANNEL VOLUME VOLUME CHANNEL (UP/DOWN) Flip through available channels. ENTER Shows the Channel/Time display. Press after channel numbers for instant selection. LEFT/RIGHT ARROWS The Left/Right arrows adjust options.

CHANNEL MUTE Turns sound Off and On while the picture remains. Press once to quiet sound, press again to mute, press again to restore sound. VOLUME LEFT/RIGHT Adjusts the sound levels on your Entertainment Machine. NUMBER KEY PAD Selects channels directly and enters numeric values for some options. UP/DOWN ARROWS The Up/Down arrows select options. 1 4 7 0 2 5 8 ENTER 3 6 9 MENU QUIT MENU Displays on-screen menus for TV mode. A B PAUSE C CC TV/VCR SOURCE RECORD TIMER PLAY QUIT Removes on-screen display from view. TIMER Displays the Sleep Timer Menu. REWIND STOP FFWD CC(CLOSED CAPTIONING) Displays the closed caption menu. TV/VCR-SOURCE Switches between watching TV through your antenna/cable or through your VCR.

Keys dedicated to VCR functions will still operate your VCR while the remote is in TV mode. remote control part number MBR3447CT (124-233-04) 206-3588 PAGE 13 Front Panel Diagram There are three different front panel button styles used with this Operating Guide. Select the front panel that resembles the Entertainment Machine you are using and learn what each button operates and controls. Six Button Front Panel When using the on-screen menus, the buttons on the front panel of these models correspond to the remote control buttons as follows: VOLUME = Adjust Left/Right CHANNEL = Select Up/Down volume power menu channel 1 2 3 To access the on screen menus, press the MENU button repeatedly on the front panel. Choose the menu and then the function you wish to change using the CHANNEL UP/DOWN buttons. The Channel buttons act as a "select" (Up/Down) function. The VOLUME buttons act as an "adjustment" (Left/Right) function. Use the VOLUME buttons to make changes or adjustments. menu channel volume power 1 Ten Button Front Panel 2 3 1 To access the Setup menu, press the MENU button repeatedly until the Setup Menu appears on screen.



[You're reading an excerpt. Click here to read official ZENITH C25A24T user guide](http://yourpdfguides.com/dref/340956)
<http://yourpdfguides.com/dref/340956>

Press the Select button to choose the function you wish to change.

Use the ADJUST buttons to make changes or adjustments. Press the Enter button to clear the screen. The Volume and Channel rocker buttons control Volume Up/Down and Channel Up/Down only. enter adjust select menu volume channel power 2 3 4 5 3 4 power 1 2 ch vol Menus disappear after five seconds. To get them back, push the MENU button again.

1 2 3 4 menu sel adj ent PAGE 14 206-3588 Basic Television Operation Introducing you to the basics of your Entertainment Machine. Source On some models, the A/V input is designated as a channel that is one below the lowest/one above the highest. You'll have to use the Channel Up/Down buttons or the Source Menu display (see page 30) to access it. The Time/Channel display will read "Video" in place of a channel number. Cable/Antenna Input: This setting allows you to change cable or antenna channels and to view videocassettes on channel 3 (or 4) in mono sound.

Video Input: This setting allows stereo playback of videocassettes. The television cannot change channels in the Video mode, but the VCR can. Channel or Video (Indicates Source) Time Audio Mode CH 12 10:55 AM MONO To view the current input source, press ENTER on your remote. The Time/Channel display should appear in the upper right hand corner of the screen. If the display reads Video, then the source is an A/V input. If the display reads a channel number, then the source is your Cable or Antenna. Channel Changing CHANNEL UP/DOWN arrows: Use these arrows to change the channels. Auto program will have found all channels available to you. NUMBER Key Pad: To skip to any channel, enter the number of the channel using the NUMBER key pad, then press ENTER. FLASHBACK: To instantly return to the last channel viewed, press FLASHBACK.

Audio Volume Right/Left: To adjust the volume level, use the volume Right/Left arrows. Press MUTE to quiet the sound (Soft Mute). Press MUTE a second time to remove the sound entirely (MUTE). Press MUTE a third time to restore the sound. 206-3588 PAGE 15 Setup Menu Here are descriptions of the menu options found in the Setup menu. Function What it does Go to page Setup Adjust the basic characteristics of your Entertainment Machine. Automatically finds and stores active channels to flip through using Channel Up/Down. Manually pick and choose which active channels will appear when flipping through using Channel Up/Down. Use the Surf feature to select just the channels you wish to have on your favorite channel scan.

Sets the current time on your Entertainment Machine. Switches the Captions feature On and Off and EZ Mute. Displays closed captions or text when available. Options are Caption 1, Caption 2, Caption 3, Caption 4, Text 1, Text 2, Text 3, and Text 4. Selects language for on-screen menus.

Your options are English, Spanish, or French. Customize your Entertainment Machine's functions. Program a time for your Entertainment Machine to turn itself on or off, or to turn itself off after a certain amount of time. Label your channels with their network names (ABC, CBS, NBC, etc.).

Extended Data Service displays Channel, Time, and Network Label, (Data is provided at the sole discretion of the broadcaster). Use V-Chip technology to block channels according to ratings. Your Entertainment Machine will show you what it's capable of by running through all of its options and menus automatically. Customize the sound to suit your room and your taste. Your options are: Bass, Treble, Balance, Audio Mode, Front Surround, EZ SoundRite, Speakers, and EZ Sound. Adjust your picture for any viewing situation. your options are: Contrast, Brightness, Color, Tint, Sharpness, Color Temperature, and EZ Picture. Choose from the available sources for the min picture. 22 12 Setup Menu EZ Program Add/Del/Surf Clock Set Captions Captions/Text 18 19 20 This is an example of what on-screen menus look like. Language 21 Special Features EZ Timer Ch.

Labels 23 XDS Display 24 Parental Controls 25 EZ Demo 27 Audio Menu 28 Video Menu 29 Source Menu 30 PAGE 16 206-3588 Setting Add/Del/Surf Customize your channel selection. Setup Menu EZ Program Add/Del/Surf Clock Set Captions Caption/Text Language Ch 9 Added 1 2 3 4 5 Press the MENU key on the remote so the Setup menu appears. Select the Add/Del/Surf menu using the UP/DOWN arrows. Using either the NUMBER key pad or the CHANNEL UP/DOWN arrows on the remote, select a channel. (If adding a deleted channel, you will need to use the NUMBER key pad.) Using the RIGHT/LEFT arrows, select either Add, Surf or Delete for that particular channel. To continue, select another channel and repeat step 4. @@@@ If you delete a channel, it isn't gone for good. @@@@ Press the FLASHBK button to select AM or PM. @@@@ EZ Program Add/Del/Surf Clock Set Captions Caption/Text Language Caption 1 1 2 3 4 Press the MENU key on the remote control so that the Setup menu appears.

PRG POWER Using the UP/DOWN arrows on the remote control, select Captions/Text on your screen. CABLE SURF VCR AUX TV MUTE FLASHBK Press a RIGHT/LEFT arrow to choose any of the following options: Caption 1, Caption 2, Caption 3, Caption 4, Text 1, Text 2, Text 3 or Text 4. Press ENTER to return to TV viewing. CHANNEL VOLUME VOLUME CHANNEL 1 4 7 0 2 5 8 ENTER 3 6 9 Captions come in handy when the television is on mute.

Standard Closed Captioning is available using the Caption 1 option.

Not all programming has closed captioning or text available. 4 QUIT 2 1 MENU 3 A B PAUSE C CC TV/VCR SOURCE RECORD TIMER PLAY REWIND STOP FFWD PAGE 20 206-3588 Language Options Choose the language you want all of the menus to appear in. Setup Menu EZ Program Agr/Bor/Surf Ajuste Reloj Subtít Subtít/Texto Language Spanish 1 2 3 4 Press the MENU key on the remote control so that the Setup menu appears. Using the UP/DOWN arrows on the remote control, select Language on your screen. @@@@ Once again, using the UP/DOWN arrow keys, select OFF TIME.

@@ Using the UP/DOWN arrow keys, select ON/OFF TIMER. Use the RIGHT/LEFT keys to select ON or OFF. The Timer feature is now set.

@@@@ Use either the RIGHT or LEFT arrow to specify On or Off. On - - XDS Display will appear as channels are changed. @@@@ The number of hours blocked can be specified. @@@@ Aux. @@@@ (See layout on next page). There are six levels of settings. @@@@ CHILDREN: These settings are: TV-Y and Above and TV-Y7.

@@ They are: Dialog, Language, Sex Scenes, Violence, F Violence and No Rating. These settings allow you the option to block the program "Content" based on individual parameters such as: Strong Dialog, Bad Language, Sex Scenes, Violence Scenes or Fantasy Violence Scenes and then to select an age level as well.



[You're reading an excerpt. Click here to read official ZENITH](#)

[C25A24T user guide](#)

<http://yourpdfguides.com/dref/340956>

Press LEFT/RIGHT arrows on the remote to access. NOTE: If you choose TV-PG, all of the more restrictive ratings will be automatically blocked. This means that the viewer will not be able to see TV-PG, TV-14, or TV-MA rated programming. Set Hours: Use this setting to enter the amount of hours you wish the Parental Control feature to be active. Set Password: Select a secret password or code, using the number keys on the remote control. Don't forget the password. It is the only way you can access the Parental Control menu and change the rating selections. It is also the only way you can turn the Parental Control feature off.

Lock On Off: This setting gives you the option to have the Parental Control feature active all the time or allow you to turn it on or off as needed. Simply specifying one content block such as Sex Scenes, will not automatically block another content in the programs from appearing. 206-3588 Even if you choose to leave the Aux inputs unblocked, the ratings you specify will automatically restrict the programming that appears from the video sources. PAGE 25 IAAT Parental Control (Continued) Determine the programs and video sources your family can or cannot access. Setup Menu EZ Program Add/Del/Surf Clock Set

Captions Caption/Text Language To Program Special Features EZ Timer Ch Labels XDS Display Parental Ctrl EZ Demo Parental Control Aux.

Block MPAA Age Block Content Blk Set Hours Set Password Lock On/Off Content Block To Block Dialog Language Sex Scenes Violence F Violence No Rating To Block TV-PG and above 1 2 3/4 Press the MENU key repeatedly until the Special Features menu appears on screen. PRG POWER Select Parental Control, using the UP/DOWN arrow keys. Press the RIGHT/LEFT arrows to select Block Channels. Using the UP/DOWN arrow buttons, select MPAA to block channels according to the MPAA guidelines. Select Age Block to block according to Age and Content Block to block channels according to program content.

If you wish to block a video source (VCR or DVD, etc), press the UP/DOWN arrow keys and select AUX. BLOCK and repeat 3. To set the hours you wish the Parental Control feature to be on, press the UP/DOWN arrow keys and select SET HOURS. Use the SET PASSWORD feature to insert a four digit code that will make sure no one else can change your settings. Finally set the lock to ON to complete the blocking out of the channels or video sources. Press ENTER to return to normal viewing. CABLE SURF VCR AUX TV MUTE FLASHBK CHANNEL VOLUME VOLUME CHANNEL 1 4 7 0 2 5 8 ENTER 3 6 9 5 6 7 8 9 9

QUIT 1 3/4 MENU A B C CC TV/VCR SOURCE 2/5/6 RECORD PAUSE TIMER PLAY REWIND STOP FFWD Mini glossary MOTION PICTURE

ASSOCIATION OF AMERICA (MPAA) RATING SYSTEM G PG PG-13 R NC-17 X General Audiences Parental Guidance Suggested Parental Guidance Suggested Restricted viewing Restricted Viewing Hard Core Films Content not offensive to most viewers. Content is such that parents may not want their children to view the program. Program is inappropriate for preteens, with a greater degree of offensive material than a PG rated program. Not for children under age 17.

Strong elements of sex and/or violence. Not for children under age 17 under any circumstances. Strong sexual content. Same as NC-17 rating. Note: Zenith Electronics Corporation is not liable for any program content that appears when using this rating system; as always, user discretion is advised.

@@@ Press a RIGHT/LEFT arrow to make an adjustment. @@@@ Your options are: · Contrast: Adjusts the level of difference between white and black in the TV picture. The more contrast, the brighter the picture appears. · Brightness: Increases or decreases amount of white in the TV picture. · Color: Adjusts levels of all colors in the TV picture.

CHANNEL PRG POWER CABLE SURF VCR AUX TV MUTE FLASHBK · Tint: Balance between amount of red and green in the TV picture. · Sharpness: Raise or lower the definition of the TV picture. The lower the level, the softer the images will appear. · Color Temperature: select between a warm or a cool color layout to the overall picture. · EZ Picture: Choose either Custom or Preset.

Custom allows you to set the picture the way you want. Preset moves all the above options back to their original, factory-set levels. VOLUME VOLUME CHANNEL 1 4 7 0 2 5 8 ENTER 3 6 9 4 QUIT 2 3 4 5 6 Use the UP/DOWN arrows on the remote control to make your selection. Using the RIGHT/LEFT arrows to adjust the level to your preference. Press ENTER, QUIT or MENU one more time to return to TV viewing, or repeat to set the other menu options. Using the Up/Down arrow, select EZ Picture on your screen. Use the RIGHT/LEFT arrows to choose an appropriate viewing setting based on video image options included in your EZ Picture feature. They are: Custom, Normal, Movie, Digital Preset, Video Game, Sports, Weak Signal and Night Time. 1 2/5

MENU 3/6 A B PAUSE C CC TV/VCR SOURCE RECORD TIMER PLAY REWIND STOP FFWD 206-3588 PAGE 29 Source Menu Choose between Antenna/Cable and Video Sources. Source Menu Main Source Video 1 Press the MENU key on the remote control repeatedly until the Source Menu appears on screen. It will show that the source of the picture on your screen is either coming from your Antenna Cable or from your Video (e.g. Video can be a VCR, a DVD player, etc.). Press a RIGHT/LEFT arrow to make an adjustment.

, changing the signal source from Antenna/Cable to your Video or vice versa. PRG POWER CABLE SURF VCR AUX TV MUTE FLASHBK 2 3 CHANNEL VOLUME VOLUME Press ENTER to clear the screen. 1 4 7 0 CHANNEL 2 5 8 ENTER 3 6 9 3 QUIT 1 MENU 2 A B PAUSE C CC TV/VCR SOURCE RECORD TIMER PLAY REWIND STOP FFWD PAGE 30 206-3588 Programming the Remote Program your remote to work with a vast range of A/V devices. 1 2 The device you want to program should be ON. On the chart in this manual, find the type of device you're programming and then find the brand name. Make a note of the three-digit code--you'll need it soon. Press and hold the PRG key. It's recessed so it doesn't get pushed accidentally. When indicator light behind the PRG button turns on, you can release the button. 3 PRG POWER Indicator Light CABLE VCR AUX TV MUTE 7 4 SURF FLASHBK 3 CHANNEL VOLUME VOLUME 4 5 6 Push the button with the name of the device you're programming (VCR, CABLE, TV).

Using the number pad, enter the three digit code found on the chart in the Reference section. Press ENTER to save the code The indicator light will flash three times and turn off if the code was accepted. CHANNEL 1 4 2 5 8 ENTER 3 6 9 5 7 0 6 QUIT MENU 7 Aim the remote at the device and push the POWER button.



[You're reading an excerpt. Click here to read official ZENITH](http://yourpdfguides.com/dref/340956)

[C25A24T user guide](http://yourpdfguides.com/dref/340956)

<http://yourpdfguides.com/dref/340956>

It should turn off. If not, try the other codes listed and continue from step three.

Note: After programming, to operate the device you have just programmed, press the proper Mode button first. A B PAUSE C CC TV/VCR SOURCE RECORD TIMER PLAY REWIND STOP FFWD Programming your Zenith remote will allow you to use one remote to work up to 7 different devices! Not all devices will work with your Zenith remote control. 206-3588 PAGE 31 Amplifier Volume Override Control the volume on your home audio system without changing modes. 1 Select the code that operates your amplifier and program it into the mode in which you want the volume to appear (e.g. CABLE mode), as described on the "Programming the Remote" on page 31. Press and hold PRG, using a blunt instrument, on your remote until the indicator light stays lit. Press 4-9-9; then ENTER on the remote. The indicator light will flash three times if code is accepted. The audio system volume/mute now appears in all modes 2 PRG POWER CABLE VCR AUX TV MUTE 2 3 SURF FLASHBK CHANNEL VOLUME VOLUME CHANNEL 4 1 4 2 5 8 ENTER 3 6 9 3 7 0 3 QUIT MENU A B PAUSE C CC TV/VCR SOURCE RECORD TIMER PLAY If you can't find the code for your amplifier, use the Auto Find feature on page 34. REWIND STOP FFWD PAGE 32 206-3588 Aux+1, Aux+2, Aux+3 Control up to seven devices with your remote! 1 2 3 4 5 6 7 Refer to the chart in this manual to find the type and brand name of the device you're programming. Press and hold the PRG key until the indicator light turns on. Press the AUX key and the 1 on the number pad at the same time (for AUX +1). Using the number pad, enter the three-digit code for the device you've selected. Press Enter to save the code.

Aim the remote at the device and press POWER. It should turn on. Repeat the steps for AUX+2, and AUX+3. VOLUME VOLUME 2 3 PRG POWER 6 CABLE SURF VCR AUX TV MUTE FLASHBK CHANNEL CHANNEL 1 4 7 0 2 5 8 ENTER 3 6 9 4 5 QUIT MENU A Programming your Zenith remote will allow you to use one remote to work up to 7 different devices! Not all devices will work with your Zenith remote control. B PAUSE C CC TV/VCR SOURCE RECORD TIMER PLAY REWIND STOP FFWD 206-3588 PAGE 33 Remote Control Auto-Find Use the remote control to search all possible codes. If Programming the Remote did not find your code, try this procedure to automatically find the code for your device. 1 2 3 4 5 Turn on the device you're programming for the remote control. Indicator Light 2 3 PRG POWER 5/7 Press and hold the PRG key until the indicator light turns on. Press the key for the device you're trying to program (CABLE, VCR, TV). Enter the code 0-0-0 (zero-zerozero), then press the ENTER key right away.

Aim the remote at the correct device and press the POWER button. Allow a second to pass, then push the POWER button again. Repeat until the device turns off. (This is a trial and error process, so it may be necessary to repeat these steps until the remote finds your code.) Push ENTER to save the code.

Press POWER to turn the device back on. CABLE SURF VCR AUX TV MUTE FLASHBK CHANNEL VOLUME VOLUME CHANNEL 1 4 7 2 5 8 ENTER 3 6 9 4 0 4/6 QUIT 6 7 MENU A B PAUSE C CC TV/VCR SOURCE RECORD TIMER PLAY REWIND STOP FFWD PAGE 34 206-3588 Programming Codes

Find the codes you need to program your remote. On this page: TVs, VCRs and Satellite Receivers. TVs TV/VCRS Admiral . .

. 121 Adventura

. . 154 Bell & Howell 121 Citizen

. . . . 121 Curtis Mathes .

. . . . 121 Daewoo . .

. 148 149 Electra

. . . . 121 Funai

. . 154 Goldstar . . .

. . . . 153 172 Kurazai .

. 121 Lodgenet . . .

. . . . 121 Logik

. . . . 121 Majestic . .

.

121 Memorex 121 Montgomery Ward . 121 Teknika . .

. 121 Telerent

. . . . 121 Signature 2000 .

. . 121 XR-1000 . . .

. . . . 121 Symphonic

154 Zenith 101 121 149 152 Zenith TV/VCR . .

. 150 153 154 172 VCRs Admiral

. . . . 261 Akai . .

. 292 717 718 719 720 Audio Dynamics . .

726 Bell & Howell 247 Broksonic

221 250 255 729 Candle

. . . . 727 Canon . .

. 704 Capeheart

. . 728 Citizen

727 Craig

. . . . 212 Curtis Mathes .

. . 259 266 725 727 Daewoo 244 246 248 254 703 729 Daytron .

. 246 DBX

.

. 726 Electrohome

. 730 Emerson 203 250 722 731 221 243 293 721 729 730 732 282 701 702 725 Goldstar . .

. 253 Go Video
 . . 256 262 263 700 Harman Kardon . . .
 296 Hitachi
 . . . 257 270 273 292 705 706 707 708 J.C. Penny

 . 268 2726 Jensen 292 JVC .

 224 225 258 268 292 299 726 Kenwood .
 268 292 726 727 Magnavox

 . . 275 Marantz 267 268 726 727 Memorex .

 . 212 298 MGA
 297 730 Mitsubishi

 . . 276 277 278 279 280 296 297 730 Montgomery Ward . 216 219 249 291 730 Multi Tech 727 NEC .

 267 268 269 281 292 709 726 Orion .
 250 Panasonic

 245 251 259 713 714 715 716 Pentax
 . . 708 727 Philco

 . 275 Pioneer 210 282 726 Portland

 246 727 ProScan
 . . 216 260 266 282 725 Quasar

 259 295 Radio Shack 213 265 730 RCA

 216 240 260 283 286 708 725 220 242 266 284 287 710 228 249 282 285 288 711 Sansui
 . . . 289 292 709 726 Sanyo

 . 212 247 294 Scott

 243 290 729 Sears 211 212 213 265 274 Sharp .

 . . . 261 730 Signature 2000
 . 216 219 249 Sony

 232 723 724 Sylvania 275 297 Tatung

 268 292 Teac
 268 Teknika

 . . . 272 Toshiba
 . 213 274 290 297 Vector Research . . 726 727 Victor

 . . 726 Video Concepts . . . 726 727 XR 1000

 . . 243 Yamaha
 726 Zenith
 . . . 201 224 225 229 Realistic
 212 213 265 730 Saisho

 722 Salora
 . . . 297 Samsung

 220 230 Fisher 211 212 213 247 265 274 General Electric .

 . 216 220 266 Satellite Receivers Alphastar 516 Chaparral

 501 502 Cheyenne
 . . 502 Dishnet

 515 Drake 503 General Electric .

.. 510 517 General Instrument 504 505 Hitachi ...

 519 520 Hughes Network... 514 JVC
 .. 518 Macom
 314 Magnavox
 . 521 Philips
 521 PrimeStar

 . 513 ProScan..... 510 517 RCA DSS .

 . 373 RCA
 510 517 Realistic

 ... 506 Sierra I
 . 502 Sierra II
 ... 502 Sierra III ..
 502 Sony

 511 STS1

 507 STS3
 508 Toshiba

 .. 509 512 Uniden
 522 United
 ... 344 Zenith Drake ..
 ... 312 330 Zenith

.. 312 328 351 378 500 206-3588 PAGE 35 Programming Codes Find the codes you need to program your remote. On this page: Cable, DVD Players, CD
 Players, Tape Decks and Audio Tuners and Amplifiers. Cable Boxes Allegro

.. 358 362 Allegro A/B Switch 361 Archer...

. 325 Century 325 Citizen .

..... 325 Comtronic .



[You're reading an excerpt. Click here to read official ZENITH
 C25A24T user guide
 http://yourpdfguides.com/dref/340956](http://yourpdfguides.com/dref/340956)

... 326 Garrard ..

. 325 Gemini 305 331 338 General Electric.
 .. 367 General Instrument 304 305 306 307 308 309 310 318 Hamlin
 302 303 345 365 366 Jasco
 325 Jerrold .
 304 307 308 309 310 318 360 363 Kale Vision ...

.. 335 Macom
 321 Magnavox
 . 327 334 NSC
 335 339 368 369 370 Oak

..... 311 332 342 Panasonic
 .. 313 320 Paragon ...
 333 Philips .
 325 327 347 350 352 354 355 Pioneer ...

..... 315 343 RCA

341 Regency
 .. 329 Samsung 326 335 Scientific Atlanta .

316 323 336 337 364 Signal 326 SL Marx .

.. 326 Sprucer ...
 313 Standard Comp ... 335 Stargate ..

..... 326 379 Teleview
 .. 326 Texscan ...
 339 356 371 Tocom .
 317 318 346 Unika ...

..... 325 348 362 Universal
 .. 325 358 362 Vid Tech ...
 340 Video Way .
 349 Viewstar

.. 327 354 355 372 Zenith HT-2000. . . 353 Zenith PM
 . 374 DVD Players JVC

.....

. 965 Mitsubishi 964 Pioneer ...

..... 963 Sony
 962 Toshiba .

.. 961 Zenith

960 Audio CD Players ADC
 940 ADO

939 Aiwa.

938 Akai
 937 Denon
 ... 935 Dynatech ..
 953 Emerson

.. 952 Fisher

. 438 933 951 General Electric. . . 932 Goldstar .

. 460 Hitachi 950 JVC .

..... 949 954 Kenwood .

441 931 948 Luxman
 . . . 930 Magnavox 421 422 433 434 Marantz .
 929 947 MCS

 . . 928 Mitsubishi
 . . . 927 Nakamichi 925 926 Onkyo .
 923 924 946 Optimus
 920 921 922 Panasonic .

 431 432 945 Philips 421 433 434 Pioneer . .
 431 435 944 Quasar
 432 Radio Shack .
 431 441 RCA .
 437 943 909 Sanyo .
 438 439 Sears

 . . 936 Sharp
 441 442 Sherwood
 449 Sony
 . . 420 443 444 445 934 Soundesign
 . . 461 498 901 902 Sylvania
 433 Teac
 . . . 418 419 Technics
 432 Toshiba
 . . . 961 Yamaha
 414 941 942 Zenith
 . . . 460 461 498 901 502 Audio Tape Decks Sony
 . . . 452 Audio Tuners/Amps Citizen

 . 914 General Electric . . . 916 Goldstar
 . 460 474 Hitachi 919 JVC .

 908 420 484 Luxman .
 467 Marantz
 903 913 Memorex
 . 485 Nad

 . 904 Nakamichi 493 Onkyo
 471 906 Optimus
 . . 905 Panasonic
 . . . 912 Pioneer
 470 485 907 Proton
 910 Quasar
 . . 912 RCA

 . . 909 Sharp
 . 483 917 918 Sherwood 900 Sony

 . . 486 489 490 491 492 Soundesign
 . . 461 498 901 902 Toshiba

 915 Techniques 912 Victor

 908 Zenith

CABLE VCR AUX TV SURF FLASHBK MUTE CHANNEL UP CHANNEL DN VOLUME (RIGHT) VOLUME (LEFT) 1 2 3 4 5 6 7 8 9 0 ENTER MENU UP
ARROW DOWN ARROW LEFT ARROW RIGHT ARROW QUIT/A B C CC TIMER TV/VCR/SOURCE RECORD PAUSE REWIND PLAY STOP FFWD
References: TV Mode Zenith Code 101 VCR Mode Zenith Code 201 Cable Mode Zenith Code 353 Cable Box On/Off Selects Cable Selects VCR Selects Aux
Selects TV Cable FC/Fav Ch Cable Flashback TV Mute Cable Channel Up Cable Channel Dn TV Volume Up TV Volume Dn Cable Digit 1 Cable Digit 2
Cable Digit 3 Cable Digit 4 Cable Digit 5 Cable Digit 6 Cable Digit 7 Cable Digit 8 Cable Digit 9 Cable Digit 0 Cable Enter Cable Menu Cable Up Arrow
Cable Dn Arrow Cable Left Arrow Cable Right Arrow Cable Quit Day Up Day Down Cable Pg Up Cable Pg Down Cable Timer Cable Info Cable Buy Cable
Guide VCR Rewind VCR Play VCR Stop VCR Fast Forward AUX Mode Zenith Code 960 AUX On/Off Selects Cable Selects VCR Selects AUX Selects TV
AUX Audio AUX Frame/Time TV Mute AUX Skip >> AUX Skip << TV Volume Up TV Volume Dn AUX Digit 1 AUX Digit 2 AUX Digit 3 AUX Digit 4 AUX
Digit 5 AUX Digit 6 AUX Digit 7 AUX Digit 8 AUX Digit 9 AUX Digit 0 Aux Display AUX Program AUX Part AUX Random AUX x3 FAST << AUX x3 FAST
> AUX Clear AUX Repeat-Side AUX Repeat-A-B AUX Repeat-Chap AUX Memory AUX Still AUX TV/Disc AUX Edit AUX Pause AUX Scan << AUX Play
AUX Stop/Eject AUX Scan >> TV On/Off VCR On/Off Selects Cable Selects Cable Selects VCR Selects VCR Selects Aux Selects AUX Selects TV Selects TV
Surf On/Off VCR AM/PM TV Flashback VCR Flashback TV Mute TV Mute TV Channel Up VCR Channel Up TV Channel Dn VCR Channel Dn TV Volume
Up TV Volume Up TV Volume Dn TV Volume Dn TV Digit 1 VCR Digit 1 TV Digit 2 VCR Digit 2 TV Digit 3 VCR Digit 3 TV Digit 4 VCR Digit 4 TV Digit 5
VCR Digit 5 TV Digit 6 VCR Digit 6 TV Digit 7 VCR Digit 7 TV Digit 8 VCR Digit 8 TV Digit 9 VCR Digit 9 TV Digit 0 VCR Digit 0 TV Enter VCR Enter TV
Menu VCR Menu TV Select Up VCR Select Up TV Select Dn VCR Select Dn TV Adjust Left VCR Adjust Left TV Adjust Right VCR Adjust Right TV Seq Sound
(Menu Quit)VCR Quit TV PIP VCR+ TV PIP Swap VCR Channel Map TV PIP Freeze VCR Search TV Closed Captions VCR Memory TV Timer VCR Timer
TV Sources TV Tuner or VCR Tuner VCR Record VCR Record VCR Pause VCR Pause VCR Rewind VCR Rewind VCR Play VCR Play VCR Stop VCR Stop
VCR Fast Forward VCR Fast Forward 124-233-04 and μ P 221-1445-01 Some of the functions, such as PIP, shown above, may not be available on your TV.
206-3588 PAGE 37 Glossary A complete list of definitions for words found in this guide. 75 OHM RF CABLE The wire that comes from an off-air antenna or
cable service provider. The end looks like a hex-shaped nut with a wire sticking through the middle. It screws onto the threaded jack on the back of your TV. A
small device that connects a two-wire 300 ohm antenna to a 75 ohm RF jack.

They are usually about an inch long with two screws on one end and a round opening with a wire sticking out on the other end. Audio/Video cables. Three
cables bunched together--right audio (red), left audio (white), and video (yellow). A/V cables are used for stereo playback of videocassettes and for higher
quality picture and sound from other A/V devices. This function lets you add new channels to list that you'll scroll through when using your remote. The
physical receiver of television signals sent over the air. A large metal piece of equipment does not always have to be visible for your home to be using an
antenna. Auto Program has your Entertainment Machine automatically find all the channels available in your area. Restrict or censor a channel for a set
length of time. This function lets you remove channels that you don't watch from the list you'll scroll through using your remote.

Refers to the jack that receives a signal from a TV, VCR or other A/V device. A connection on the back of a TV, VCR, or any other A/V device. Mono
(monaural) sound is one channel of sound. On more than one speaker, all the speakers play the same audio. Refers to the jack that sends a signal out of a
VCR, DVD, or other A/V device.

300 TO 75 OHM ADAPTER A/V CABLES ADD ANTENNA AUTO PROGRAM BLOCK DELETE INPUT JACK MONO SOUND OUTPUT SECOND AUDIO
Second Audio Programming (SAP) is another, separate, audio channel PROGRAMMING/SAP available with some programming.



[You're reading an excerpt. Click here to read official ZENITH
C25A24T user guide
http://yourpdfguides.com/dref/340956](http://yourpdfguides.com/dref/340956)

Choosing SAP often refers to listening to audio in another language, such as Spanish or French. SIGNAL Picture and sound traveling through cable, or on the air, to your television screen. Stereo (stereophonic) sound refers to audio that's divided into right and left sides. Device that picks up the signal and turns them into picture and sound.

STEREO SOUND TUNER PAGE 38 206-3588 Troubleshooting Some quick and easy tips to fixing problems yourself. SYMPTOMS Snowy picture and poor sound. Multiple images or 'ghost shadows.' SOLUTIONS · Check your antenna connection or location. · Check your antenna direction and/or location. ·

Make sure the wire from your antenna to your Entertainment Machine is properly connected. The following may cause image problems or distortion: Electrical appliances, powerful lights, cars, trucks; computers or portable phones; medical equipment · If possible increase the distance between your Entertainment Machine™ and the offending appliance. Or shut one of them off. Interference: Sharp lines across the screen and poor sound. Normal picture but no sound.

· Check volume control. · Make sure the TV is not Muted. · Try another channel. The problem may be the broadcast, not your Entertainment Machine™. · Are the Audio A/V cables properly installed? · Are the wires for external speakers (if you have external speakers) properly installed? · Are you in TV or cable tuning mode and should be in the other? · Make sure output channels on all A/V equipment are on the same channel (3 or 4). · Check that all connections are tight. · Is the AC power plugged in? · Check that your AC power outlet works. (Test it by plugging in something else or try another plug.) · Make sure your brightness and audio controls are set properly. · Try another channel.

The problem may be with the broadcast. · Check the color control in the Video menu. · Try another channel. The problem may be with the broadcast. · The CC (closed caption) option may be in Text mode.

Select OFF in the Captions/Text menu. · Your program is in letterbox. This means that the shape of your TV is a square, but the program is a rectangle. Because this format is a direct representation of film as you see it in the movies, you are actually seeing MORE of the program when you see those bars. No picture and poor sound.

No picture and no sound No color, but the sound is O.K. Picture has a big black box on it, but the sound is O.K. Picture has two horizontal black bars, one on top and one on bottom. Remote control doesn't work. · Make sure the batteries are fresh and installed properly. · Remove batteries for 30 seconds and replace. Menu options won't change. · Try unplugging the TV, waiting about five minutes, and then plugging it back in and trying again.

206-3588 PAGE 39 Maintenance Caring for your Entertainment Machine. Early malfunctions can be prevented. Careful and regular cleaning can extend the amount of time you will have with your new Entertainment Machine. Be sure to turn the power off and pull out the plug before you begin any cleaning. Screen Cleaning 1. Here's a great way to keep the dust off your screen for a while. Wet a soft cloth in a mixture of lukewarm water and a little fabric softener or dish washing detergent. Wring the cloth until it's almost dry, and then use it to wipe the screen. 2. Make sure the excess water is off the screen, and then let it air-dry before you turn on your Entertainment Machine.

Cabinet Cleaning 1. Use a soft cloth with a mild soap solution to wipe the cabinet. 2. Rinse the cloth and wipe the cabinet again. 3.

Let the cabinet air-dry before turning the Entertainment Machine on. Wood Cabinets Use a quality wood cleaner and polish. This will protect the Entertainment Machine from dirt and dust, as well as keep the cabinet looking new. Extended Absence If you leave your Entertainment Machine dormant for a long time (such as a vacation), it's a good idea to unplug the power to protect against possible damage from lightning or power surges. If you use an off-air antenna, you may also want to disconnect it from the back of your TV before leaving.

If you unplug your Entertainment Machine, you may have to reset the clock using the Clock Set menu described earlier. PAGE 40 206-3588 Index Find what you want quickly. FEATURE

.

PAGE Antenna

.

. 6, 8 Amplifier Volume Override .

.

.

. 32 Audio Menu

.

.

.

28 Auxiliary Remote Functions

.

. 33 Basic Television Operation .

.

. 15 Batteries

.

.

.

. 6-9 Button Functions on Remote

.

.

. 13 Cable

.....	
.....	
.....	
..... 7, 9 Captions and Text Menu	
.....	
..... 19-20 Ch. Add/Del/Surf ..	
.....	
.....	
..... 17 Ch. Labels .	
.....	
.....	
.....	
..... 23 Clock Set ..	
.....	
.....	
.....	
..... 18 EZ Demo ..	
.....	
.....	
.....	
..... 27 EZ Program ..	
.....	
.....	
.....	
..... 12 Front Panel Diagram ...	
.....	
.....	
..... 14 Glossary .	
.....	
.....	
.....	
..... 38 Hook-Up Directory.	
.....	
.....	
.....	
..... 5 Language Menu	
.....	
.....	
.....	
..... 21 Maintenance	
.....	
.....	
.....	
..... 40 Parental Control ..	
.....	
.....	
.....	
..... 25-26 Programming the Remote	
.....	
.....	
.....	
..... 31 Programming Codes	
.....	
.....	
..... 36 Remote Control Diagram	
.....	
.....	
..... 13 Remote Control Auto Find ..	

.....
.....
. . 41 Safety Information
.....
.....
..... 2-4 Setup Menu
.....
.....
.....
. . . 16 Source Menu.
.....
.....
.....
. 30 Stereo Amplifier Hookup
.....
.....
. 11 Super VHS Hookup
.....
.....
..... 10 Timer Setup
.....
.....
.....
. . . 22 Troubleshooting
.....
.....
..... 39 VCR ..
.....
.....
.....
.....
8-10 Video Menu
.....
.....
..... 29 Warranty ..
.....
.....
.....
.....
..... 43 XDS Display ..
.....
.....
.....
..... 24 Zenith Product Codes
.....
.....

... 37 206-3588 PAGE 41 Recommended Video Accessories INDOOR AMPLIFIED ANTENNA Receive Local programming NOT available on your Satellite system!!! Perfect backup antenna for cable outages. Enhanced quality picture and stereo sound in weak signal areas.
· Amplified VHF/UHF/FM Antenna includes 4 feet of 75 ohm cable for easy hookup. ATS 775 ONLY \$34.95 PLUS \$6.95 SHIPPING & HANDLING
TELEVISION WALL MOUNTS Set up your game room or spare room in style!! Sturdy black wall mounts keep the TV off your furniture and in easy view. All mounts have 90 degree and 10 degree tilt angles. · ALGW27 fits most 25" to 27" TVs - ONLY \$59.99 · ALGW20 fits most 19" and 20" TVs - ONLY \$49.99 · ALGw13 fits most 13" Televisions - ONLY \$39.99 Available in White, just add "-WH" to part number (e.g.

ALGW27-WH) FOR ALL ORDERS ADD \$6.95 SHIPPING & HANDLING 2 1 3 ZENITH 5 FUNCTION REMOTE Broken or lost remote? Need a second remote or more functions? Order direct from Zenith!! @@@@Please read this warranty carefully, it is a "LIMITED WARRANTY" as defined under Federal Law.

[You're reading an excerpt. Click here to read official ZENITH](#)



[C25A24T user guide](#)

<http://yourpdfguides.com/dref/340956>

This warranty gives you specific legal rights, and you may also have other rights that vary from state to state within the U.S.A. ZENITH RESPONSIBILITY Service Labor During a period of 90 days from effective warranty date, Zenith will provide service labor by a Zenith authorized service center when needed as determined by Zenith, as a result of manufacturing defects. New or remanufactured replacements for factory-defective parts will be supplied by a Zenith authorized service center for one year from effective warranty date (color picture tube -- two years). Such replacement parts are warranted for the remaining portion of the original warranty period. @@@@ @@@@ OWNER'S RESPONSIBILITY Effective Warranty Date Warranty begins on the date of original consumer purchase. For your convenience, keep the dealer's dated bill of sale or delivery ticket as evidence of the purchase date.

Read your Operating Guide carefully so that you will understand the operation of your set and how to adjust the customer controls. Models under 21" diagonal (U.S.A.) screen size must be taken to a Zenith authorized service center for warranty service and must be picked up by the owner.

Reception problems caused by inadequate home antenna or faulty antenna connections are the owner's responsibility. Product Registration--Please fill out and mail your Product Registration Card. It is imperative that Zenith know how to reach you promptly if we should discover a safety problem that could affect you. For warranty service information, contact any Zenith authorized service center. Parts and service labor that are Zenith's responsibility (see above) will be provided without charge.

Other service is at the owner's expense. If you have any problem in obtaining satisfactory warranty service, call or write the Zenith Response Center. You must provide the model number, serial number and date of purchase or date of original installation. Before you ask for warranty service, read "Maintenance and Troubleshooting" in your operating guide. You might avoid a service call. Operating Guide Carry-In Service Antenna Important Warranty Service ZENITH ELECTRONICS CORPORATION Zenith Response Center 201 James Record Rd., Building 3, Huntsville, AL 35824 Telephone (256) 772-1515 Mon-Fri, 7:00 a.m.-8:00 p.m.

CST Sat. 8:00 a.m.-5:00 p.m. CST www.zenith.com ZENITH CONSUMER SERVICES FACTORY OWNED SERVICE CENTERS 801 E. Roosevelt Rd Lombard, IL 60148 (630)705-2830 Home & Carry-in Service Television/VCR Parts and Accessories PTV/Camcorders 201 James Record Rd. Building 4 Huntsville, AL 35824 (256) 774-4025 Service Hours: M-F 8-6, Sat 9-2 Will accept UPS Shipments Additional Zenith Picture Tube Protection Plan Available Zenith offers you the opportunity to obtain additional long-term protection against failure of the picture tube in your new Entertainment Machine. Our Picture Tube Protection Plan enables you to avoid any unexpected picture tube repair expenses and keep your Entertainment Machine in top condition. It guarantees you a genuine Zenith replacement picture tube and service from a Zenith authorized service center. Be sure to send in the Product Registration Card. We will send you an application for the Protection Plan near the expiration of the two-year manufacturer's warranty on the picture tube. For additional information call (256) 774-4088.

© Copyright 2000, Zenith Electronics Corporation. 206-3588 Rev. A .



[You're reading an excerpt. Click here to read official ZENITH C25A24T user guide](http://yourpdfguides.com/dref/340956)
<http://yourpdfguides.com/dref/340956>