



Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for ZENITH C27A25. You'll find the answers to all your questions on the ZENITH C27A25 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual ZENITH C27A25
User guide ZENITH C27A25
Operating instructions ZENITH C27A25
Instructions for use ZENITH C27A25
Instruction manual ZENITH C27A25

Operating Guide | Warranty

Machine Numbers | C27A25



© Copyright 2002.Zenith Electronics Corporation



[You're reading an excerpt. Click here to read official ZENITH C27A25 user guide](http://yourpdfguides.com/dref/340958)
<http://yourpdfguides.com/dref/340958>

Manual abstract:

REFER SERVICING TO QUALIFIED SERVICE PERSONNEL. @@@@POWER CORD POLARIZATION: CAUTION: TO PREVENT ELECTRIC SHOCK, MATCH WIDE BLADE OF PLUG TO WIDE SLOT, FULLY INSERT. ATTENTION: POUR ÉVITER LES CHOCs ÉLECTRIQUES, INTRODUIRE LA LAME

LA PLUS LARGE DE LA FICHE DANS LA BORNE CORRESPONDANTE DE LA PRISE EL POUSSER JUSQU'AU FOND. NOTE TO CABLE/TV INSTALLER: This reminder is provided to call the cable TV system installer's attention to Article 820-40 of the National Electric Code (U.S.A.). The code provides guidelines for proper grounding and, in particular, specifies that the cable ground shall be connected to the grounding system of the building, as close to the point of the cable entry as practical. **REGULATORY INFORMATION:** This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a residential installation.

@@@@@ · Increase the separation between the equipment and receiver. @@ · Consult the dealer or an experienced radio/TV technician for help. The responsible party for this device compliance is: Zenith Electronics Corporation, 2000 Millbrook Drive, Lincolnshire, IL 60069, USA, Phone 1-847-941-8000.

COMPLIANCE: CAUTION: Do not attempt to modify this product in any way without written authorization from Zenith Electronics Corporation. Unauthorized modification could void the user's authority to operate this product.

PAGE 2 © Copyright 2002 Zenith Electronics Corporation B-WARN-DV-1 7/98 IMPORTANT SAFETY INSTRUCTIONS IMPORTANT SAFETY INSTRUCTIONS Important safety instructions shall be provided with each apparatus. This information shall be given in a separate booklet or sheet, or be located before any operating instructions in an instruction for installation for use and supplied with the apparatus. This information shall be given in a language acceptable to the country where the apparatus is intended to be used. The important safety instructions shall be entitled "Important Safety Instructions". The following safety instructions shall be included where applicable, and, when used, shall be verbatim as follows.

Additional safety information may be included by adding statements after the end of the following safety instruction list. At the manufacturer's option, a picture or drawing that illustrates the intent of a specific safety instruction may be placed immediately adjacent to that safety instruction: 1. Read these instructions. 2. Keep these instructions. 3. Heed all warnings. 4. Follow all instructions. 5.

Do not use this apparatus near water. 6. Clean only with dry cloth. 7. Do not block any ventilation openings. Install in accordance with the manufacturer's instructions. 8. Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat. 9.

Do not defeat the safety purpose of the polarized or grounding-type plug.

A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet. 10. Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus. 11. Only use attachments/accessories specified by the manufacturer. 12. Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus.

When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from type-over. **PORTABLE CART WARNING** (Continued on next page) **PAGE 3 IMPORTANT SAFETY INSTRUCTIONS** 13. Unplug this apparatus during lightning storms or when unused for long periods of time. 14. Refer all the servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has exposed to rain or moisture, does not operate normally, or has been dropped. 15. **CAUTION** concerning the Power Cord: Most appliances recommend they be placed upon a dedicated circuit; that is, a single outlet circuit which powers only that appliance and has no additional outlets or branch circuits. Check the specification page of this owner's manual to be certain.

Do not overload wall outlets.

Overloaded wall outlets, loose or damage wall outlets, extension cords, frayed power cords, or damaged or cracked wire insulation are dangerous. Any of these conditions could result in electric shock or fire. Periodically examine the cord of your appliance, and if its appearance indicates damage or deterioration, unplug it, discontinue use of the appliance, and have the cord replaced with an exact replacement part by an authorized servicer. Protect the power cord from physical or mechanical abuse, such as being twisted, kinked, pinched, closed in a door, or walked upon. Pay particular attention to plugs, wall outlets, and the point where the cords exits the appliance. 16. **Outdoor Use Marking: WARNING - To reduce the risk of fire or electric shock, do not expose this appliance to rain or moisture.** 17. **Wet Location Marking:** Apparatus shall not be exposed to dripping or splashing and no objects filled with liquids, such as vases, shall be placed on the apparatus. **PAGE 4 Table Of Contents** Turn to the next page to set up your Entertainment Machine™ Safety

Warnings .

.....

.....

.....

..... 2 Important Safety Instructions

.....

.....

. 3 - 4 Table of Contents

.....

.....

.. 5 Language . . .

.....

.....

.....

23 Source Menu Select Main Picture and PIP sources

24 Video Menu

.....

.....

... 25 Contrast, Brightness, Color, Tint, Sharpness, Color Temp: (Cool, Warm), EZ Picture: (Custom, Normal, Movie, Digital Pres, Video Game, Sports, Weak Signal, Night Time). Audio Menu .

.....

.....

.....

.. 26 Bass, Treble, Balance, Audio Mode: (Stereo, Mono, SAP), Front Surround, EZ SoundRite, Speakers, EZ Sound: (Custom, Normal, Stadium, News, Music, Theater). Parental Control Menu . .

.....

.....

..... 27 - 29 Restricts viewer programming. Special Menu EZ Timer Sleep Timer, On Time, Off Time, On/Off Timer . . .

30 Channel Labels

.....

.....

..... 31 XDS Display

.....

.....

.....

. 32 PIP Picture Adjustment Menu

.....

. 33 Picture-in-Picture Overview and Explanation 34 - 35 EZ Demo (On-screen menus overview)

..... 36 EZ Help

.....

.....

.....

..... 37 Remote Control Multi-Product Usage Programming 38 - 44 Maintenance

.....

.....

.....

..... 45 Trouble Shooting

.....

.....

. 46 - 48 Glossary

.....

.....

.....

.. 49 Notes



[You're reading an excerpt. Click here to read official ZENITH C27A25 user guide](http://yourpdfguides.com/dref/340958)
<http://yourpdfguides.com/dref/340958>

.....	
.....	
.....	
.....	... 0 - 51 5 Warranty . .
.....	
.....	
.....	. Back Cover Step 1. Hook Up TV Hookup Directory . . .
.....	
.....	
.....	.. 6 TV and other Equipment Hookups Antenna . . .
.....	
.....	
.....	.. 7 Cable service . . .
.....	
.....	
..... 8 Antenna with VCR .
.....	
.....	
.....	... 9 Cable Service with VCR
.....	
.....	
.....	... 10 Super VHS VCR/Digital Video Disk Player
.....	
.....	
.....	. 11 External Audio Connections
.....	
.....	... 12 Step 2. Channel Search and Reception Setup EZ Program .
.....	
.....	
.....	... (Select Antenna, or cable service and perform channel search) Remote Control TV Mode Key Functions . .
..... Remote On-Screen Menu Operation .
..... Front Panel Controls . .
.....	
.....	
.....	. Selecting Viewing Sources
.....	
.....	
.....	On-Screen Menus/Displays Overview On-Screen Displays . .
.....	
.....	
.....	
.....	.. 13
.....	
.....	
.....	
.....	.. 14 15 16 17 18 19 Step 3. Customize Your TV's Features Setup Menu (Starts with page 13, EZ Program) EZ Program
.....	
.....	
.....	
.....	.13 Add/Del/Surf
.....	
.....	
..... 20 EZ Clock . . .

.....
.....
.....
..... 21 Captions, Captions/Text

.....
.....
22 Features on this TV also include: PIP - Picture-in-Picture, see page 34. Programmable Remote Control - Remote may control up to 7 products, see page 38. Extended data service (XDS) shows in-depth program information, see page 32. EZ Features: Designed to make your viewing experience less work; see the EZ Help menu on page 37. EZ Program Finds channels in your area automatically.

EZ Clock Sets the time in the TV's clock. EZ Picture Customizes video level settings. EZ Sound Adjusts sound based on program. EZ SoundRite Maintains and even sound level during programming volume variances. EZ Timer Sets times to turn TV on/off automatically. EZ Mute Displays Closed Captions/Text selection when TV sound is mute, while picture remains. EZ Demo Shows menus and displays on this TV. EZ Help Offers solutions to common problems on one convenient menu. Note: Design and specifications are subject to change without prior notice. 206-3802 Entertainment Machine™ is a trademark of Zenith Electronics Corporation.

PAGE 5 Hookup Directory This page directs you to the appropriate page for hook up of your Entertainment Machine IMPORTANT!! Use this page to decide where you need to begin your setup. First, find the line below that best describes what you want to do, then go to that page number. Note: Design and specifications are subject to change without prior notification. Antenna only If you are using an antenna and no other equipment, go to

.....
.....
. page 7 Cable only If you subscribe to cable service and use no other equipment, go to

. page 8 Cable TV wall jack In Out Cable box Antenna with VCR If you are using an antenna and have a VCR, go to

.....
.....
. page 9 Cable and VCR If you subscribe to cable service and have a VCR, go to .

.....
.....
page 10 Cable TV wall jack In Out Cable box S-VHS/DVD/Stereo If you have a Super VHS VCR, a DVD Player, go to

.....
.....
. back back of remote Out VCR back A/V panel In Out output switch 3 4 Audio Video R-L Out Out 3 Plug in your TV. Do not plug it into a switched outlet. Typical TV back RF coaxial wire (75ohm) not included with TV 120 V AC 60 Hz 4 Go to page 13 to EZ Program your Entertainment Machine. Leave your VCR and your television tuned to channel 3 or 4 and use the cable box to change channels.

Remember to set the cable box output channel switch to channel 3 or 4. Auxiliary sources provide better picture and picture and sound. No A/V cables are included with your Zenith Entertainment Machine. TV back panel (expanded view) A/V cables not included with TV Front input jacks are also available for Video, L - R Audio. L audio R video s-video PAGE 10 206-3802 Super VHS VCR / DVD Player Connecting a S-VHS VCR or DVD player to your Entertainment Machine (VCR Only) Attach to cable wall jack, cable box, or antenna Super VHS VCR Super VHS VCR or DVD Player 1 Locate the Ant In jack on the back of your S-VHS VCR.

Connect the cable line coming from your wall directly ton keys are pressed. CABLE / VCR / AUX / TV Selects remote operating mode. MUTE Turns sound Off and On while the picture remains. VOLUME LEFT / RIGHT Adjusts the sound level. FLASHBK CHANNEL VOLUME VOLUME CHANNEL 1 4 7 2 5 8 3 6 9 ENTER NUMBER KEYPAD Selects channels directly and enters numeric values for some options. ENTER Shows the Channel/Time display. (MENU) UP / DOWN DIRECTIONAL ARROWS The Up/Down directional arrows select and adjust menu options. QUIT/ Removes on-screen menu/display from view. With no menus shown on-screen, turns front surround sound on and off. CLOSED CAPTIONS Selects Off, On, or EZ Mute.

TV / VCR SOURCE Switches between watching TV through antenna/cable, or one of the video sources. MENU Shows on-screen menus for TV mode. See page 18. (MENU) LEFT / RIGHT DIRECTIONAL ARROWS The Left/Right directional arrows select and adjust menu options. PIP FEATURES For PIP (Picture-in-Picture) operation. See page 34. TIMER Displays the Sleep Timer Menu. See page 30. 0 MENU QUIT PIP SWAP FREEZ CC TV/VCR SOURCE RECORD PAUSE TIMER PLAY REWIND STOP FFWD Keys dedicated to VCR functions will still operate your VCR while the remote is in TV mode. remote control part number MBR3457CT (124-233-05) PAGE 14 206-3802 On-Screen Menu Operation Use either the remote or the TV front controls to access the on-screen menus PARENTAL CTRL AUX.

BLOCK MPA A AGE BLOCK CONTENT BLK SET HOURS SET PASSWORD LOCK ON/OFF UNBLOCKED BLOCKED MENU NEXT MENU MOVE NEXT PRG 1 2 3 4 5 Press MENU repeatedly on the remote control, to "select" one of the five main menus on your screen like PARENTAL CONTROL. Use the UP/DOWN directional arrow to select an option like AUX. BLOCK. (You can select the other menu options like AGE BLOCK by pressing the UP or DOWN directional arrow repeatedly.) Once the option is selected, in this case AUX BLOCK, press the RIGHT directional arrow to go to the next selection of options. Use the UP or DOWN directional arrow to choose an option, in this case BLOCKED or UNBLOCKED. When finished, press MENU repeatedly to go back to the main menu or press QUIT to remove the menus and submenus from the TV screen. POWER CABLE SURF VCR AUX TV MUTE FLASHBK CHANNEL VOLUME VOLUME CHANNEL 1 4 7 0 2 5 8 3 6 9 ENTER 2/4 5 2/3 1/5 On-screen menus automatically disappear after about 10 seconds. Remote must be in the TV mode for it to control the TV. Press TV on the remote to select TV mode.

MENU QUIT PIP SWAP FREEZ CC TV/VCR SOURCE 2/4 RECORD PAUSE TIMER PLAY REWIND STOP FFWD Mini glossary MENU UP/DOWN LEFT/RIGHT QUIT ENTER On-screen displays you use to program the TV features.

[You're reading an excerpt. Click here to read official ZENITH C27A25 user guide](#)



<http://yourpdfguides.com/dref/340958>

Use the Menu UP or DOWN directional arrow to "select" or highlight and choose menu options. Use the Menu LEFT or RIGHT directional arrow to move to or return from the menu options listings. Exits menus and removes on-screen displays. Returns to the previously selected menu option on some menus. 206-3802 PAGE 15 Front Panel Controls How to use your front control panel to operate the menus When using the on-screen menus, the buttons on the TV front panel correspond to the remote control keys as follows: CHANNEL = VOLUME = Moves Up/Down Moves Left/Right 1 2 3 4 menu channel volume power L audio R video s-video To access the on-screen menus, press MENU. Pressing MENU repeatedly will cycle through the available menus. Highlight the option you want using the DOWN or UP Channel arrow. ADJUST or change the selected feature using the LEFT or RIGHT Volume arrow. Wait a few moments and the menu will disappear by themselves or press MENU repeatedly to remove menus.

Typical TV Front Panel menu channel volume power L audio R video s-video Menus disappear by themselves. To get them back, press MENU again. If you've lost your remote, you can get a new one by calling 1-800-255-6790 to purchase a replacement. 1 2 3 Turns TV On and Off Front Audio/Video Inputs Front S-Video Input PAGE 16 206-3802 Selecting Viewing Sources Typical TV back L audio R video s-video Front and Back Connection Panels. Where picture and sound "sources" are connected. R -AUD Camcorder VCR AUDIO/ IO-L VIDE VIDEO O OUT Pick the viewing source (picture and sound) you want to see and hear on your Entertainment Machine S-Video VCR R -AUD IO-L AUDIO/ VIDE VIDEO O OUT DVD Player R -AUD AUDIO/ IO-L VIDE VIDEO O OUT 1 Press TV/VCR SOURCE repeatedly to choose from the available viewing sources that are connected to the TV. R -AUD IO-L Other AUDIO IN Available Sources: Back Connections Panel ANTENNA/CABLE: ANTENNA/CABLE on TV back Jackpack, Over-the-Air Antenna or Cable service signal source. Video 1: Video on TV back Jackpack, Audio/Video Inputs. S-Video 1: S-Video on TV back Jackpack, Audio/Video Inputs. Front Connections Panel Video 2: Video on TV Front Jackpack, Audio/Video Inputs.

S-Video 2: S-Video on TV Front Jackpack, Audio/Video Inputs. VOLUME Typical Equipment Sources CHANNEL VOLUME CHANNEL 1 4 7 0 2 5 8 3 6 9 ENTER MENU QUIT PIP SWAP FREEZ CC TV/VCR SOURCE RECORD PAUSE TIMER 1 PLAY REWIND STOP FFWD The sources you intend to view should be turned on. You can connect equipment to the Video or S-Video jacks, but not at the same time. Use the Audio input jacks with either the S-Video or Video input. 206-3802 PAGE 17 On-Screen Menus / Displays Overview Descriptions of the menus and displays on your Entertainment Machine Menu Name Page Description/Function ON-SCREEN MENUS SETUP EZ Program Add/Del/Surf EZ Clock Captions Caption/Text Language Source Menu 13 13 20 21 22 22 23 24 Sets the TV up and adjusts the basic features.

Your options are: Automatically finds and stores active channels you will choose using Channel Up/Down. Choose which channels will appear when using Channel Up/Down. Adds favorite channels to Surf list. Sets the TV's clock. Turns closed captioning on, off, or set it to come on when the television sound is muted.

Chooses a captioning or text option. Chooses the language in which you want the on-screen menus to appear. Selects which picture and sound will appear on your TV main screen and PIP inset picture. VIDEO AUDIO PARENTAL CTRL 25 26 27 Adjusts the picture for different viewing situations. Your options are: Contrast, Brightness, Color, Tint, Sharpness, Color Temperature, EZ Picture. Customizes the sound to suit your room and taste. Your options are: Bass, Treble, Balance, Audio Mode, Front Surround, EZ Soundrite, Speakers, EZ Sound. Allows parents to block any program or A/V source for up to 99 hours, with the use of a password. SPECIAL EZ Timer 30 30 Goes beyond basics and customizes your Entertainment Machine's features. Your options are: Sleep Timer On Time Off Time On/Off Timer Sets a time that the TV will automatically turn itself off.

Sets the time the TV will turn on automatically each day. Sets the time the TV will turn off automatically each day. Enables or disables the On and Off Time features. Channel Labels XDS Display PIP Menu EZ Demo EZ Help 32 32 33 36 37 Titles the channels with their network names (ABC, CBS, HBO, etc.). On/Off. If available, shows program information when a channel is tuned or ENTER is pressed. Adjusts the Contrast, Brightness, Color, Tint, and Size of the PIP picture. Demonstrates the on-screen menus that control TV setup and operational features. Help menu offers several features from different menus that can be adjusted on one convenient menu.

ON-SCREEN DISPLAYS Surf's Up No Surfing Mute Volume Display Channel/Time PIP/Channel Sleep Timer Captions/Text 19 19 19 19 19 19 19 19 Indicates channel selection is in Surf mode. Indicates that Surf channel selection has been turned off and normal channel selection mode is on. Indicates sound has been removed. Shows the current sound level. Shows the current time, channel, video/incoming audio signal, and channel label if available.

Appears on the Channel/Time display if PIP is on. Shows the chosen amount of time in which the TV will turn itself off. Selected caption or text option appears on-screen if provided by broadcaster. PAGE 18 206-3802 On-Screen Displays On-screen displays reveal the current status of your Entertainment Machine CH 32-UPN 2:45 PM STEREO PIP CH 2-CBS A "Surf" Channels Mode Active Display Press SURF to turn on Surf channels tuning mode; only channels specified as Surf channels will appear when using channel Up/Down. Surf's Up! No Surfing Press SURF to display "No Surfing!" and return to normal channel tuning mode.

Closed Captions scroll across the screen as an aid to viewers and the hearing impaired...viewer PRG POWER No Surfing S B Mute Display Press MUTE to quiet sound. Press MUTE again to remove the sound. Press MUTE a third time to restore the sound. S O F T M U T E A B C CABLE SURF VCR AUX TV MUTE FLASHBK CHANNEL VOLUME VOLUME CHANNEL C Volume Display Press the VOLUME Left/Right arrow on the remote control, to view the sound status. 1 4 7 0 2 5 8 3 6 9 ENTER VOLUME D QUIT D E Channel/Time Display (Shown above with PIP on) Press ENTER on the remote control to view the Channel/Time/incoming audio signal display. Remove On-Screen Displays and Menus Press QUIT/ to remove displays or menus, returning to TV viewing.

Or, wait a few moments and the displays or menus will automatically disappear from the screen. Turns front surround sound on or off, if no menus are shown onscreen.



[You're reading an excerpt. Click here to read official ZENITH C27A25 user guide](http://yourpdfguides.com/dref/340958)
<http://yourpdfguides.com/dref/340958>

Captions/Text (Appear if available, see above) Press CC repeatedly to select a Captions/Text option or to turn Captions/Text off. Sleep Timer Display Press TIMER on the remote control to view the Sleep Timer Status Display. Press TIMER repeatedly to set the amount of time before the TV automatically turns itself off. MENU PIP SWAP FREEZ CC TV/VCR SOURCE E F G RECORD PAUSE TIMER PLAY REWIND STOP FFWD F G SLEEP TIMER 0:10 206-3802 PAGE 19 Add/Delete/Surf Channel Menu SETUP Customize your channel selection list: Add Channels not found by EZ Program, Delete channels you don't watch, Create a favorite channels list to "Surf" - - with Surf on, only those channels specified as Surf channels will appear when using Channel Up/Down MENU EZ PROGRAM ADD/DEL/SURF EZ CLOCK CAPTION/TEXT LANGUAGE SOURCE MENU CH 20 DELETED ADDED SURF NEXT MENU MOVE NEXT 1 2 3 4 5 6 Use the NUMBER keypad to go to the Channel you want to add, delete, or include in the Surf channel list. Press MENU repeatedly until the SETUP menu appears. Use the Up/Down arrow to highlight the Add/Del/Surf option, then press the Right (adjust) arrow. Use the Up/Down arrow to pick ADDED or DELETED or SURF; move the check mark next to the option. Use MENU to go back to the SETUP menu.

Press QUIT to remove menu when finished or go to another channel you want to add or delete by using the NUMBER keypad to select it and repeat from Step 3. If you've deleted a channel, it isn't gone for good. Just select it using the NUMBER keypad on the remote, or add it later. Surf channels are automatically added. PRG POWER CABLE SURF VCR AUX TV MUTE FLASHBK CHANNEL VOLUME VOLUME CHANNEL 1 2 5 8 3 6 9 ENTER 1 2/5 4 7 0 3/4 3 6 3/4 MENU QUIT PIP SWAP FREEZ CC TV/VCR SOURCE RECORD PAUSE TIMER PLAY REWIND STOP FFWD Mini glossary ADDED Includes new channels to the channel list that you'll scroll through when using Channel Up/Down.

DELETED Removes channels that you don't watch from the channel list you'll scroll through using Channel Up/Down. SURF Adds your favorite channels to the Surf channel list. Press SURF, channels you specify as Surf channels will be the only ones to appear when you use Channel Up/Down. Press SURF repeatedly to turn Surf off. (No Surfing!) and return TV to normal channel selection mode. PAGE 20 206-3802 Setting the Clock Set the clock yourself or have the TV do it for you SETUP EZ PROGRAM ADD/DEL/SURF EZ CLOCK CLOCK MODE TO SET PRESS TIME ZONE DAY.

SAVINGS AUTO MANUAL EZ CLOCK CAPTION/TEXT LANGUAGE SOURCE MENU MENU NEXT MENU MOVE NEXT MOVE MENU BACK 1 2 In the Setup menu with the EZ Clock option highlighted, press the Adjust RIGHT arrow to go to the EZ Clock Menu. PRG POWER Use the Select UP or DOWN arrows, the Adjust LEFT or RIGHT arrows, and the NUMBER keypad to set the clock menu options. As indicated on the menu, use FLASHBK to set AM or PM. EZ Clock Menu Options CABLE SURF VCR AUX TV MUTE 2/3 FLASHBK CHANNEL 3 Manual Mode User sets the EZ Clock options. · Clock Mode: Auto, Manual. · Time Set: Highlight Time Set, press the right arrow. Set hours/minutes using the NUMBER keypad or the left/right arrow keys. Use Flashbk for AM/PM. Automatic Mode TV sets the clock, but the user can enter the menus and make custom changes if needed. · Time Zone: Auto, Eastern, Central, Mountain, Pacific.

· Daylight Savings: Auto, Off, On. VOLUME VOLUME CHANNEL 1 4 2 5 8 3 6 9 ENTER 3 1 2/3 7 0 4 Press QUIT to return to TV viewing. MENU QUIT 2/3 4 1/3 PIP PIP ch FREEZ CC TV/VCR SOURCE RECORD PAUSE TIMER PLAY REWIND STOP FFWD Mini glossary TIME HOURS A four-number figure broken down into hours and minutes; first two numbers are hours, last two numbers are minutes. First two numbers that are entered when setting the clock. MINUTES The second two numbers that are entered when setting the clock. FLASHBK Use to set AM or PM when setting time. 206-3802 PAGE 21 Selecting Captions/Text Options Turn on Closed Captioning or Captions when sound is Muted, then choose a Closed Captions or Text option SETUP EZ PROGRAM ADD/DEL/SURF EZ CLOCK SETUP EZ PROGRAM ADD/DEL/SURF EZ CLOCK CAPTION/TEXT LANGUAGE SOURCE MENU OFF ON EZ MUTE CAPTION/TEXT LANGUAGE SOURCE MENU MENU NEXT MENU MOVE NEXT MENU NEXT MENU MOVE NEXT Caption/Text sets up your Entertainment Machine to receive various closed caption and text options if provided by broadcasters. Availability and functionality of Caption/Text is determined only by the broadcaster. PRG POWER CABLE SURF VCR AUX TV MUTE 1 2 3 Press MENU repeatedly to select the SETUP menu. Use the Up/Down arrow to choose Captions, then press the Right arrow.

Use the Up/Down arrow to select Off, On or EZ Mute, then press the Right arrow. Note: If you selected either On or EZ Mute, then use the Up/Down/Left/Right arrows to choose an option from the Caption/Text menu: Caption 1, Caption 2, Caption 3, Caption 4, Text 1, Text 2, Text 3, or Text 4. To have that option appear when the TV is muted or a program is tuned to that has Closed Captions or Text. Press QUIT to remove menu and return to TV viewing. FLASHBK CHANNEL VOLUME VOLUME CHANNEL 1 4 2 5 8 3 6 9 ENTER 2/3 1 3 7 0 2/3 4 2/3 MENU QUIT 4 PIP SWAP FREEZ CC TV/VCR SOURCE RECORD PAUSE TIMER PLAY REWIND FFWD STOP Captions come in handy when the television is on mute.

Standard closed captioning is available using the Caption 1 option. Not all programming has closed captioning or text available, even though Captions 1, 2, 3, 4, and Text 1, 2, 3, 4 are available to broadcasters. Mini glossary CAPTION/TEXT The term for the words that scroll across the bottom of the TV screen; usually the audio portion of the program provided for the hearing impaired. The term for the words that appear in a large black frame and almost cover the entire screen; usually messages provided by the broadcaster. PAGE 22 206-3802 Selecting a Language for the Menus SETUP Choose the language in which you want the on-screen menus to appear EZ PROGRAM ADD/DEL/SURF EZ CLOCK CAPTION/TEXT LANGUAGE SOURCE MENU ENGLISH SPANISH FRENCH MOVE NEXT MENU NEXT MENU 1 2 3 4 Press MENU repeatedly to select the SETUP menu.

Use the Up/Down arrow to select the Language option on your screen, then press the Right arrow. Use the Up/Down arrow to choose any of the following options: English, Spanish or French, then press the Right arrow. Press QUIT to remove menu and to return to TV viewing. PRG POWER CABLE SURF VCR AUX TV MUTE FLASHBK CHANNEL VOLUME VOLUME CHANNEL 1 4 2 5 8 3 6 9 ENTER 2/3 1 7 0 2 4 2/3 MENU QUIT PIP SWAP FREEZ CC TV/VCR SOURCE RECORD PAUSE TIMER PLAY REWIND STOP FFWD 206-3802 PAGE 23 Selecting Main Picture/PIP Sources Choose the picture and sound you want to view on the Main Picture Screen and the smaller PIP inset SETUP EZ PROGRAM ADD/DEL/SURF EZ CLOCK CAPTION/TEXT LANGUAGE SOURCE MENU MAIN SOURCE PIP SOURCE TO SET PRESS ANTENNA/CABLE VIDEO 1 VIDEO 2 SOURCE MENU MENU NEXT MENU MOVE NEXT MOVE MENU BACK 1 2 3 4 5 Selecting Sources with the Menus Press MENU repeatedly to select the SETUP menu.



[You're reading an excerpt. Click here to read official ZENITH C27A25 user guide](http://yourpdfguides.com/dref/340958)
<http://yourpdfguides.com/dref/340958>

PRG POWER Use the Up/Down arrow to select SOURCE MENU, then press the Right arrow. Use the Up/Down arrow to choose the MAIN SOURCE or PIP SOURCE option, press the Right arrow. Use Up/Down arrow to select ANTENNA/CABLE, Video 1, or Video 2. After you have selected viewing sources for the Main picture screen and the smaller PIP inset, press QUIT to remove menus and return to TV viewing. Using TV/VCR SOURCE to Choose Viewing Sources Press TV/VCR SOURCE repeatedly to scroll through the available sources: ANTENNA/CABLE, VIDEO 1, VIDEO 2. CABLE SURF VCR AUX TV MUTE FLASHBK CHANNEL VOLUME CHANNEL 1 4 7 0 2 5 8 3 6 9 ENTER 2/3/4 5 2/3 Direct Source Access 1 2/3/4 MENU QUIT PIP SWAP FREEZ CC TV/VCR SOURCE RECORD PAUSE TIMER PLAY REWIND STOP FFWD Mini glossary ANTENNA/CABLE VIDEO 1, 2 TV/VCR SOURCE The source from the ANTENNA/CABLE jack.

The equipment connected to the video input jacks on the back or front of the TV: VCR, DVD, camcorder etc. The key on the remote control providing direct access to available sources. PAGE 24 206-3802 Setting the Video Menu Options VIDEO CONTRAST BRIGHTNESS COLOR TINT SHARPNESS COLOR TEMP EZ PICTURE Customize the picture to your personal viewing preferences MENU Move Next MENU Adjust CONTRAST 64% 1 2 With the VIDEO menu on-screen, use the Up/Down arrow to select an option like EZ Picture, press the Right arrow to go to the EZ Picture menu selections. Using the Up/Down arrow, select a setting. Your options are: Contrast: Changes the amount of difference between black levels and white levels in your picture. Brightness: Increases or decreases the amount of white in your picture. Color: Adjusts levels of all colors. Tint: Adjusts the relative amounts of the colors red and green in your picture. Sharpness: Raises or lowers the definition of the picture. The lower the level, the softer the image will appear.

Color Temperature: Changes the overall picture appearance. Options are: Warm, Medium, Cool. EZ Picture: Sets your viewing preference based on the viewed image's setting. Options are: Custom, Normal, Movie, Digital Pres, Video Game, Sports, Weak Signal, Night Time. PRG POWER CABLE SURF VCR AUX TV MUTE FLASHBK CHANNEL VOLUME CHANNEL 1 4 2 5 8 3 6 9 ENTER 1/2/3 7 0 MENU QUIT 3 1/3 1/2/3 PIP SWAP FREEZ CC TV/VCR SOURCE 3 RECORD PAUSE TIMER PLAY REWIND STOP FFWD 3 After you have used the Up/Down and Left/Right arrows to select and adjust the VIDEO menu options to your preference, press QUIT to return to TV viewing.

Mini glossary Custom Preset The settings you have changed to your personal preferences. Select this option to reset the video menu settings to their original levels. 206-3802 PAGE 25 Setting Audio Menu Options AUDIO BASS Personalize the sound coming from your Entertainment Machine TREBLE BALANCE AUDIO MODE FRONT SURR EZ SOUNDRITE SPEAKERS EZ SOUND MENU Move Next Menu Adjust 1 2 With the AUDIO menu selected and the Audio Mode option highlighted, press the Right arrow. Using the Left/Right arrows, select your preferred settings. Choose from Mono, Stereo, or SAP.

Audio Menu Options Include: · Bass: Increases/decreases lower-end sounds. · Treble: Increases/decreases higher-end sounds. · Balance: Allows you to put the sound more to the left or right channel. · Audio Mode: Chooses sound: Stereo, Mono, 2nd Audio/SAP. · Front Surr: Turns front surround sound on and off. @@ · Speakers: Turns the regular speakers on or off. @@@@ @@@@ @@@@ @@@@ @@@@ @@@@ @@@@ @@@@ @@@@ @@@@ The number of hours blocked are specified. @@ Viewer ratings are specified for both TV and the motion picture industry; both rating systems can be used. The ratings are based mainly on the ages of children. Overview To insure complete coverage for all TV programs, (movies and regular TV shows) choose a rating for "MPAA", from the selections below AND choose ratings from the "TV Parental Guideline Rating System" on the next page, using the Age Block option for General Audiences, and for Children.

In addition to those, you may wish to include additional restrictions from the Content Block menu. See the Parental Control menu, and submenus example on the next page. Things to Consider before Setting Up Parental Control Determine which rating you consider acceptable to the viewer. (For example, if you choose TV-PG, all more restrictive ratings will be automatically blocked; the viewer will not be able to see: TV-PG, TV-14, or TV-MA rated programming.) Do you want to block the auxiliary video source entirely? @@@@ @@@@ How many hours do you want Parental Control to be active? You can set the Hours option for up to 99 hours. Select a secret password; in the Set Password option. Use the NUMBER keys on the remote. @@ Do you want Parental Control to be active all the time? @@@@ @@@@ @@@@ @@@@ @@@@ @@@@ Not for children under age 17. Strong elements of sex and/or violence. Not for children under age 17 under any circumstances.

Strong sexual content. @@@@ choose an acceptable rating. @@@@ - Set your 4-number password - - use the NUMBERS on the remote. - Set the Lock On/Off option to either on or off. @@ Use the Up/Down arrow to select an option, like F.

@@ Use the Up/Down arrow to select an acceptable rating like TV-Y7. @@ Select the "No Rating" option and block it if appropriate.

@@@@ @@@@ Considered suitable for children over 7, may contain Fantasy Violence Scenes. PAGE 28 206-3802 Parental Control Menu Structure PARENTAL CTRL AUX. BLOCK MPAA AGE BLOCK CONTENT BLK SET HOURS SET PASSWORD LOCK ON/OFF UNBLOCKED BLOCKED PARENTAL CTRL AUX.

BLOCK MPAA AGE BLOCK CONTENT BLK SET HOURS SET PASSWORD LOCK ON/OFF UNBLOCKED G and above PG and above PG-13 and above R NC-17 X MENU NEXT MENU MOVE NEXT MENU MOVE NEXT MENU BACK PARENTAL CTRL AUX. BLOCK MPAA GENERAL CHILDREN TO SET PRESS AGE BLOCK CONTENT BLK SET HOURS SET PASSWORD LOCK ON/OFF UNBLOCKED TV-G and above TV-PG and above TV-14 and above TV-MA UNBLOCKED TV-Y and above TV-Y7 MOVE NEXT MENU BACK PARENTAL CTRL AUX. BLOCK MPAA AGE BLOCK DIALOG TO SET PRESS LANGUAGE SEX SCENES VIOLENCE F VIOLENCE NO RATING UNBLOCKED TV-PG and above TV-13 and above CONTENT BLK SET HOURS SET PASSWORD LOCK ON/OFF MOVE NEXT MENU BACK UNBLOCKED TV-PG and above TV-14 and above TV-MA PARENTAL CTRL AUX. BLOCK MPAA AGE BLOCK CONTENT BLK UNBLOCKED TV-Y7 UNBLOCKED BLOCKED SET HOURS SET PASSWORD LOCK ON/OFF 00 Hours MOVE NEXT MENU BACK PARENTAL CTRL AUX. BLOCK MPAA AGE BLOCK CONTENT BLK SET HOURS PARENTAL CTRL AUX. BLOCK MPAA AGE BLOCK CONTENT BLK SET HOURS SET PASSWORD LOCK ON/OFF TO SET SET PASSWORD LOCK ON/OFF ENTER CODE: ---- ON OFF MOVE NEXT MENU BACK MOVE NEXT MENU BACK 206-3802 PAGE 29 EZ Timer: Sleep and On/Off Timers Set the Sleep Timer to automatically turn the TV off, after the preset time has expired Set the On/Off Timer to turn the TV on and off each day at the specified time SPECIAL EZ TIMER CH.



[You're reading an excerpt. Click here to read official ZENITH C27A25 user guide](http://yourpdfguides.com/dref/340958)
<http://yourpdfguides.com/dref/340958>

LABELS XDS DISPLAY PIP MENU EZ DEMO EZ HELP TO SET TIMERS EZ TIMER SLEEP TIMER ON TIME OFF TIME ON/OFF TIM. 8:00 AM PM
FLSHBK MENU NEXT MENU MOVE NEXT MOVE NEXT MENU BACK Sleep Timer Direct Access 1 Press TIMER to place the Sleep Timer menu on the
screen. Press TIMER repeatedly to scroll through the different sleep timer settings and choose one of the preset turn-off times. Options are: Off, 10, 20, 30,
60, 90, 120, 180, or 240 minutes.

You can also set the Sleep Timer by using the menu. Using the EZ Timer Menu PRG POWER CABLE SURF VCR AUX TV MUTE FLASHBK CHANNEL On
Time With the EZ Timer menu selected, use Up/Down arrows to choose On Time, then press the Right arrow. Use the NUMBER keypad or the Left/Right
arrows to pick a time for the TV to automatically turn itself on each day. Use FLASHBK to set AM or PM. Off Time With the EZ Timer menu selected, use
Up/Down arrows to choose Off Time, then press the Right arrow. Use the number keypad or the Left/Right arrows to pick a time for the TV to automatically
turn itself off each day. Use FLSHBK to set AM or PM. On/Off Timer With the EZ Timer menu selected, use Up/Down arrows to choose On/Off Timer, then
press the Right arrow. Choose either: On-TV will automatically turn itself on and off each day at the specified times. Off-TV will not turn itself on and off
each day, but the turn on and turn off times will be retained in memory for future use.

VOLUME VOLUME CHANNEL 1 4 7 0 2 5 8 3 6 9 ENTER MENU QUIT 2 1 PIP SWAP FREEZ CC TV/VCR SOURCE RECORD PAUSE TIMER PLAY
REWIND STOP FFWD 2 Press QUIT to return to TV viewing. PAGE 30 206-3802 Selecting Channel Labels Pick a preset label to help identify the network
you just tuned to or are currently watching SPECIAL EZ TIMER CH 32-UPN 2:45 PM STEREO PIP CH. LABELS XDS DISPLAY PIP MENU EZ DEMO EZ
HELP CH 20 USA CH 2-CBS Closed Captions scroll across the screen as an aid to viewers and the hearing impaired...

.viewer Channel/Time Display with Channel Labels MENU NEXT MENU MOVE NEXT 1 2 3 4 Using the NUMBER keypad or the CHANNEL Up/Down
arrow, pick the channel you want to label. PRG POWER Press MENU repeatedly to choose the Special menu. CABLE VCR AUX TV MUTE Use the Up/Down
arrow to select CH. LABELS, then press the Right arrow.

@@@- - - Broadcaster's label will appear if one is provided. @@Some networks display their own channel labels. @@@@Use the Up/Down arrow
to choose: On, or Off. @@@@Use the Up/Down/Left/Right arrows to select and change the PIP menu options. · Contrast: Changes the amount
of difference between black levels and white levels in your picture. · Brightness: Increases or decreases the amount of white in your picture. · Color: Adjusts
levels of all colors. · Tint: Adjusts the relative amounts of the colors red and green in your picture. · Size: Selects the PIP inset picture size. Options are:
Large, Small.

1 4 7 PRG POWER CABLE SURF VCR AUX TV MUTE FLASHBK CHANNEL VOLUME VOLUME CHANNEL 2 5 8 3 6 9 ENTER 3 1 2/3 0 2/3 4 2 MENU
QUIT 4 Press QUIT to remove menu and return to TV viewing. PIP SWAP FREEZ CC TV/VCR SOURCE RECORD PAUSE TIMER PLAY REWIND STOP
FFWD Turn to the next page for a more detailed description of the PIP feature. 206-3802 PAGE 33 PIP Overview PIP = Picture-In-Picture Think of PIP as a
mini TV screen superimposed onto your main TV screen Press PIP on the remote to place the PIP inset on the screen, press PIP again to remove it YOUR
PICTURE-IN-PICTURE FEATURE The Picture-In-Picture (PIP) function allows you to put a smaller picture, called the "inset," on the bigger screen, or the
"main" picture. You need some other piece of equipment, like a VCR, to act as a tuner to receive and display a second channel at the same time. With the
additional tuner source, like a VCR, PIP is available. WORKING WITH PIP Just like your Entertainment Machine's main screen, PIP will need a source to
take its image from. Set the main screen source to Antenna/Cable, then set the PIP source to Video 1 where you have a VCR connected, as an example. Then if
you use the TV's tuner to pick your channels, you can enjoy TV channel tuning on the main screen and a tape playing in the VCR in the PIP inset. PIP will
need a source from which to take its image. Put Antenna/ Cable in the inset while you watch a video tape, from a VCR connected to Video 1.

Have a DVD disk playing in the PIP inset, while you watch a videotape on the main screen. PIP Inset Picture Main Picture SOME TYPICAL PIP/MAIN
SCREEN VIEWING SETUPS 1. You want to watch a videotape, but keep scanning for another movie or game. Set the PIP source to Video 1, or 2 and you can
watch the VCR and TV, swapping between the two. 2.

You want to watch your favorite live program on Antenna/Cable on the main picture and when a commercial break appears, swap to the PIP inset; which has
a videotape in the VCR ready to play, or Surf your favorite channels on Antenna/Cable source for the PIP inset. SETUP EZ PROGRAM ADD/DEL/SURF EZ
CLOCK CAPTIONS CAPTION/TEXT LANGUAGE SOURCE MENU MAIN SOURCE PIP SOURCE TO SET PRESS ANTENNA/CABLE VIDEO 1 VIDEO 2
SOURCE MENU MENU NEXT MENU MOVE NEXT MOVE MENU BACK Use the Source Menu to choose Main screen and PIP sources. If no equipment is
connected to a source you select for the PIP inset, or if it is turned off, the PIP inset will be black. Mini glossary TUNER A/V SOURCE A device that picks up
broadcast signals and turns them into picture and sound. Other equipment connected to the TV Audio/Video source inputs on the TV back and Front
connections panel; Video 1, or Video 2.

PAGE 34 206-3802 Using the PIP Feature Using Picture-in-Picture (PIP) features PIP Inset Picture Press PIP to turn PIP on and off. Move PIP Around
Screen Press Up/Down/Right/Left arrows to move the PIP inset to the other corners of the screen. Main Screen Picture With PIP off, press FREEZ to place
the Main screen picture in the PIP inset and "freeze" the image thereby turning PIP on. (A good way to freeze the image so you can write down phone
numbers etc.) CH 32-UPN 2:45 PM STEREO PIP Video 1 Channel/Time/Audio Source Display Press ENTER to show display. Shows source for: Main
picture, PIP. PIP Source Can be ANTENNA/CABLE, Video 1, or Video 2. (Use the Setup Menu.) Swap Main Picture with PIP Press the SWAP repeatedly to
swap the images between the Main picture and PIP inset. Main Picture Source Press TV/VCR SOURCE to change the source to ANTENNA/CABLE, Video 1,
or Video 2.

(Or, use the Setup Menu.) PIP Key Functions FLASHBK (FLASHBACK) Returns to the last channel viewed. POWER ENTER Shows Channel/Time Display
on Main screen. Up/Down/Left/Right Arrows UP/DOWN ARROWS Move PIP inset around screen.



[You're reading an excerpt. Click here to read official ZENITH
C27A25 user guide
http://yourpdfguides.com/dref/340958](http://yourpdfguides.com/dref/340958)

LEFT/RIGHT ARROWS Move PIP inset around screen. QUIT PRG CABLE SURF VCR AUX TV MUTE FLASHBK 0 ENTER CHANNEL VOLUME CHANNEL MENU 3 6 9 QUIT Exits menus. 1 4 7 0 2 5 8 PIP SWAP FREEZ CC TV/VCR SOURCE ENTER MENU QUIT RECORD PAUSE TIMER PIP SWAP FREEZ CC TV/VCR SOURCE FREEZ PIP On: Freezes image in PIP inset. PIP Off: Freezes Main screen picture in PIP inset and turns PIP on. TV/VCR SOURCE Chooses viewing sources. SWAP Swap Main and PIP sources RECORD PAUSE TIMER PLAY REWIND STOP FFWD PIP Turns PIP on and off.

206-3802 PAGE 35 EZ Demo Menu SPECIAL Your Entertainment Machine can show you the menus available EZ TIMER CH. LABELS XDS DISPLAY PIP MENU EZ DEMO EZ HELP OFF ON MENU NEXT MENU MOVE NEXT 1 2 3 Press MENU repeatedly to select the SPECIAL menu. Use the Up/Down arrow to select the EZ DEMO option, then press the Right arrow. Use the Up/Down arrow to choose either: On; then press ENTER. EZ Demo will continue to run (even if the TV is turned off and on again) until it is turned off in the SPECIAL menu.

Off; EZ Demo will not be active. Press QUIT to remove menu and to return to TV viewing. PRG POWER CABLE SURF VCR AUX TV MUTE FLASHBK CHANNEL VOLUME CHANNEL 4 1 4 7 0 2 5 8 3 6 9 ENTER 3 2/3 4 2 Even if the TV is turned off, the EZ Demo feature will continue to operate when the TV is turned on again. 1 2/3 MENU QUIT PIP SWAP FREEZ CC TV/VCR SOURCE The only way to turn EZ Demo off is to select Off, in the SPECIAL menu. RECORD PAUSE TIMER PLAY REWIND STOP FFWD Mini glossary EZ DEMO Feature provides an automatic demonstration of the on-screen menus on your Entertainment Machine.

View and learn what features are available to you as EZ Demo cycles through the on-screen menus. PAGE 36 206-3802 Using the EZ Help Menu SPECIAL EZ TIMER CH. LABELS XDS DISPLAY PIP MENU EZ DEMO Need Help? Go to the on-screen EZ Help menu and use it to solve the problems listed below TO SET PRESS EZ HELP MENU NEXT MENU MOVE NEXT 1 2 3 Press MENU repeatedly to select the SPECIAL menu on your screen. Use the Up/Down arrow to select the EZ HELP option, then press the Right arrow. Use the (Up/Down/Right/Left arrow keys) as described onscreen to select the options below and correct the problem. · If you do not have any watchable channels: Do a channel search. · If you want to add or delete a channel: Adds or Deletes channels. · If your screen is stained: Use Degaussing. · If you have a color problem: Use viewing option for picture setting. · If there is a volume difference between channels: Turn on Soundrite so sound level is maintained.

· If there is noise in picture or picture is shaky: Message shows some common problem solutions. PRG POWER CABLE SURF VCR AUX TV MUTE FLASHBK CHANNEL VOLUME CHANNEL 1 4 2 5 8 3 6 9 ENTER 3 1 2/3 7 0 2/3 4 2/3 MENU QUIT PIP SWAP FREEZ CC TV/VCR SOURCE RECORD PAUSE TIMER PLAY REWIND STOP FFWD 4 Press QUIT to remove the menu and return to TV viewing. EZ Help offers solutions to common problems on one convenient menu. 206-3802 PAGE 37 Programming the Remote Set up your remote control to operate other brand name devices Indicator Light 1 2 3 4 5 6 7 Turn on the device you want to program. On the chart on page 42/43, find the type of device you're programming, and then find the brand name. Make a note of the three-number code, you'll need it soon. Press and hold PRG. It's recessed so it doesn't get pushed accidentally. Use a small, blunt object. When the indicator light turns on, you can release PRG.

Push the key name with the type of device you're programming (VCR, CABLE, AUX, TV). Using the NUMBER keypad, enter the three-number code you found on page 42/43. Press ENTER to save the code. (The indicator light will flash 3 times, then turn off to indicate the code is valid.) Point the remote at the device and push POWER.

It should turn off. If not, try the other codes listed and continue from step three. Note: To reset remote to factory settings, enter 9-1-1, in Step 5. Note: After programming, be sure to press the mode key first to operate the device you have just programmed. Programming your Zenith remote may allow you to use one remote to work up to 7 different devices.

Not all devices will work with your Zenith remote control. 3 PRG POWER CABLE SURF VCR AUX TV MUTE 7 4 FLASHBK CHANNEL VOLUME CHANNEL 5 1 4 7 0 2 5 8 3 6 9 ENTER 6 QUIT MENU PIP SWAP FREEZ CC TV/VCR SOURCE RECORD PAUSE TIMER PLAY REWIND STOP FFWD Mini glossary PROGRAMMING PRG DEVICE Procedure to set up remote to operate other equipment. Programming mode key. Infra-red remote controllable electronic accessory equipment. PAGE 38 206-3802 Amplifier Volume Override Control the volume on your home audio system without changing modes 1 2 3 4 Find the code that operates your amplifier. Test it to make sure it's the correct one by following the procedure in "Programming Your Remote" on the previous page. Program your audio system into one of the available AUX modes: Aux, Aux+1, Aux+2, or Aux+3. Press and hold PRG on your remote until the indicator light stays lit, then release. Press 4-9-9; then ENTER on the remote. The indicator light will flash three times the code was accepted.

Audio system volume/mute now appears in all modes. Note: You can also program Cable Box Volume and Mute control (if available) into your cable box mode (CABLE or AUX mode) by repeating the steps for programming on the previous page but entering 3-9-9, instead of a brand code, then pressing ENTER. 3 PRG POWER Indicator Light CABLE SURF VCR AUX TV MUTE FLASHBK 2 CHANNEL VOLUME CHANNEL 1 4 7 0 2 5 8 3 6 9 ENTER 2/4 MENU QUIT PIP SWAP FREEZ CC TV/VCR SOURCE To put everything back to normal, reprogram the mode from Step 3 with the original brand code. If you can't find the code for your amplifier, use the Auto Find feature on page 41. RECORD PAUSE TIMER PLAY REWIND STOP FFWD Mini glossary AMPLIFIER CABLE BOX VOLUME/MUTE Audio device which sends sound to speakers, like an Audio Tuner, Receiver, or Amplifier. See Audio Tuners/Amp list on page 43. Some cable boxes have volume controls. 206-3802 PAGE 39 Aux-1, Aux-2, Aux-3 Control up to seven different devices with your remote Indicator Light 1 2 3 4 5 6 7 Refer to the chart on page 42/43 to find the type and brand name of the device you're programming. Press and hold down PRG with a small blunt object until the indicator light turns on, then release PRG. Press AUX and the 1 on the NUMBER keypad at the same time (for AUX +1).



[You're reading an excerpt. Click here to read official ZENITH](http://yourpdfguides.com/dref/340958)

[C27A25 user guide](http://yourpdfguides.com/dref/340958)

<http://yourpdfguides.com/dref/340958>

2 3 PRG POWER 6 CABLE SURF VCR AUX TV MUTE FLASHBK CHANNEL VOLUME VOLUME Using the NUMBER keypad, enter the three-number code for the device you've selected. Press ENTER to save the code. With the device turned on, point the remote at it and press POWER. It should turn off.

Repeat the steps for AUX+2, and AUX+3.

MENU CHANNEL 1 4 7 0 2 5 8 3 6 9 ENTER 4 5 QUIT PIP SWAP FREEZ CC TV/VCR SOURCE RECORD PAUSE TIMER PLAY Programming your Zenith remote may allow you to use one remote to work up to 7 different products or devices. Some devices may not work with your Zenith remote control. REWIND STOP FFWD Mini glossary AUX Auxiliary equipment. Can be any equipment which does not have a dedicated key on your remote like Cable or VCR.

Typically a second VCR, stereo system, audio tape deck, etc.

PAGE 40 206-3802 Remote Control Auto Find Use Auto Find to automatically search and try all possible brand codes 1 2 3 4 5 Turn on the device you want the remote to control. Press and hold PRG until the indicator light turns on, then release PRG. Press the key for the device you are trying to program (CABLE, VCR, AUX, TV). Press 0-0-0 (zero-zero-zero), then press ENTER right away. Aim the remote at the correct device and push the POWER key (The indicator light will turn off while the POWER key is pressed). Allow a second to pass, then push the POWER key again. Repeat until the device turns off. Push ENTER to save the code (The indicator light will flash 3 times and then turn off). Press POWER to turn the device back on. 2 PRG POWER Indicator Light

CABLE SURF VCR AUX TV MUTE FLASHBK 5/7 3 CHANNEL VOLUME VOLUME CHANNEL 1 4 7 2 5 8 3 6 9 ENTER 6 7 4 0 4/6 QUIT MENU PIP SWAP FREEZ CC TV/VCR SOURCE RECORD PAUSE TIMER PLAY You can quickly get out of Auto Find by pressing PRG.

If the indicator light stays on while you press Power instead of turning off, all the codes have been tried and your device can't be controlled. REWIND STOP FFWD Mini glossary AUTO FIND Another way of finding a brand code for controlling auxiliary equipment such as a VCR, DVD player, etc. that is not available through the regular remote brand code programming method. 206-3802 PAGE 41 Programming Codes Find the codes you need to program your remote. On this page: TVs, VCRs, and Cable Boxes TVs Admiral

. . 121 Bell & Howell . . .

. . 121 Citizen

. 121 Curtis Mathis 121 Daewoo . .

. 149 Elektra

. 121 Kurazi

.

. . 121 Lodgent

121 Logik 121 Majestic

.

. . 121 Memorex

. . . 121 Montgomery Ward . 121 Teknika

. . 121 Telerent

121 Signature 2000 . . . 121 XR-1000

.

121 Zenith 101 121 149 152 Funai TV/VCR . .

. . 154 Goldstar TV/VCR . . 153 172 Symphonic TV/VCR 154 Zenith TV/VCR . . . 150 153 154 172 TV/VCR Combination Codes Adventura TV/VCR . 154 Daewoo TV/VCR . .

148 VCRs Admiral

. . 261 Akai

. 292 717 718 719 720 Audio Dynamics . . 726 Bell & Howell . .

. 247 Broksonic 221 250 255 729 Candle

.

. . 727 Canon

. 704 Capeheart

. . 728 Citizen

727 Craig

. 212 Curtis Mathes

. . 259 266 725 727 Daewoo 244 246 248 254 703 729 Daytron . .

. 246 DBX

.

. 726 Electrochrome

730 Emerson 203 250 722 731 221 243 293 721 729 730 732 General Electric . . 216 220 266 282 701 702 725 Go Video . .

. 256 262 263 700 Goldstar

. . . 253 Harmon Kardon

. 296 Hitachi

. 257 270 273 292 705 706 707 708 J.C. Penny

. . 268 726 Jensen

292 JVC

.

224 225 258 268 292 299 726 Kenwood 268 292 726 727 Magnavox . . .
 . . . 275 Marantz
 267 268 726 727 Memorex
 . . . 212 298 MGA
 297 730 Mitsubishi
 . . . 276 277 278 279 280 296 297 730 Montgomery Ward 216 219 249 291 730 MultiTech
 727 NEC

 267 268 269 281 292 709 726 Orion 250 Panasonic
 245 251 259 713 714 715 716 Pentax
 . . . 708 727 Philco

 . . . 275 Pioneer 210 282 726 Portland
 246 727 ProScan
 . . . 216 260 266 282 725 Quasar

 . 259 295 Radio Shack 213 265 730 RCA
 216 240 260 283 286 708 725 220 242 266 284 287 710 228 249 282 285 288 711 Samsung
 . . . 220 230 Sansui

 . 289 292 709 726 Sanyo 212 247 294 Scott
 243 290 729 Sears

 . . . 211 212 213 265 274 Sharp
 261 730 Signature 2000 . . . 216 219 249 Sony
 232 723 724 Sylvania

 275 297 Tatung
 . . . 268 292 Teac
 . . . 268 Teknika
 . 272 Toshiba
 . . . 213 274 290 297 Vector Research
 . 726 727 Victor
 726 Video Concepts . . . 726 727 XR - 1000 243 Yamaha

 . . . 726 Zenith
 201 224 225 229 Realistic
 . . . 212 213 265 730 Saisho
 . 722 Salora

 297 Fisher 211 212 213 247 265 274 Cable Boxes Allegro
 358 362 Allegro A-B Switch 361 Archer

 325 Century
 . . . 325 Citizen
 . 325 Comtronic 326 Garrard

 325 Gemini
 . . . 305 331 338 General Electric . . . 367 General Instrument 304 305 306 307 308 309 310 318 Hamlin
 302 303 345 365 366 Jasco
 . . . 325 Jerrold

 . 304 307 308 309 310 318 360 363 Kale Vision 335 Macom

.... 321 Magnavox
327 334 NSC

.....
335 339 368 369 370 Oak

311 332 342 Panasonic 313 320 Philips
.... 325 327 347 350 352 354 355 Pioneer .

.....
.. 315 343 RCA

.. 341 Regency 329 Samsung .

.....
. 326 335 Scientific Atlanta 316 323 336 337 364 Teleview
... 326 Texscan

339 356 371 Tocom 317 318 346 Unika ..

.....
.. 325 348 362 Universal ...
... 325 358 362 Vid Tech

340 Video Way 349 Viewstar

... 327 354 355 372 Zenith HT-2000 .

. 353 Zenith PM

.. 374 Signal

. 326 SL Marx 326 Sprucer .

.....
.. 313 Standard Comp ...

335 Stargate 326 379 PAGE 42 206-3802 Programming Codes Find the codes you need to program your remote. On this page: Cable, Satellite, CD
Players, Tape Decks and Audio Tuners and Amplifiers. Satelite Receivers Alphastar.

..... 516 Chaparral

... 501 502 Cheyenne ..

.....
502 Dishnet 515 Drake ..

..... 503 General Electric. ...
510 517 General Instrument 504 505 Hitachi

... 519 520 Hughes Network ..

514 JVC

518 Macom 314 Magnavox ..

.... 521 Phillips .

.....
.. 521 PrimeStar 513 ProScan.

..... 510 517 RCA DSS ...

.... 373 RCA .

.....
.... 510 517 Realistic

. 506 Sierra I 502 Sierra II .

.....
. 502 Sierra III

... 502 Sony.

... 511 STS1

... 507 STS3 ..

.....
... 508 Toshiba

. 509 512 Uniden 522 United .

.....
.. 344 Zenith Drake ...

.. 312 330 Zenith Satellite .. 328 351 378 500 DVD Players JVC

.... 965 Mitsubishi

964 Pioneer
... 963 Sony
..... 962 Toshiba
..... 961 Zenith
.....
960 Audio CD Players ADC
..... 940 ADO
..... 939 Aiwa
.....
938 Akai
..... 937 Denon
..... 935 Dynatech



[You're reading an excerpt. Click here to read official ZENITH
C27A25 user guide
http://yourpdfguides.com/dref/340958](http://yourpdfguides.com/dref/340958)

.....
 953 Emerson
 .. 952 Fisher ...
 438 933 951 GE

 932 Goldstar ...
 460 Hitachi .

 .. 950 JVC

 .. 949 954 Kenwood 441 931 948 Luxman ..

 . 930 Magnavox
 .. 421 422 433 434 Marantz

 929 947 MCS
 928 Mitsubishi
 . 927 Nakamichi
 .. 925 926 Onkyo

 923 924 946 Optimus 920 921 922 Panasonic ...
 ... 431 432 945 Phillips ..

 . 421 433 434 Pioneer 431 435 944 Quasar .

 432 Radio Shack ...
 .. 431 441 RCA ...

 .. 437 943 Sanyo

 . 438 439 Sears
 936 Sharp
 441 442 Sherwood .
 449 Sony

 420 443 444 445 934 Soundesign
 461 498 901 902 Sylvania
 .. 433 Teac ...
 418 419 Technics

 ... 432 Toshiba
 . 915 Yamaha
 414 941 942 Zenith .
 460 461 498 901 902 Audio Tape Decks Sony...

 452 Audio Tuners/Amps Citizen ...

 914 GE
 916 Goldstar

 ... 460 474 Hitachi
 . 919 JVC

 . 908 Kenwood 484 Luxman ..

 467 Marantz
 903 913 Memorex .

 . 485 Nad

 . 904 Nakamichi 493 Onkyo ...

 471 906 Optimus
 .. 905 Panasonic 912 Pioneer ..

 470 485 907 Proton
 910 Quasar .

.....
.. 912 RCA

.. 909 Sharp

. 483 917 918 Sherwood

.. 900 Sony. . .

..... 486 489 490 491 492 Soundesign . . .

.. 461 498 901 902 Toshiba

915 Techniques.

. 912 Victor.

..... 908 Zenith

... 460 461 498 901 902 206-3802 PAGE 43 Remote Key Functions By Mode A complete list of key functions for your remote control TV Mode Zenith Code 101 Program Mode Codes TV On/Off Selects Cable Selects VCR Selects AUX Selects TV Channel Preview TV Flashback TV Mute TV Channel Up TV

Channel Down TV Volume Up TV Volume Down TV Digit 1 TV Digit 2 TV Digit 3 TV Digit 4 TV Digit 5 TV Digit 6 TV Digit 7 TV Digit 8 TV Digit 9 TV Digit 0 TV Enter TV Menu TV Select Up TV Select Down TV Adjust Left TV Adjust Right TV Surr Sound TV PIP TV PIP Swap TV PIP Freeze TV Closed Captions TV Timer TV Sources VCR Record VCR Pause VCR Rewind VCR Play VCR Stop VCR Fast Forward KEY NAME PRG POWER CABLE VCR AUX TV Surf FLASHBK MUTE CHANNEL UP CHANNEL DOWN VOLUME (RIGHT) VOLUME (LEFT) 1 2 3 4 5 6 7 8 9 0 ENTER MENU UP ARROW DOWN ARROW

LEFT ARROW RIGHT ARROW QUIT/(Note) PIP SWAP FREEZ CC TIMER TV/VCR/SOURCE RECORD PAUSE REWIND PLAY STOP FFWD References: VCR Mode Zenith Code 201 Program Mode Codes VCR On/Off Selects Cable Selects VCR Selects AUX Selects TV VCR SP/EP VCR Flashback TV Mute VCR

Channel Up VCR Channel Down TV Volume Up TV Volume Down VCR Digit 1 VCR Digit 2 VCR Digit 3 VCR Digit 4 VCR Digit 5 VCR Digit 6 VCR Digit 7 VCR Digit 8 VCR Digit 9 VCR Digit 0 VCR Enter VCR Menu VCR Select Up VCR Select Down VCR Adjust Left VCR Adjust Right VCR Quit VCR+ VCR

Eject Tape VCR Commercial Skip VCR Memory VCR Timer TV Tuner or VCR Tuner VCR Record VCR Pause VCR Rewind VCR Play VCR Stop VCR Fast Forward Cable Mode Zenith Code 353 Program Mode Codes Cable Box On/Off Selects Cable Selects VCR Selects AUX Selects TV Cable FC/Fav Ch Cable

Flashback TV Mute Cable Channel Up Cable Channel Down TV Volume Up TV Volume Down Cable Digit 1 Cable Digit 2 Cable Digit 3 Cable Digit 4 Cable Digit 5 Cable Digit 6 Cable Digit 7 Cable Digit 8 Cable Digit 9 Cable Digit 0 Cable Enter Cable Menu Cable Up Arrow Cable Down Arrow Cable Left

Arrow Cable Right Arrow Cable Quit Day Up Day Down Cable Page Up Cable Page Down Cable Timer Cable Info Cable Buy Cable Guide VCR Rewind VCR Play VCR Stop VCR Fast Forward AUX Mode Zenith Code 960 Program Mode Codes AUX On/Off Selects Cable Selects VCR Selects AUX Selects TV

AUX Audio AUX Return TV Mute AUX Skip >> AUX Skip << TV Volume Up TV Volume Down AUX Digit 1 AUX Digit 2 AUX Digit 3 AUX Digit 4 AUX Digit 5 AUX Digit 6 AUX Digit 7 AUX Digit 8 AUX Digit 9 AUX Digit 0 AUX Display AUX Menu AUX Up Arrow AUX Down Arrow AUX Title AUX Sub-

Title AUX Resume AUX Marker AUX Marker Search AUX Repeat-Chap AUX Repeat A-B AUX Program AUX Open/Close AUX Angle AUX Pause AUX Scan << AUX Play AUX Stop/Eject AUX Scan >> MBR3457CT, 124-233-05 and µP 221-1445-02 Some of the functions shown above may not be available on your equipment. PAGE 44 206-3802 Maintenance Caring for your Entertainment Machine Early malfunctions can be prevented. Careful and regular cleaning can

extend the amount of time you will have with your new Entertainment Machine. Be sure to turn the power off and pull out the plug before you begin any cleaning. Screen Cleaning 1. Here's a great way to keep the dust off your screen for a while. Wet a soft cloth in a mixture of lukewarm water and a little fabric

softener or dish washing detergent.

Wring the cloth until it's almost dry, and then use it to wipe the screen. 2. Make sure the excess water is off the screen, and then let it air-dry before you turn on your Entertainment Machine. Cabinet Cleaning 1. Use a soft cloth with a mild soap solution to wipe the cabinet.

2. Rinse the cloth and wipe the cabinet again. 3. Let the cabinet air-dry before turning your Entertainment Machine on. Wood Cabinet Use a quality wood cleaner and polish.

This will protect the Entertainment Machine from dirt and dust, as well as keep the cabinet looking new. Extended Absence If you leave your Entertainment Machine dormant for a long time (such as a vacation), it's a good idea to unplug the power to protect against possible damage from lightning or power

surges. If you use an off-air antenna, you may also want to disconnect it from the back of your TV before leaving. If you unplug your Zenith Entertainment Machine, you may have to reset the clock using the Clock Set menu described earlier. See page 21. 206-3802 PAGE 45 Trouble Shooting Some quick and easy

tips to fixing problems yourself SYMPTOMS Snowy picture and poor sound. Multiple images or 'ghost shadows.' SOLUTIONS · Check your antenna connection or location. · Check your antenna direction and/or location. · Make sure the wire from your antenna to your Entertainment Machine is properly connected.

The following may cause image problems or distortion: Electrical appliances, powerful lights, cars, trucks; computers or portable phones; medical equipment · If possible increase the distance between your Entertainment Machine and the offending appliance. Or shut one of them off. · Check volume levels. · Make

sure the TV is not muted. · Try another channel. The problem may be the broadcast, not your Entertainment Machine. · Are the Audio A/V cables properly installed? · Are you in TV or cable tuning mode, and should be in the other? · Make sure output channels on all A/V equipment are on the same channel (3 or 4). · Check that all connections are tight. · Is the AC power plugged in? · Check that your AC power outlet works. (Test it by plugging in something else or try

another plug.

) · Make sure your brightness and audio controls are set properly.



[You're reading an excerpt. Click here to read official ZENITH C27A25 user guide](http://yourpdfguides.com/dref/340958)
<http://yourpdfguides.com/dref/340958>