




Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for ZENITH C27C41T. You'll find the answers to all your questions on the ZENITH C27C41T in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual ZENITH C27C41T
User guide ZENITH C27C41T
Operating instructions ZENITH C27C41T
Instructions for use ZENITH C27C41T
Instruction manual ZENITH C27C41T

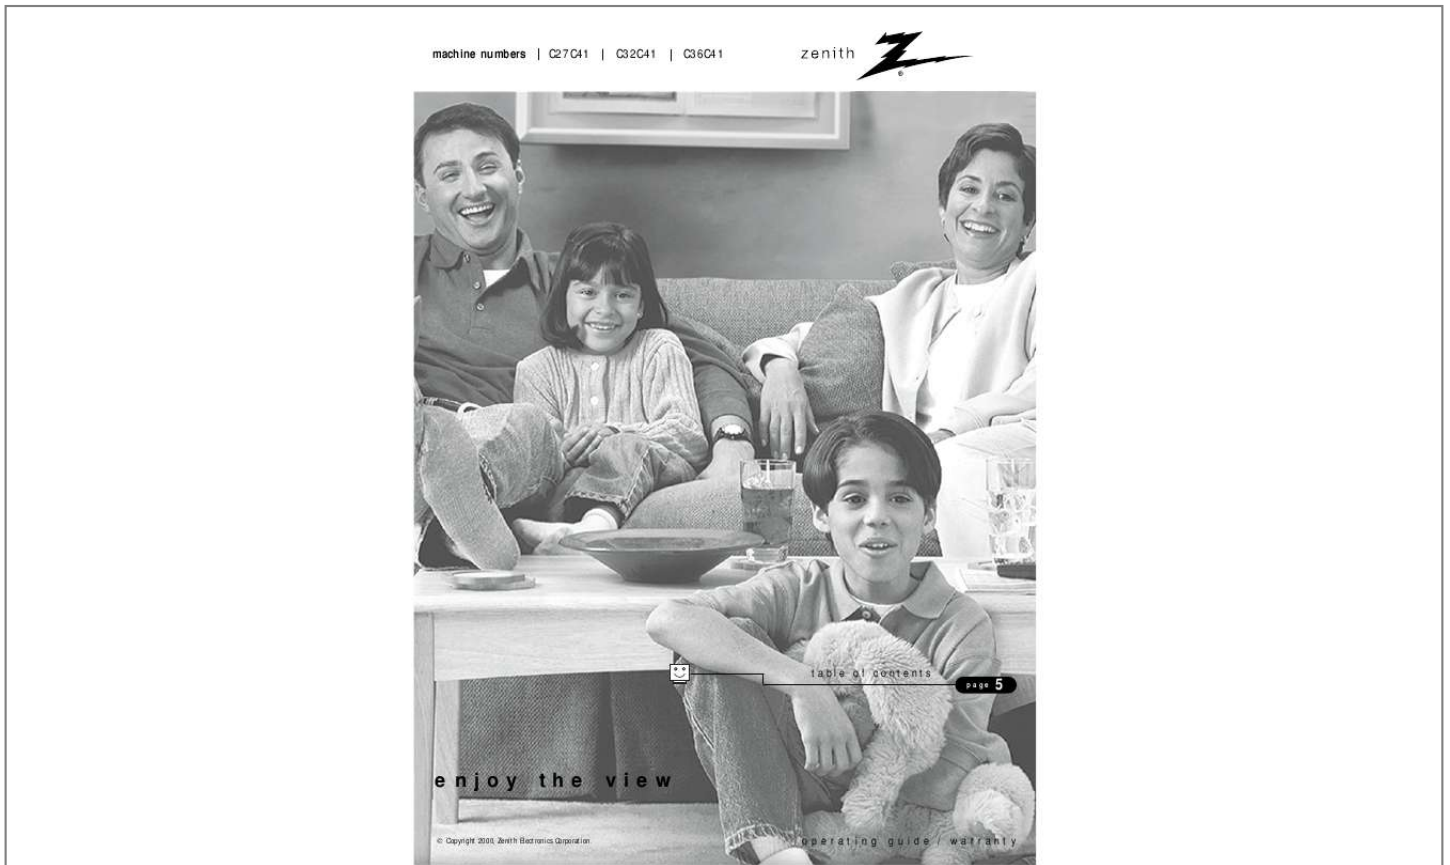

[You're reading an excerpt. Click here to read official ZENITH C27C41T user guide](http://yourpdfguides.com/dref/340960)
<http://yourpdfguides.com/dref/340960>

Manual abstract:

REFER SERVICING TO QUALIFIED SERVICE PERSONNEL. @@@@ **POWER CORD POLARIZATION:** CAUTION: To prevent electric shock, match wide blade of plug to wide slot, fully insert. ATTENTION: Pour éviter les chocs électriques, introduire la lame la plus large de la fiche dans la borne correspondante de la prise et pousser jusqu'au fond. NOTE TO CABLE/TV INSTALLER: This reminder is provided to call the cable TV system installer's attention to Article 820-40 of the National Electric Code (U.S.A.). The code provides guidelines for proper grounding and, in particular, specifies that the cable ground shall be connected to the grounding system of the building, as close to the point of the cable entry as practical. REGULATORY INFORMATION: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a residential installation.

@@@@@ · Increase the separation between the equipment and receiver. @@ · Consult the dealer or an experienced radio/TV technician for help. CAUTION: Do not attempt to modify this product in any way without written authorization from Zenith Electronics Corporation. Unauthorized modification could void the user's authority to operate this product. PAGE 2 ©Copyright 2000 Zenith Electronics Corporation B-WARN-DV-1 7/98 **IMPORTANT SAFETY INSTRUCTIONS** Important safeguards for you and your new product Your product has been manufactured and tested with your safety in mind. However, improper use can result in potential electrical shock or fire hazards. To avoid defeating the safeguards that have been built into your new product, please read and observe the following safety points when installing and using your new product, and save them for future reference. Observing the simple precautions discussed in this operating guide can help you get many years of enjoyment and safe operation that are built into your new product. This product complies with all applicable U.S.

Federal safety requirements, and those of the Canadian Standards Association. 1. Read Instructions All the safety and operating instructions should be read before the product is operated. 9. Attachments Do not use attachments not recommended by the product manufacturer as they may cause hazards. 2. Follow Instructions All operating and use instructions should be followed. 10. Ventilation Slots and openings in the cabinet are provided for ventilation and to ensure reliable operation of the product and to protect it from overheating, and these openings must not be blocked or covered. The openings should never be blocked by placing the product on a bed, sofa, rug, or other similar surface.

This product should not be placed in a built-in installation such as a bookcase or rack unless proper ventilation is provided or the manufacturer's instructions have been adhered to. 3. Retain Instructions The safety and operating instructions should be retained for future reference. 4. Heed Warnings All warnings on the product and in the operating instructions should be adhered to. 5. Cleaning Unplug this product from the wall outlet before cleaning. Do not use liquid cleaners or aerosol cleaners. Use a damp cloth for cleaning. 11.

Power Sources This product should be operated only from the type of power source indicated on the marking label. If you are not sure of the type of power supply to your home, consult your product dealer or local power company. For products intended to operate from battery power, or other sources, refer to the operating instructions. 6. Water and Moisture Do not use this product near water for example, near a bath tub, wash bowl, kitchen sink, or laundry tub, in a wet basement, or near a swimming pool.

12. Line-Cord Polarization This product is equipped with a polarized alternating-current line plug (a plug having one blade wider than the other). This plug will fit into the power outlet only one way. This is a safety feature. If you are unable to insert the plug fully into the outlet, try reversing the plug. If the plug should still fail to fit, contact your electrician to replace your obsolete outlet. Do not defeat the safety purpose of the polarized plug. 7. Accessories Do not place this product on an unstable cart, stand, tripod, bracket, or table. The product may fall, causing serious injury to a child or adult, and serious damage to the product. Use only with a cart, stand, tripod, bracket, or table recommended by the manufacturer, or sold with the product. Any mounting of the product should follow the manufacturer's instructions, and should use a mounting accessory recommended by the manufacturer. 13. Power-Cord Protection Power-supply cords should be routed so that they are not likely to be walked on or pinched by items placed upon or against them, paying particular attention to cords at plugs, convenience receptacles, and the point where they exit from the product. 8.

Transporting Product A product and cart combination should be moved with care. Quick stops, excessive force, and uneven surfaces may cause the product and cart combination to overturn. (Continued on next page) **PORTABLE CART WARNING 206-3481 PAGE 3 IMPORTANT SAFETY INSTRUCTIONS** (Continued from previous page) 18. Object and Liquid Entry Never push objects of any kind into this product through openings as they may touch dangerous voltage points or short-out parts that could result in a fire or electric shock. Never spill liquid of any kind on the product. 14. Outdoor Antenna Grounding If an outside antenna or cable system is connected to the product, be sure the antenna or cable system is grounded so as to provide some protection against voltage surges and built-up static charges. Article 810 of the National Electrical Code (U.S.A.

), ANSI/NFPA 70 provides information with regard to proper grounding of the mast and supporting structure, grounding of the lead-in wire to an antenna discharge unit, size of grounding conductors, location of antenna-discharge unit, connection to grounding electrodes, and requirements for the grounding electrode. Example of Grounding According to National Electrical Code Instructions 19. Servicing Do not attempt to service this product yourself as opening or removing covers may expose you to dangerous voltage or other hazards. Refer all servicing to qualified service personnel. 20.

Damage Requiring Service Unplug this product from the wall outlet and refer servicing to qualified service personnel under the following conditions: a. If the power-supply cord or plug is damaged. b. If liquid has been spilled, or objects have fallen into the product. c.

If the product has been exposed to rain or water. d. If the product does not operate normally by following the operating instructions. Adjust only those controls that are covered by the operating instructions as an improper adjustment of other controls may result in damage and will often require extensive work by a qualified technician to restore the product to its normal operation.



[You're reading an excerpt. Click here to read official ZENITH C27C41T user guide](http://yourpdfguides.com/dref/340960)
<http://yourpdfguides.com/dref/340960>

When the search is complete, press **QUIT** repeatedly to return to TV viewing. **VOLUME VOLUME CHANNEL 1 4 7 0 2 5 8 3 6 9 ENTER 2/4 6 3/5** Note: EZ Program finds channels being received by the TV tuner.

1 2/4 MENU QUIT PIP Cable will not work unless you subscribe to a cable service. **RECORD PIP ch FREEZ CC TV/VCR SOURCE PAUSE TIMER PLAY REWIND STOP FFWD** Mini glossary **AIR ANTENNA CABLE TV** The device receiving the program signal broadcast over-the-air. Your EZ Program selection, if you subscribe to a cable service. 206-3591 PAGE 13 Remote Key Functions for TV Mode Note: Pressing TV puts remote into TV operating mode. A quick list of the keys on your remote and what they do in TV mode, see page 44 for remote key functions in the other modes **POWER** Turns TV On or Off. **PRG PRG (PROGRAM)** Programs your remote to operate other products.

See page 38. **FLASHBK (FLASHBACK)** Return to the last channel viewed. **SURF** Press to turn Surf channel scan on and off for channel scanning using Channel Up/Down. On=Only Surf channels appear. Off=Normal channel scan. **CHANNEL UP / DOWN** Tunes to next available channel. **POWER CABLE SURF VCR LED INDICATOR LIGHT** Lights when keys are pressed. **AUX TV MUTE FLASHBK CABLE / VCR / AUX / TV** Selects remote operating mode. **MUTE** Turns sound Off and On while the picture remains. **VOLUME LEFT / RIGHT** Adjusts the sound level.

CHANNEL VOLUME VOLUME CHANNEL 1 4 7 2 5 8 3 6 9 ENTER NUMBER KEYPAD Selects channels directly and enters numeric values for some options. **ENTER** Shows the Channel/Time display. **(MENU) UP / DOWN DIRECTIONAL ARROWS** The Up/Down directional arrows select and adjust menu options. **QUIT/** Removes on-screen menu/display from view. With no menus shown on-screen, turns front surround sound on and off. **CLOSED CAPTIONS** Selects Off, On, or EZ Mute. **TV / VCR SOURCE** Switches between watching TV through antenna/cable, or one of the video sources. **MENU** Shows on-screen menus for TV mode. See page 18. **(MENU) LEFT / RIGHT DIRECTIONAL ARROWS** The Left/Right directional arrows select and adjust menu options. **PIP FEATURES** For PIP (Picture-in-Picture) operation. See page 34. **TIMER** Displays the Sleep Timer Menu. See page 30. **0 MENU QUIT PIP PIP ch FREEZ CC TV/VCR SOURCE RECORD PAUSE TIMER PLAY REWIND STOP FFWD** Keys dedicated to VCR functions will still operate your VCR while the remote is in TV mode.

remote control part number **MBR3458CT (124-233-06)** PAGE 14 206-3591 On-Screen Menu Operation Use either the remote or the TV front controls to access the on-screen menus **PARENTAL CTRL AUX. BLOCK MPAA AGE BLOCK CONTENT BLK SET HOURS SET PASSWORD LOCK ON/OFF UNBLOCKED BLOCKED MENU NEXT MENU MOVE NEXT PRG 1 2 3 4 5** Press **MENU** repeatedly on the remote control, to "select" one of the five main menus on your screen like **PARENTAL CONTROL**. Use the **UP/DOWN** directional arrow to select an option like **AUX. BLOCK**. (You can select the other menu options like **AGE BLOCK** by pressing the **UP** or **DOWN** directional arrow repeatedly.

) Once the option is selected, in this case **AUX BLOCK**, press the **RIGHT** directional arrow to go to the next selection of options. Use the **UP** or **DOWN** directional arrow to choose an option, in this case **BLOCKED** or **UNBLOCKED**. When finished, press **MENU** repeatedly to go back to the main menu or press **QUIT** to remove the menus and submenus from the TV screen. **POWER CABLE SURF VCR AUX TV MUTE FLASHBK CHANNEL VOLUME VOLUME CHANNEL 1 4 7 0 2 5 8 3 6 9 ENTER 2/4 5 2/3 1/5** On-screen menus automatically disappear after about 20 seconds. Remote must be in the TV mode for it to control the TV. Press **TV** on the remote to select TV mode. **MENU QUIT PIP PIP ch FREEZ CC TV/VCR SOURCE 2/4 RECORD PAUSE TIMER PLAY REWIND STOP FFWD** Mini glossary **MENU UP/DOWN LEFT/RIGHT QUIT ENTER** On-screen displays you use to program the TV features. Use the Menu **UP** or **DOWN** directional arrow to "select" or highlight and choose menu options. Use the Menu **LEFT** or **RIGHT** directional arrow to move to or return from the menu options listings. Exits menus and removes o-screen displays.

Returns to the previously selected menu option on some menus. 206-3591 PAGE 15 Front Panel Controls How to use your front control panel to operate the menus When using the on-screen menus, the buttons on the TV front panel correspond to the remote control keys as follows: **CHANNEL = VOLUME = Moves Up/Down Moves Left/Right 1 2 3 4** menu channel volume power **L audio R video s-video** To access the on-screen menus, press **MENU**. Pressing **MENU** repeatedly will cycle through the available menus. Highlight the option you want using the **DOWN** or **UP** Channel arrow. **ADJUST** or change the selected feature using the **LEFT** or **RIGHT** Volume arrow. Wait a few moments and the menus will disappear by themselves or press **MENU** repeatedly to remove menus. Typical TV Front Panel menu channel volume power **L audio R video s-video** Menus disappear by themselves. To get them back, press **MENU** again. If you've lost your remote, you can get a new one by calling 1-800-255-6790 to purchase a replacement. **1 2 3** Turns TV On and Off **Front Audio/Video Inputs Front S-Video Input** PAGE 16 206-3591 Selecting Viewing Sources Typical TV back **L audio R video s-video Front and Back Connection Panels.**

Where picture and sound "sources" are connected. **R -AUD IO-L Camcorder AUDIO/ VIDE VIDEO O OUT VCR** Pick the viewing source (picture and sound) you want to see and hear on your Entertainment Machine **R -AUD IO-L AUDIO/ VIDE VIDEO O OUT S-Video VCR R -AUD AUDIO/ IO-L VIDE VIDEO O DVD Player OUT 1** Press **TV/VCR SOURCE** repeatedly to choose from the available viewing sources that are connected to the TV. Available Sources: **Back Connections Panel ANTENNA/CABLE: ANTENNA/CABLE** on TV back Jackpack, **Over-the-Air Antenna** or **Cable service signal source. Video 1: Video** on TV back Jackpack, **Audio/Video Inputs. S-Video 1: S-Video** on TV back Jackpack, **Audio/Video Inputs.**

Front Connections Panel Video 2: Video on TV Front Jackpack, **Audio/Video Inputs. S-Video 2: S-Video** on TV Front Jackpack, **Audio/Video Inputs. R -AUD IO-L AUDIO IN** Other Typical Equipment Sources **CHANNEL VOLUME VOLUME CHANNEL 1 4 7 0 2 5 8 3 6 9 ENTER MENU QUIT PIP PIP ch FREEZ CC TV/VCR SOURCE RECORD PAUSE TIMER 1 PLAY REWIND FFWD STOP** The sources you intend to view should be turned on. You can connect equipment to the Video or S-Video jacks, but not at the same time. Use the Audio input jacks with either the S-Video or Video input.

206-3591 PAGE 17 On-Screen Menus / Displays Overview Descriptions of the menus and displays on your Entertainment Machine Menu Name Page Description/Function **ON-SCREEN MENUS SETUP EZ Program Add/Del/Surf EZ Clock Captions Caption/Text Language Source Menu 13 13 20 21 22 22 23 24** Sets the TV up and adjusts the basic features.



[You're reading an excerpt. Click here to read official ZENITH](http://yourpdfguides.com/dref/340960)

[C27C41T user guide](http://yourpdfguides.com/dref/340960)

<http://yourpdfguides.com/dref/340960>

Your options are: Automatically finds and stores active channels you will choose using Channel Up/Down. Choose which channels will appear when using Channel Up/Down. Adds favorite channels to Surf list. Sets the TV's clock. Turns closed captioning on, off, or set it to come on when the television sound is muted. Chooses a captioning or text option. Chooses the language you want the on-screen menus to appear in. Selects which picture and sound will appear on your TV main screen and PIP inset picture. VIDEO AUDIO PARENTAL CTRL 25 26 27 Adjusts the picture for different viewing situations.

Your options are: Contrast, Brightness, Color, Tint, Sharpness, Color Temperature, EZ Picture. Customizes the sound to suit your room and taste. Your options are: Bass, Treble, Balance, Audio Mode, Front Surround, EZ Soundrite, Speakers, EZ Sound. Allows parents to block any program or A/V source for up to 99 hours, with the use of a password. SPECIAL EZ Timer 30 30 Goes beyond basics and customizes your Entertainment Machine's features. Your options are: Sleep Timer On Time Off Time On/Off Timer Sets a time that the TV will automatically turn itself off. Sets the time the TV will turn on automatically each day. Sets the time the TV will turn off automatically each day. Enables or disables the On and Off Time features. Channel Labels XDS Display PIP Menu EZ Demo EZ Help 32 32 33 36 37 Titles the channels with their network names (ABC, CBS, HBO, etc.). On/Off. If available, shows program information when a channel is tuned or ENTER is pressed. Adjusts the Contrast, Color, Tint, and Size of the PIP picture. Demonstrates the on-screen menus that control the TV's setup and operational features.

Help menu offers several features from different menus that can be adjusted on one convenient menu. ON-SCREEN DISPLAYS Surf's Up No Surfing Mute Volume Display Channel/Time PIP/Channel Sleep Timer Captions/Text 19 19 19 19 19 19 19 19 Indicates channel selection is in Surf mode. Indicates that Surf channel selection has been turned off and normal channel selection mode is on. Indicates sound has been removed. Shows the current sound level. Shows the current time, channel, video/incoming audio signal, and channel label if available. Appears on the Channel/Time display if PIP is on. Chooses the amount of time in which the TV will turn itself off. Selected caption or text option appears on-screen if provided by broadcaster. PAGE 18 206-3591 On-Screen Displays On-screen displays reveal the current status of your Entertainment Machine CH 32-UPN 2:45 PM STEREO PIP A "Surf" Channels Mode Active Display Press SURF to turn on Surf channels tuning mode; only channels specified as Surf channels will appear when using channel Up/Down. CH 2-CBS Surf's Up! No Surfing Press SURF to display "No Surfing!" and return to normal channel tuning mode. Closed Captions scroll across the screen as an aid to viewers and the hearing impaired....

viewer No Surfing S B Mute Display Press MUTE to quiet sound. Press MUTE again to remove the sound. Press MUTE a third time to restore the sound. S O F T M U T E PRG POWER A B C CABLE SURF VCR AUX TV MUTE FLASHBK CHANNEL C VOLUME VOLUME Volume Display Press the VOLUME Left/Right arrow on the remote control, to view the sound status. CHANNEL 1 4 7 2 5 8 3 6 9 ENTER VOLUME D Channel/Time Display (Shown above with PIP on) Press ENTER on the remote control to view the Channel/Time-Incoming Audio signal display. Channel selection mode is indicated by flashing source; Main screen or PIP inset. Pressing QUIT/ repeatedly with the Channel/Time display on-screen will move the note symbol allowing you to choose either main screen or PIP as the sound source. Remove On-Screen Displays and Menus Press QUIT/ to remove displays or menus, returning to TV viewing. Or, wait a few moments and the displays or menus will automatically disappear from the screen. Turns front surround sound on or off, if no menus are shown on-screen.

Captions/Text (Appear if available, see example above) Press CC repeatedly to select a Captions/Text option or to turn Captions/Text off. Sleep Timer Display Press TIMER on the remote control to view the Sleep Timer Status Display. Press TIMER repeatedly to set the amount of time before the TV automatically turns itself off. 0 D QUIT MENU PIP PIP ch FREEZ CC TV/VCR SOURCE E F G RECORD PAUSE TIMER PLAY REWIND FFWD STOP E F G SLEEP TIMER 0:10 206-3591 PAGE 19 Add/Delete/Surf Channel Menu SETUP Customize your channel selection list: Add Channels not found by EZ Program Delete channels you don't watch Create a favorite channels list to "Surf" - - with Surf on, only those channels specified as Surf channels will appear when pressing the Channel Up/Down keys MENU EZ PROGRAM ADD/DEL/SURF EZ CLOCK CAPTIONS CAPTION/TEXT LANGUAGE SOURCE MENU CH 20 DELETED ADDED SURF NEXT MENU MOVE NEXT 1 2 3 4 5 6 Use the NUMBER keypad to go to the Channel you want to add, delete, or include in the Surf channel list. Press MENU repeatedly until the SETUP menu appears.

Use the Up/Down arrow to highlight the Add/Del/Surf option, then press the Right (adjust) arrow. Use the Up/Down arrow to pick ADDED or DELETED or SURF; move the check mark next to the option. Use MENU to go back to the SETUP menu. Press QUIT to remove menu when finished. Or, go to another channel you want to add, delete, or include as a Surf channel by using the NUMBER keypad to select the channel and repeat from Step 3.

If you've deleted a channel, it isn't gone for good. Just select it using the NUMBER keypad on the remote, or add it later. Surf channels are automatically added. PRG POWER CABLE SURF VCR AUX TV MUTE FLASHBK CHANNEL VOLUME VOLUME CHANNEL 1 2 5 8 3 6 9 ENTER 1 2/5 4 7 0 3/4 3 6 3/4 MENU QUIT PIP PIP ch FREEZ CC TV/VCR SOURCE RECORD PAUSE TIMER PLAY REWIND STOP FFWD Mini glossary ADDED Includes new channels to the channel list that you'll scroll through when using Channel Up/Down. DELETED Removes channels that you don't watch from the channel list you'll scroll through using Channel Up/Down. SURF Adds your favorite channels to the Surf channel list. Press SURF, channels you specify as Surf channels will be the only ones to appear when you use Channel Up/Down. Press SURF repeatedly to turn Surf off, (No Surfing!) and return TV to normal channel selection mode. PAGE 20 206-3591 Setting the Clock Set the clock yourself or have the TV do it for you SETUP EZ PROGRAM ADD/DEL/SURF EZ CLOCK CLOCK MODE TO SET PRESS TIME ZONE DAY. SAVINGS AUTO MANUAL EZ CLOCK CAPTIONS CAPTION/TEXT LANGUAGE SOURCE MENU MENU NEXT MENU MOVE NEXT MOVE MENU BACK 1 2 In the Setup menu with the EZ Clock option highlighted, press the Adjust RIGHT arrow to go to the EZ Clock Menu.



[You're reading an excerpt. Click here to read official ZENITH](http://yourpdfguides.com/dref/340960)

[C27C41T user guide](http://yourpdfguides.com/dref/340960)

<http://yourpdfguides.com/dref/340960>

Use the Select UP or DOWN arrows, the Adjust LEFT or RIGHT arrows, and the NUMBER keypad to set the clock menu options. As indicated on the menu, use FLASHBK to set AM or PM. EZ Clock Menu Options PRG POWER CABLE SURF VCR AUX TV MUTE FLASHBK CHANNEL AM/PM Automatic Mode TV sets the clock, but the user can enter the menus and make custom changes if needed. · Time Zone: Auto, Eastern, Central, Mountain, Pacific. · Daylight Savings: Auto, Off, On. VOLUME VOLUME 3 Manual Mode User sets the EZ Clock options. · Clock Mode: Auto, Manual. · Time Set: Set Hours and minutes using the NUMBER keypad or the left/right arrow keys. Use Flashbk to set AM/PM. CHANNEL 1 4 2 5 8 3 6 9 ENTER 3 1 2/3 7 0 3/4 2/3 4 1/3 4 Press ENTER or QUIT to return to TV viewing.

MENU QUIT PIP PIP ch FREEZ CC TV/VCR SOURCE RECORD PAUSE TIMER PLAY REWIND STOP FFWD Mini glossary TIME HOURS A four-number figure broken down into hours and minutes; first two numbers are hours, last two numbers are minutes. First two numbers that are entered when setting the clock. MINUTES The second two numbers that are entered when setting the clock. FLASHBK Use to set AM or PM when setting time. 206-3591 PAGE 21 Selecting Captions/Text Options Turn on Closed Captioning or Captions when sound is Mute, then choose a Closed Captions or Text option SETUP EZ PROGRAM ADD/DEL/SURF EZ CLOCK SETUP EZ PROGRAM ADD/DEL/SURF EZ CLOCK CAPTION/CAPTION TEXT 1 TEXT 2 TEXT 3 TEXT 4 1 2 3 4 CAPTION/CAPTION TEXT LANGUAGE SOURCE MENU OFF ON EZ MUTE CAPTION/CAPTION TEXT LANGUAGE SOURCE MENU MENU NEXT MENU MOVE NEXT MENU NEXT MENU MOVE NEXT The Caption/Text feature sets up your Entertainment Machine to receive various closed caption and text options provided by broadcasters.

Availability and functionality of Caption/Text is determined only by the broadcaster and may not be available. PRG POWER CABLE VCR AUX TV MUTE 1 2 3 Press MENU repeatedly until the SETUP menu appears. Use the Up/Down arrow to highlight the Captions option, then press the Right arrow. Use the Up/Down arrow to select Off, On or EZ Mute, then press the Right arrow. Note: If you selected either On or EZ Mute, then use the Up/Down/Left/Right arrows to choose an option from the Caption/Text menu: Caption 1, Caption 2, Caption 3, Caption 4, Text 1, Text 2, Text 3, or Text 4.

The option will appear when the TV sound is muted or a program is tuned to that has Closed Captions or Text available. Press QUIT to remove menu and return to TV viewing. SURF FLASHBK CHANNEL VOLUME VOLUME CHANNEL 1 4 2 5 8 3 6 9 ENTER 2/3 1 3 7 0 2/3 4 2/3 MENU QUIT 4 PIP PIP ch FREEZ CC TV/VCR SOURCE RECORD PAUSE TIMER PLAY REWIND FFWD STOP Captions come in handy when the television is on mute. Standard closed captioning is available using the Caption 1 option. Not all programming has closed captioning or text available; even though Captions 1, 2, 3, 4, and Text 1, 2, 3, 4 are available to broadcasters. Mini glossary CAPTION/CAPTION TEXT The term for the words that scroll across the bottom of the TV screen; usually the audio portion of the program provided for the hearing impaired. The term for the words that appear in a large black frame and almost cover the entire screen; usually messages provided by the broadcaster. PAGE 22 206-3591 Selecting a Language for the Menus SETUP Choose the language you want the on-screen menus to appear in EZ PROGRAM ADD/DEL/SURF EZ CLOCK CAPTION/CAPTION TEXT LANGUAGE SOURCE MENU ENGLISH SPANISH FRENCH MOVE NEXT MENU NEXT MENU 1 2 3 4 Press MENU repeatedly to select the SETUP menu. Use the Up/Down arrow to select the Language option on your screen, then press the Right arrow. Use the Up/Down arrow to choose any of the following options: English, Spanish or French.

Press QUIT to remove menu and to return to TV viewing. VOLUME PRG POWER CABLE SURF VCR AUX TV MUTE FLASHBK CHANNEL VOLUME CHANNEL 1 4 2 5 8 3 6 9 ENTER 2/3 1 7 0 2 4 2/3 MENU QUIT PIP PIP ch FREEZ CC TV/VCR SOURCE RECORD PAUSE TIMER PLAY REWIND STOP FFWD 206-3529 PAGE 23 Selecting Main Picture/PIP Sources Choose the picture and sound you want to view on the Main Picture Screen and the smaller PIP inset SETUP EZ PROGRAM ADD/DEL/SURF EZ CLOCK CAPTION/CAPTION TEXT LANGUAGE SOURCE MENU MAIN SOURCE PIP SOURCE TO SET PRESS ANTENNA/CABLE VIDEO 1 VIDEO 2 SOURCE MENU MENU NEXT MENU MOVE NEXT MOVE MENU BACK 1 2 3 4 5 A Selecting Sources with the Menus Press MENU repeatedly to select the SETUP menu. PRG POWER Use the Up/Down arrow to select SOURCE MENU, then press the Right arrow. Use the Up/Down arrow to choose MAIN SOURCE or PIP SOURCE option, press the Right arrow. CABLE SURF VCR AUX TV MUTE FLASHBK CHANNEL VOLUME Use Up/Down arrow to select ANTENNA/CABLE, Video 1, or Video 2. After you have selected viewing sources for the Main picture screen and the smaller PIP inset, press QUIT to remove menus and return to TV viewing. Using TV/VCR SOURCE to Choose Viewing Sources Press TV/VCR SOURCE repeatedly to scroll through the available sources: ANTENNA/CABLE, VIDEO 1, VIDEO 2. With the smaller PIP inset picture on-screen, press PIP Ch repeatedly to toggle between Main Picture channel tuning mode and PIP inset channel tuning mode. (Pressing ENTER reveals what channel tuning mode the TV is in shown by the "blinking" on-screen display.) No extra equipment required for PIP source.

This TV has two tuners which allows the viewer to see two different channels at the same time; one channel on the Main picture and another channel on the PIP inset. 1 4 7 0 CHANNEL 2 5 8 3 6 9 ENTER 2/3 5 2/3 A 1 2/3 MENU QUIT PIP PIP ch FREEZ CC TV/VCR SOURCE RECORD PAUSE TIMER PLAY REWIND STOP FFWD Mini glossary ANTENNA/CABLE VIDEO 1, 2 TV/VCR SOURCE The source from the ANTENNA/CABLE jack. The equipment connected to the video input jacks on the back or front of the TV: VCR, DVD, camcorder etc. The key on the remote control providing direct access to available sources. PAGE 24 206-3591 Setting the Video Menu Options VIDEO CONTRAST BRIGHTNESS COLOR TINT SHARPNESS COLOR TEMP EZ PICTURE Customize the picture to your personal viewing preferences MENU Move Next MENU Adjust CONTRAST 64% 1 2 With the VIDEO menu on-screen, use the Up/Down arrow to select an option like EZ Picture, press the Right arrow to go to the EZ Picture menu selections.

Using the Up/Down arrow, select a Video menu feature. Your options are: Contrast: Changes the amount of difference between black levels and white levels in your picture. PRG POWER CABLE SURF VCR AUX TV MUTE FLASHBK CHANNEL VOLUME VOLUME Brightness: Increases or decreases the amount of white in your picture.



[You're reading an excerpt. Click here to read official ZENITH C27C41T user guide](http://yourpdfguides.com/dref/340960)
<http://yourpdfguides.com/dref/340960>

Color: Adjusts levels of all colors. Tint: Adjusts the relative amounts of the colors red and green in your picture.

Sharpness: Raises or lowers the definition of the picture. The lower the level, the softer the image will appear. Color Temperature: Changes the overall picture appearance. Options are: Warm, Medium, Cool. EZ Picture: Sets your viewing preference based on the viewed image's setting. Options are: Custom, Normal, Movie, Digital Pres, Video Game, Sports, Weak Signal, Night Time. 1 4 CHANNEL 2 5 8 3 6 9 ENTER 1/2/3 7 0 MENU QUIT 3 1/3 1/2/3 PIP PIP ch FREEZ CC TV/VCR SOURCE 3 RECORD PAUSE TIMER PLAY REWIND STOP FFWD 3 After you have used the Up/Down and Left/Right arrows to select and adjust the VIDEO menu options to your preference, press QUIT to return to TV viewing. Mini glossary Custom Preset The settings you have changed to your personal preferences. Select this option to reset the video menu settings to their original levels. 206-3483 PAGE 25 Setting Audio Menu Options AUDIO BASS Personalize the sound coming from your Entertainment Machine TREBLE BALANCE AUDIO MODE FRONT SURR EZ SOUNDRITE SPEAKERS EZ SOUND MENU Move Next Menu Adjust 1 2 With the AUDIO menu selected and the Audio Mode option highlighted, press the Right arrow.

Using the Left/Right arrows, select your preferred settings. Choose from Mono, Stereo, or SAP. Audio Menu Options Include: · Bass: Increases/decreases lower-end sounds. · Treble: Increases/decreases higher-end sounds. · Balance: Allows you to put the sound more to the left or right channel. · Audio Mode: Chooses sound: Stereo, Mono, 2nd Audio/SAP. · Front Surr: Turns the front surround sound on or off. @@ · Speakers: Turns the regular speakers on or off.

@@@@@@@@@@@@@@@@@@@@The number of hours blocked are specified. @@@@The ratings are based mainly on the ages of children.

Overview To insure complete coverage for all TV programs, (movies and regular TV shows) choose a rating for "MPAA", from the selections below AND choose ratings from the "TV Parental Guideline Rating System" on the next page, using the Age Block option for General Audiences, and for Children. In addition to those, you may wish to include additional restrictions from the Content Block menu. See the Parental Control menu, and submenus example on the next page. Things to Consider before Setting Up Parental Control Determine which rating you consider acceptable to the viewer. @@@@ @@@@How many hours do you want Parental Control to be active? You can set the Hours option for up to 99 hours.

Select a secret password; in the Set Password option. Use the NUMBER keys on the remote. @@Do you want Parental Control to be active all the time?

@@@@@@@@@@@@@@@@@@@@Not for children under age 17. Strong elements of sex and/or violence. Not for children under age 17 under any circumstances.

Strong sexual content. @@@@choose an acceptable rating. @@@@- Set your 4-number password - - use the NUMBERS on the remote. - Set the Lock On/Off option to either on or off. @@Use the Up/Down arrow to select an option, like F. @@Use the Up/Down arrow to select an acceptable rating like TV-Y7. @@@@ @@@@Adults only, may contain: Strong Dialog, Bad Language, Sex, and Violence Scenes. CHILDREN'S CLASSIFICATIONS TV-Y TV-Y7 Children Children 7 and over Considered suitable for all children under 7 years old. Considered suitable for children over 7, may contain Fantasy Violence Scenes. PAGE 28 206-3591 Parental Control Menu Structure PARENTAL CTRL AUX.

BLOCK MPAA AGE BLOCK CONTENT BLK SET HOURS SET PASSWORD LOCK ON/OFF UNBLOCKED BLOCKED PARENTAL CTRL AUX. BLOCK MPAA AGE BLOCK CONTENT BLK SET HOURS SET PASSWORD LOCK ON/OFF UNBLOCKED G and above PG and above PG-13 and above R NC-17 X MENU NEXT MENU MOVE NEXT MOVE NEXT MENU BACK PARENTAL CTRL AUX. BLOCK MPAA GENERAL CHILDREN TO SET PRESS AGE

BLOCK CONTENT BLK SET HOURS SET PASSWORD LOCK ON/OFF UNBLOCKED TV-G and above TV-PG and above TV-14 and above TV-MA UNBLOCKED TV-Y and above TV-Y7 MOVE NEXT MENU BACK PARENTAL CTRL AUX. BLOCK MPAA AGE BLOCK DIALOG TO SET PRESS LANGUAGE SEX SCENES VIOLENCE F VIOLENCE NO RATING UNBLOCKED TV-PG and above TV-13 and above CONTENT BLK SET HOURS SET PASSWORD LOCK ON/OFF MOVE NEXT MENU BACK UNBLOCKED TV-PG and above TV-14 and above TV-MA PARENTAL CTRL AUX. BLOCK MPAA AGE BLOCK CONTENT BLK UNBLOCKED TV-Y7 UNBLOCKED BLOCKED SET HOURS SET PASSWORD LOCK ON/OFF 00 Hours MOVE NEXT MENU BACK PARENTAL CTRL AUX. BLOCK MPAA AGE BLOCK CONTENT BLK SET HOURS PARENTAL CTRL AUX. BLOCK MPAA AGE BLOCK CONTENT BLK SET HOURS SET PASSWORD LOCK ON/OFF TO SET SET PASSWORD LOCK ON/OFF ENTER CODE: ---- ON OFF MOVE NEXT MENU BACK MOVE NEXT MENU BACK 206-3529 PAGE 29 EZ Timer: Sleep and On/Off Timers Set the Sleep Timer to automatically turn the TV off, after the preset time has expired On/Off Timer to turn TV on and off each day at the specified time SPECIAL EZ TIMER CH. LABELS XDS DISPLAY PIP MENU EZ DEMO EZ HELP TO SET TIMERS EZ TIMER SLEEP TIMER ON TIME OFF TIME ON/OFF TIM. 8:00 AM PM FLSHBK MENU NEXT MENU MOVE NEXT MOVE NEXT MENU BACK Sleep Timer Direct Access A Press TIMER to place the Sleep Timer menu on the screen. Press TIMER repeatedly to scroll through the available sleep timer settings and choose one of the preset turn-off times.

Options are: Off, 10, 20, 30, 60, 90, 120, 180, or 240 minutes. You can also set the Sleep Timer by using the menu. Using the EZ Timer Menu PRG POWER CABLE SURF VCR AUX TV MUTE FLASHBK CHANNEL B On Time With the EZ Timer menu selected, use Up/Down arrows to choose On Time, then press the Right arrow. Use the NUMBER keypad or the Left/Right arrows to pick a time for the TV to automatically turn itself on each day. Use FLSHBK to choose AM or PM.

Off Time With the EZ Timer menu selected, use Up/Down arrows to choose Off Time, then press the Right arrow. Use the number keypad or the Left/Right arrows to pick a time for the TV to automatically turn itself off each day. Use FLSHBK to choose AM or PM. On/Off Timer With the EZ Timer menu selected, use Up/Down arrows to choose On/Off Timer, then press the Right arrow. Choose either: On-TV will automatically turn itself on and off each day at the specified times.

Off-TV will not turn itself on and off each day, but the turn on and turn off times will be retained in memory for future use. B VOLUME VOLUME CHANNEL 1 4 7 0 2 5 8 3 6 9 ENTER B C B A B B MENU QUIT PIP PIP ch FREEZ CC TV/VCR SOURCE RECORD PAUSE TIMER PLAY REWIND STOP FFWD C Press QUIT to return to TV viewing. PAGE 30 206-3591 Selecting Channel Labels Pick a preset label to help identify the network you just tuned to or are currently watching SPECIAL CH 32-UPN 2:45 PM STEREO PIP EZ TIMER CH.

Off-TV will not turn itself on and off each day, but the turn on and turn off times will be retained in memory for future use. B VOLUME VOLUME CHANNEL 1 4 7 0 2 5 8 3 6 9 ENTER B C B A B B MENU QUIT PIP PIP ch FREEZ CC TV/VCR SOURCE RECORD PAUSE TIMER PLAY REWIND STOP FFWD C Press QUIT to return to TV viewing. PAGE 30 206-3591 Selecting Channel Labels Pick a preset label to help identify the network you just tuned to or are currently watching SPECIAL CH 32-UPN 2:45 PM STEREO PIP EZ TIMER CH.



[You're reading an excerpt. Click here to read official ZENITH](#)

[C27C41T user guide](#)

<http://yourpdfguides.com/dref/340960>

LABELS XDS DISPLAY PIP MENU EZ DEMO EZ HELP CH 20 USA CH 2-CBS Closed Captions scroll across the screen as an aid to viewers and the hearing impaired...viewer Channel/Time Display with Channel Labels MENU NEXT MENU MOVE NEXT 1 2 3 4 Using the NUMBER keypad or the CHANNEL Up/Down arrow, pick the channel you want to label. PRG POWER Press MENU repeatedly to choose the SPECIAL menu. CABLE VCR AUX TV MUTE Use the Up/Down arrow to select CH.

LABELS, then press the Right arrow. Select a Label for the Channel Press the Down arrow key (each press will bring up a different label) to go through the alphabetical listing, starting with A B - C - D, etc. @@@@ Some networks display their own channel labels. @@@@ Use the Up/Down arrow to choose: On, or Off. @@@@ Use the Up/Down/Left/Right arrows to select and change the PIP menu options. · Contrast: Changes the amount of difference between black levels and white levels in your picture. · Brightness: Increases or decreases the amount of white in your picture. · Color: Adjusts levels of all colors. · Tint: Adjusts the relative amounts of the colors red and green in your picture. · Size: Selects the PIP inset picture size.

Options are: Large, Small. 1 4 7 PRG POWER CABLE SURF VCR AUX TV MUTE FLASHBK CHANNEL VOLUME CHANNEL 2 5 8 3 6 9 ENTER 3 1 2/3 0 2/3 4 2/3 MENU QUIT 4 Press QUIT to remove menu and return to TV viewing. PIP PIP ch FREEZ CC TV/VCR SOURCE RECORD PAUSE TIMER PLAY REWIND STOP FFWD Turn to the next page for a more detailed description of the PIP feature. 206-3591 PAGE 33 Two-Tuner PIP Overview PIP = Picture-In-Picture Think of PIP as a mini TV screen superimposed onto your main TV screen Press PIP on the remote to place the PIP inset on the screen, press PIP again to remove it YOUR PICTURE-IN-PICTURE FEATURE The Picture-In-Picture (PIP) function allows you to put a smaller picture, called the "inset," on the bigger screen, or the "main" picture. Normally you would need some other piece of equipment, like a VCR, to act as a tuner to receive and display a second channel at the same time.

Your TV eliminates that need by giving you two tuners on one TV, on the Antenna/Cable source. PIP is always available, no matter what equipment you have. Don't want to miss any of the big game, but hate commercials? Just put the game in the PIP inset, and Surf your favorite channels on the main picture screen.

WORKING WITH PIP Just like your Entertainment Machine's main screen, PIP will need a source to take its image from. Set the main screen source to Antenna/Cable, then set the PIP source to Antenna/Cable, as an example.

Then if you use the TV's tuner to pick your channels, you can enjoy 2-tuner PIP; channel scan capability for both the main screen and the PIP inset. PIP can be used in any picture mode. Put Antenna/Cable in the inset while you watch a video tape, from a VCR connected to Video 1. Have a DVD disk playing in the PIP inset, while you watch a videotape on the main screen. PIP Inset Picture Main Picture SETUP EZ PROGRAM ADD/DEL/SURF EZ CLOCK CAPTIONS CAPTION/TEXT LANGUAGE SOURCE MENU MAIN SOURCE PIP SOURCE TO SET PRESS ANTENNA/CABLE VIDEO 1 VIDEO 2 SOURCE MENU SOME TYPICAL PIP/MAIN SCREEN VIEWING SETUPS 1. You want to watch a videotape, but keep scanning for another movie or game. Set the PIP source to Video 1, or 2 and you can watch the VCR and TV, swapping between the two. 2. You want to watch your favorite live program on Antenna/Cable on the main picture and when a commercial break appears, swap to the PIP inset; which has a videotape in the VCR ready to play, or Surf your favorite channels using the Antenna/Cable source for the PIP inset. MENU NEXT MENU MOVE NEXT MOVE MENU BACK Use the Source Menu to choose Main screen and PIP sources.

If no equipment is connected to a source you select for the PIP inset, or if it is turned off, the PIP inset will be black. Mini glossary TUNER A/V SOURCE A device that picks up broadcast signals and turns them into picture and sound. Other equipment connected to the TV Audio/Video source inputs on the TV back or front connections panel; Video 1 or Video 2. PAGE 34 206-3591 Using the PIP Feature Using two-tuner, Picture-in-Picture (PIP) features PIP Inset Picture Press PIP to turn PIP on and off. Move PIP Around Screen Press Right/Left arrows to move the PIP inset to the other corners of the screen. Main Screen Picture With PIP off, press FREEZ to place the Main screen picture in the PIP inset and "freeze" the image thereby turning PIP on. (A good way to freeze the image so you can write down phone numbers etc.) CH 32-UPN 2:45 PM STEREO PIP Musical Note Symbol Indicates if PIP or the Main screen is the sound source. (In this case sound is from Main screen source.) To change sound source, press QUIT repeatedly with the Channel/Time/Audio Display on-screen.

Channel/Time/Audio Source Display Press ENTER to show display. Shows source for: Main picture, PIP, and sound source (Main or PIP). Channel Tuning Mode Press PIP ch repeatedly to switch channel tuning between Main screen and PIP inset. Flashing shows channel tuning mode; in this case, channel tuning is for the PIP inset. (When you press Channel Up/Down, the channels in the PIP inset change.

) CH 2-CBS Swap Main Picture with PIP Press the Up/Down arrows repeatedly to swap the images between the Main picture and PIP inset. Main Picture Source In Main picture channel tuning mode, press TV/VCR SOURCE to change the source to ANTENNA/CABLE, Video 1, or Video 2. (Or, use the Setup Menu.) PIP Source In PIP channel tuning mode, press TV/VCR SOURCE to change the source for the PIP inset to ANTENNA/CABLE, Video 1, or Video 2. (Or, use the Setup Menu.

) PIP Key Functions FLASHBK (FLASHBACK) Returns to the last channel viewed. POWER ENTER Shows Channel/Time Display on Main screen. Up/Down/Left/Right Arrows UP/DOWN ARROWS Swap Main and PIP sources LEFT/RIGHT ARROWS Move PIP inset around screen. QUIT PRG CABLE SURF VCR AUX TV MUTE FLASHBK 0 ENTER CHANNEL VOLUME VOLUME CHANNEL MENU 3 6 9 1 4 7 0 2 5 8 QUIT Chooses sound source. (With Channel/Time Display on-screen.) PIP PIP ch FREEZ CC TV/VCR SOURCE ENTER MENU QUIT RECORD PAUSE TIMER PIP PIP ch FREEZ CC TV/VCR SOURCE FREEZ PIP On: Freezes image in PIP inset. PIP Off: Freezes Main screen picture in PIP inset and turns PIP on. TV/VCR SOURCE Chooses Main picture and PIP sources. PIP CH Chooses the channel tuning mode; Main screen channels or PIP channels. RECORD PAUSE TIMER PLAY REWIND STOP FFWD PIP Turns PIP on and off.

206-3529 PAGE 35 EZ Demo Menu SPECIAL Your Entertainment Machine can show you the menus available EZ TIMER CH.



[You're reading an excerpt. Click here to read official ZENITH C27C41T user guide](http://yourpdfguides.com/dref/340960)
<http://yourpdfguides.com/dref/340960>

LABELS XDS DISPLAY PIP MENU EZ DEMO EZ HELP OFF ON MENU NEXT MENU MOVE NEXT 1 2 3 Press MENU repeatedly to select the SPECIAL menu. Use the Up/Down arrow to select the EZ DEMO option, then press the Right arrow. Use the Up/Down arrow to choose either: On; then press ENTER. EZ Demo will continue to run (even if the TV is turned off and on again) until it is turned off in the SPECIAL menu. Off: EZ Demo will not be active. Press QUIT to remove menu and to return to TV viewing. PRG POWER CABLE SURF VCR AUX TV MUTE FLASHBK CHANNEL VOLUME VOLUME CHANNEL 4 1 4 7 0 2 5 8 3 6 9 ENTER 3 2/3 4 2 Even if the TV is turned off, the EZ Demo feature will continue to operate when the TV is turned on again. 1 2/3 MENU QUIT PIP PIP ch FREEZ CC TV/VCR SOURCE The only way to turn EZ Demo off is to select Off, in the SPECIAL menu. RECORD PAUSE TIMER PLAY REWIND STOP FFWD Mini glossary EZ DEMO Feature provides an automatic demonstration of the on-screen menus on your Entertainment Machine.

See and learn what features are available to you as EZ Demo cycles through the on-screen menus. PAGE 36 206-3591 Using the EZ Help Menu SPECIAL EZ TIMER CH. LABELS XDS DISPLAY PIP MENU EZ DEMO Need Help? Go to the on-screen EZ Help menu and use it to solve the problems listed below TO SET PRESS EZ HELP MENU NEXT MENU MOVE NEXT 1 2 3 Press MENU repeatedly to select the SPECIAL menu on your screen. Use the Up/Down arrow to select the EZ HELP option, then press the Right arrow. Use the (Up/Down/Right/Left arrow keys) as described onscreen to select the options below and correct the problem.

PRG POWER CABLE SURF VCR AUX TV MUTE FLASHBK CHANNEL VOLUME VOLUME · If you do not have any watchable channels: Do a channel search. · If you want to add or delete a channel: Adds or Deletes channels. · If your screen is stained: Use Degaussing. · If you have a color problem: Use viewing option for picture setting. · If there is a volume difference between channels: Turn on Soundrite so sound level is maintained. · If there is noise in picture or picture is shaky: Message shows some common problem solutions. CHANNEL 1 4 2 5 8 3 6 9 ENTER 3 1 2/3 7 0 2/3 4 2/3 MENU QUIT PIP PIP ch FREEZ CC TV/VCR SOURCE RECORD PAUSE TIMER PLAY REWIND STOP FFWD 4 Press QUIT to remove the menu and return to TV viewing. EZ Help offers solutions to common problems on one convenient menu. 206-3591 PAGE 37 Programming the Remote Set up your remote to operate other IR controlled brand name devices: VCRs, Cable Boxes, TVs, Satellite Receivers, DVD Players, Audio CD Players, Audio Tape Decks, Audio Tuners and Amplifiers etc. See listing on pages 42/43 Indicator Light 1 2 3 4 5 6 7 Turn on the device you want to program. On the chart on page 42/43, find the type of device you're programming, and then find the brand name. Make a note of the three-number code, you'll need it soon. Press and hold PRG. It's recessed so it doesn't get pushed accidentally. Use a small, blunt object.

When the indicator light turns on, you can release PRG. Push the key name with the type of device you're programming (VCR, CABLE, AUX, TV). Using the NUMBER keypad, enter the three-number code you found on page 42/43. Press ENTER to save the code. (The indicator light will flash 3 times, then turn off to indicate the code is valid.) Point the remote at the device and push POWER. It should turn off. If not, try the other codes listed and continue from step three. Note: To reset remote to factory settings, enter 9-1-1, in Step 5. Note: After programming, be sure to press the mode key first to operate the device you have just programmed.

Programming your Zenith remote may allow you to use one remote to work up to 7 different devices. Not all devices will work with your Zenith remote control. 3 PRG POWER CABLE SURF VCR AUX TV MUTE 7 4 FLASHBK CHANNEL VOLUME VOLUME CHANNEL 5 1 4 7 0 2 5 8 3 6 9 ENTER 6 QUIT MENU PIP PIP ch FREEZ CC TV/VCR SOURCE RECORD PAUSE TIMER PLAY REWIND STOP FFWD Mini glossary PROGRAMMING PRG DEVICE Procedure to set up remote to operate other equipment. Programming mode key. Infra-red remote controllable electronic accessory equipment.

PAGE 38 206-3483 Amplifier Volume Override Control the volume on your home audio system without changing modes 1 2 3 4 Find the code that operates your amplifier. Test it to make sure it's the correct one by following the procedure in "Programming Your Remote" on the previous page. Program your audio system into one of the available AUX modes: Aux, Aux+1, Aux+2, or Aux+3. Press and hold PRG on your remote until the indicator light stays lit, then release. Press 4-9-9; then ENTER on the remote.

The indicator light will flash three times the code was accepted. 3 PRG POWER Indicator Light CABLE SURF VCR AUX TV MUTE FLASHBK 2 CHANNEL VOLUME VOLUME CHANNEL 1 2 5 8 3 6 9 ENTER Audio system volume/mute now appears in all modes. Note: You can also program Cable Box Volume and Mute control (if available) into your cable box mode (CABLE or AUX mode) by repeating the steps for programming on the previous page but entering 3-9-9, instead of a brand code, then pressing ENTER. 4 7 0 4 MENU QUIT PIP PIP ch FREEZ CC TV/VCR SOURCE To put everything back to normal, reprogram the mode from Step 3 with the original brand code. If you can't find the code for your amplifier, use the Auto Find feature on page 41. RECORD PAUSE TIMER PLAY REWIND STOP FFWD Mini glossary AMPLIFIER CABLE BOX VOLUME/MUTE Audio device which sends sound to speakers, like an Audio Tuner, Receiver, or Amplifier. See Audio Tuners/Amp list on page 43. Some cable boxes have volume controls. 206-3591 PAGE 39 Aux-1, Aux-2, Aux-3 Control up to seven different devices with your remote Indicator Light 1 2 3 4 5 6 7 Refer to the chart on page 42/43 to find the type and brand name of the device you're programming. Press and hold down PRG with a small blunt object until the indicator light turns on, then release PRG.

Press AUX and the 1 on the NUMBER keypad at the same time (for AUX +1). 2 3 PRG POWER 6 CABLE SURF VCR AUX TV MUTE FLASHBK CHANNEL VOLUME VOLUME Using the NUMBER keypad, enter the three-number code for the device you've selected. Press ENTER to save the code. With the device turned on, point the remote at it and press POWER. It should turn off. Repeat the steps for AUX+2, and AUX+3. MENU CHANNEL 1 4 7 0 2 5 8 3 6 9 ENTER 4 5 QUIT PIP PIP ch FREEZ CC TV/VCR SOURCE RECORD PAUSE TIMER PLAY Programming your Zenith remote may allow you to use one remote to work up to 7 different products or devices.



[You're reading an excerpt. Click here to read official ZENITH C27C41T user guide](http://yourpdfguides.com/dref/340960)
<http://yourpdfguides.com/dref/340960>

Some devices may not work with your Zenith remote control. REWIND STOP FFWD Mini glossary AUX Auxiliary equipment. Can be any equipment which does not have a dedicated key on your remote like Cable or VCR.

Typically a second VCR, stereo system, audio tape deck, etc. PAGE 40 206-3483 Remote Control Auto Find Use Auto Find to automatically search and try all possible brand codes 1 2 3 4 5 Turn on the device you want the remote to control. Press and hold PRG until the indicator light turns on, then release PRG.

Press the key for the device you are trying to program (CABLE, VCR, AUX, TV). Press 0-0-0 (zero-zero-zero), then press ENTER right away. Aim the remote at the correct device and push the POWER key (The indicator light will turn off while the POWER key is pressed). Allow a second to pass, then push the POWER key again. Repeat until the device turns off. Push ENTER to save the code (The indicator light will flash 3 times and then turn off).

Press POWER to turn the device back on.

2 PRG POWER Indicator Light CABLE SURF VCR AUX TV MUTE 5/7 3 FLASHBK CHANNEL VOLUME VOLUME CHANNEL 1 4 7 2 5 8 3 6 9 ENTER 6 7 4 0 4/6 QUIT MENU PIP PIP ch FREEZ CC TV/VCR SOURCE RECORD PAUSE TIMER You can quickly get out of Auto Find by pressing PRG. If the indicator light stays on while you press Power instead of turning off, all the codes have been tried and your device can't be controlled. PLAY REWIND STOP

FFWD Mini glossary AUTO FIND Another way of finding a brand code for controlling auxiliary equipment such as a VCR, DVD player, etc. that is not available through the regular remote brand code programming method. 206-3483 PAGE 41 Programming Codes Find the codes you need to program your remote. On this page: TVs, VCRs, and Cable Boxes TVs Admiral

. . . 121 Bell & Howell 121 Citizen . . .

.

121 Curtis Mathis 121 Daewoo .

. 149 Elektra

. . . . 121 Kurazi

. . . . 121 Lodgent. .

.

. 121 Logik

121 Majestic 121 Memorex . . .

. . . . 121 Montgomery Ward .

121 Teknika

. . . 121 Telerent.

. 121 Signature 2000 . . . 121 XR-1000

. 121 Zenith

. . . . 101 121 149 152 Funai TV/VCR.

. . . 154 Goldstar TV/VCR . . 153 172 Symphonic TV/VCR 154 Zenith TV/VCR . . . 150 153 154 172 TV/VCR Combination Codes Adventura TV/VCR . 154 Daewoo TV/VCR .

. 148 VCRs Admiral 261 Akai . .

.

. . . 292 717 718 719 720 Audio Dynamics . .

726 Bell & Howell 247 Broksonic

221 250 255 729 Candle 727 Canon . .

.

. . 704 Capeheart . . .

. . . 728 Citizen

. 727 Craig

212 Curtis Mathes . . . 259 266 725 727 Daewoo . .

.

244 246 248 254 703 729 Daytron 246 DBX . . .

. 726 Electrochrome . . .

. 730 Emerson

. . . 203 250 722 731 221 243 293 721 729 730 732 General Electric . .

216 220 266 282 701 702 725 Go Video 256 262 263 700 Goldstar . . .

. . . . 253 Harmon Kardon . . . 296 Hitachi . . .

.

257 270 273 292 705 706 707 708 J.C. Penny . . .

. . . 268 726 Jensen

. 292 JVC

. 224 225 258 268 292 299 726 Kenwood

. . . 268 292 726 727 Magnavox . .

. . . . 275 Marantz

. 267 268 726 727 Memorex 212 298 MGA . .

.
 297 730 *Mitsubishi* . .
 276 277 278 279 280 296 297 730 *Montgomery Ward* 216 219 249 291 730 *MultiTech*
 727 *NEC*
 267 268 269 281 292 709 726 *Orion*

 250 *Panasonic* 245 251 259 713 714 715 716 *Pentax*
 708 727 *Philco*
 275 *Pioneer*

 210 282 726 *Portland* 246 727 *ProScan*
 216 260 266 282 725 *Quasar*
 259 295 *Radio Shack*
 213 265 730 *RCA*
 216 240 260 283 286 708 725 220 242 266 284 287 710 228 249 282 285 288 711 *Samsung*
 220 230 *Sansui*
 289 292 709 726 *Sanyo*

 212 247 294 *Scott* 243 290 729 *Sears*
 211 212 213 265 274 *Sharp*

 261 730 *Signature 2000*
 216 219 249 *Sony* 232 723 724 *Sylvania*
 275 297 *Tatung*
 268 292 *Teac*

 268 *Teknika*

 272 *Toshiba*
 213 274 290 297 *Vector Research* 726 727 *Victor*

 726 *Video Concepts* 726 727 *XR - 1000*

 243 *Yamaha* 726 *Zenith*

 201 224 225 229 *Realistic*
 212 213 265 730 *Saisho*

 722 *Salora*
 297 *Fisher*

 211 212 213 247 265 274 *Cable Boxes Allegro* 358 362 *Allegro A-B Switch* 361 *Archer*
 325 *Century*
 325 *Citizen*

 325 *Comtronic* 326 *Garrard*
 325 *Gemini*
 305 331 338 *General Electric*
 367 *General Instrument* 304 305 306 307 308 309 310 318 *Hamlin*
 302 303 345 365 366 *Jasco*
 325 *Jerrold*
 304 307 308 309 310 318 360 363 *Kale Vision*
 335 *Macom*
 321 *Magnavox*

 327 334 *NSC*
 335 339 368 369 370 *Oak*

. 311 332 342 Panasonic 313 320 Philips . . .
 325 327 347 350 352 354 355 Pioneer
 . . . 315 343 RCA . . .

 . . . 341 Regency
 329 Samsung 326 335 Scientific Atlanta 316 323 336 337 364 Teleview . . .
 326 Texscan

 . 339 356 371 Tocom 317 318 346 Unika . . .
 325 348 362 Universal . . .
 325 358 362 Vid Tech . . .

 . 340 Video Way 349 Viewstar . . .
 327 354 355 372 Zenith HT-2000 . . . 353 Zenith PM . . .
 . . . 374 Signal . . .

 . . 326 SL Marx

 326 Sprucer 313 Standard Comp . . .
 . 335 Stargate
 . . . 326 379 PAGE 42 206-3602 Programming Codes Find the codes you need to program your remote. On this page: Cable, Satellite, CD Players, Tape
 Decks and Audio Tuners and Amplifiers.
 Satellite Receivers Alphastar 516 Chaparral . . .
 501 502 Cheyenne
 . 502 Dishnet
 515 Drake
 503 General Electric

 . 510 517 General Instrument 504 505 Hitachi 519 520 Hughes Network . . .
 . 514 JVC

 . 518 Macom 314 Magnavox
 521 Phillips
 . . . 521 PrimeStar

 513 ProScan 510 517 RCA DSS
 373 RCA

 510 517 Realistic
 . . 506 Sierra I

 502 Sierra II 502 Sierra III
 502 Sony

 511 STS1
 507 STS3
 508 Toshiba

 . . 509 512 Uniden

 522 United 344 Zenith Drake
 . . . 312 330 Zenith Satellite
 328 351 378 500 DVD Players JVC
 965 Mitsubishi

 . 964 Pioneer 963 Sony

 962 Toshiba
 961 Zenith

..... 960 Audio CD Players ADC

 . 940 ADO
 939 Aiwa
 938 Akai

 . 937 Denon
 935 Dynatech

 . 953 Emerson 952 Fisher ..

 .. 438 933 951 GE ...
 932 Goldstar ..

 460 Hitachi
 ... 950 JVC ..

 ... 949 954 Kenwood 441 931 948 Luxman .

 930 Magnavox ...
 ... 421 422 433 434 Marantz ..

 . 929 947 MCS

 . 928 Mitsubishi 927 Nakamichi ...
 ... 925 926 Onkyo ..

 . 923 924 946 Optimus 920 921 922 Panasonic ..

 431 432 945 Phillips
 .. 421 433 434 Pioneer ...

 431 435 944 Quasar 432 Radio Shack ..

 ... 431 441 RCA
 ... 437 943 Sanyo ..

 .. 438 439 Sears

 . 936 Sharp
 441 442 Sherwood
 . 449 Sony ...
 420 443 444 445 934 Soundesign .



[You're reading an excerpt. Click here to read official ZENITH
 C27C41T user guide](http://yourpdfguides.com/dref/340960)

<http://yourpdfguides.com/dref/340960>