




# Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for ZENITH C34W23-2. You'll find the answers to all your questions on the ZENITH C34W23-2 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

**User manual ZENITH C34W23-2**  
**User guide ZENITH C34W23-2**  
**Operating instructions ZENITH C34W23-2**  
**Instructions for use ZENITH C34W23-2**  
**Instruction manual ZENITH C34W23-2**

**Operating Guide | Warranty**

Model Numbers | C32V23, C36V23, C34W23 | Digital TVs

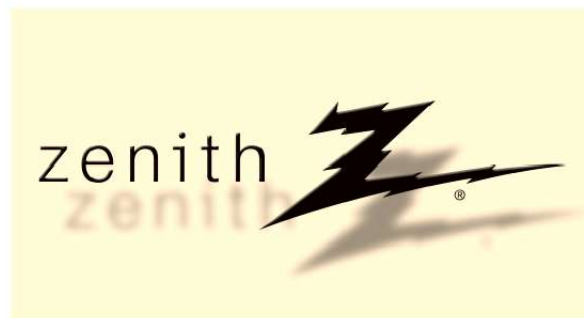

© Copyright 2002, Zenith Electronics Corporation



[You're reading an excerpt. Click here to read official ZENITH C34W23-2 user guide](http://yourpdfguides.com/dref/340985)  
<http://yourpdfguides.com/dref/340985>

**Manual abstract:**

©1992 - 1997 Dolby Laboratories, Inc. @@@@ \_\_\_\_\_ WARNING RISK OF ELECTRIC SHOCK DO NOT OPEN WARNING: TO REDUCE THE RISK OF ELECTRIC SHOCK DO NOT REMOVE COVER (OR BACK). NO USER SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL. The lightning flash with arrowhead symbol, within an equilateral triangle, is intended to alert the user to the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons. The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance. WARNING: TO PREVENT FIRE OR SHOCK HAZARDS, DO NOT EXPOSE THIS PRODUCT TO RAIN OR MOISTURE. POWER CORD POLARIZATION: CAUTION: TO PREVENT ELECTRIC SHOCK, MATCH WIDE BLADE OF PLUG TO WIDE SLOT, FULLY INSERT. ATTENTION: POUR ÉVITER LES CHOCS ÉLECTRIQUES, INTRODUIRE LA LAME LA PLUS LARGE DE LA FICHE DANS LA BORNE CORRESPONDANTE DE LA PRISE ET POUSSER JUSQU'AU FOND. NOTE TO CABLE/TV INSTALLER: This reminder is provided to call the cable TV system installer's attention to Article 820-40 of the National Electric Code (U.

S.A.). @@@@ @@@@ If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures: · Reorient or relocate the receiving antenna. · Increase the separation between the equipment and receiver.

· Connect the equipment into an outlet on a circuit different from that to which the receiver is connected. · Consult the dealer or an experienced radio/TV technician for help. CAUTION: Do not attempt to modify this product in any way without written authorization from Zenith Electronics Corporation. Unauthorized modification could void the user's authority to operate this product. COMPLIANCE: The responsible party for this product's compliance is: Zenith Electronics Corporation, 2000 Millbrook Drive, Lincolnshire, IL 60069, USA · Phone: 1-847-941-8000.

Entertainment Machine™ is a trademark of Zenith Electronics Corporation © Copyright 2002 Zenith Electronics Corporation IMPORTANT SAFETY INSTRUCTIONS Important safeguards for you and your new product Your product has been manufactured and tested with your safety in mind. However, improper use can result in potential electrical shock or fire hazards. To avoid defeating the safeguards that have been built into your new product, please read and observe the following safety points when installing and using your new product, and save them for future reference. Observing the simple precautions discussed in this operating guide can help you get many years of enjoyment and safe operation that are built into your new product. This product complies with all applicable U.S. Federal safety requirements, and those of the Canadian Standards Association. 1. Read Instructions All the safety and operating instructions should be read before the product is operated. 9.

Attachments Do not use attachments not recommended by the product manufacturer as they may cause hazards. 2. Follow Instructions All operating and use instructions should be followed. 10. Ventilation Slots and openings in the cabinet are provided for ventilation and to ensure reliable operation of the product and to protect it from overheating, and these openings must not be blocked or covered. The openings should never be blocked by placing the product on a bed, sofa, rug, or other similar surface. This product should not be placed in a built-in installation such as a bookcase or rack unless proper ventilation is provided or the manufacturer's instructions have been adhered to. 3. Retain Instructions The safety and operating instructions should be retained for future reference. 4.

Heed Warnings All warnings on the product and in the operating instructions should be adhered to. 5. Cleaning Unplug this product from the wall outlet before cleaning. Do not use liquid cleaners or aerosol cleaners. Use a damp cloth for cleaning. 11. Power Sources This product should be operated only from the type of power source indicated on the marking label. If you are not sure of the type of power supply to your home, consult your product dealer or local power company. For products intended to operate from battery power, or other sources, refer to the operating instructions. 6.

Water and Moisture Do not use this product near water for example, near a bath tub, wash bowl, kitchen sink, or laundry tub, in a wet basement, or near a swimming pool. 12. Power Cord Polarization This product is equipped with a polarized alternating - current power plug (a plug having one blade wider than the other). This plug will fit into the power outlet only one way. This is a safety feature. If you are unable to insert the plug fully into the outlet, try reversing the plug. If the plug should still fail to fit, contact your electrician to replace your obsolete outlet. Do not defeat the safety purpose of the polarized plug. 7. Accessories, Carts, and Stands Do not place this product on a slippery or tilted surface, or on an unstable cart, stand, tripod, bracket, or table.

The product may slide or fall, causing serious injury to a child or adult, and serious damage to the product. Use only with a cart, stand, tripod, bracket, or table recommended by the manufacturer, or sold with the product. Any mounting of the product should follow the manufacturer's instructions, and should use a mounting accessory recommended by the manufacturer. 13. Power Cord Protection Power-supply cords should be routed so that they are not likely to be walked on or pinched by items placed upon or against them, paying particular attention to cords at plugs, convenience receptacles, and the point where they exit from the product. 8. Transporting Product A product and cart combination should be moved with care. Quick stops, excessive force, and uneven surfaces may cause the product and cart combination to overturn. (Continued on next page) PORTABLE CART WARNING 206-3706 2-WR-POLZ PAGE 3 IMPORTANT SAFETY INSTRUCTIONS (Continued from previous page) 14. Outdoor Antenna Grounding If an outside antenna or cable system is connected to the product, be sure the antenna or cable system is grounded so as to provide some protection against voltage surges and built-up static charges. Article 810 of the National Electrical Code (U.S.A.), ANSI/NFPA 70 provides information with regard to proper grounding of the mast and supporting structure, grounding of the lead-in wire to an antenna discharge unit, size of grounding conductors, location of antenna-discharge unit, connection to grounding electrodes, and requirements for the grounding electrode.



[You're reading an excerpt. Click here to read official ZENITH C34W23-2 user guide](http://yourpdfguides.com/dref/340985)  
<http://yourpdfguides.com/dref/340985>

Example of Grounding According to National Electrical Code Instructions short-out parts that could result in a fire or electric shock. Never spill liquid of any kind on the product. 19. Servicing Do not attempt to service this product yourself as opening or removing covers may expose you to dangerous voltage or other hazards. Refer all servicing to qualified service personnel. 20.

Damage Requiring Service Unplug this product from the wall outlet and refer servicing to qualified service personnel under the following conditions: a. If the power-supply cord or plug is damaged. b. If liquid has been spilled, or objects have fallen into the product. c. If the product has been exposed to rain or water. d. If the product does not operate normally by following the operating instructions. Adjust only those controls that are covered by the operating instructions as an improper adjustment of other controls may result in damage and will often require extensive work by a qualified technician to restore the product to its normal operation. e.

If the product has been dropped or the cabinet has been damaged. f. If the product exhibits a distinct change in performance. Ground Clamp Antenna Lead in Wire Antenna Discharge Unit (NEC Section 810-20) Grounding Conductor (NEC Section 810-21) Ground Clamps Power Service Grounding Electrode System (NEC Art 250, Part H) Electric Service Equipment NEC - National Electrical Code 21. Replacement Parts 15. Lightning For added protection for this product (receiver) during a lightning storm, or when it is left unattended and unused for long periods of time, unplug it from the wall outlet and disconnect the antenna or cable system. This will prevent damage to the product due to lightning and power-line surges. When replacement parts are required, be sure the service technician has used replacement parts specified by the manufacturer or have the same characteristics as the original part. Unauthorized substitutions may result in fire, electric shock, or other hazards. 22.

Safety Check Upon completion of any service or repairs to this product, ask the service technician to perform safety checks to determine that the product is in proper operating condition. 16. Power Lines An outside antenna system should not be located in the vicinity of overhead power lines or other electric light or power circuits, or where it can fall into such power lines or circuits. When installing an outside antenna system, extreme care should be taken to keep from touching such power lines or circuits as contact with them might be fatal. 23.

Wall or Ceiling Mounting The product should be mounted to a wall or ceiling only as recommended by the manufacturer. The product may slide or fall, causing serious injury to a child or adult, and serious damage to the product. 17. Overloading Do not overload wall outlets and extension cords as this can result in a risk of fire or electric shock. 24.

Heat The product should be situated away from heat sources such as radiators, heat registers, stoves, or other products (including amplifiers) that produce heat. 18. Object and Liquid Entry Never push objects of any kind into this product through openings as they may touch dangerous voltage points or PAGE 4 3-WireRev6/00 Table of Contents Refer to the information below to hook up external equipment and set up the features on your TV. As a aid to installing and setting up your TV, see the Setup Checklist on the next page... Step 1. Hook up external equipment and antenna or cable service wires to the TV. Install batteries in the remote control. After all connections have been made, plug your TV into standard household power, see pages 7 thru 17.

Step 2. Go to page 18 to use EZ Scan. (Search for and memorize all the channels available in your area.) Step 3. Set up all other TV options see pages listed below. Safety Warnings . . . . .

. . . . .  
. . . . .  
. . . . .

. . . . . 2 Important Safety Information . . .

. . . . .  
. . . . .

. . . . . 3 - 4 Table of Contents . . .

. . . . .  
. . . . .  
. . . . .

. . . . . 5 Weak Signal, Video Game, Sports), Contrast, Brightness, Color, Tint, Sharpness, Color Temp, Z-View Audio Menu . .

. . . . .  
. . . . .  
. . . . .  
. . . . .

. 31 Audio Mode: (Mono, Stereo, SAP), EZ SoundRite, EZ Sound: (Custom, Normal, Stadium, News, Music, Theater) Balance, Treble, Bass, Speakers, Front SurroundDolby Laboratories. Confidential Unpublished Works. ©1992 - 1997 Dolby Laboratories, Inc. All rights reserved. PAGE 5 Setup and Operation Checklist Setup and Operation Checklist (See page 5 for available connection and operational setup options.) 1. Unpack TV and all accessories. 2. Connect your TV to input sources: antenna and all video source equipment.

See pages 7 - 14. 3. Connect TV output to all external video and audio equipment see pages 7, 15, 16. 4. Install batteries in remote control.

See any page 8 through 14. 5. Plug TV and sh the middle, and it screws onto the threaded antenna/cable jack on the back of your TV. A small device that connects a two-wire 300 ohm antenna to a 75 ohm RF jack. They are usually about an inch long with two screws on one end and a round opening with a wire sticking out on the other end.

300 TO 75 OHM ADAPTER PAGE 8 206-3767 Hook Up Cable Service (CATV) Connect cable service to your Entertainment Machine 1 2 Locate the Antenna/Cable jack on the back of the TV. Connect the cable service wire that runs from the wall or cable box directly to this jack, according to one of the diagrams to the right. Remove the back of the remote and put in two "AAA" batteries. ANTENNA/ CABLE 1 Typical TV Back Typical Cable TV Wall Jack 3 Back of Remote Coaxial Round Wire (75ohm) 4 Plug in your TV. Your TV is designed to operate on standard household current, 120-volt 60 Hertz AC. Do not plug it into an outlet controlled by a switch. Do not attempt to operate it on DC power. Typical Cable TV Wall Jack 120 V AC 60 Hz In Cable Box output switch 3 4 Typical TV Back If you're using a cable box, leave the TV on channel 3 or 4 and use your cable box to change channels. If you're using a cable box, EZ Scan might only find the channel your cable service is on (usually channel 3 or 4). Don't worry, that's all you need! Out ANTENNA/ CABLE 1 RF Coaxial Wire (75ohm) 206-3767 PAGE 9 Hook Up a VCR Connect a VCR to your TV VCR Back RF Coaxial Round Wire (75ohm) Typical Antennas: Flat or Round Wire 1 2 3 Locate the Antenna In jack on the back of the VCR.

*Connect the wire that runs from the antenna, according to the diagram to the right. Make any other connections as necessary. Remove the back of the remote and put in two "AAA" batteries. VCR Back AV Panel In Out output switch 3 4 Audio Video Flat Wire (300 ohm) Back of Remote 300/75 ohm Adapter 4 Plug in your TV. Your TV is designed to operate on standard household current, 120-volt 60 Hertz AC. Do not plug it into an outlet controlled by a switch. Do not attempt to operate it on DC power.*



[You're reading an excerpt. Click here to read official ZENITH  
C34W23-2 user guide  
http://yourpdfguides.com/dref/340985](http://yourpdfguides.com/dref/340985)

TV Back 120 V AC 60 Hz HD IN DVD IN VIDEO 1 IN VIDEO 2 IN MONITOR OUTPUT Y Y S-VIDEO 1 S-VIDEO 2 No adapters or A/V cables are included with the TV. See your Zenith dealer to purchase any adapters or cables. Without A/V cables, most VCRs will not play videocassettes in stereo sound.

ANTENNA/ CABLE 1 Pr RGB Pr VIDEO VIDEO VIDEO Pb R AUDIO Pb R AUDIO R AUDIO R AUDIO L L L L L Connect your VCR to the Video 1 or Video 2 set of input jacks PAGE 10 206-3767 Hook Up Cable Service (CATV) and VCR Typical Cable TV Wall Jack Connect Cable service and a VCR to the TV VCR Back In Out Cable Box output switch 3 4 VCR Back AV Panel 1 2 Locate the Antenna/Cable In jack on the back of the VCR. Connect the cable service wire that runs from the wall, according to one of the diagrams to the right. Make any other connections necessary for your setup. Remove the back of the remote and put in two "AAA" batteries. Cable service with or without a cable box In Out output switch 3 4 Audio Video 3 Typical Cable TV Wall Jack Back of Remote 4 Plug in your TV.

Your TV is designed to operate on standard household current, 120-volt 60 Hertz AC. Do not plug it into an outlet controlled by a switch. Do not attempt to operate it on DC power. TV Back HD IN 120 V AC 60 Hz DVD IN VIDEO 1 IN VIDEO 2 IN MONITOR OUTPUT Y Pr Y S-VIDEO 1 S-VIDEO 2 Pr VIDEO VIDEO Tune both the VCR and the television to channel 3 or 4 (cable box output channel) and use the cable box to change channels. No A/V cables are included with your TV.

Without A/V cable hookups, most VCRs will not play videocassettes in stereo sound. RGB ANTENNA/ CABLE 1 Pb R AUDIO Pb R AUDIO R AUDIO R AUDIO L L L L L Connect your VCR to the Video 1 or Video 2 set of input jacks 206-3767 PAGE 11 Hook Up S-VHS VCR Your Zenith TV may be connected to a SuperVHS VCR through the S-Video Input located on the front or rear source connection panels on your TV From Antenna or Cable Service With or Without a Cable Box VCR Back VCR Back AV Panel In output switch 3 4 Audio Out S-Video Out RL 1 2 Hook up your S-VHS VCR to your Zenith TV according to the diagram shown at the right. Remove the back of the remote and put in two "AAA" batteries. Out Flat Wire (300 ohm) 300/75 ohm Adapter

Back of Remote 3 Plug in your TV. Your TV is designed to operate on standard household current, 120-volt 60 Hertz AC. Do not plug it into an outlet controlled by a switch. Do not attempt to operate it on DC power. TV Back 120 V AC 60 Hz 4 On the remote, press SOURCE repeatedly until "Video1 or Video2" is displayed. Or use the Source menu to choose the Video1 or Video2 input the equipment is connected to. ANTENNA/ CABLE 1 HD IN DVD IN VIDEO 1 IN VIDEO 2 IN MONITOR OUTPUT Y Pr RGB Y S-VIDEO 1 S-VIDEO 2 Pr VIDEO VIDEO VIDEO Pb R AUDIO Pb R AUDIO R AUDIO R AUDIO L L L L L Connect your S-Video VCR to the S-Video 1 or S-Video 2 set of input jacks PAGE 12 206-3767 Hook Up Component Video Equipment The DVD IN Input jacks will only accept an interlaced signal.

Switch your DVD player or set-top box to interlaced. Connecting component video DVD equipment DVD IN (480 Interlaced only) Connect standard component video equipment or a DVD player here. DVD Player, 480i SDTV Set top Box, 480i TV Back 1 2 Make the connections as indicated. (Appearance of components may vary from those in the illustrations.) Remove the back of the remote and put in two "AAA" batteries. HD IN DVD IN (480i) VIDEO 1 IN VIDEO 2 IN MONITOR OUTPUT Y Pr Y S-VIDEO 1 S-VIDEO 2 Pr VIDEO VIDEO VIDEO Back of Remote RGB Pb R AUDIO Pb R AUDIO R AUDIO R AUDIO 3 Plug in your TV. Your TV is designed to operate on standard household current, 120-volt 60 Hertz AC. Do not plug it into an outlet controlled by a switch. Do not attempt to operate it on DC power. L L L L L 120 V AC 60 Hz Y Pr Pb R L COMPONENT VIDEO OUT 4 5 Press POWER to turn TV on.

On the remote, press SOURCE repeatedly until "DVD IN" is displayed. Or use the Source menu to choose DVD IN. S-VIDEO OUT VIDEO R-AUDIO L-/MONO Component video jacks are sometimes labeled with CR, CB, or PB, PR. In this case, connect B to B and the R to R. The "Y" jack is usually labeled "Y", connect Y to Y.

DVD IN input does not accept progressive (480p/720p) or interlaced (1080i) video formats. DVD Player with Component Video 206-3767 PAGE 13 Hook Up HD Equipment The HD IN Input jacks will only accept a 1080i interlaced signal. Switch your set-top box to interlaced. Connecting high-definition equipment HD IN (1080i Interlaced only) Connect high-definition component video equipment here. HDTV Set top Box, 1080i TV Back 1 2 Make the HD connections as indicated.

(Appearance of components may vary from those in the illustrations.) Remove the back of the remote and put in two "AAA" batteries. HD IN (1080i) DVD IN (480i) VIDEO 1 IN VIDEO 2 IN MONITOR OUTPUT Y Pr Y S-VIDEO 1 S-VIDEO 2 Pr VIDEO VIDEO VIDEO Back of Remote RGB Pb R AUDIO Pb R AUDIO R AUDIO R AUDIO R AUDIO 3 Plug in your TV. Your TV is designed to operate on standard household current, 120-volt 60 Hertz AC. Do not plug it into an outlet controlled by a switch. Do not attempt to operate it on DC power. L L L L L 120 V AC 60 Hz Y Pr Pb R L HD OUT 4 5 Press POWER to turn TV on. On the remote, press SOURCE repeatedly until "HD-In" is displayed. Or use the Source menu to choose HD-In. HD IN input does not accept progressive (480p/720p) or interlaced (480i) video formats.

S-VIDEO OUT VIDEO R-AUDIO L-/MONO Set Top Box with Component Video PAGE 14 206-3767 Audio/Video Signal Output Output to Audio/Video devices TV Back Make the Audio/Video Output connections as indicated. (Appearance of devices may vary from those in the illustrations.) 1 2 Video Output Use the Video Out jack to connect to an external video device. Audio Output Use the Left and Right Audio Out jacks to connect an external amplifier and speakers. (Refer to the Audio Menu on page 31 for instructions on how to turn the TV's internal speakers off and on.) Select Audio/Video Input on the external device to see the image and hear the sound from the TV. If you are watching a DIGITAL CHANNEL or the source connected to the HD-IN or DVD-IN jacks, MONITOR OUTPUT is not available. HD IN DVD IN VIDEO 1 IN VIDEO 2 IN MONITOR OUTPUT Y Pr RGB Y S-VIDEO 1 S-VIDEO 2 Pr VIDEO VIDEO VIDEO Pb R AUDIO Pb R AUDIO R AUDIO R AUDIO R AUDIO L L L MONO L MONO L 3 VIDEO R-AUDIO L-/MONO IN IN IN Audio/Video Device 206-3767 PAGE 15 Digital Audio Output Send the TV's audio out to external audio equipment (stereo system) via the Digital Audio Optical Output port 1 2 3 Connect one end of an optical cable to the TV Digital Audio Optical Output port.



[You're reading an excerpt. Click here to read official ZENITH](http://yourpdfguides.com/dref/340985)

[C34W23-2 user guide](http://yourpdfguides.com/dref/340985)

<http://yourpdfguides.com/dref/340985>



TV Back Connect the other end of the optical cable to the digital audio optical input on the audio equipment. See the external audio equipment instruction manual for operation.

VIDEO 1 IN ANTENNA/ CABLE 1 CALIBRATION Y HD IN VIDEO 2 IN MONITOR OUTPUT Y S-VIDEO 1 S-VIDEO 2 ANTENNA/ CABLE 2 Pr Pb Pr VIDEO VIDEO VIDEO Pb R AUDIO AUDIO Caution: Do not look into the optical output port. Looking at the laser beam may damage your vision. DIGITAL AUDIO OUTPUT OPTICAL R L R AUDIO R AUDIO R AUDIO L L MONO L MONO L Digital Audio Optical Input Digital Audio Equipment PAGE 16 206-3767 Front-Side Panel Controls/Inputs Using the front/side panel to operate the TV's basic features and to make temporary connections Typical TV Front Panel menu channel volume power Menu Operation 1 2 3 4 Press MENU to place menus on screen. Use Channel Up/Down to select menu option. Use Volume Left/Right to adjust menu option.

Use MENU to remove menus from screen. S-video video L-audio-R C34W23 Side Control Panel menu Left/Right Audio Used for stereo sound from external equipment. S-Video / Video Connects the video signals from external equipment. channel TV Operation 1 2 3 Press POWER to turn TV on and off. Use the CHANNEL Up/Down buttons to select the next higher/lower channel number Use the VOLUME Left/Right buttons to adjust the sound level quieter or louder to your preference.

C32V23/C36V23 Front Control Panel volume menu Temporary Connections channel volume power 1 2 Connect your video equipment like a Camcorder to the Front Video input jacks. On the remote control, use Source to choose Front Video, or use the Source menu to choose the Front Video input source. 1 2 3 Typical Front Panel Controls Note: Side controls operate the same as the front controls shown above. 206-3767 PAGE 17 EZ Scan (Channel Search) Use EZ Scan to automatically find active channels and store them in the TV's memory SETUP VIDEO AUDIO TIME SPECIAL EZ Scan Ch. Edit DTV Signal Tilt Ch. Label Input Source Ant 1 Ant 2 TV/DTV Ant 1 CATV CADTV Ant 1 Ant 2 CATV TV/DTV X Select cable band, Ant 2 ENTER press Select antenna input, Select antenna input, 1. Std ENTER press ENTER press 2. HRC 1. 1. TV/DTV Ant only 3.

IRCTV/DTV Ant only 2. CATV only 2. CATV only 3. TV/DTV+CATV 3. TV/DTV+CATV Menu X Select antenna input, press ENTER 1. TV/DTV Ant only 2. CATV only 3. TV/DTV+CATV Menu LOCK Prev. Menu Prev. Prev.

Option 1 1 2 3 4 5 Option 2 Option 3 Press MENU, (if not selected, use the Up/Down arrow to choose Setup Menu,) then press ENTER or the right arrow button. Using the Up or Down arrow on the remote control, select EZ Scan on your screen, then press ENTER or the right arrow button. Using the Up or Down arrow, select option 1, 2, or 3. (Based on your connection(s) to Antenna/Cable 1-2.) PRG POWER CABLE SURF VCR AUX TV MUTE FLASHBK CHANNEL VOLUME VOLUME Press ENTER to begin the channel search.

Note: Allow EZ Scan to complete the channel search cycle for TV, CABLE\*, DTV, etc. When the channel search is complete, press MENU repeatedly until all menus are removed, or press QUIT. EZ Scan finds active channels being received by the TV tuner. Cable will not work unless you subscribe to a cable service. Run EZ Scan again after any Antenna/Cable connection changes.

CHANNEL 1 4 7 0 2 5 8 3 6 9 1/2/3 1/5 ENTER VIDEO 1/2 1/2/4 5 MENU RATIO SIGNAL AUDIO PAUSE CC QUIT RECORD TIMER PLAY SOURCE REWIND F FWD STOP Mini glossary TV DTV CATV CADTV The antenna device receiving the program signal sent over-the-air. Digital TV programming sent over-the-air. Your EZ Scan selection, if you subscribe to a cable service. Your EZ Scan selection, if you subscribe to a digital cable service. \*Cable Service Band Note: Select Std=Standard, HRC=HRC Band, or IRC=IRC Band. For further band information, contact your cable service provider. PAGE 18 206-3767 TV Mode Remote Key Functions Note: Pressing TV puts remote into TV operating mode A quick list of the keys on your remote and what they do in TV mode, see page 48 for remote key functions in all programmable modes... PRG (PROGRAM) Programs your remote to operate other products.

See page 42. FLASHBK (FLASHBACK) Return to the last channel viewed. SURF Press repeatedly to "Surf" through your favorite channels list. CHANNEL (UP/DOWN) Selects next available channel. CHANNEL NUMBER DASH "-" Selects channel numbers with dashes. Example: 7-0 selects analog channel 7. 7-1, 7-2, etc. select DTV channel 7s. UP/DOWN ARROWS Up/Down arrows select menu options. LEFT/RIGHT ARROWS Left/Right arrows adjust options. MENU Shows on-screen menus for TV mode. See page 20. RATIO Selects different picture aspect ratios. See page 35. SIGNAL Displays the digital signal strength.

See page 26. AUDIO Selects available sound options: Stereo, Mono, SAP. See page 31. TIMER Displays the Sleep Timer Menu. See "Timer Setup" on page 34 for more information.

Keys dedicated to VCR functions will still operate your VCR while the remote is in TV mode. POWER Turns TV On or Off. PRG POWER CABLE SURF VCR AUX TV MUTE LED INDICATOR LIGHT Lights when keys are pressed. CABLE/VCR/AUX/TV Selects remote operating mode. MUTE Turns sound Off/On while the picture remains. Press to mute sound, press again to restore sound. VOLUME LEFT/RIGHT Adjusts the sound levels. FLASHBK CHANNEL VOLUME VOLUME CHANNEL 1 4 7 0 MENU RATIO 2 5 8 3 6 9 NUMBER KEYPAD Selects channels directly and enters numeric values for some options. ENTER Goes to menu options and shows the Channel/Time display. Press after channel numbers for instant selection.

VIDEO Selects different picture settings. QUIT Removes on-screen displays. CC (CLOSED CAPTIONING) Selects closed caption options. SOURCE Switches between watching TV through available sources. ENTER VIDEO SIGNAL AUDIO CC QUIT RECORD PAUSE TIMER PLAY SOURCE REWIND STOP F FWD remote control part number MBR4286 (P124-00240) 206-3767 PAGE 19 On-Screen Menu Operation When selected, values change to a gold color SETUP EZ Scan Ch. Edit DTV Signal Tilt Ch. Label Input Source SETUP VIDEO AUDIO TIME SPECIAL EZ Picture Contrast Brightness Color Tint Sharpness Color Temp Z-View 50 50 50 7G 50 R Use the remote to access the onscreen menus VIDEO AUDIO TIME SPECIAL LOCK LOCK Main TV Features Menu Video Menu 1 Press MENU on the remote control. Use the Up or Down directional arrow to "select" or highlight the name of one of the six main menus on your screen like the VIDEO menu, then press ENTER. Use the Up or Down directional arrow to highlight an option like the CONTRAST adjustment bar, then press the Right arrow. You can select other menu options like COLOR TEMP using the UP or DOWN directional arrows.



[You're reading an excerpt. Click here to read official ZENITH](http://yourpdfguides.com/dref/340985)

[C34W23-2 user guide](http://yourpdfguides.com/dref/340985)

<http://yourpdfguides.com/dref/340985>

Once the option is selected, in this case CONTRAST, use the RIGHT or LEFT directional arrow to adjust the setting; the larger the number the more contrast, the lower the number, the less contrast in the picture. Note: Some menu options use a checkmark to indicate setting, see page 22. You can adjust the other menu options using the above procedure or if you are done adjusting the menu option settings: a. Press MENU repeatedly to go back to the main menu.

b.  
Press QUIT to remove the menus from the TV screen. Additional instructions are usually included on the bottom of the menu indicating which remote keys to use to move to the right, move to the left, or return to the previous menu, etc. Use the number keypad to enter numerical values when required. Mini glossary MENU ENTER UP/DOWN LEFT/RIGHT QUIT On-screen displays used to set up and operate TV features. Action key used to make changes on the menus. Menu UP or DOWN directional arrows used to "select" or highlight and choose menu options. Menu LEFT or RIGHT directional arrows used to "adjust" some menu settings. Exits menus and removes on-screen displays. 2 3 2 1 3 MENU ENTER 4 QUIT 1/4 2 3 4 PAGE 20 206-3767 Input Source Selection Options TV Back Choose the connected source you want to see and hear on your TV ANTENNA/ CABLE 1 CALIBRATION HD IN (1080i) DVD IN (480i) VIDEO 1 IN VIDEO 2 IN MONITOR OUTPUT Y Pr Pb DIGITAL AUDIO OUTPUT OPTICAL Y S-VIDEO 1 S-VIDEO 2 ANTENNA 2 Pr VIDEO VIDEO VIDEO Pb R AUDIO AUDIO R L R AUDIO R AUDIO R AUDIO L L L L S-Video Video L Audio R 1 Press SOURCE repeatedly to choose from the available input viewing sources. Analog: Antenna/Cable1 -2 on TV back near Jackpack, Over-the-Air Antenna or Cable service signal source. Video 1 In: on TV back Jackpack, Set of Composite Audio/Video Input jacks. S-Video Input jack use with Video 1 Audio Input jacks. Video 2 In: on TV back Jackpack, Set of Composite Audio/Video Input jacks. S-Video Input jack use with Video 2 Audio Input jacks. F Video In: on TV front Jackpack, Set of Composite Audio/Video Input jacks.

R -AUD IO-L VIDEO Camcorder R -AUD VCR IO-L VIDEO AUDIO /VIDEO OUT R -AUD IO-L S-Video VIDEO AUDIO /VIDEO OUT S-VIDEO R -AUD IO-L OUT DVD AUDIO Audio/Video F S-Video In: on TV front Jackpack, S-Video Input jack use with front Audio Input jacks. DVD IN: on TV back Jackpack, 480i, Set of Component Audio/Video Input jacks. HD In: on TV back Jackpack, Set of component Audio/Video Input jacks at 1080i. R -AUD R -AUD /VIDEO OUT IO-L Y COMP Component Video Pr Pb ONEN T VID EO IO-L Y COMP Y / U / V 1080i Pr Pb ONEN T VID EO The source equipment you intend to view should be turned on. Typical Viewing Sources 206-3767 PAGE 21 On-Screen Menus Overview Descriptions of the menus and displays Using MENU, the Up/Down arrows, and the ENTER key and the other keys indicated on the remote, the user can access the menus and displays described below. SETUP VIDEO AUDIO TIME SPECIAL ON-SCREEN MENUS EZ Scan Ch. Edit DTV Signal Tilt Ch. Label Input Source Ant 1 Ant 2 TV/DTV X SETUP pages 18/25 - 29 Sets the TV up and adjusts the basic features. EZ Scan page 18 Automatically finds and stores all available channels in your viewing area; tune in those channels using Channel Up/Down. Ch.

Edit page 25 Choose which channels will appear when using Channel Up/Down. Adds favorite channels to Surf channel list. DTV Signal page 26 Shows the strength of the DTV signal being received. Select antenna input, press ENTER 1. TV/DTV Ant only 2. CATV only 3. TV/DTV+CATV Menu LOCK Prev. SETUP VIDEO AUDIO TIME SPECIAL EZ Picture Contrast Brightness Color Tint Sharpness Color Temp Z-View 50 50 50 7G 50 R Tilt page 27 If needed, adjusts the picture by tilting it to fit screen. Ch. Label page 28 Choose a network symbol to identify the channel.

Input Source page 29 Chooses the input source for the picture and sound. VIDEO page 30 Adjusts the picture appearance to your preference. Your options are: EZ Picture, Contrast, Brightness, Color, Tint, Sharpness, Color Temperature, Z-View. LOCK SETUP VIDEO AUDIO TIME SPECIAL Audio Mode EZ Soundrite EZ Sound Balance Treble Bass Speakers Front Surround Menu 0 50 50 AUDIO page 31 Customizes the sound to suit your room and taste. @@ Clock page 32 Sets the current time on the TV. @@@@ Analog Caption page 36 Chooses a captioning or text option. @@EZ Demo page 38 On/Off. @@@@Movie Rating TV Rating-Children TV Rating-General Aux. @@@@Sleep Timer Display Sleep Timer Status Display. ENTER E C D E RATIO VIDEO SIGNAL AUDIO PAUSE CC QUIT Sleep Time: Off RECORD TIMER PLAY SOURCE REWIND STOP F FWD "Surf" Channels are typically your favorite channels that you tune to and watch frequently.

PAGE 24 206-3767 Channel Edit Add/Delete/Surf Setup SETUP EZ Scan Ch. Edit DTV Signal Tilt Ch. @@Edit option, then press ENTER or the right arrow. Use the Up/Down/Left/Right arrows to highlight and select a channel. @@To add the selected channel to the Surf list, press SURF. To go to the next group of channels use CHANNEL Page Up/Page Down. Use MENU to go back to the SETUP menu. @@@@Adds a favorite channel to the Surf channel list.

@@@Edit DTV Signal Tilt Ch. Label Input Source SETUP VIDEO AUDIO TIME SPECIAL EZ Scan Ch. Edit DTV Signal Tilt Ch. @@Use the Up/Down arrow to select the DTV Signal option. @@@@Edit DTV Signal Tilt Ch. Label Input Source SETUP VIDEO AUDIO TIME SPECIAL EZ Scan Ch. Edit DTV Signal Tilt Ch. @@Use the Up/Down arrow to select the Tilt option. @@@@Edit DTV Signal Tilt Ch. Label Input Source SETUP VIDEO AUDIO TIME SPECIAL EZ Scan Ch. Edit DTV Signal Tilt Ch. @@Use the Up/Down arrow to select the Ch.

Label option on your screen, then press the right arrow or ENTER. @@@@The logo appears above the channel picture on the menu. @@@@Edit DTV Signal Tilt Ch. Label Input Source SETUP VIDEO AUDIO TIME SPECIAL EZ Scan Ch. Edit DTV Signal Tilt Ch. @@Selecting Input Source using the Setup Menu Press MENU to show the menus on-screen. Use the Up/Down arrow to select the SETUP MENU option, then press ENTER. PRG POWER CABLE SURF VCR AUX TV MUTE FLASHBK CHANNEL VOLUME VOLUME Use the Up/Down arrow to select the Input Source option, then press ENTER. (Use MENU to go backward as needed.) Use the Up/Down arrow to move the checkmark and select Analog, or one of the other available sources.

After you have selected a viewing source, press QUIT to remove the menu and return to TV viewing. If S-Video sources are connected, they will appear on the Source menu as Video 1, 2 etc. Be sure to use the Video menu to change the Aspect Ratio as needed when using sources which have different picture proportions for the main screen.



You're reading an excerpt. [Click here to read official ZENITH C34W23-2 user guide](http://yourpdfguides.com/dref/340985)  
<http://yourpdfguides.com/dref/340985>

1 4 7 0 CHANNEL 2 5 8 3 6 9 2/3/4 1 ENTER MENU RATIO 2/3/4 5 A VIDEO SIGNAL AUDIO PAUSE CC QUIT RECORD TIMER PLAY SOURCE  
REWIND STOP F FWD 206-3767 PAGE 29 Video Menu SETUP EZ Scan Ch. Edit DTV Signal Tilt Ch. Label Input Source SETUP VIDEO AUDIO TIME  
SPECIAL EZ Picture Contrast Brightness Color Tint Sharpness Color Temp Z-View 50 50 50 7G 50 R Use the Video menu to customize the picture  
appearance VIDEO AUDIO TIME SPECIAL LOCK LOCK 1 2 3 4 Press MENU, use the Up/Down arrow to select the Video menu, then press ENTER or the  
Right arrow. Using the Up/Down arrow on the remote control, choose Contrast (or another menu option on your screen), then press the Right arrow twice.  
Using the Left/Right arrow, change the Contrast level to your preference. Use the Up/Down arrow to select other adjustment bars like Brightness, Color, Tint,  
and Sharpness. Press QUIT, to return to TV viewing, or press MENU and repeat from step two to set the other menu options.

Your options are: · EZ Picture: Choose either Custom, Normal, Digital Preset, Night Time, Movie, Weak Signal, Video Game, or Sports. Custom: Allows you  
to adjust the picture the way you want. Normal: Resets all the options to their preset values. Other options adjust the picture to the source's image. · Contrast:

Adjusts the level of difference between white and black in the TV picture.

The more contrast, the brighter the picture appears. · Brightness: Increases or decreases amount of white in the TV picture. · Color: Adjusts levels of all  
colors in the TV picture. · Tint: Adjusts the relative amounts of red and green colors in your picture. · Sharpness: Raises or lowers the definition of the  
picture.

The lower the level, the softer the image will appear. · Color Temp: Adjusts levels of all colors in the TV picture; Cool or Warm. · Z-View: On, automatically  
adjusts the picture display for optimum quality: on or off. PRG POWER CABLE SURF VCR AUX TV MUTE FLASHBK CHANNEL VOLUME VOLUME

CHANNEL 1 4 7 2 5 8 3 6 9 2/3/4 1/4 0 MENU RATIO ENTER 1/2/4 4 VIDEO SIGNAL AUDIO PAUSE CC QUIT RECORD TIMER PLAY SOURCE  
REWIND STOP F FWD Choose the NORMAL option in EZ Picture to quickly reset the Video Menu options to their original pre-set values, or use your own  
settings with CUSTOM. PAGE 30 206-3767 Audio Menu SETUP EZ Scan Ch. Edit DTV Signal Tilt Ch. Label Input Source SETUP VIDEO AUDIO TIME  
SPECIAL Adjust the sound to your preference and set up the audio features VIDEO AUDIO TIME SPECIAL Audio Mode EZ Soundrite EZ Sound Balance  
Treble Bass Speakers Front Surround Menu 0 50 50 LOCK LOCK Prev. Adjust 1 2 3 4 Press MENU, use the Up/Down arrow to select the Audio menu, then  
press ENTER or the Right arrow button. Using the Up/Down arrow on the remote control, highlight the audio option you want to adjust, then press the Right  
arrow. Using the Left/Right arrow, change the Audio option level to your preference.

Press QUIT, to return to TV viewing, or press MENU and repeat from step two to set the other menu options. Your options are: · Audio Mode: Choose from  
Stereo sound, Mono sound, or 2nd Audio/SAP. · EZ SoundRite: Turns the uniform volume level on or off. @@@@1/2/3 · Treble: Increases/decreases higher-  
end sounds. · Bass: Increases/decreases lower-end sounds. · Speakers: Turns the TV speakers on or off. @@Mono (monaural) sound is one channel of sound.  
For more than one speaker, all the speakers play the same audio. @@@@Clock Menu Options Manual Mode User sets the Clock options. · Year: Set the  
current year.

· Date: Set the Month and Date. @@@@Use the Left/Right arrows to move through the menu and the Up/Down arrows to set the Off Timer  
options, as indicated on the menu. Setting the TV Turn On Time With the Time menu selected, use the Up/Down arrows to choose the On Timer option, then  
press ENTER or the Right arrow button. Use the Left/Right arrows to move through the menu and the Up/Down arrows to set the On Timer options, as  
indicated on the menu. Set the TV turn on time, channel, and volume level.

Press QUIT to return to TV viewing, or press MENU to return to the previous menu. PRG POWER CABLE SURF VCR AUX TV MUTE FLASHBK CHANNEL  
VOLUME VOLUME 1 2 3 CHANNEL 1 4 7 2 5 8 3 6 9 1/2 1/3 0 MENU RATIO ENTER 1 3 VIDEO SIGNAL AUDIO PAUSE CC QUIT RECORD TIMER  
PLAY SOURCE REWIND STOP F FWD 206-3767 PAGE 33 Sleep Timer Menu SETUP Set the Sleep Timer to automatically turn the TV off, after the preset  
time has expired VIDEO AUDIO TIME SPECIAL Clock Off Timer On Timer Sleep Timer SETUP VIDEO AUDIO TIME SPECIAL Clock Off Timer On Timer  
Sleep Timer LOCK LOCK Menu Prev. Off 10 min 20 min 30 min 60 min 90 min 120 min 180 min 240 min A Sleep Timer Use the TIMER button to choose a  
preset time from 10 minutes to 4 hours for the TV to automatically turn itself off. PRG POWER Using the Sleep Timer Menu CABLE SURF VCR AUX TV  
MUTE 1 2 3 Selecting Sleep Timer Menu With the Time menu selected, use the Up/Down arrows to choose the Sleep Timer option, then press ENTER or the  
right arrow button. Use the Up/Down arrows to select a preset TV turn-off time from the preset options listed, press ENTER.

Press QUIT to remove the menu and return to TV viewing. FLASHBK CHANNEL VOLUME VOLUME CHANNEL 1 4 7 2 5 8 3 6 9 1/2 1 0 MENU RATIO  
ENTER 1/2 3 A VIDEO SIGNAL AUDIO PAUSE CC QUIT RECORD TIMER PLAY SOURCE REWIND STOP F FWD PAGE 34 206-3767 Aspect Ratio  
Menu SETUP EZ Scan Ch. Edit DTV Signal Tilt Ch. Label Input Source SETUP VIDEO AUDIO TIME SPECIAL Change the picture aspect ratio to the  
format required by the selected source VIDEO AUDIO TIME SPECIAL Aspect Ratio Analog Caption Language EZ Demo Set By Program 16:9 4:3 LOCK  
LOCK Menu Prev. A 1 2 3 Direct Entry Method: RATIO Key Press RATIO repeatedly to select available aspect ratios for viewing source. Using the Special  
Menu Option Method PRG POWER With the Special menu selected, press ENTER or the Right arrow button. Use the Up/Down arrow to select the Aspect  
Ratio option, then press ENTER or the Right arrow button. Using the Up/Down arrow, choose the correct Aspect Ratio on the menu, then press ENTER. Your  
options are: · Set By Program: Selects the proper picture proportion to match the source's image; 16:9, 4:3. · 16:9: Selects the proper picture proportion to  
match the 16:9 source's image.

· 4:3: Selects the proper picture proportion to match the 4:3 source's image. CABLE SURF VCR AUX TV MUTE FLASHBK CHANNEL VOLUME VOLUME  
CHANNEL 1 4 7 2 5 8 3 6 9 1/2/3 A 0 MENU RATIO ENTER 1/2/3 4 VIDEO 4 Press QUIT, to return to TV viewing.



[You're reading an excerpt. Click here to read official ZENITH  
C34W23-2 user guide  
http://yourpdfguides.com/dref/340985](http://yourpdfguides.com/dref/340985)



SIGNAL AUDIO PAUSE CC QUIT RECORD TIMER PLAY SOURCE If the Aspect Ratio option is not selectable on the menu, then the picture source is correct and no other options are available. For Model No. C34W23, Aspect Ratio will be Normal, Wide, or Zoom. As a result, Set by Program, 16:9, and 4:3 are not available. REWIND STOP F FWD Mini glossary 4:3 16:9 Standard 4 x 3 almost square-like picture proportion used for most TV formats. Wider than normal picture format used for HD sources that produce more movie theater-like images. 206-3767 PAGE 35 Analog Caption Menu SETUP EZ Scan Ch. Edit DTV Signal Tilt Ch.

Label Input Source SETUP VIDEO AUDIO TIME SPECIAL Choose a Closed Captions or Text option or turn the feature off VIDEO AUDIO TIME SPECIAL Aspect Ratio Analog Caption Language EZ Demo Off CC1 CC2 CC3 CC4 Text 1 Text 2 Text 3 Text 4 LOCK LOCK Menu Prev. Analog Caption (Caption/Text) allows your TV to receive various closed caption and text options if provided by broadcasters. Availability and functionality of Caption/Text is determined only by the broadcaster and may not be available on a given program. Standard captions are usually on Caption1, standard text is usually on Text 1. PRG POWER CABLE SURF VCR AUX TV MUTE FLASHBK 1 2 3 Press MENU, use the Up/Down arrow to select the Special menu, then press ENTER or the Right arrow button.

VOLUME CHANNEL VOLUME Use the Up/Down arrow to choose Analog Caption, then press ENTER or the Right arrow button. Use the Up/Down arrow to select an option from the Analog Caption menu (Caption/Text): Off, Caption 1, Caption 2, Caption 3, Caption 4, Text 1, Text 2, Text 3, or Text 4; so that the option will appear when the TV is tuned to a program that has Closed Captions or Text. Press QUIT to remove menu and return to TV viewing. 1 4 7

CHANNEL 2 5 8 3 6 9 1/2/3 1/4 0 MENU RATIO ENTER 4 1/2/3 4 VIDEO Standard closed captioning is available using the Caption 1 option. Not all programming has closed captioning or text available; even though Captions 1, 2, 3, 4, and Text 1, 2, 3, 4 are available to broadcasters.

SIGNAL AUDIO PAUSE CC QUIT RECORD TIMER PLAY SOURCE REWIND STOP F FWD Mini glossary CAPTIONS The term for the words that scroll across the bottom of the TV screen; usually the audio portion of the program provided for the hearing impaired. TEXT The term for the words that appear in a large black frame and almost cover the entire screen; usually messages provided by the broadcaster. PAGE 36 206-3767 Language Menu SETUP EZ Scan Ch. Edit DTV Signal Tilt Ch. Label Input Source SETUP VIDEO AUDIO TIME SPECIAL Choose the language you want the onscreen menus to appear in VIDEO AUDIO TIME SPECIAL Aspect Ratio Analog Caption Language EZ Demo English Spanish French LOCK LOCK Menu Prev. 1 2 3 4 Press MENU, use the Up/Down arrow to select the Special menu, then press ENTER or the Right arrow button. PRG POWER Use the Up/Down arrow to select the Menu Language option on your screen, then press ENTER or the Right arrow button. Use the Up/Down arrow to choose any of the following options: English, Spanish, or French, then press ENTER. Press QUIT to remove menu and to return to TV viewing. CABLE SURF VCR AUX TV MUTE FLASHBK CHANNEL VOLUME VOLUME CHANNEL 1 4 7 2 5 8 3 6 9 1/2/3 1 0 MENU RATIO ENTER 1/2/3 4 VIDEO SIGNAL AUDIO PAUSE CC QUIT RECORD TIMER PLAY SOURCE REWIND STOP F FWD 206-3767 PAGE 37 EZ Demo Menu SETUP EZ Scan Ch.

Edit DTV Signal Tilt Ch. Label Input Source SETUP VIDEO AUDIO TIME SPECIAL Your TV can display the menus available VIDEO AUDIO TIME SPECIAL Aspect Ratio Analog Caption Language EZ Demo Selection ( or ENTER ) leads you to the EZ Demo. LOCK LOCK Menu Prev. 1 2 3 4 Press MENU and use Up/Down arrow to select the SPECIAL menu, then press ENTER or the Right arrow button. PRG POWER Use the Up/Down arrow to select the EZ DEMO option. CABLE VCR AUX TV MUTE When you press ENTER or the Right arrow button, EZ Demo will start and continue to run. Press QUIT to stop EZ Demo, remove menu and return to TV viewing. SURF FLASHBK CHANNEL VOLUME VOLUME CHANNEL 1 4 7 2 5 8 3 6 9 1/2 1 0 MENU RATIO ENTER 1/3 4 VIDEO SIGNAL AUDIO PAUSE CC QUIT RECORD TIMER PLAY SOURCE REWIND STOP F FWD Mini glossary EZ DEMO Feature provides an automatic demonstration of the on-screen menus available on your TV. View and learn what features are available to you as EZ Demo cycles through the on-screen menus. PAGE 38 206-3767 Lock (Parental Control) Overview If used, this optional feature can "block" undesirable programming from appearing on the TV.

Note: Lock, is also known and referred to in the text as Parental Control. To block specific source inputs, use the AUX. Block options. Lock options are available by country: USA and Canada. Lock options are also available with TV Ratings for English and TV Ratings for French. Block individual channels if desired. Lock/Parental Control offers the user a wide variety of options and settings that restrict or "block" the programming that can appear on the TV. Parental control allows the user the capability of defining which program rating they consider acceptable, to the younger or more sensitive viewer. It can be preset and turned either on or off by the user who specifies the secret 4-number code, the password. General audience and children viewer blocks should both be programmed into the TV's memory.

Viewer ratings are specified for both TV and the motion picture industry; both rating systems should be used, for complete coverage. The ratings are based mainly on children's ages. Overview To insure complete coverage for all TV programs, (movies and regular TV shows) choose a rating for MPAA, from the selections AND choose ratings from the TV Parental Guidelines Rating System, using the Age Block option for General Audiences, and for Children. In addition to those, you may wish to add additional restrictions from viewing certain channels. See the Lock menu, and submenus example on the following pages. Things to Consider before Setting Up Lock (Parental Control) · Determine which rating you consider acceptable to the viewer. (For example, if you choose TV-PG, all more restrictive ratings will be automatically blocked; the viewer will not be able to see: TV-PG, TV-14, or TV-MA rated programming.) · Do you want to block the auxiliary video sources? (Blocks the signal sent by the equipment, such as a VCR, connected to the TV Audio/Video input jacks; in the Aux. Block option.) Or leave unblocked, but choose allowable ratings.

· In the TV Rating-General option, block program "Content" based on individual parameters such as: Age, Dialog, Language, Sex, Violence, or in the TV Rating-Children option: Fantasy Violence.



[You're reading an excerpt. Click here to read official ZENITH](#)

[C34W23-2 user guide](#)

<http://yourpdfguides.com/dref/340985>

· Select a secret password; in the Set Password option. Use the number keys on the remote. Don't forget the password, it is the only way you can access the Lock menu and change rating selections, or turn Lock off. · Do you want Lock to be active all the time? If not, you can turn it on or off; with the Lock On/Off option. You can set different Parental Control viewing restrictions for general audiences and for children - both can be active at the same time. Simply specifying one content block such as Sex, will not automatically block another content in the programs from appearing. Even if you choose to leave the Aux source inputs unblocked, the ratings you specify will automatically restrict the programming that appears from the video sources. You cannot disable Lock by disconnecting the TV from power. Lock will automatically reset if power is disconnected.

206-3767 PAGE 39 Lock Menu SETUP After you have read the preceding page, follow instructions below to set up and activate Lock EZ Scan Ch. Edit DTV Signal Tilt Ch. Label Input Source SETUP VIDEO AUDIO TIME SPECIAL VIDEO AUDIO TIME SPECIAL Lock System Set Password Select Country Block Ch. Movie Rating TV Rating-Children TV Rating-General Aux. Block Menu On Off LOCK LOCK Prev.

Lock Menu Typical Setup Requirements As shown above, with the Lock System turned on: - Set the initial 4-digit password "0-0-0-0" with the number keypad. After setting the password and confirming it, use the Up/Down arrow to highlight an option like TV Rating-General, then press ENTER or the Right arrow. Navigating Within the Lock Menu Use the Up/Down/Left/Right arrows to select and adjust or set the rating for an option. For "Language" for example, use the "TV-PG" setting. (See the Mini Glossary, Ratings Charts on this and the next page for rating definitions.

) Use MENU to return to the previous menu. Activating Your Blocking Scheme After you have selected and adjusted the Lock menu options to your preference: - Set the Lock System option to either On or Off. Mini glossary 1 4 2 5 8 3 6 9 Number Keypad 7 0 ENTER VIDEO Menu (Previous) MENU RATIO Enter (Next) SIGNAL AUDIO CC QUIT Up/Down Left/Right Arrows MOTION PICTURE ASSOCIATION OF AMERICA (MPAA) RATING SYSTEM G PG PG-13 R NC-17 X General Audiences Parental Guidance Suggested Parental Guidance Suggested Restricted viewing Restricted Viewing Hard Core Films Content not offensive to most viewers. Content is such that parents may not want their children to view the program. Program is inappropriate for preteens, with a greater degree of offensive material than a PG rated program. Not for children under age 17. Strong elements of sex and/or violence. Not for children under age 17 under any circumstances. Strong sexual content. Same as NC-17 rating.

Note: Zenith Electronics Corporation is not liable for any program content that appears when using this rating system; as always, user discretion is advised. PAGE 40 206-3767 Lock System Menu Structure Lock System menus with various restriction options are shown below On Off SETUP VIDEO AUDIO TIME SPECIAL EZ Scan Ch. Edit DTV Signal Tilt Ch. Label Input Source SETUP VIDEO AUDIO TIME SPECIAL Lock System Set Password Select Country Block

Ch. Movie Rating TV Rating-Children TV Rating-General Aux. Block Menu New \*\*\*\* Confirm \*\*\*\* Selection leads you to the block channel screen. To Submenu USA Canada All Block G PG PG-13 R NC-17 X Blocking Off LOCK LOCK Prev. Age Fantasy Violence To Submenus Age Dialog Language Sex Violence To Submenus Video 1 Video 2 Front Video DVD In HD In Off Off Off Off Off Mini glossary TV PARENTAL GUIDELINE RATING SYSTEM TV-G TV-PG TV-14 TV-MA General Audience Parental Guidance Suggested Parents Strongly Cautioned Mature Audience Only Considered suitable for all audiences; children may watch unattended. Unsuitable for younger children, may contain: Suggestive Dialog, Bad Language, Sex, and Violence Scenes.

Unsuitable for children under 14, may contain: Strong Dialog, Bad Language, Sex, and Violence Scenes.

Adults only, may contain: Strong Dialog, Bad Language, Sex, and Violence Scenes. CHILDREN'S CLASSIFICATIONS TV-Y TV-Y7 Children Children 7 and over Considered suitable for all children under 7 years old. Considered suitable for children over 7, may contain Fantasy Violence Scenes. 206-3767 PAGE 41 Programming the Remote Set up your remote to operate other brand name devices Indicator Light 1 2 3 4 5 6 7 Turn on the device you want to program.

On the chart on page 46/47, find the type of device you're programming, and then find the brand name.

Write down the three-number code(s). Press and hold PRG. It's recessed so it doesn't get pushed accidentally. Use a small, blunt object. When the indicator light turns on, you can release PRG.

Push the button name with the type of device you're programming: VCR, CABLE, AUX, TV. Using the NUMBER keypad, enter the three-number code you found on page 46/47. Press ENTER to save the code. (The indicator light will flash 2 times, then turn off to indicate the code is valid.) Point the remote at the device and push POWER. It should turn off. If not, try the other codes listed and continue from step three. Note: To reset remote to factory settings, enter 9-1-1, in Step 5. Programming your Zenith remote may allow you to use one remote to operate up to 4 different devices, if all modes are programmed. Once the device turns off, try the other functions.

IF they do not operate, try another code. Or, see page 45. Not all devices will operate with your Zenith remote control. 3 PRG POWER CABLE SURF VCR AUX TV MUTE 7 4 FLASHBK CHANNEL VOLUME VOLUME CHANNEL 5 1 4 7 0 MENU RATIO SIGNAL 2 5 8 3 6 9 ENTER 6 VIDEO AUDIO CC QUIT RECORD PAUSE TIMER PLAY SOURCE REWIND STOP F FWD Mode / Product Compatibility TV VCR CATV Cable Boxes, Satellite Receivers AUX All products on pp 46 - 47 TVs VCRs DVDs Mini glossary PROGRAMMING PRG DEVICE Procedure to set up remote to operate other equipment.

Programming mode button. Infra-red remote controllable electronic accessory devices. PAGE 42 206-3767 Mode Sound Switch Setup This feature is typically used to set up the remote to control the sound from an external audio system, or cable box, without changing modes Note: Check to make sure the remote operates the device you want to hear. If not, see the remote programming page. 1 2 3 4 5 With a small blunt object, press and hold PRG until the LED indicator light turns on (about 3 seconds), then release PRG. Press the mode button of the device you want to hear: CABLE, VCR, AUX, TV.

Press the Vol+ button, the LED will blink. 1 PRG POWER Indicator Light CABLE SURF VCR AUX TV MUTE 2/4 FLASHBK CHANNEL Press the button of the mode you want the volume to be controlled by: CABLE, VCR, AUX, TV.



[You're reading an excerpt. Click here to read official ZENITH C34W23-2 user guide](http://yourpdfguides.com/dref/340985)  
<http://yourpdfguides.com/dref/340985>

Press ENTER to save the code (The indicator light will flash 2 times and then turn off). For example: If you want the VCR mode to control the volume of the AUX mode (audio system), press VCR in Step 2 and press AUX in Step 4. Then, when you press volume in VCR mode, the device programmed for the AUX mode will respond.

Default Mode Volume Control Setups Mode TV VCR AUX CABLE Sound controlling mode TV (Controls TV volume.) TV (Controls TV volume.) AUX (Controls AUX Volume.) CABLE (Controls Cable Volume.) VOLUME VOLUME 3 CHANNEL 1 4 7 0 MENU RATIO SIGNAL 2 5 8 3 6 9 ENTER 5 VIDEO AUDIO CC QUIT RECORD PAUSE TIMER PLAY SOURCE REWIND STOP F FWD If you can't find the code for your amplifier, use the Auto Search feature described on page 45.

Mini glossary AMPLIFIER CABLE BOX VOLUME AUX Audio device which sends sound to speakers, like an Audio Tuner, Receiver, or Amplifier. See Audio Tuners/Amp list on page 47. Some cable boxes have volume controls. Auxiliary equipment. 206-3767 PAGE 43 Verify 3-Digit Code Stored in Mode Use the following method described below to find the code number stored in memory for each remote operating mode: TV, VCR, CABLE, and AUX Indicator Light 1 2 With a small blunt object, press and hold PRG for about three seconds. When the light turns on, release PRG. Press the mode button you want the 3-number code for, then press the TIMER button. The LED will blink the number of times to indicate the number of the first digit. There will be a 1 second pause during which the LED light will be off, then the LED will blink the number of times for the second digit of the code, and so on. For example: - One blink, no LED light for 1 second.

- Three blinks, no LED light for 1 second. - Eight blinks. This is the example for code: 1-3-8. Note: Ten blinks indicate code number "0". 1 PRG POWER CABLE SURF VCR AUX TV MUTE 2 FLASHBK CHANNEL VOLUME VOLUME CHANNEL 1 4 7 0 MENU RATIO SIGNAL 2 5 8 3 6 9 ENTER 3 VIDEO AUDIO CC QUIT RECORD PAUSE TIMER PLAY SOURCE Programming your Zenith remote may allow you to use one remote to work up to 4 different devices, if all modes are programmed. Not all devices will work with your Zenith remote control. REWIND STOP F FWD 2 Mode / Product Compatibility TV VCR TVs VCRs DVDs CATV Cable Boxes, Satellite Receivers AUX All products on pp 46 - 47 Mini glossary PROGRAMMING PRG DEVICE CODE Procedure to set up remote to operate other equipment. Programming mode key. Code to control infra-red remote controllable electronic devices: TVs, VCRs, Cable Boxes, etc. PAGE 44 206-3767 Brand Code Auto Search Use Auto Search to try all available brand codes to determine if your multi-brand remote control can operate the device 1 2 3 4 5 Turn on the device you want to program the remote to operate.

With a small blunt object, press and hold PRG until the indicator light turns on (about 3 seconds), then release PRG. Press the button for the device you are trying to program: CABLE, VCR, AUX, or TV. Press and hold the CH+ or CH- button. When the device turns off, release the CH+ or CH- button. (During this procedure the remote sends out a series of power on/off codes.)

) To check the code, aim the remote at the device and press the POWER button to turn the device on and off. Try other buttons on the remote to operate other functions to determine if they are also functional. Push ENTER to save the code (The indicator light will flash 2 times and then turn off). Press POWER to turn the device back on. 2 PRG POWER Indicator Light CABLE SURF VCR AUX TV MUTE FLASHBK 5/7 3 4 VOLUME CHANNEL VOLUME 4 1 4 7 0 MENU RATIO SIGNAL CHANNEL 2 5 8 3 6 9 ENTER 6 7 6 VIDEO AUDIO CC QUIT RECORD PAUSE TIMER PLAY SOURCE You can quickly get out of Auto Search by pressing PRG or not pressing any button for 20 seconds.

The Zenith remote may not be able to operate the device. If so, use the device's original remote control. REWIND STOP F FWD Mini glossary Auto Search Another way of finding a brand code for controlling auxiliary equipment such as a VCR, DVD player, etc. that is not available through the regular remote brand code programming method. 206-3767 PAGE 45 Programming Codes TVS A MARK ADMIRAL AKAI AMPRO AMSTRAD ANAM 112 072 006 073 052

043 108 131 004 088 002 058 043 002 101 043 004 039 143 043 043 143 081 161 146 167 054 056 080 104 112 115 118 121 006 058 112 003 004 006  
GOLDSTAR 056 130 165 004 113 137 004 004 012 158 164 129 164 004 030 160 013 034 043 006 002 143 006 255 072 072 004 007 164 003 060 143 006  
164 004 088 004 049 088 004 042 004 Other Manufacturers Brand Names and Programming Codes 073 074 091 116 144 155 160 161 102 116 143 116 006  
023 163 106 110 112 119 122 127 NAD NEC 015 006 040 NIKKI 043 ONKING 043 ONWA 043 OPTONICA 019 PADIO SHACK 004 PANASONIC 034  
PHILCO 003 056 127 PHILIPS 003 059 164 PIONEER 006 116 PORTLAND 004 PROSCAN 144 PROTON 004 171 QUASAR 034 RADIO SHACK 019 143  
RCA 004 065 160 REALISTIC 007 ROCTEC 186 RUNCO 168 SAMPO 004 SAMSUNG 004 113 143 SANYO 007 053 SCOTT 004 143 SEARS 004 057 143  
SHARP 004 025 007 016 019 024 056 130 132 134 SIEMENS SIGNATURE SONY SOUNDESIGN SPECTRICON SSS SUPRE MACY SYLVANIA 029 088 072  
041 139 003 112 004 002 003 060 140 081 056 034 004 002 028 101 037 072 172 004 007 062 143 008 146 174 004 004 060 074 004 004 043 001 157 112  
081 143 170 175 070 079 085 126 147 185 004 028 043 116 043 004 006 044 059 063 064 116 127 160 164 062 080 084 003 031 103 046 004 006 024 043  
072 077 143 086 087 HALL MARK HITACHI 081 056 004 059 143 004 070 018 135 143 160 058 173 056 043 006 074 161 019 169 006 050 116 160 020  
057 028 080 006 060 164 005 093 092 164 024 043 063 064 006 038 143 160 AOC BLAUPUNKT CANDLE CAPEHART CETRONIC CITIZEN CLASSIC  
CONCERTO CONTEC CORONADO CRAIG CROWN CURTIS MATHES CXC DAEWOO 009 010 011 041 075 143 166 INFINITY INKEL JBL JCPENNY  
003 004 006 043 103 143 006 008 009 024 065 101 143 156 043 050 051 054 143 006 101 116 143 016 071 114 127 116 017 076 117 128 143 043 103 120  
136 044 107 123 143 004 043 004 055 111 125 DAYTRON 004 DYNASTY 043 DYNATECH 062 ELECTROHOME 024 EMERSON 004 047 116 155 FISHER  
007 FUNAI 028 FUTURETECH 043 GE 004 JENSEN JVC KEC KENWOOD KLOSS KMC KTV LG LODGENET LOGIK LUXMAN LXI MAGNAVOX 023  
025 027 176 161 165 167 116 131 143 092 047 116 127 023 024 056 144 152 156 165 043 047 TANDY TATUNG TECHNICS TECHWOOD TEKNIKA 038  
070 083 145 070 059 043 143 154 TELEFUNKEN TELERENT TERA TMK TOSHIBA TOTEVISION UNIVERSAL VIDEO CONCEPTS VIDIKRON  
VIDTECH WARDS 116 015 030 040 051 101 138 009 077 005 048 143 057 043 143 006 028 043 050 051 096 151 153 154 MARANTZ MATSUI MEMOREX  
METZ MGA MINERVA MITSUBISHI MTC 015 166 004 061 160 077 052 081 160 006 022 059 063 064 127 164 164 058 116 089 101 105 127 133 137 021  
033 039 082 166 043 048 116 007 072 116 006 024 028 042 077 116 006 024 028 040 109 116 124 146 006 062 101 YAMAHA YORK YUPITERU ZENITH  
ZONDA 116 008 009 019 028 061 063 064 072 116 143 164 006 116 072 073 095 103 006 008 009 034 007 015 028 030 082 094 101 116 160 014 019 022  
028 VCRs AIWA AKAI AMPRO ANAM AUDIO DYNAMICS BROKSONIC CANON CAPEHART CRAIG CURTIS MATHES DAEWOO 034 016 043 046 124  
125 146 072 031 033 103 012 035 028 108 003 023 039 043 037 129 031 033 040 135 033 041 007 010 064 065 110 111 112 116 119 023 039 043 053 017  
025 027 029 034 035 036 037 101 129 131 138 008 009 010 033 063 072 107 144 147 136 013 020 101 106 123 031 005 108 117 DAYTRON 108 DBX 012  
DYNATECH 034 ELECTROHOME 059 EMERSON 006 031 046 153 FISHER 003 FUNAI 034 GE 031 109 GO VIDEO 132 GOLDSTAR 012 114 HARMAN  
KARDON 012 045 HITACHI 004 018 026 063 137 150 INSTANT REPLAY 031 033 JCL 031 033 JCPENNY 012 013 015 066 101 JENSEN 043 JVC 012 031  
033 050 055 060 152 KENWOOD 014 034 039 048 LG 154 LLOYD 034 LXI 003 009 013 034 101 106 MAGIN 040 MAGNAVOX 031 033 034 068  
MARANTZ 012 031 033 MARTA 101 MATSUI 027 030 MEI 031 033 MEMOREX 003 010 014 034 053 072 134 139 MGA 045 046 059 MINOLTA 013 020  
MITSUBISHI 013 020 045 051 059 061 MTC 034 040 MULTITECH 024 034 034 043 NEC NORDMENDE OPTONICA PANASONIC PENTAX PHILCO  
PHILIPS PILOT PIONEER PORTLAND PULSAR QUARTZ QUASAR RCA 033 040 043 048 130 150 043 047 014 017 041 067 067 069 REALISTIC 031 033  
101 102 RICO RUNCO SALORA SAMSUNG SANSUI SANYO 046 049 151 SCOTT SEARS 012 043 053 066 140 013 031 031 071 101 013 108 072 011 033  
013 041 140 003 033 101 058 148 014 032 107 120 022 003 134 017 003 014 023 039 043 048 054 070 145 020 034 033 101 074 083 133 031 033 063 067  
034 054 067 021 048 014 066 020 062 144 008 034 075 033 063 145 010 040 145 034 107 147 014 053 040 109 031 054 040 109 122 043 007 102 112 125



048 010 104 105 113 115 135 014 102 037 112 129 131 008 009 010 013 017 020 031 042 073 081 031 054 024 003 009 057 058 149 SOUNDESIGN 034  
STS 013 SYLVANIA 031 033 SYMPHONIC 034 TANDY 010 034 TATUNG 039 043 TEAC 034 039 TECHNICS 031 033 TEKNIKA 019 031 THOMAS 034  
TMK 006 TOSHIBA 008 013 082 112 TOTEVISION 040 101 UNITECH 040 VECTOR RESEARCH 012 VICTOR 048 VIDEO CONCEPTS 012 034  
VIDEOSONIC 040 WARDS 003 013 033 034 131 YAMAHA 012 034 ZENITH 001 034 072 080 SHARP SHINTOM SONY 101 149 031 052 056 076 077 078  
034 059 067 043 070 033 034 101 042 047 059 131 046 017 024 031 040 053 054 039 043 048 056 058 101 206-3767 PAGE 46 Programming Codes  
VCR/DVDs APEX DIGITAL 222 DENON 220 214 GE 205 206 GOLDSTAR 210 216 225 HARMAN KARDON 227 JVC LG MAGNAVOX MARANTZ  
MITSUBISHI NAD ONKYO Other Manufacturers Brand Names and Programming Codes 212 201 210 216 225 213 224 202 223 208 217 PANASONIC  
PHILIPS PIONEER PROCEED PROSCAN RCA SAMSUNG 203 213 204 221 205 205 211 209 226 206 206 215 SONY THOMPSON TOSHIBA YAMAHA  
ZENITH 207 205 219 209 210 206 208 218 216 225 Cable Boxes ABC 003 052 ANTRONIK 014 ARCHER 005 CABLE STAR 026 CENTURION 092  
CENTURY 007 CITIZEN 007 COLOUR VOICE 065 COMBANO 080 COMTRONICS 019 DIAMOND 023 EAGLE 020 EASTERN 057 ELECTRICORD 032  
GE 072 004 039 042 046 053 007 014 024 090 081 030 030 040 062 066 GEMINI 008 GI 052 GOLDEN CHANNEL HAMLIN 049 HITACHI 052  
HOSPITALITY 070 JERROLD 002 010 LG 058 M-NET 037 MACOM 033 MAGNAVOX 010 MEMOREX 001 MOVIE TIME 028 NSC 015 OAK 016  
PANASONIC 044 PARAGON 001 022 025 054 074 030 050 055 055 077 003 004 008 009 052 069 074 101 012 064 079 032 028 038 071 073 031 037 053  
047 006 012 085 090 PIONEER 034 051 POST NEWS WEEK PRUCER 059 PTS 011 048 074 PULSAR 001 RCA 047 REGAL 049 050 REGENCY 057  
REMBRANT 025 RK 091 SAMSUNG 030 061 SCIENTIFIC ATLANTA 042 043 SHERITECH 022 SIGNAL 030 PHILIPS 013 020 065 052 063 076 016 071  
072 073 068 083 003 011 041 045 046 SIGNATURE SL MARX SPRUCER STARCOM STARGATE SYLVANIA TADIRAN TANDY TEXSCAN TOCOM  
TOSHIBA UNIKA UNITED CABLE UNIVERSAL VIEWSTAR ZENITH 052 030 047 002 008 067 030 017 029 039 001 007 004 005 027 012 088 001 078 004  
008 009 030 067 040 056 014 053 007 032 015 089 021 024 014 024 026 035 018 086 087 060 093 Cable Satellite ALPHASTAR DSR 233 AMPLICA 160  
BIRDVIEW 161 BSR 163 CAPETRONICS 163 CHANNEL MASTER 128 CHAPARRAL 118 CITOHO 164 CURTIS MATHES 160 DRAKE 115 121 183 DX  
ANTENNA 134 ECHOSTAR 148 203 207 236 239 123 124 125 146 165 119 122 187 228 116 117 120 162 222 226 156 150 204 208 166 167 205 209 186  
168 206 210 232 ELECTRO HOME 199 EUROPLUS 224 FUJITSU 127 131 132 137 243 244 GENERAL INSTRUMENT 113 114 126 139 141 169 211  
HITACHI 144 177 HOUSTON TRACKER 143 147 149 161 167 214 HUGHES 178 HYTEK 163 JANIEL 170 241 JERROLD 171 KATHREIN 218 LEGEND  
167 LG 249 LUTRON 242 LUXOR 172 223 120 175 MEMOREX 167 NEXTWAVE 138 NORSAT 179 PACE SKY SATELLITE PANASONIC 170 PANSAT 231  
PERSONAL CABLE PHILIPS 181 PICO 215 PRESIDENT 129 PRIMESTAR 140 PROSAT 182 RCA 176 REALISTIC 153 SAMSUNG 233 SATELLITE  
SERVICE CO 138 MACOM 169 173 174 SCIENTIFIC ATLANTA SONY STARCAST SUPER GUIDE TEECOM 195 142 213 151 130 133 198 247 112 126  
154 188 211 245 225 238 111 194 248 234 235 180 219 202 227 234 235 136 185 197 200 217 240 237 135 152 153 155 158 159 189 190 196 246 229 191  
192 193 201 230 TOSHIBA UNIDEN 212 220 221 216 184 UNIDEN VIEWSTAR WINEGARD ZENITH 145 157 167 AUX Audio GOLDSTAR HITACH JVC  
KENWOOD 005 010 006 039 049 050 001 013 029 031 044 LUXMAN MARANTZ NAD NAKAMICHI ONKYO 017 002 032 014 051 008 041 021 028 030  
035 052 009 025 040 OPTIMUS PANASONIC PIONEER QUASAR RCA 011 003 007 024 047 003 004 013 015 016 026 036 022 036 046 020 023 033 037  
SHARP SHERWOOD SONY SOUNDESIGN TOSHIBA VICTOR 013 012 027 053 018 042 006 029 043 045 019 034 038 048 039 Audio CD Players ADC  
AIWA AKAI DENON EMERSON FISHER GE HITACHI JVC KENWOOD 206-3767 104 149 212 134 101 223 133 175 113 168 209 133 117 105 178 189  
202 165 200 190 221 222 136 152 166 122 138 140 LUXMAN MAGNAVOX MARANTZ MCS MITSUBISHI ONKYO OPTIMUS 166 196 227 228 110 113 118  
144 200 108 127 180 129 224 111 120 231 125 213 100 139 162 154 216 123 135 135 225 147 179 126 215 107 140 163 155 198 217 153 173 172 179 141  
159 226 156 169 229 230 130 232 110 145 164 131 124 146 165 PANASONIC PHILIPS PIONEER QUASAR RADIO SHACK RCA SANYO SEARS SHARP  
170 106 203 127 237 107 179 206 106 186 114 114 121 147 110 151 176 184 219 233 135 195 199 124 167 171 187 191 205 207 176 188 133 157 166 140  
158 168 141 150 181 SHERWOOD SONY TECHNICS TEAC YAMAHA 200 217 102 141 100 182 234 106 184 103 160 185 109 194 204 210 150 115 193  
142 183 235 148 203 112 161 161 119 211 116 128 168 192 236 151 214 132 132 197 137 174 208 176 218 141 177 201 143 PAGE 47 Remote Key  
Functions By Mode Key functions list for your remote control TV Mode Zenith Code 101 VCR Mode Zenith Code 201 Cable Mode Zenith Code 353 Cable  
Box On/Off Selects Cable Selects VCR Selects Aux Selects TV CABLE FC Fav Ch Cable Flashback TV Mute Cable Channel Up Cable Channel Down TV  
Volume Louder TV Volume Quieter Cable Digit 1 Cable Digit 2 Cable Digit 3 Cable Digit 4 Cable Digit 5 Cable Digit 6 Cable Digit 7 Cable Digit 8 Cable  
Digit 9 Cable Digit 0 Cable Enter Cable Menu Cable Up Arrow Cable Down Arrow Cable Left Arrow Cable Right Arrow Cable Quit No Function No  
Function Cable Day Up Cable Day Down Cable Pg Up Cable Pg Down Cable Timer Cable Info Cable Buy Cable Guide VCR Rewind VCR Play VCR Stop  
VCR Fast Forward KEY NAME POWER CABLE VCR AUX TV SURF FLASHBK MUTE CHANNEL UP CHANNEL DOWN VOLUME (RIGHT) VOLUME  
(LEFT) 1 2 3 4 5 6 7 8 9 0 ENTER MENU UP ARROW DOWN ARROW LEFT ARROW RIGHT ARROW QUIT RATIO VIDEO SIGNAL AUDIO DASH CC  
TIMER SOURCE RECORD PAUSE REWIND PLAY STOP F FWD MBR4286 AUX Mode (DVD) Zenith Code 960 AUX TV/DISC Selects Cable Selects VCR  
Selects AUX Selects TV AUX Audio AUX Return TV Mute AUX Skip >> AUX Skip << TV Volume Louder TV Volume Quieter AUX Digit 1 AUX Digit 2 AUX  
Digit 3 AUX Digit 4 AUX Digit 5 AUX Digit 6 AUX Digit 7 AUX Digit 8 AUX Digit 9 AUX Digit 0 Aux Display AUX Menu AUX Up Arrow AUX Down Arrow  
AUX Title AUX Subtitle AUX Resume AUX Zoom AUX Clear AUX Marker AUX Marker Search AUX Repeat-Chap AUX Memory AUX Program AUX  
Open/Close AUX Angle AUX Pause AUX Scan << AUX Play AUX Stop/Eject AUX Scan >> TV On/Off VCR On/Off Selects Cable Selects Cable Selects VCR  
Selects VCR Selects Aux Selects AUX Selects TV Selects TV Surf On/Off VCR SP/EP TV Flashback VCR Flashback TV Mute TV Mute TV Channel Up VCR  
Channel Up TV Channel Down VCR Channel Down TV Volume Louder TV Volume Louder TV Volume Quieter TV Volume Quieter TV Digit 1 VCR Digit 1  
TV Digit 2 VCR Digit 2 TV Digit 3 VCR Digit 3 TV Digit 4 VCR Digit 4 TV Digit 5 VCR Digit 5 TV Digit 6 VCR Digit 6 TV Digit 7 VCR Digit 7 TV Digit 8  
VCR Digit 8 TV Digit 9 VCR Digit 9 TV Digit 0 VCR Digit 0 TV Enter VCR Enter TV Menu VCR Menu TV Select Up VCR Select Up TV Select Down VCR  
Select Down TV Adjust Left VCR Adjust Left TV Adjust Right VCR Adjust Right TV Menu Quit VCR Quit TV Aspect Ratio DsplyMde No Function TV Z-Video  
Selection No Function TV Signal Strength VCR VCR+ TV Audio Selection VCR Eject TV Dash "-" VCR CM Skip TV Closed Captions VCR Memory TV Timer  
VCR Timer TV Sources TV Tuner or VCR Tuner VCR Record VCR Record VCR Pause VCR Pause VCR Rewind VCR Rewind VCR Play VCR Play VCR Stop  
VCR Stop VCR Fast Forward VCR Fast Forward P124-00240 2/12 Some of the functions shown above may not be available on your equipment.



[You're reading an excerpt. Click here to read official ZENITH](http://yourpdfguides.com/dref/340985)

[C34W23-2 user guide](http://yourpdfguides.com/dref/340985)

<http://yourpdfguides.com/dref/340985>