




Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for ZENITH C36V22. You'll find the answers to all your questions on the ZENITH C36V22 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual ZENITH C36V22
User guide ZENITH C36V22
Operating instructions ZENITH C36V22
Instructions for use ZENITH C36V22
Instruction manual ZENITH C36V22

Operating Guide | Warranty

Model Numbers | C27V22 | C32V22 | C36V22 | HDTV Monitors

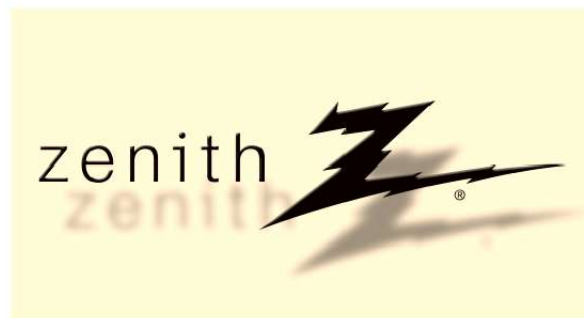

© Copyright 2002, Zenith Electronics Corporation



[You're reading an excerpt. Click here to read official ZENITH C36V22 user guide](http://yourpdfguides.com/dref/340995)
<http://yourpdfguides.com/dref/340995>

Manual abstract:

REFER SERVICING TO QUALIFIED SERVICE PERSONNEL. @The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance. **WARNING: TO PREVENT FIRE OR SHOCK HAZARDS, DO NOT EXPOSE THIS PRODUCT TO RAIN OR MOISTURE. POWER CORD POLARIZATION: CAUTION:** To prevent electric shock, match wide blade of plug to wide slot, fully insert. **ATTENTION:** P correspondante de la prise et pousser jusqu'au fond. **NOTE TO CABLE/TV INSTALLER:**

This reminder is provided to call the cable TV system installer's attention to Article 820-40 of the National Electric Code (U.S.A.). The code provides guidelines for proper grounding and, in particular, specifies that the cable ground shall be connected to the grounding system of the building, as close to the point of the cable entry as practical.

REGULATORY INFORMATION: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a residential installation. @@@@ · Increase the separation between the equipment and receiver. @ · Consult the dealer or an experienced radio/TV technician for help. **CAUTION:** Do not attempt to modify this product in any way without written authorization from Zenith Electronics Corporation.

Unauthorized modification could void the user's authority to operate this product. **COMPLIANCE:** The responsible party for this product's compliance is: Zenith Electronics Corporation, 2000 Millbrook Drive, Lincolnshire, IL 60069, USA · Phone: 1-847-941-8000. Entertainment Machine™ is a trademark of Zenith Electronics Corporation © Copyright 2002 Zenith Electronics Corporation our éviter les chocs électriques, introduire la lame la plus large de la fiche dans la borne **IMPORTANT SAFETY INSTRUCTIONS** Important safeguards for you and your new product Your product has been manufactured and tested with your safety in mind. However, improper use can result in potential electrical shock or fire hazards. To avoid defeating the safeguards that have been built into your new product, please read and observe the following safety points when installing and using your new product, and save them for future reference.

Observing the simple precautions discussed in this operating guide can help you get many years of enjoyment and safe operation that are built into your new product. This product complies with all applicable U.S. Federal safety requirements, and those of the Canadian Standards Association. 1. Read Instructions

All the safety and operating instructions should be read before the product is operated. 9. Attachments Do not use attachments not recommended by the product manufacturer as they may cause hazards. 2. Follow Instructions All operating and use instructions should be followed.

10. Ventilation Slots and openings in the cabinet are provided for ventilation and to ensure reliable operation of the product and to protect it from overheating, and these openings must not be blocked or covered. The openings should never be blocked by placing the product on a bed, sofa, rug, or other similar surface. This product should not be placed in a built-in installation such as a bookcase or rack unless proper ventilation is provided or the manufacturer's instructions have been adhered to. 3. Retain Instructions The safety and operating instructions should be retained for future reference. 4. Heed Warnings All warnings on the product and in the operating instructions should be adhered to. 5. Cleaning Unplug this product from the wall outlet before cleaning.

Do not use liquid cleaners or aerosol cleaners. Use a damp cloth for cleaning. 11. Power Sources This product should be operated only from the type of power source indicated on the marking label. If you are not sure of the type of power supply to your home, consult your product dealer or local power company.

For products intended to operate from battery power, or other sources, refer to the operating instructions. 6. Water and Moisture Do not use this product near water for example, near a bath tub, wash bowl, kitchen sink, or laundry tub, in a wet basement, or near a swimming pool. 12. Power Cord Polarization This product is equipped with a polarized alternating - current power plug (a plug having one blade wider than the other).

This plug will fit into the power outlet only one way. This is a safety feature. If you are unable to insert the plug fully into the outlet, try reversing the plug. If the plug should still fail to fit, contact your electrician to replace your obsolete outlet. Do not defeat the safety purpose of the polarized plug. 7. Accessories, Carts, and Stands Do not place this product on a slippery or tilted surface, or on an unstable cart, stand, tripod, bracket, or table. The product may slide or fall, causing serious injury to a child or adult, and serious damage to the product. Use only with a cart, stand, tripod, bracket, or table recommended by the manufacturer, or sold with the product. Any mounting of the product should follow the manufacturer's instructions, and should use a mounting accessory recommended by the manufacturer.

13. Power Cord Protection Power-supply cords should be routed so that they are not likely to be walked on or pinched by items placed upon or against them, paying particular attention to cords at plugs, convenience receptacles, and the point where they exit from the product. 8. Transporting Product A product and cart combination should be moved with care. Quick stops, excessive force, and uneven surfaces may cause the product and cart combination to overturn.

(Continued on next page) **PORTABLE CART WARNING 206-3706 2-WR-POLZ PAGE 3 IMPORTANT SAFETY INSTRUCTIONS** (Continued from previous page) nductors, location of 14. Outdoor Antenna Grounding If an outside antenna or cable system is connected to the product, be sure the antenna or cable system is grounded so as to provide some protection against voltage surges and built-up static charges. Article 810 of the National Electrical Code (U.S.A.), ANSI/NFPA 70 provides information with regard to proper grounding of the mast and supporting structure, grounding of the lead-in wire to an antenna discharge unit, size of grounding co antenna-discharge unit, connection to grounding electrodes, and requirements for the grounding electrode. Example of Grounding According to National Electrical Code Instructions short-out parts that could result in a fire or electric shock. Never spill liquid of any kind on the product. 19. Servicing Do not attempt to service this product yourself as opening or removing covers may expose you to dangerous voltage or other hazards. Refer all servicing to qualified service personnel.



[You're reading an excerpt. Click here to read official ZENITH C36V22 user guide](http://yourpdfguides.com/dref/340995)
<http://yourpdfguides.com/dref/340995>

20. *Damage Requiring Service* Unplug this product from the wall outlet and refer servicing to qualified service personnel under the following conditions: a. If the power-supply cord or plug is damaged. b. If liquid has been spilled, or objects have fallen into the product. c. If the product has been exposed to rain or water. d. If the product does not operate normally by following the operating instructions. Adjust only those controls that are covered by the operating instructions as an improper adjustment of other controls may result in damage and will often require extensive work by a qualified technician to restore the product to its normal operation. e. If the product has been dropped or the cabinet has been damaged. f. If the product exhibits a distinct change in performance.

Ground Clamp Antenna Lead in Wire Antenna Discharge Unit (NEC Section 810-20) Grounding Conductor (NEC Section 810-21) Ground Clamps Power Service Grounding Electrode System (NEC Art 250, Part H) Electric Service Equipment NEC - National Electrical Code 21. Replacement Parts 15. Lightning For added protection for this product (receiver) during a lightning storm, or when it is left unattended and unused for long periods of time, unplug it from the wall outlet and disconnect the antenna or cable system. This will prevent damage to the product due to lightning and power-line surges. When replacement parts are required, be sure the service technician has used replacement parts specified by the manufacturer or have the same characteristics as the original part. Unauthorized substitutions may result in fire, electric shock, or other hazards. 22. Safety Check Upon completion of any service or repairs to this product, ask the service technician to perform safety checks to determine that the product is in proper operating condition. 16. Power Lines An outside antenna system should not be located in the vicinity of overhead power lines or other electric light or power circuits, or where it can fall into such power lines or circuits.

When installing an outside antenna system, extreme care should be taken to keep from touching such power lines or circuits as contact with them might be fatal. 23. Wall or Ceiling Mounting The product should be mounted to a wall or ceiling only as recommended by the manufacturer. The product may slide or fall, causing serious injury to a child or adult, and serious damage to the product. 17.

Overloading Do not overload wall outlets and extension cords as this can result in a risk of fire or electric shock. 24. Heat The product should be situated away from heat sources such as radiators, heat registers, stoves, or other products (including amplifiers) that produce heat. 18. Object and Liquid Entry Never push objects of any kind into this product through openings as they may touch dangerous voltage points or **PAGE 4 3-WireRev6/00 Table of Contents**
Refer to the information below to hook up external equipment and set up the features on your Entertainment Machine Step 1.

Hook up external equipment and antenna or cable service wires to the TV. Install batteries in the remote control. After all connections have been made, plug your TV into standard household power, see pages 7 thru 14. Step 2. Go to page 18 to EZ program the TV. Step 3. Set up all other TV options see pages listed below. Safety Warnings . . .

.....
.....
.....
..... 2 Important Safety Information .

.....
.....
..... 3 - 4 Table of Contents .

.....
.....
.....
..... 5 Video Menu

..... 29 Contrast, Brightness, Color, Tint, Sharpness, Color Temp: . . . (Cool, Warm), EZ Picture: (Custom, Normal, Movie, Digital Pres, Video Game, Sports, Night Time, Weak Signal). Video Sub Menu, Aspect Ratio and other settings . .

..... 30 Audio Menu

..... 31 Bass, Treble, Balance, Audio Mode: (Stereo, Mono, SAP), EZ Bass Front Surround, EZ SoundRite, Speakers, EZ Sound: (Custom, Normal, Stadium, News, Music, Theater). Lock (Parental Control Menu) . .

..... 32 - 33 - 34 Restricts viewer programming. Special Menu EZ Timer: Sleep Timer . . Pb R AUDIO Pb R AUDIO R AUDIO R AUDIO R AUDIO
ANTENNA/CABLE Use to hookup your antenna or cable system. See pages 7, 8, 9, 10, 11. L L L MONO L MONO L HD-RGB INPUT Connect HD-RGB here. RGB Format: EDTV Set top Box 640 x 480p RGB Format: HDTV Set top Box 1920 x 1080i HD IN Connect progressive scan or high-definition component video equipment here.

Progressive Scan DVD, 480p EDTV Set top Box, 480p HDTV Set top Box, 1080i DVD IN Connect a standard component video equipment or DVD player here. DVD Player, 480i SDTV Set top Box, 480i PAGE 6 VIDEO 1 IN VIDEO 2 IN Connect your Audio/Video or S-Video equipment to these jacks. See pages 9, 10, 11. VIDEO / R - L AUDIO OUT Use these output jacks to connect external audio/video equipment. See page 15. 206-3808 Hook Up an Off-Ainna/Cable In jack on the back of the VCR. Connect the cable service wire that runs from the wall, according to one of the diagrams to the right. Make any other connections necessary for your setup. Remove the back of the remote and put in two "AAA" batteries. Cable service with or without a cable box In Out

output switch 3 4 Audio Video 3 Typical Cable TV Wall Jack Back of Remote 4 Plug in the TV.

Do not plug it into an outlet controlled by a switch. The TV is designed to operate on standard current, 120-volt 60 Hertz AC. Do not attempt to operate it on DC power. TV Back 120 V AC 60 Hz HD IN DVD IN VIDEO 1 IN VIDEO 2 IN MONITOR OUTPUT Y Pr Y S-VIDEO 1 S-VIDEO 2 Pr VIDEO VIDEO VIDEO Tune both the VCR and the television to channel 3 or 4 (cable box output channel) and use the cable box to change channels. No A/V cables are included with your TV.

Without A/V cable hookups, most VCRs will not play videocassettes in stereo sound. RGB ANTENNA CABLE Pb R AUDIO CB Pb R AUDIO R AUDIO R AUDIO R AUDIO L L L MONO L MONO L Connect your VCR to the Video 1 or Video 2 set of input jacks PAGE 10 206-3594 Hook Up S-VHS VCR Your Zenith TV may be connected to a Super-VHS VCR through the S-Video Input located on the front or rear source connection panels on your TV From Antenna or Cable Service With or Without a Cable Box VCR Back VCR Back AV Panel In output switch 3 4 S-Video Out 1 2 Hook up your S-VHS VCR to your Zenith TV according to the diagram shown at the right. Remove the back of the remote and put in two "AAA" batteries. Flat Wire (300 ohm) Audio Out RL Out Back of Remote 300/75 ohm Adapter 3 Plug in your TV. Do not plug it into a switched outlet.

Your Zenith TV is designed to operate on standard household current, 120-volt 60 Hertz AC. Do not attempt to operate it on DC power. TV Back 120 V AC 60 Hz 4 On the remote, press SOURCE repeatedly until "S-Video" is displayed. Or use the Source menu to choose the S-Video input the equipment is connected to.



[You're reading an excerpt. Click here to read official ZENITH](#)

[C36V22 user guide](#)

<http://yourpdfguides.com/dref/340995>

HD IN DVD IN VIDEO 1 IN VIDEO 2 IN MONITOR OUTPUT Y Pr RGB Y S-VIDEO 1 S-VIDEO 2 Pr VIDEO VIDEO VIDEO ANTENNA CABLE Pb R AUDIO Pb R AUDIO R AUDIO R AUDIO R AUDIO L L L MONO L MONO L Connect your S-Video VCR to the S-Video 1 or S-Video 2 set of input jacks 206-3594 PAGE 11 Hook Up Component Video Equipment Connecting component video DVD equipment DVD IN Connect a standard component video equipment or DVD player to DVD IN. DVD Player, 480i SDTV Set top Box, 480i TV Back 1 2 Make the connections as indicated. (Appearance of components may vary from those in the illustrations.) Plug in your TV. Do not plug it into a switched outlet. Your Entertainment Machine is designed to operate on standard household current, 120volt 60 Hertz AC.

Do not attempt to operate it on DC power. HD IN DVD IN VIDEO 1 IN VIDEO 2 IN MONITOR OUTPUT Y Pr RGB Y S-VIDEO 1 S-VIDEO 2 Pr VIDEO VIDEO VIDEO Pb R AUDIO Pb R AUDIO R AUDIO R AUDIO R AUDIO L L L MONO L MONO L 120 V AC 60 Hz 3 4 Press POWER to turn TV on. On the remote, press SOURCE repeatedly until "DVD" is displayed. Or use the Source menu to choose DVD. Y Pr Pb R L COMPONENT VIDEO OUT S-VIDEO OUT VIDEO R-AUDIO L-/MONO Component video jacks are sometimes labeled with CR, CB, or PB, PR. In this case, connect B to B and the R to R. The "Y" jack is usually labeled "Y", connect Y to Y. DVD Player with Component Video PAGE 12 206-3594 Hook Up HD Equipment Connecting high-definition equipment HD IN Connect progressive scan or high-definition component video equipment to HD IN. Progressive Scan DVD, 480p EDTV Set top Box, 480p HDTV Set top Box, 1080i TV Back 1 2 Make the HD connections as indicated. (Appearance of components may vary from those in the illustrations.) Plug in your TV. Do not plug it into a switched outlet. Your Entertainment Machine is designed to operate on standard household current, 120-volt 60 Hertz AC. Do not attempt to operate it on DC power. HD IN DVD IN VIDEO 1 IN VIDEO 2 IN MONITOR OUTPUT Y Pr RGB Y S-VIDEO 1 S-VIDEO 2 Pr VIDEO VIDEO VIDEO ANTENNA CABLE Pb R AUDIO Pb R AUDIO R AUDIO R AUDIO R AUDIO L L L MONO L MONO L 120 V AC 60 Hz 3 4 Press POWER to turn TV on.

On the remote, press SOURCE repeatedly until "HD-In" is displayed. Or use the Source menu to choose HD-In. Y Pr Pb R L HD OUT S-VIDEO OUT VIDEO R-AUDIO L-/MONO Set Top Box with Component Video 206-3594 PAGE 13 Hook Up HD-RGB Equipment Connecting High-definition RGB output equipment HD-RGB INPUT Connect HD-RGB equipment here. RGB Format: EDTV Set top Box 640 x 480p RGB Format: HDTV Set top Box 1920 x 1080i TV Back 1 2 Make the RGB connections as indicated. (Appearance of components may vary from those in the illustrations.) Plug in your TV. Do not plug it into a switched outlet. Your Entertainment Machine is designed to operate on standard household current, 120-volt 60 Hertz AC. Do not attempt to operate it on DC power. HD IN DVD IN VIDEO 1 IN VIDEO 2 IN MONITOR OUTPUT Y Pr RGB Y S-VIDEO 1 S-VIDEO 2 Pr VIDEO VIDEO VIDEO Pb R AUDIO Pb R AUDIO AUDIO R AUDIO R AUDIO R AUDIO 120 V AC 60 Hz L L L MONO L MONO L 3 4 Press POWER to turn TV on. On the remote, press SOURCE repeatedly until "HD-RGB In" is displayed. Or use the Source menu to choose HD-RGB In. RGB Out R Audio Out L Set Top Box with HD-RGB Output PAGE 14 206-3594 Audio/Video Signal Output Output to Audio/Video devices TV Back Make the Audio/Video Output connections as indicated. (Appearance of devices may vary from those in the illustrations.) HD IN DVD IN 1 2 Video Output Use the Video Out jack to connect to an external video device.

Audio Output Use the Left and Right Audio Out jacks to connect an external amplifier and speakers. (Refer to the Audio Menu on page 31 for instructions on how to turn the TV's internal speakers off and on.) Select Audio/Video Input on the external device to see the image and hear the sound from the TV. RGB VIDEO 1 IN VIDEO 2 IN MONITOR OUTPUT Y Pr Pb R AUDIO Y S-VIDEO 1 S-VIDEO 2 Pr VIDEO VIDEO VIDEO ANTENNA CABLE Pb R AUDIO R AUDIO R AUDIO R AUDIO L L L MONO L MONO L 3 VIDEO R-AUDIO L-/MONO IN IN IN Audio/Video Device 206-3594-A PAGE 15 Front Panel Controls/Inputs Using the front panel to operate the TV's basic features and to make temporary connections Typical TV Front Panel menu channel volume power Menu Operation 1 2 3 4 Press MENU to place menus on-screen. Use Channel Up/Down to select menu option. Use Volume Left/Right to adjust menu option. Use MENU to remove menus from screen. S-video video L-audio-R Left/Right Audio Used for stereo sound from external equipment. S-Video / Video Connects the video signals from external equipment. TV Operation 1 2 3 Press POWER to turn TV on and off. Use the CHANNEL Up/Down buttons to select the next higher/lower channel number Use the VOLUME Up/Down buttons to adjust the sound level louder or quieter to your preference. Typical Front Panel Controls menu channel volume power 1 2 3 PAGE 16 206-3594 TV Mode Remote Key Functions Note: Pressing TV puts remote into TV operating mode A quick list of the keys on your remote and what they do in TV mode, see page 44 for remote key functions in the 6 additional programmable modes... PRG (PROGRAM) Programs your remote to operate other products. See page 45. FLASHBK (FLASHBACK) Return to the last channel viewed. Selects AM/PM in Clock/Timer menus. SURF Turns on and off custom channel selection mode. When Surf mode is active, CHANNEL Up/Down keys "Surf" through the channels you've selected. CHANNEL (UP/DOWN) Select next available channel. ENTER Shows the Channel/Time display. Press after channel numbers for instant selection. LEFT/RIGHT ARROWS The Left/Right arrows adjust options. MENU Shows on-screen menus for TV mode. See pages 20 - 21. PIP FEATURES For PIP (Picture-in-Picture) operation. See page 36. TIMER Displays the Sleep Timer Menu. See "Timer Setup" on pages 35 - 36 for more information.

POWER Turns TV On or Off. PRG POWER CABLE SURF VCR AUX TV MUTE LED INDICATOR LIGHT Lights when keys are pressed. CABLE/VCR/AUX/TV Selects remote operating mode. MUTE Turns sound Off and On while the picture remains. Press once to quiet sound, press again to mute, press again to restore sound. VOLUME LEFT/RIGHT Adjusts the sound levels on your Entertainment Machine. NUMBER KEYPAD Selects channels directly and enters numeric values for some options. UP/DOWN ARROWS The Up/Down arrows select options. QUIT Removes on-screen display from view.



[You're reading an excerpt. Click here to read official ZENITH C36V22 user guide](http://yourpdfguides.com/dref/340995)
<http://yourpdfguides.com/dref/340995>

If no display is on, switches Surround sound feature On and Off on some TVs.

CC (CLOSED CAPTIONING) Displays the closed caption menu. FLASHBK CHANNEL VOLUME VOLUME CHANNEL 1 4 7 0 2 5 8 ENTER 3 6 9 MENU QUIT PIP SWAP PAUSE FREEZ CC TV/VCR SOURCE RECORD TIMER PLAY REWIND STOP FFWD TV/VCR-SOURCE Switches between watching TV through your antenna/cable, or through your VCR. Keys dedicated to VCR functions will still operate your VCR while the remote is in TV mode. remote control part number MBR3457CT (124-233-05) 206-3594 PAGE 17 EZ Program (Channel Search) Setup EZ Program Add/Del/Surf EZ Clock Captions Caption/Text Language Source Menu Background ENTER Cable TV Air Antenna Use EZ Program to automatically find and store in the TV's memory, all the channels in your area Select: CABLE TV, If you subscribe to a cable service. AIR ANTENNA, If you receive over-the-air programs.

Video Audio Lock Special Move Next MENU Back 1 2 3 4 5 Press MENU, (if not selected, use the Up/Down arrow to choose Setup Menu,) then press ENTER. Using the Up or Down arrow on the remote control, select EZ Program on your screen, then press ENTER. Using the Up or Down arrow, select either Cable TV or Air Antenna, on your screen. PRG POWER CABLE SURF VCR AUX TV MUTE FLASHBK CHANNEL VOLUME VOLUME Press ENTER to begin the channel search. When the channel search is complete, press MENU repeatedly until all menus are removed, or press QUIT.

1 4 7 CHANNEL 2 5 8 ENTER 3 6 9 EZ Program finds channels being received by the TV tuner. Cable will not work unless you subscribe to a cable service. 0 2/3 1/5 1/2/4 QUIT MENU 5 PIP SWAP PAUSE FREEZ CC TV/VCR SOURCE RECORD TIMER PLAY REWIND STOP FFWD Mini glossary Air Antenna Cable TV The device receiving the program signal sent over-the-air. Your EZ Program selection, if you subscribe to a cable service. PAGE 18 206-3594 On-Screen Menu Operation When selected, words and values change to a gold color Setup EZ Program Add/Del/Surf EZ Clock Captions Caption/Text Language Source Menu Background Setup Video Audio Lock Special Move Contrast Brightness Color Tint Sharpness Color Temp Advanced EZ Picture ENTER 50 50 50 G 50 R Use the remote to access the on-screen menus Video Audio Lock Special Next MENU Back Main TV Features Menu Video Menu 1 Press MENU on the remote control. Use the Up or Down directional arrow to "select" or highlight (change the text color to gold) the name of one of the five main menus on your screen like the VIDEO menu, then press ENTER. Use the Up or Down directional arrow to highlight an option like CONTRAST, then press ENTER. You can select other menu options like COLOR TEMP by pressing the UP or DOWN directional arrow repeatedly. Once the option is selected, in this case CONTRAST, use the RIGHT or LEFT directional arrow to adjust the setting; the larger the number the more contrast, the lower the number, the less contrast in the picture. Note: Some menu options use a checkmark to indicate setting, see page 19.

You can adjust the other menu options using the above procedure or if you are done changing the menu option settings: a. Press MENU repeatedly to go back to the main menu. b. Press QUIT to remove the menus from the TV screen. Additional instructions are usually included on the bottom of the menu indicating which remote keys to use to move to the right, move to the left, or return to the original menu, etc. Use the number keypad to enter numerical values when required. Mini glossary MENU ENTER UP/DOWN LEFT/RIGHT QUIT On-screen displays used to set up and operate TV features. Action key used to make changes on the menus. Menu UP or DOWN directional arrows used to "select" or highlight and choose menu options. Menu LEFT or RIGHT directional arrows used to "adjust" some menu settings.

Exits menus and removes on-screen displays. 2 3 2 1/2 3 ENTER 4 MENU QUIT 1/4 2 3 4 206-3594 PAGE 19 On-Screen Menus Overview Descriptions of the menus and displays Using MENU, the Up/Down arrows, and the ENTER key and the other keys indicated on the remote, the user can access the menus and displays described below. ON-SCREEN MENUS Setup Video Audio Lock Special EZ Program Add/Del/Surf EZ Clock Captions Caption/Text Language Source Menu Background Cable TV Air Antenna SETUP 18 Sets the TV up and adjusts the basic features. EZ Program 18 Automatically finds and stores active channels you tune to by using Channel Up/Down. Add/Del/Surf 23 Choose which channels will appear when using Channel Up/Down.

Adds favorite channels to Surf channel list. EZ Clock 24 Sets the TV's clock. Setup Video Audio Lock Special Contrast Brightness Color Tint Sharpness Color Temp Advanced EZ Picture 50 50 50 G 50 Captions 25 Turns closed captioning On, Off, or set it to come on when the television sound is muted. R Caption/Text 25 Chooses a captioning or text option. Language 26 Chooses the language you want the on-screen menus to appear in. Source Menu 27 Selects which picture and sound will appear on your TV. Background 28 Adds or removes menu background for better readability. Setup Video Audio Lock Special Bass Treble Balance Audio Mode EZ Bass Front Surr EZ Soundrite Speakers EZ Sound 11 40 L2 R VIDEO 29 - 30 Adjusts the picture appearance to your preference. Your options are: Contrast, Brightness, Color, Tint, Sharpness, Color Temperature, Advanced (Aspect Ratio etc.), EZ Picture. AUDIO 31 Customizes the sound to suit your room and taste. Your options are: Bass, Treble, Balance, Audio Mode, EZ Bass, Front Surround, EZ Soundrite, Speakers, EZ Sound. PAGE 20 206-3594 On-Screen Menus/Displays Overview Setup Video Audio LOCK 32 - 33 - 34 Allows parents to block programming based on the program's content rating or the A/V source for up to 99 hours, with the use of a password. SPECIAL 35 - 42 Goes beyond basics and customizes your Entertainment Machine's features. Your options are: EZ Timer 35 - 36 · Sleep Timer, Sets a time that the TV will automatically turn itself off, one time.

· Alarm, Sets the time the TV will turn on and off automatically each day. Channel Labels 37 Titles the channels with their network names (ABC, CBS, HBO, etc.). XDS Display 38 On/Off. If available, shows program information when a new channel is tuned to, or ENTER is pressed. PIP Menu 39 Adjusts the PIP inset image appearance. Source Sense 40 ON/Off. Controls how the Sources appear on the menu. EZ Demo 42 On/Off. Demonstrates the on-screen menus that control the TV's setup and operational features.

Aux Sources MPAA Age Block Content Blk Cdn. Ratings Set Hours Set Password Unblocked Blocked Lock Special Lock On/Off Setup Video Audio Lock Special EZ Timer CH.



[You're reading an excerpt. Click here to read official ZENITH C36V22 user guide](http://yourpdfguides.com/dref/340995)
<http://yourpdfguides.com/dref/340995>

Labels XDS Display PIP Menu Source Sense EZ Demo ENTER TO SET PRESS CH 32-UPN 2:45 PM STEREO PIP CH 2-CBS Channel/Time display shown with PIP on. OTHER ON-SCREEN DISPLAYS (See pages indicated.) · Surf's Up 22 · No Surfing 22 · Mute 22 · Volume Display 22 · Channel/Time 21 · Sleep Timer 22 · Captions/Text 21 CC Captions Off On EZ Mute Closed Captions menu display.

206-3594 PAGE 21 Other Functions & On-Screen Displays On-screen displays reveal the current status of your Entertainment Machine A "Surf" Channels Mode Active Display Press SURF to turn on Surf channels tuning mode; only channels specified as Surf channels will appear when using Channel Up/Down. PRG POWER Surf's Up! No Surfing Press SURF to display "No Surfing!" and return to normal channel tuning mode, using Channel Up/Down. CABLE VCR AUX TV MUTE A SURF FLASHBK B CHANNEL VOLUME VOLUME No Surfing S B Mute Display Press MUTE to quiet the sound. Press MUTE again to remove the sound. Press MUTE again to restore the sound.

MUTE CHANNEL 1 4 7 0 2 5 8 ENTER 3 6 9 C C Volume Display Press the VOLUME +/- key on the remote control to see the sound level status display. D QUIT MENU Volume 18 PIP SWAP PAUSE FREEZE CC TV/VCR SOURCE DE Channel/Time Display Press ENTER on the remote control to view the Channel/Time/incoming audio signal display. Remove On-Screen Displays and Menus Instantly Press QUIT to remove displays and menus and return to TV viewing, or wait a few moments and the displays and menus will automatically disappear from the screen. Sleep Timer Display Sleep Timer Status Display. Appears one minute before the TV automatically turns itself off. RECORD TIMER PLAY REWIND STOP FFWD F F SLEEP TIMER 0:10 "Surf" Channels are typically your favorite channels that you tune to and watch frequently. PAGE 22 206-3594 Channel Add/Delete/Surf Setup Setup EZ Program Add/Del/Surf Ch 2 CBS Deleted Added Surf EZ Clock Captions Caption/Text Language Customize your channel selection list: Add Channels not found by EZ Program, Delete channels you don't watch, Create a favorite channels list to "Surf" - with Surf on, only those channels specified as Surf channels will appear when using Channel Up/Down Video Audio Lock Special Move Add, Source Menu Background ENTER Next MENU Back 1 2 3 4 5 Use the NUMBER keypad to go to the Channel you want to Delete, or include in the Surf channel list. PRG POWER Press MENU, use the Up/Down arrow to select the then press ENTER. Use the Up/Down arrow to highlight the Add/Del/Surf option, then press ENTER. Use the Up/Down arrow to pick ADDED, DELETED, or SURF; move the checkmark next to the option, then press ENTER.

Use MENU to go back to the SETUP menu. Press QUIT to remove menu when finished or go to another channel you want to add or delete by using the NUMBER keypad to select it and repeat from Step 3. CABLE SURF VCR AUX TV MUTE FLASHBK CHANNEL VOLUME VOLUME CHANNEL 1 2 5 8 ENTER 3 6 9 1 3/4 2/5 4 7 0 2/3/4 QUIT If you've deleted a channel, it isn't gone for good. Just select it using the NUMBER keypad on the remote, or add it later. "Surf" channels are also automatically "Added." MENU 5 PIP SWAP PAUSE FREEZE CC TV/VCR SOURCE RECORD TIMER PLAY Mini glossary ADDED Includes new channels to the channel list that you'll scroll through when using Channel Up/Down. REWIND STOP FFWD DELETED Removes channels that you don't watch from the channel list you'll scroll through using Channel Up/Down. SURF Adds your favorite channels to the Surf channel list. Press SURF, channels you specify as Surf channels will be the only ones to appear when you use Channel Up/Down. Press SURF to turn Surf off. (No Surfing!) and return TV to normal channel selection mode.

206-3594 PAGE 23 SETUP menu, Set the Clock Setup EZ Program Add/Del/Surf EZ Clock Captions Caption/Text Language Source Menu Background Setup Video Audio Lock Special Move EZ Program Add/Del/Surf EZ Clock Captions Caption/Text Language Source Menu Background ENTER Set the clock yourself or have the TV do it for you Video Audio Lock Special TO SET PRESS ENTER Next MENU Back 1 2 In the Setup menu with the EZ ENTER to go to the EZ Clock Menu. PRG POWER Use the Select UP or DOWN arrows, the Adjust LEFT or RIGHT arrows, and the NUMBER keypad to set the clock menu options. As indicated on the menu, use FLASHBK to set AM or PM. EZ Clock Menu Options Manual Mode User sets the EZ Clock options. · Clock Mode: Auto, Manual.

· Time Set: Highlight Time Set, press the right arrow. Set hours/minutes using the NUMBER keypad or the left/right arrow keys. Use Flashbk for AM/PM. CABLE SURF VCR AUX TV MUTE FLASHBK CHANNEL 2 VOLUME Automatic Mode TV sets the clock, but the user can enter the menus and make custom changes if needed. · Time Zone: Auto, Eastern, Central, Mountain, Pacific.

· Daylight Savings: Auto, Off, On. VOLUME CHANNEL 1 2 5 8 ENTER 3 6 9 2 2 4 7 0 3 Press QUIT to return to TV viewing. 1 QUIT MENU The On/Off timers will not work until the Clock on your television has been set. PIP SWAP PAUSE FREEZE 3 Clock option highlighted, press 2 CC RECORD TIMER PLAY TV/VCR SOURCE REWIND STOP FFWD Mini glossary TIME HOURS A four-number figure broken down into hours and minutes; first two numbers are hours, last two numbers are minutes. First two numbers entered when setting the clock. MINUTES Second two numbers entered when setting the clock.

FLASHBK Use to choose AM or PM when setting time. 206-3594 PAGE 24 Captions Caption/Text Setup EZ Program Add/Del/Surf EZ Clock Captions Caption/Text Language Source Menu Background ENTER Setup Video Off On EZ Mute EZ Program Add/Del/Surf EZ Clock Captions Caption/Text Language Source Menu Background ENTER Caption 1 Caption 2 Caption 3 Caption 4 Text 1 Text 2 Text 3 Text 4 MENU Turn on Closed Captioning or Captions when select the SETUP menu, select Off, On or EZ Mute. sound is Mute, then ENTER. a Closed choose Captions or Text option Video Audio Lock Special Move Audio Lock Special Next MENU Back Move Next Back Caption/Text allows your Entertainment Machine to receive various closed caption and text options provided by broadcasters.

Availability and functionality of Caption/Text is determined only by the broadcaster and may not be available on a given program. Standard captions are usually on Caption1, standard text is usually on Text 1. PRG POWER CABLE SURF VCR AUX TV MUTE FLASHBK 1 2 3 Press MENU, use the Up/Down arrow to then press VOLUME CHANNEL VOLUME Use the Up/Down arrow to choose Captions, then press ENTER.



[You're reading an excerpt. Click here to read official ZENITH C36V22 user guide](http://yourpdfguides.com/dref/340995)
<http://yourpdfguides.com/dref/340995>

Use the Up/Down arrow to Note: If you selected either On or EZ Mute, then use the Up/Down arrows to choose an option from the Caption/Text menu: Caption 1, Caption 2, Caption 3, Caption 4, Text 1, Text 2, Text 3, or Text 4; so that the option will appear when the TV is muted or a program is tuned to that has Closed Captions or Text. @Standard closed captioning is available using the Caption 1 option. @@@@Use the Up/Down arrow to select the Source Menu, then press ENTER. @@@@Your TV can be set up to show what sources are connected. @@@@Any source can be used for the picture and sound for the main screen. Use SWAP to switch the main screen and the PIP inset pictures, when the PIP inset is on the screen. PRG POWER CABLE VCR AUX TV MUTE 1 2 3 4 5 SURF FLASHBK CHANNEL VOLUME VOLUME CHANNEL 1 4 7 0 2 5 8 ENTER 3 6 9 2/3/4 1 2/3/4 QUIT MENU 5 A PIP SWAP PAUSE FREEZ CC TV/VCR SOURCE RECORD TIMER PLAY REWIND STOP FFWD 206-3594 on-screen.

@@@The more contrast, the brighter the picture appears. @@Color: Adjusts levels of all colors in the TV picture. @@Sharpness: Raises or lowers the definition of the picture. The lower the level, the softer the image will appear. @@Advanced Video Menu Options: See next page.

@@Custom: Allows you to adjust the picture the way you want. Normal: Resets the options to their original settings. @@@Use the Up/Down arrow to select Advanced, then press ENTER. @@@@ 4 7 0 2/3/4 5 1/2/3 QUIT MENU 5 PIP SWAP PAUSE FREEZ CC TV/VCR SOURCE RECORD TIMER PLAY REWIND FFWD STOP Mini glossary NORMAL 16X9 WIDESCREEN Standard 4 x 3 almost square-like picture proportion used for most TV formats.

@@@Choose from: · Bass: Increases/decreases lower-end sounds.

· Treble: Increases/decreases higher-end sounds. @@@EZ Bass: Turns the bass booster function on or off. · Front Surround: Turns front surround sound on or off. · EZ SoundRite: Turns the uniform volume level on or off. · Speakers: Turns the TV speakers on or off. @@Use the Up/Down arrow to select another audio option and adjust it or press QUIT to return to TV viewing. 1/2/4 1 1/2 QUIT MENU PIP SWAP PAUSE FREEZ CC TV/VCR SOURCE 4 3 RECORD TIMER PLAY REWIND STOP FFWD Not all programming is broadcast in stereo sound or has 2nd Audio SAP. Mini glossary STEREO SOUND MONO SOUND 2nd Audio/SAP Stereo (stereophonic) sound refers to audio that's divided into right and left sides. Mono (monaural) sound is one channel of sound. For more than one speaker, all the speakers play the same audio.

Second audio program provided by some broadcasters; usually a different language. 206-3594 PAGE 31 Lock Options Overview If used, this optional feature can "block" undesirable programming from appearing on the TV. Note: Lock, also known and referred to in the text as Parental Control, is not available in Computer Mode. To block Computer inputs, use the block AUX SOURCES option in the Lock menu in TV Mode; computer inputs will not be available.

Lock/Parental Control offers the user a wide variety of options and settings that restrict or "block" the programming that can appear on the TV. Parental control allows the user the capability of defining which program rating they consider acceptable, to the younger or more sensitive viewer. It can be preset and turned either on or off by the user who specifies the secret 4-number code, the password. The number of hours blocked are specified. General audience and children viewer blocks should both be programmed into the TV's memory. Viewer ratings are specified for both TV and the motion picture industry; both rating systems should be used, for complete coverage.

The ratings are based mainly on children's ages. Overview idual parameters such as: Strong Dialog, Bad Language, Sex Scenes, Violence To insure complete coverage for all TV programs, (movies and regular TV shows) choose a rating for MPAA, from the selections below AND choose ratings from the TV Parental Guidelines Rating System on the next page, using the Age Block option for General Audiences, and for Children. In addition to those, you may wish to add additional restrictions from the Content Block menu. See the Parental Control menu, and submenus example on the next two pages. Things to Consider before Setting Up Lock (Parental Control) · Determine which rating you consider acceptable to the viewer.

(For example, if you choose TV-PG, all more restrictive ratings will be automatically blocked; the viewer will not be able to see: TV-PG, TV-14, or TV-MA rated programming.) · Do you want to block the auxiliary video source entirely? (Blocks the signal sent by the equipment, such as a VCR, connected to the TV Audio/Video input jacks; in the Aux. Block option.) Or leave unblocked, then choose allowable ratings. · Block program "Content" based on indiv Scenes, or Fantasy Violence Scenes; in the Content Blk option.

· How many hours do you want Parental Control to be active? You can set the Hours option for up to 99 hours. · Select a secret password; in the Set Password option. Use the number keys on the remote. Don't forget the password, it is the only way you can access the Parental Control menu and change rating selections, or turn Parental Control off. · Do you want Parental Control to be active all the time? If not, you can turn it on or off; with the Lock On/Off option. You can set different Parental Control viewing restrictions for general audiences and for children - - both can be active at the same time. Simply specifying one content block such as Sex Scenes, will not automatically block another content in the programs from appearing. Even if you choose to leave the Aux inputs unblocked, the ratings you specify will automatically restrict the programming that appears from the video sources. You cannot disable Parental Control by disconnecting the TV from power. Block hours will automatically reset to the original block time setting specified if power is disconnected.

PAGE 32 206-3594 Lock Menu Setup EZ Program Add/Del/Surf EZ Clock Captions Caption/Text Language Source Menu Background Setup Video Audio Lock Aux Sources MPAA Age Block Content Blk Cdn. @@@@For Sex Scenes for example, use the "From TV-PG" setting. @@- Set a 4-number password.

@@@@@Not for children under age 17. Strong elements of sex and/or violence. Not for children under age 17 under any circumstances. Strong sexual content. @@@@English) Exempt Children 8+ General PG 14+ 18+ (Cdn. @@@@Unsuitable for children under 14, may contain: Strong Dialog, Bad Language, Sex, and Violence Scenes. Adults only, may contain: Strong Dialog, Bad Language, Sex, and Violence Scenes.

CHILDREN'S CLASSIFICATIONS TV-Y TV-Y7 Children Children 7 and over Considered suitable for all children under 7 years old.



[You're reading an excerpt. Click here to read official ZENITH](#)

[C36V22 user guide](#)

<http://yourpdfguides.com/dref/340995>

Considered suitable for children over 7, may contain Fantasy Violence Scenes. PAGE 34 206-3594 EZ Timer: Sleep Timer Menu Setup EZ Program Add/Del/Surf EZ Clock Captions Caption/Text Language Source Menu Background Setup Video Audio Lock Special Move EZ Timer CH. Labels XDS Display PIP Menu Source Sense EZ Demo ENTER TO SET PRESS Set the Sleep Timer to automatically turn the TV off, after the preset time has expired Video Audio Lock Special ENTER Next MENU Back A Sleep Timer Use TIMER to choose a preset time from 10 minutes to 4 hours for the TV to automatically turn itself off. PRG POWER Using the EZ Timer Menu CABLE SURF VCR AUX TV MUTE 1 2 3 Selecting Sleep Timer Menu With the EZ Timer menu selected, press ENTER.

Use the Up/Down arrows to choose Sleep Timer, then press ENTER. Use the Up/Down arrows to select a preset TV turn-off time from the options listed, press ENTER. Press QUIT to return to TV viewing. FLASHBK CHANNEL VOLUME VOLUME CHANNEL 1 4 7 0 2 5 8 ENTER 3 6 9 1/2 MENU QUIT 1/2 3 PIP SWAP PAUSE FREEZ CC TV/VCR SOURCE RECORD TIMER PLAY REWIND STOP FFWD A One minute before TV turnoff, the Sleep Timer on-screen display will appear letting you know that the TV will turn itself off in the time specified. 206-3594 PAGE 35 EZ Timer: On/Off Timer Menus Setup EZ Program Add/Del/Surf EZ Clock Captions Caption/Text Language Source Menu Background Setup Video Audio Lock Special Move EZ Timer CH. Labels XDS Display PIP Menu Source Sense EZ Demo ENTER TO SET PRESS Set the On/Off timers to turn the TV on each day at the specified time and off, or have the timer settings retained and disable the On/Off function temporarily Video Audio Lock Special ENTER Next MENU Back 1 2 Setting the TV Turn On Time With the EZ Timer menu selected, use the Up/Down arrows to choose On Time, then press ENTER. Use the number keypad or the Left/Right arrows to pick a time for the TV to automatically turn itself on each day. Use FLSHBK to set AM or PM. Setting the TV Turn Off Time With the EZ Timer menu selected, use the Up/Down arrows to choose Off Time, then press ENTER. Use the number keypad or the Left/Right arrows to pick a time for the TV to automatically turn itself off each day. Use FLSHBK to set AM or PM. Using the TV On/Off Timer Option With the EZ Timer menu selected, use the Up/Down arrows to choose On/Off Timer, then press ENTER. Select On of Off On: TV on/off timers function each day. Off: TV on/off timers do not function although on/off time settings are retained in menu. Press QUIT to return to TV viewing.

PRG POWER CABLE SURF VCR AUX TV MUTE FLASHBK CHANNEL VOLUME VOLUME 2 1 2 CHANNEL 1 2 5 8 ENTER 3 6 9 2 1 4 7 0 1 2 1 2 3 MENU QUIT 3 PIP SWAP PAUSE FREEZ CC TV/VCR SOURCE RECORD TIMER PLAY REWIND STOP FFWD PAGE 36 206-3594 Using Preset Channel Labels Setup EZ Timer CH. Labels XDS Display PIP Menu Source Sense EZ Demo Customize your Channel/Time on-screen display by adding preset Channel Labels CH 32-UPN 2:45 PM STEREO CH 23 - - - Video Audio Lock Special Channel/Time Display Move ENTER Next MENU Back 1 2 3 4 5 Using either the NUMBER keypad or the Channel Up/Down keys on the remote, select a channel. Press MENU, use the Up/Down arrow to select Special, then press ENTER. Select the Ch. Labels option using the Up/Down arrow, then press ENTER. Pressing either the Up or Down arrow repeatedly, pick the label you want from the available selections; such as A & E. To continue channel labeling, select another channel or if you are finished, press QUIT to remove menu. Some channels already provide a channel label which is included with the broadcast signal. Labeling the channels helps identify which familiar nationwide channels are available. For example, A & E - Arts and Entertainment, CNN - News, ESPN - Sports, HBO - Movies, and so on. .. PRG POWER CABLE SURF VCR AUX TV MUTE FLASHBK 1/5 VOLUME CHANNEL VOLUME CHANNEL 1 2 5 8 ENTER 3 6 9 1/5 2/3 2 4 7 0 2/3 QUIT MENU 5 PIP SWAP PAUSE FREEZ CC TV/VCR SOURCE RECORD TIMER PLAY REWIND STOP FFWD Mini glossary ---NONE The 4 dashes will allow a channel label to appear; if one is provided by the broadcaster. Prevents any channel label from appearing. 206-3594 PAGE 37 XDS On-Screen Display Rating: TV-14 Setup Ch 25 - PBS 7:15 PM Stereo EZ Timer CH.

Labels XDS Display PIP Menu Source Sense EZ Demo Off On Video Audio Lock Let the Extended Data Service display in-depth program information DISASTERS Length 01:00 Time Left 00:45 Special Move ENTER Next MENU Back 1 2 Press MENU, use the Up/Down arrow to select the SPECIAL menu on your screen, then press ENTER. PRG POWER Use the Up/Down arrow to select the XDS DISPLAY option, then press ENTER. CABLE SURF VCR AUX TV MUTE essed, Use the Up/Down arrow to choose: On, or Off. 3 On: XDS Display will appear as channels are changed or ENTER is pr Off: XDS Display will not appear. FLASHBK CHANNEL VOLUME VOLUME 4 Press QUIT to remove the menu and return to TV viewing. 1 4 CHANNEL 2 5 8 ENTER 3 6 9 At this printing, XDS data may only be provided by some broadcasting stations; and as a result, may only be available on some channels. Even though XDS data may be present, it may not be available during commercial or network breaks. 7 0 1/2/3 1 1/2 QUIT MENU 4 PIP SWAP PAUSE FREEZ CC TV/VCR SOURCE Mini glossary XDS Extended Data Service - - If provided by the broadcaster, may show some or all of the following information: Channel/Time/Audio display. Network label if present. Title of program. Length of program in hours and minutes. Time remaining on the program in hours and minutes. Program content rating, and if PIP is active, the PIP channel number. RECORD TIMER PLAY REWIND STOP FFWD PAGE 38 206-3594 PIP Inset Picture Adjustments Setup EZ Timer CH. Labels TO SET PRESS ENTER XDS Display PIP Menu Source Sens EZ Demo Contrast Brightness Color Tint Size 50 50 50 G R Set the PIP inset picture appearance options to your personal viewing preferences Video Audio Lock Special Move ENTER Next MENU Back 1 2 Press MENU.

Use the Up/Down arrow to select the SPECIAL menu, press ENTER. PRG POWER Use the Up/Down arrow to select the PIP Menu option, then press ENTER. @@The more contrast, the brighter the picture appears. · Brightness: Increases or decreases amount of white in the PIP picture. · Color: Adjusts levels of all colors in the PIP picture. · Tint: Adjust the relative amounts of the color red and green in the PIP picture. · Size: Chooses the size that the PIP inset will appear on the screen: Small or Large.



[You're reading an excerpt. Click here to read official ZENITH C36V22 user guide](http://yourpdfguides.com/dref/340995)
<http://yourpdfguides.com/dref/340995>

Using the Up/Down arrow on the remote control, choose Contrast on your screen. Using the Left/Right arrow, change the contrast level to your preference. Press QUIT, to return to TV viewing, or press MENU and repeat from step two to set other PIP inset appearance menu options.

See the PIP section for Picture-in-Picture setup and operation. CABLE SURF VCR AUX TV MUTE FLASHBK CHANNEL VOLUME VOLUME CHANNEL 1 4 7 0 2 5 8 ENTER 3 6 9 1/2 4 3 4 5 1/2/3 1/5 MENU QUIT 5 PIP SWAP PAUSE FREEZ CC TV/VCR SOURCE RECORD TIMER PLAY REWIND STOP FFWD 206-3594 PAGE 39 Source Sense Sub-Menu Source Sense automatically determines the picture and sound sources connected to the TV Setup Video Audio Lock Special Move EZ Program Add/Del/Surf EZ Clock Captions Caption/Text Language Source Menu Background TO SET PRESS ENTER Main Source PIP Source Antenna Video 1 Video 2 F Video DVD HD HD-RGB Main Source PIP Source Antenna Video 1 Video 2 F Video DVD HD HD-RGB Main Source PIP Source Antenna Video 1 Video 2 F Video DVD HD HD-RGB ENTER Next MENU Back Selected Source appears in Yellow (shown here in bold for clarity) Available Sources appear in White (shown here in bold italic for clarity) Non-available Sources appear in Gray (shown here in bold for clarity) Setup Video Audio Lock Special Move EZ Timer CH. Labels XDS Display PIP Menu Source Sense EZ Demo On Off PRG POWER CABLE SURF VCR AUX TV MUTE FLASHBK CHANNEL VOLUME VOLUME Move ENTER Next MENU Back CHANNEL 1 2 3 4 5 Press MENU, then press Use the Up/Down arrow to select the SPECIAL menu, then press ENTER. Use the Up/Down arrow to select SOURCE SENSE, then press ENTER. Use Up/Down to select On or Off.

Press QUIT to remove menus and return to TV viewing. Source Sense On TV shows sources with and without equipment connected. · Selected Source: Appears in yellow text on the menu. · Connected Sources: Appear in white text on the menu. · Unconnected Sources: Appear in gray text on the menu.

1 4 7 0 2 5 8 ENTER 3 6 9 2/3/4 1/5 1/2/3 QUIT MENU 5 PIP SWAP PAUSE FREEZ CC TV/VCR SOURCE RECORD TIMER PLAY Source Sense Off (Default) TV shows all source menu options. · Selected Source: Appears in yellow text on the menu. · Connected/Not Connected Sources: All sources appear in white text on the menu. REWIND STOP FFWD S-Video will appear on the source menu if you connect S-Video equipment. PAGE 40 206-3594 ENTER.

Source Selection Options Choose the connected source you want to see and hear on your Entertainment Machine TV Back HD IN DVD IN VIDEO 1 IN VIDEO 2 IN MONITOR OUTPUT Y Pr RGB Y S-VIDEO 1 S-VIDEO 2 Pr VIDEO VIDEO VIDEO ANTENNA CABLE Pb R AUDIO Pb R AUDIO R AUDIO R AUDIO R AUDIO L L L MONO L MONO L Camcorder S-Video Video L Audio R R -AUD IO-L VCR VIDEO AUDIO /VIDEO OUT 1 Press SOURCE repeatedly to choose from the available viewing sources or use the Source menu. Antenna: Antenna/Cable on TV back near Jackpack, Over-the-Air Antenna or Cable service signal source. R -AUD IO-L S-Video VIDEO AUDIO /VIDEO OUT S-VIDEO R -AUD IO-L OUT DVD Video 1 In: on TV back Jackpack, Set of Composite Audio/Video Input jacks. R -AUD IO-L VIDEO Video 2 In: on TV back Jackpack, Set of Composite Audio/Video Input jacks. F Video In: on TV front Jackpack, Set of Composite Audio/Video Input jacks.

F S-Video In: on TV front Jackpack, S-Video Input jack use with front Audio Input jacks. DVD IN: on TV back Jackpack, Set of Component Audio/Video Input jacks. HD IN: on TV back Jackpack, Set of Component Audio/Video Input jacks. HD-RGB Input: on TV back Jackpack, 15 Pin RGB Input connector, use with HD-In R-L Audio. The source equipment you intend to view should be turned on. 206-3594 AUDIO Audio/Video /VIDEO OUT R -AUD IO-L Y COMP Component Video Pr Pb ONEN T VID EO RGB OUT R -AUD IO-L HD-RGB SET TO P BO X Typical Viewing Sources PAGE 41 EZ Demo Menu Setup Video EZ Program Add/Del/Surf EZ Clock Captions Caption/Text Language Source Menu Background Setup Video Audio Lock Special Move EZ Timer CH. Labels XDS Display PIP Menu Source Sense EZ Demo ENTER TO SET PRESS Your Entertainment Machine can show you the menus available Audio Lock Special ENTER Next MENU Back 1 2 3 Press MENU and use Up/Down arrow to select the SPECIAL menu on your screen, then press ENTER. Use the Up/Down arrow to select the EZ DEMO option, then press ENTER. Use the Up/Down arrow to choose either: On; then press ENTER. EZ Demo will continue to run (even if the TV is turned off and on again) until it is turned off in the SPECIAL menu.

Off; EZ Demo will not be active. Press QUIT to remove menu. PRG POWER CABLE SURF VCR AUX TV MUTE FLASHBK CHANNEL VOLUME VOLUME CHANNEL 4 1 4 7 2 5 8 ENTER 3 6 9 Even if the TV is turned off, the EZ Demo feature will continue to operate when the TV is turned on again. 0 The only way to turn EZ Demo off is to select Off, in the SPECIAL menu. 1/2/3 1 1/2/3 QUIT MENU 4 1/2/3 PIP SWAP PAUSE FREEZ CC TV/VCR SOURCE RECORD TIMER PLAY REWIND STOP FFWD Mini glossary EZ DEMO Feature provides an automatic demonstration of the on-screen menus on your Entertainment Machine.

View and learn what features are available to you as EZ Demo cycles through the on-screen menus. PAGE 42 206-3594 Picture-In-Picture Overview PIP = Picture-In-Picture Think of PIP as a mini TV screen superimposed onto your main TV screen Press PIP on the remote to place the PIP inset on the screen, press PIP again to remove it YOUR PICTURE-IN-PICTURE FEATURE The Picture-In-Picture (PIP) function allows you to put a smaller picture, called the "inset," on the bigger screen, or the "main" picture. You will need to have another source, (audio/video device connected to the TV) like a VCR; to use as a source to display an additional picture. Don't want to miss any of the big game, but hate commercials? When the broadcaster breaks for a commercial, just tune the VCR to the channel with the game being broadcast for the PIP inset, and Surf your favorite channels on the main picture screen. WORKING WITH PIP Just like your Entertainment Machine's main screen, PIP will need a source to take its image from.

PIP Sources Antenna/Cable, Video 1, Video 2, F Video. S-Video sources can also be used for the PIP picture. PIP Inset Picture Setup Main Picture Antenna Video 1 Video 2 F Video DVD HD HD-RGB EZ Program Add/Del/Surf EZ Clock Captions Caption/Text Language Source Menu Background ENTER SOME TYPICAL PIP/MAIN SCREEN VIEWING SETUPS 1.



[You're reading an excerpt. Click here to read official ZENITH](http://yourpdfguides.com/dref/340995)

[C36V22 user guide](http://yourpdfguides.com/dref/340995)

<http://yourpdfguides.com/dref/340995>

You want to watch a videotape, but keep scanning for another movie or game. Set the PIP source to Video 1, or 2 and you can watch the VCR and TV, swapping between the two. 2. You want to watch your favorite live program on Antenna on the main screen and when a commercial break appears, swap to the PIP inset; which has a videotape in the VCR ready to play, or Surf your favorite channels using the Antenna source for the PIP inset. 3. To monitor an infant asleep, connect a camcorder to F Video for the PIP source and watch a TV channel from the Antenna/Cable source on the main picture screen. Video Audio Lock Special Move Main Source PIP Source TO SET PRESS ENTER Next MENU Back Use the Source Menu to choose Main screen and PIP sources.

Some sources are not available for PIP and cannot be swapped from the main screen to the PIP inset. See the Source menu page for details. If no equipment is connected to a source you select for the PIP inset, or if it is turned off, the PIP inset will be black. Continued on next page. Mini glossary TUNER AV SOURCE A device that picks up broadcast signals and turns them into picture and sound. Other equipment connected to the TV Audio/Video source inputs on the TV back or front connections panel; Video 1, Video 2 etc. 206-3594 PAGE 43 Picture-In-Picture Operation Using Picture-in-Picture (PIP) features PIP Inset Picture Press PIP to turn PIP on and off. Move PIP Around Screen Press Right/Left/Up/Down arrows to move the PIP inset to the other corners of the screen. Main Screen Picture With PIP off, press FREEZ to place the Main screen picture in the PIP inset and "freeze" the image - turning PIP on. (A good way to freeze the image so you can write down phone numbers etc.

) CH 32-UPN 2:45 PM STEREO PIP Video 2 Channel/Time/Audio Source Display Press ENTER to show display. Shows source for: Main picture, and PIP. Flip Main and PIP Sources Press SWAP to switch the Main picture source with the PIP inset source. PIP Inset Source In PIP channel tuning mode, press SOURCE to change the source for the PIP inset to Antenna, Video 1, Video 2, or F Video. (Or, use the Setup Menu.

) Main Picture Source In Main picture channel tuning mode, press SOURCE to change the source to Antenna, Video 1, Video 2, or F Video. (Or, use the Setup Menu.) Remote Key Functions for PIP SURF FLASHBK MUTE CHANNEL VOLUME VOLUME FLASHBK (Flashback) Returns to the last channel viewed. CHANNEL 1 4 7 Up/Down/Left/Right Ar Move PIP inset around screen. SWAP Switches Main screen picture and sound with PIP picture and sound.

PIP Turns PIP on and off. 2 5 8 ENTER 3 6 9 ENTER Shows Channel/Time Display on Main screen. QUIT Chooses sound source. (With Channel/Time Display on-screen.) QUIT 0 MENU PIP SWAP PAUSE rows FREEZ TIMER CC TV/VCR SOURCE FREEZ PIP On: Freezes image in PIP inset. PIP Off: Freezes Main screen picture in PIP inset and turns PIP on. SOURCE Chooses Main screen and PIP picture sources. 206-3594-0 RECORD PAGE 44 Programming the Remote Set up your remote to operate other brand name devices Indicator Light 1 2 3 4 5 6 7 Turn on the device you want to program. On the chart on page 49/50, find the type of device you're programming, and then find the brand name. Make a note of the three-number code, you'll need it soon.

Press and hold PRG. It's recessed so it doesn't get pushed accidentally. Use a small, blunt object. When the indicator light turns on, you can release PRG. Push the key name with the type of device you're programming (VCR, CABLE, AUX, TV). Using the NUMBER keypad, enter the three-number code you found on page 49/50. Press ENTER to save the code. (The indicator light will flash 3 times, then turn off to indicate the code is valid.) Point the remote at the device and push POWER. It should turn off.

If not, try the other codes listed and continue from step three. Note: To reset remote to factory settings, enter 9-1-1, in Step 5. Programming your Zenith remote may allow you to use one remote to work up to 7 different devices, if all modes are programmed. Not all devices will work with your Zenith remote control. 3 PRG POWER CABLE SURF VCR AUX TV MUTE 7 4 FLASHBK CHANNEL VOLUME VOLUME CHANNEL 5 1 4 7 0 2 5 8 ENTER 3 6 9 6 QUIT MENU PIP SWAP FREEZ TIMER PLAY CC TV/VCR SOURCE RECORD PAUSE REWIND STOP FFWD Mode / Product Compatibility TV VCR TVs VCRs CATV Cable Boxes, Satellite Receivers AUX (AUX+1, AUX+2, AUX+3) All products on pp 49 - 50 Mini glossary PROGRAMMING PRG DEVICE Procedure to set up remote to operate other equipment.

Programming mode key. Infra-red remote controllable electronic accessory equipment. 206-3594 PAGE 45 Amplifier Volume Override Control the volume on your home audio system without changing modes 1 2 3 4 5 Find the code that operates your amplifier. Test it to make sure it's the correct one by following the procedure in "Programming Your Remote", on page 45. Program your audio system into one of the available AUX modes: Aux, Aux+1, Aux+2, or Aux+3.

Press and hold PRG on your remote until the indicator light stays lit, then release. Press 4-9-9; then ENTER on the remote. The indicator light will flash three times the code was accepted. Audio system volume/mute now appears in all modes. Note: You can also program Cable Box Volume and Mute control (if available) into your cable box mode (CABLE or AUX mode) by repeating the steps for programming on the previous page but entering 3-9-9, instead of a brand code, then pressing ENTER. 4 PRG POWER Indicator Light CABLE SURF VCR AUX TV MUTE 3 FLASHBK 2 CHANNEL VOLUME VOLUME CHANNEL 1 4 7 0 2 5 8 ENTER 3 6 9 5 MENU QUIT PIP SWAP FREEZ TIMER PLAY CC TV/VCR SOURCE RECORD PAUSE To put everything back to normal, reprogram the mode from Step 3 with the original brand code. If you can't find the code for your amplifier, use the Auto Find feature on page 48.

REWIND STOP FFWD Mini glossary AMPLIFIER CABLE BOX VOLUME/MUTE Audio device which sends sound to speakers, like an Audio Tuner, Receiver, or Amplifier. See Audio Tuners/Amp list on page 50. Some cable boxes have volume controls.

PAGE 46 206-3594-0 Aux-1, Aux-2, Aux-3 Control up to seven different devices with your remote Indicator Light 1 2 3 4 5 6 7 Refer to the chart on page 49/50 to find the type and brand name of the device you're programming. Press and hold PRG until the indicator light turns on, then release PRG. Press AUX and the 1 on the NUMBER keypad at the same time (for AUX +1). 2 3 PRG POWER 6 CABLE SURF VCR AUX TV MUTE FLASHBK CHANNEL VOLUME VOLUME Using the NUMBER keypad, enter the three-number code for the device you've selected. 1 CHANNEL 2 5 8 ENTER 3 6 9 Press ENTER to save the code.



[You're reading an excerpt. Click here to read official ZENITH C36V22 user guide](http://yourpdfguides.com/dref/340995)
<http://yourpdfguides.com/dref/340995>