




Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for ZENITH DVC2200C. You'll find the answers to all your questions on the ZENITH DVC2200C in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual ZENITH DVC2200C
User guide ZENITH DVC2200C
Operating instructions ZENITH DVC2200C
Instructions for use ZENITH DVC2200C
Instruction manual ZENITH DVC2200C

machine number | DVC2200C

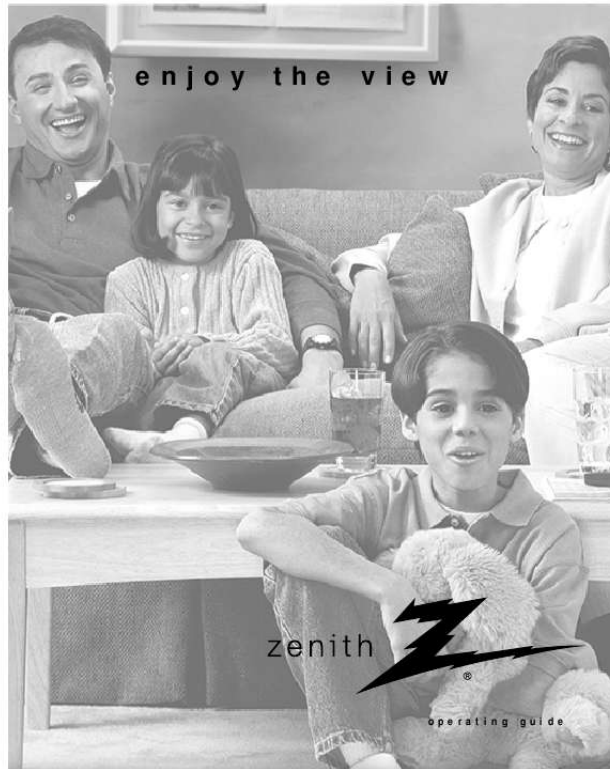

[You're reading an excerpt. Click here to read official ZENITH DVC2200C user guide](http://yourpdfguides.com/dref/350757)
<http://yourpdfguides.com/dref/350757>

| | |
|---|---|
| | |
| ... 24 Changing subtitle language .. | |
| | |
| 25 Changing audio soundtrack language. | |
| 25 Viewing from another angle .. | |
| | |
| 26 Producing a 3D Surround effect | |
| 26 Repeat Play ... | |
| | |
| 27 Storing markers in memory to be viewed (listened to) again. | |
| | |
| ... 28 Zoom Feature | |
| | |
| 29 Random Play . | |
| | |
| | |
| . 29 Program Play | |
| | |
| ... 30 Connections Initial Settings Connecting to a TV .. | |
| | |
| 13 Connecting to an Audio System | |
| | |
| ... 14 Connecting to Optional Audio System .. | |
| 15-17 Enjoying Dolby Digital (AC-3) Sound | |
| 15 Enjoying Dolby Pro Logic Surround Sound ... | |
| | |
| 16 Enjoying 2 Channel Digital Stereo Sound. | |
| 17 Enjoying DTS Sound | |
| | |
| | |
| | |
| 17 Common procedures of initial settings | 31 Selecting disc Languages ... |
| | |
| | |
| 32 Selecting rating level and password | |
| .. 33-34 Selecting TV Aspect | |
| | |
| 35 Selecting Menu Language . | |
| | |
| | |
| . 36 Selecting Digital Audio Output | |
| | |
| 37 Table of Languages and Their Abbreviations ... | 38 Basic Operations Reference Basic Playback .. |
| | |
| | |

. 18-20 Basic Playback

.
.....

. 18-20 Still Picture . .

.
.....

20 Frame Advance

.
.....

. 20 Skipping chapters and tracks forward or back .

.

20 Disc Requirements/Copyright Information

. 39 Before Calling Service Personnel

. . . 40 Specifications.

.
.....
.....

41 Various speed playback with Shuttle Ring 21 Operation Using GUI Menu Icons General Information about GUI menu icons

22 Detailed description of each GUI menu icon 23 PAGE 4 INTRODUCTION IMPORTANT SAFETY INSTRUCTIONS CAUTION: PLEASE READ AND OBSERVE ALL WARNINGS AND INSTRUCTIONS IN THIS OWNER'S MANUAL AND THOSE MARKED ON THE UNIT.

RETAIN THIS BOOKLET FOR FUTURE REFERENCE. This set has been designed and manufactured to assure personal safety. Improper use can result in electric shock or fire hazard. The safeguards incorporated in this unit will protect you if you observe the following procedures for installation, use and servicing. This unit is fully transistorized and does not contain any parts that can be repaired by the user.

DO NOT REMOVE THE CABINET COVER, OR YOU MAY BE EXPOSED TO DANGEROUS VOLTAGE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL ONLY. 1. Read owner's manual After unpacking this product, read the owner's manual carefully, and follow all the operating and other instructions. 2. Power Sources This product should be operated only from the type of power source indicated on the marking label. If you are not sure of the type of power supply in your home, consult your product dealer or local power company. For products intended to operate from battery power, or other sources, refer to the operating instructions. 3. Grounding or Polarization This product is equipped with a polarized alternating current line plug (a plug having one blade wider than the other).

This plug will fit into the power outlet only one way. This is a safety feature. If you are unable to insert the plug fully into the outlet, try reversing the plug. If the plug should still fail to fit, contact your electrician to replace your obsolete outlet. Do not defeat the safety purpose of the polarized plug. 4. Ventilation Slots and openings in the cabinet are provided for ventilation and to ensure reliable operation of the product and to protect it from overheating. These openings must not be blocked or covered.



[You're reading an excerpt. Click here to read official ZENITH](http://yourpdfguides.com/dref/350757)

[DVC2200C user guide](http://yourpdfguides.com/dref/350757)

<http://yourpdfguides.com/dref/350757>

The openings should never be blocked by placing the product on a bed, sofa, rug or other similar surface. This product should not be placed in a built-in installation such as a bookcase or rack unless proper ventilation is provided or the manufacturer's instructions have been adhered to.

5. **Heat** The product should be situated away from heat sources such as radiators, heat registers, stoves, or other products (including amplifiers) that produce heat. 6. **Water and Moisture** Do not use this product near water-for example, near a bath tub, wash bowl, kitchen sink, or laundry tub; in a wet basement; or near a swimming pool and the like.

7. **Cleaning** Unplug this product from the wall outlet before cleaning. Do not use liquid cleaners or aerosol cleaners. Use a damp cloth for cleaning. 8. **Power-Cord Protection** Power-supply cords should be routed so that they are not likely to be walked on or pinched by items placed upon or against them, paying particular attention to cords at plugs, convenience receptacles, and the point where they exit from the product. 9. **Overloading** Do not overload wall outlets, extension cords, or integral convenience receptacles as this can result in a risk of fire or electric shock. 10. **Lightning** For added protection of this product during storms, or when it is left unattended and unused for long periods of time, unplug it from the wall outlet. This will prevent damage to the product due to lightning and power-line surges. 11. **Object and Liquid Entry** Never push objects of any kind into this product through openings as they may touch dangerous voltage points or short-out parts that could result in a fire or electric shock. Never spill liquid of any kind on the product. 12.

Attachments Do not use attachments not recommended by the product manufacturer as they may cause hazards. **INTRODUCTION PAGE 5 IMPORTANT SAFETY INSTRUCTIONS** 13. **Accessories** Do not place this product on an unstable cart, stand, tripod, bracket, or table. The product may fall, causing serious injury to a child or adult, and serious damage to the product. Use only with a cart, stand, tripod, bracket, or table recommended by the manufacturer, or sold with the product. Any mounting of the product should follow the manufacturer's instructions, and should use a mounting accessory recommended by the manufacturer. A product and cart combination should be moved with care. Quick stops, excessive force, and uneven surfaces may cause the product and cart combination to overturn. 14. **Disc Tray** Keep your fingers well clear of the disc tray as it is closing.

It may cause serious personal injury. 15. **Burden** Do not place a heavy object on or step on the product. The object may fall, causing serious personal injury and serious damage to the product. 16.

Connecting When you connect the product to other equipment, turn off the power and unplug all of the equipment from the wall outlet. Failure to do so may cause an electric shock and serious personal injury. Read the owner's manual of the other equipment carefully and follow the instructions when making any connections. 17. **Sound Volume** Reduce the volume to the minimum level before you turn on the product.

Otherwise, sudden high volume sound may cause hearing or speaker damage. 18. **Sound Distortion** Do not allow the product to output distorted sound for a longtime. It may cause speaker overheating and fire. 19. **Headphones** When you use the headphones, keep the volume at a moderate level. If you use the headphones continuously with high volume sound, it may cause hearing damage. 20. **Laser Beam** Do not look into the opening of the disc tray or ventilation opening of the product to see the source of the laser beam. It may cause sight damage.

21. **Disc** Do not use a cracked, deformed, or repaired disc. These discs are easily broken and may cause serious personal injury and product malfunction. 22. **Damage Requiring Service** Unplug this product from the wall outlet and refer servicing to a service technician. If the optical pick-up lens and disc drive parts are dirty or worn down, the picture quality becomes poor. To obtain a clear picture, we recommend regular inspection and maintenance (cleaning or parts replacement) every 1,000 hours of use depending on the operating environment. For details, contact your nearest dealer. Do not use the DVD player when moisture condensation may occur. If you use the DVD player in such a situation, it may damage discs and internal parts.

Remove the disc, connect the power cord of the DVD player to the wall outlet, turn on the DVD player and leave it "ON" for two or three hours. After two or three hours, the DVD player will have warmed up and evaporated any moisture. Keep the DVD player connected to the wall outlet and moisture condensation will seldom occur. **Wa it!** **INTRODUCTION PAGE 7 Notes on Discs** This section shows you how to handle, clean, and store discs. **On Handling Discs** **On**

Storing Discs Do not touch the playback side of the disc.

Do not store discs in a place subject to direct sunlight or near heat sources. Do not store discs in places subject to moisture and dust such as a bathroom or near a humidifier. Store discs vertically in a case. Stacking or placing objects on discs outside of their case may cause warping. Do not attach paper or tape to discs.

On Cleaning Discs About This Owner's Manual Fingerprints and dust on the disc cause picture and sound deterioration. Wipe the disc from the center outward with a soft cloth. Always keep the disc clean. If you cannot wipe off the dust with a soft cloth, wipe the disc lightly with a slightly moistened soft cloth and finish with a dry cloth. Do not use any type of solvents such as thinner, benzine, commercially available cleaners or anti-static spray for vinyl LPs. They may damage the disc. This owner's manual explains the basic instructions of this DVD player. Some DVD video discs have functions that may not be explained in this owner's manual. Therefore, some instructions may differ from this owner's manual, and there may be extra instructions. In this case, follow the instructions displayed on the TV screen or package.

" " may appear on the TV screen during operation. This icon means the function explained in this owner's manual is not available on that specific DVD video disc. **PAGE 8 INTRODUCTION Identification of Controls Front Panel** SELECT/ENTER button POWER indicator Disc tray STOP button PAUSE/STEP button PLAY button menu search select/enter power open/close play pause/step stop skip scan menu Display window POWER button Remote sensor OPEN/CLOSE button ARROW buttons MENU button SKIP/SCAN buttons Display Window Operating status indicator CD indicator DVD indicator PROGRAM indicator RANDOM indicator Repeat playback mode indicators CD DVD TITLE CHP/TRK PROG. RANDOM ALL A B Total playing time/elapsed time indicators Angle icon indicator Chapter/Track number indicator Title number indicator **INTRODUCTION PAGE 9 Identification of Controls Rear Panel** COAXIAL DIGITAL AUDIO OUT jack AUDIO OUT (L/R) jacks DIGITAL OUT AUDIO OUT COAXIAL L R S-VIDEO OUT VIDEO OUT VIDEO OUT jack S-VIDEO OUT jack POWER CORD Connect to an AC 120V, 60Hz outlet only.



[You're reading an excerpt. Click here to read official ZENITH DVC2200C user guide](http://yourpdfguides.com/dref/350757)
<http://yourpdfguides.com/dref/350757>

PAGE 10 INTRODUCTION Identification of Controls (con'd) REMOTE CONTROL You will find instructions for each of the remote control functions in the appropriate sections of this instruction manual. POWER button PLAY button power dvd vcr catv tv DVD/VCR/CATV/TV Selector Switch STOP button FWD SKIP button REV SKIP button PAUSE/STEP button SELECT/ENTER button SETUP button pause /step select/ enter open/close play OPEN/CLOSE button skip stop skip ** ARROW (Volume/Channel) buttons ch DISPLAY button NUMBER buttons CLEAR button ANGLE button SUBTITLE button AUDIO button setup RETURN (TV INPUT) button SOUND (MUTE) button vol display vol ch return/tv input 1 4 7 clear 2 5 8 0 3 sound/mute PROGRAM button *MENU button program menu 6 9 title audio subtitle angle marker-search ***TITLE button repeat a-b random zoom MARKER-SEARCH buttons REPEAT button ZOOM button slow/scan A-B button RANDOM button FWD/REV SLOW/SCAN Shuttle Ring rev fwd *MENU button Use the MENU button to display the menu screen included on DVD video discs. To operate a menu screen, follow the instructions in "Using a DVD Menu" (page 24). ** Directional arrow buttons (up, down, left, right) for use in highlighting a selection on a GUI menu screen, TITLE and MENU screen. ***TITLE button Use the TITLE button to display the title screen included on DVD video discs. To operate a menu screen, follow the instructions in "Using a Title Menu" (page 24).

INTRODUCTION PAGE 11 Controlling the VCRs, CATVs (DBS) and TVs Your remote control operates the common features of most, but not all, models and brands of IR (infrared) controlled VCRs, cable converters (DBS) and TVs. 1 2 Set the DVD/VCR/CATV/TV selector to VCR, CATV or TV. While holding PROGRAM button, press the number buttons to set the code number referring to the table on the below. power dvd vcr catv tv 1 open/close play Some manufactures have more than one code number. If the remote control does not operate with the VCR, CATV or TV after setting the code number, try another number.

skip stop pause /step setup select/ enter skip To control the VCR POWER, Number (0~9), SELECT (ENTER), PLAY, SKIP (F FWD), SKIP (REW), STOP, OPEN/CLOSE (EJECT), PAUSE/STEP buttons and SHUTTLE ring on the remote control are activated. ch vol vol ch return/tv input display To control the CATV sound/mute 1 2 5 8 0 3 6 program 2 POWER, Number (0~9), SELECT (ENTER), RETURN (Input select), and CH E/D buttons on the remote control are activated. 4 7 clear 9 title menu 2 TV Brand Name PROSCAN QUASAR RADIO SHACK RCA REALISTIC SAMPO SAMSUNG SANYO SCOTT SEARS SHARP SIGNATURE 2000 To control the TV POWER, Number (0~9), SELECT (ENTER), RETURN (Input select), CH (Channel) E/D, VOL (Volume) E/D and SOUND (MUTE) buttons on the remote control are activated. Cable Converter Codes by Brand Cable Decoder Codes Brand Name KALE VISION 334 MACOM 311, 312, 342 MAGNAVOX 306, 307, 310, 334, 337, 338 NSC 332 OAK 301, 321, 322 PANASONIC 313, 318, 320 PARAGON 300 PHILIPS 306, 307, 308, 309, 310 PIONEER 318, 319 PLUSER 336 RCA 318 REGAL 310 REGENCY 304 SAMSUNG 318, 327, 334 SCIENTIFIC ATLANTA 317, 335, 347, 354 SLMARX 318, 327 SPRUCER 318, 320, 327 STANDARD COMPONENTS 334 STARGATE 318, 327, 328 TELEVIEW 318, 327, 336 TEXSCAN 303 TOCOM 315, 316 UNIDEN 348 UNIKA 336 UNIVERSAL 351, 352 VID TECH 339 VIDEO WAY 300, 349 VIEWSTAR 306, 307, 310 ZENITH 300, 305, 311 ZENITH HT-2000 300 DBS Codes by Brand DBS Brand Name Codes RCA 355 SONY 356 VCR Codes by Brand VCR Brand Name Codes ZENITH 200 LG 201 TV Codes by Brand TV Brand Name Codes ADMIRAL 110, 113, 144, 151, 152 AKAI 115 AMARK 131 AOC 115 BELL & HOWELL 113 BROKSONIC 140, 143 CANDLE 158 CENTURION 130 CITIZEN 156, 157, 158, 159, 160, 161, 162 CORONADO 131 CROWN 131 CURTIS MATHES 113, 115, 118, 130, 144, 151 DAEWOO 145, 146, 147, 148, 149, 150 DAYTRON 115, 130 EMERSON 110, 111, 115, 131, 140, 143 FISHER 116, 125 FUNAI 153, 154 GENERAL ELECTRIC 102, 118, 127, 128, 133, 144, 151 HITACHI 119, 131, 132 JC PENNEY 102, 115, 124, 130, 133 JVC 109, 141 KMC 131 KTV 115, 130, 131, 138 LG (GOLDSTAR) 115, 122, 130, 131, 133, 146 LODGENET 113 LOGIK 113 LXI 104, 116, 123, 124, 125, 131, 139 MAGNAVOX 100, 106, 107, 109, 114, 115, 121 122, 130, 131, 133, 158 MAJESTIC 113 MARANTZ 103, 115 MEMOREX 113 MGA/MITSUBISHI 103, 114, 115, 130 MONTGOMERY WARD 103, 113, 114, 115, 121, 129, 130, 131, 139 NEC 115, 130 PANASONIC 104, 122, 127, 128, 133, 163 PHILCO 115, 121, 122, 130, 131, 150 PHILIPS 121, 122 PIONEER 134 PORTLAND 131 TV Codes by Brand Codes 118, 144, 151 127, 128 110, 111, 129 115, 118, 144, 151 110, 111, 129 130 104, 115, 130, 131 116, 125 115, 130 104, 116, 123, 124, 125, 131 112, 129, 131, 139 102, 113, 114, 115, 121, 129, 130, 131, 139 SONY 105 SOUNDESIGN 158 SYLVANIA 106, 107, 115, 121, 122, 130, 133, 158 SYMPHONIC 153, 154 TATUNG 128 TEKNIKA 110, 113, 122, 131, 158 TELERENT 113, 131 YORX 130 TOSHIBA 104, 123, 124 WARDS 102, 113, 114, 115, 121, 130, 131 XR1000 155 ZENITH 100, 101 Cable Converter Codes by Brand Cable Decoder Codes Brand Name ALLEGRO 351 ARCHER 336 CABLEVIEW 336 CITIZEN 336 CURTIS MATHES 317 EAGLE 306, 307, 310 GEMINI 302, 327, 328, 333 GENERAL ELECTRIC 353 GENERAL INSTRUMENT 324, 326, 327, 328 GOBRAND 336 HAMLIN 314, 330, 331 JERROLD 323, 324, 325, 326, 327, 329 Note Due to the variety of codes used by manufactures, our company cannot guarantee that the MBR remote control will operate with every model of the brands listed. PAGE 12 INTRODUCTION Identification of Controls (con'd) Preparing the Remote Control Insert the batteries into the remote control so you can use it to operate the DVD player.

Operating with the Remote Control This section shows you how to use the remote control. Point the remote control at the remote sensor and press the buttons. menu search select/enter 1 2 Open the battery cover. Insert batteries (AAA size). power open/close play pause/step stop skip scan menu q Make sure to match the + and - on the batteries to the marks inside the battery compartment. 30° 30° Within about 23 ft (about 7 m) 3 Close the cover. power dvd vcr catv tv play skip stop pause /step setup select/ enter skip open/close Distance: About 23 ft (7 m) from the front of the remote sensor Angle: About 30° in each direction of the front of the remote sensor * Do not expose the remote sensor of the DVD player to a strong light source such as direct sunlight or illumination. If you do so, you may not be able to operate the DVD player with the remote control. Notes on the remote control AAA Notes on batteries Improper use of batteries may cause battery leakage and corrosion. To operate the remote control correctly, follow the instructions.

Do not insert the batteries into the remote control in the wrong direction.



You're reading an excerpt. Click here to read official ZENITH DVC2200C user guide
<http://yourpdfguides.com/dref/350757>

Do not charge, heat, open, or short-circuit the batteries. Do not throw the batteries into fire. Do not leave dead or exhausted batteries in the remote control. Do not use different types of batteries together, or mix old and new batteries. If you do not use the remote control for a long period of time, remove the batteries to avoid possible damage from battery corrosion. If the remote control does not function correctly or if the operating range becomes reduced, replace all batteries with new ones. If battery leakage occurs, wipe the battery liquid from the battery compartment, then insert new batteries. The batteries should last about one year with normal use. AAA Direct the remote control at the remote sensor of the DVD player.

Do not drop or give the remote control a shock. Do not leave the remote control near extremely hot or humid place. Do not spill water or put anything wet on the remote control. Do not open the remote control. CONNECTIONS PAGE 13 Connecting to a TV Connect the DVD player to your TV DIGITAL OUT AUDIO OUT Audio/Video cable (Supplied) COAXIAL L R To AUDIO OUT (L/R)/VIDEO OUT S-VIDEO OUT VIDEO OUT To S-VIDEO OUT To video input To audio inputs If the TV has an S-video input, connect the DVD player with the S-video cable.

S-video cable (Not supplied) To S-video input TV or monitor with audio/video inputs Notes Refer to the owner's manual of your TV as well. When you connect the DVD player to your TV, be sure to turn off the power and unplug both units from the wall outlet before making any connections. Connect the DVD player to your TV directly. If you connect the DVD player to a VCR, the playback picture will be distorted because DVD video discs are copy protected. Warning Do not set the Digital Audio Output of this DVD player to "Dolby Digital" unless you are connecting the DIGITAL AUDIO jack of this DVD player to an AV decoder that has the Dolby Digital (AC-3) decoding function.

High volume sound may damage your hearing as well as the speakers. (Refer to "Selecting Digital Audio Output" on page 37.) PAGE 14 CONNECTIONS Connecting to an Audio System You can listen to the sound of audio CDs and DVD video discs in stereo. DIGITAL OUT AUDIO OUT To S-VIDEO OUT S-video cable (Not supplied) COAXIAL L R S-VIDEO OUT VIDEO OUT If the TV has an S-video input, connect the DVD player with the S-video cable. To VIDEO OUT To AUDIO OUT (L/R) To S-video input Video cable (Supplied) To video input TV or monitor with audio/video inputs To audio inputs Audio cable (Supplied) Audio system Notes Refer to the owner's manual of your audio system as well. When you connect the DVD player to other equipment, be sure to turn off the power and unplug all of the equipment from the wall outlet before making any connections. If you place the DVD player near a tuner or radio, the radio broadcast sound might be distorted. In this case, move the DVD player away from the tuner and radio. The output sound of the DVD player has a wide dynamic range. @@Otherwise, the speakers may be damaged by a sudden high volume sound.

@@If you leave the receiver power on, the speakers may be damaged. Warning Do not set the Digital Audio Output of this DVD player to "Dolby Digital" unless you are connecting the DIGITAL AUDIO jack of this DVD player to an AV decoder that has the Dolby Digital (AC-3) decoding function. High volume sound may damage your hearing as well as the speakers. (Refer to "Selecting Digital Audio Output" on page 37.) CONNECTIONS PAGE 15 Connecting to Optional Audio System Enjoying Dolby Digital (AC-3) Sound You can enjoy the high quality dynamic sound of Dolby Digital (AC-3), Dolby Pro Logic, and 2 Channel Digital Stereo. Dolby Digital (AC-3) Dolby Digital is the surround sound technology used in theaters showing the latest movies, and is now available to reproduce this realistic effect in the home. You can enjoy motion picture and live concert DVD video discs with this dynamic realistic sound by connecting the DVD player to a 6 channel receiver equipped with a Dolby Digital (AC-3) decoder or Dolby Digital (AC-3) processor. DIGITAL OUT AUDIO OUT COAXIAL L R S-VIDEO OUT VIDEO OUT To DIGITAL OUT To S-VIDEO OUT or VIDEO OUT S-Video cable or Video cable To digital audio input 75 ohm coaxial cable Receiver equipped with a Dolby Digital (AC-3) decoder To enjoy Dolby Digital (AC-3) sound from this DVD player you need the following: q DVD recorded in Dolby Digital (AC-3) q 6 channel receiver equipped with a Dolby Digital (AC-3) decoder, or Dolby Digital (AC-3) processor and power receiver q 5 speakers and 1 sub woofer Connection example To S-video Input or Video Input Front speaker (left) Center speaker Front speaker (right) Sub woofer Rear speaker (left surround) Rear speaker (right surround) To enjoy Dolby Digital (AC-3) sound You need to select "Dolby Digital" on the SETUP menu. * Manufactured under license from Dolby Laboratories Licensing Corporation. "Dolby", "AC-3" and the double-D symbol are trademarks of Dolby Laboratories Licensing Corporation.

Confidential Unpublished Works. 1992-1997 Dolby Laboratories, Inc. All rights reserved. C Notes Refer to the owner's manual of your audio equipment as well. When you connect the DVD player to other equipment, be sure to turn off the power and unplug all of the equipment from the wall outlet before making any connections.

The output sound of the DVD player has a wide dynamic range. @@Otherwise, the speakers may be damaged by a sudden high volume sound. @@If you leave the receiver power on, the speakers may be damaged. PAGE 16 CONNECTIONS Connecting to Optional Audio System Enjoying Dolby Pro Logic Surround Sound Dolby Pro Logic Surround You can still enjoy the excitement of Surround Sound even if your A/V receiver does not offer Dolby Digital (AC-3) decoding. If your A/V receiver has a Dolby Pro Logic decoder.

Refer to the following connection diagram. DIGITAL OUT AUDIO OUT COAXIAL L R S-VIDEO OUT VIDEO OUT Connect one or two rear speakers. The output sound from the rear speakers will be monaural even if you connect two rear speakers. To VIDEO OUT To AUDIO OUT Video cable Audio cable Connection example Receiver equipped with Dolby Pro Logic Surround To audio input To video input Front speaker (left) TV Center speaker Front speaker (right) Rear speaker (left) Rear speaker (right) q With a receiver equipped with Dolby Digital (AC-3) Connect the equipment the same way as described in "Enjoying Dolby Digital (AC-3) Sound" on the previous page. Refer to that receiver's owner's manual and set the receiver so you can enjoy Dolby Pro Logic Surround sound. Warning Do not set the Digital Audio Output of this DVD player to "Dolby Digital" unless you are connecting the DIGITAL AUDIO jack of this DVD player to an AV decoder that has the Dolby Digital (AC-3) decoding function.



[You're reading an excerpt. Click here to read official ZENITH DVC2200C user guide](http://yourpdfguides.com/dref/350757)
<http://yourpdfguides.com/dref/350757>

High volume sound may damage your hearing as well as the speakers. (Refer to "Selecting Digital Audio Output" on page 37.) CONNECTIONS PAGE 17
Connecting to Optional Audio System Enjoying 2 Channel Digital Stereo Sound 2 Channel Digital Stereo You can enjoy the dynamic sound of 2 Channel
Digital Stereo by connecting this DVD player to a receiver equipped with a digital audio input and speaker system (right and left front speakers). Connection
example 75 ohm coaxial cable To digital audio input To S-video Input or Video Input S-Video cable or Video cable To DIGITAL OUT Front speaker (left)
Receiver equipped with a digital audio input Front speaker (right) DIGITAL OUT AUDIO OUT TV COAXIAL L R S-VIDEO OUT VIDEO OUT Enjoying
DTS Sound Introducing DTS Digital Surround™.

..the finest technology ever invented to transform existing "home theater" systems into six discrete channels of exceptionally clear, better-than-compact disc,
digital audio performance. And DTS Digital Surround is the only 5.1 surround sound format that can deliver this revolutionary 3-dimensional experience
through new music recordings on compact discs, original 5.1 soundtracks on motion picture laserdiscs, and soon, a wide variety of products on DVD. 75 ohm
coaxial cable Receiver equipped with a DTS decoder To digital audio input Connection example To S-video Input or Video Input To DIGITAL OUT To S-
VIDEO OUT or VIDEO OUT DIGITAL OUT S-Video cable or Video cable Front speaker (left) Front speaker (right) Center speaker AUDIO OUT COAXIAL
L Sub woofer Rear speaker (left surround) Rear speaker (right surround) R S-VIDEO OUT VIDEO OUT "DTS" and "DTS Digital Out" are trademarks of
Digital Theater Systems, Inc. Notes Refer to the owner's manual of your receiver as well. When you connect the DVD player to other equipment, be sure to
turn off the power and unplug all of the equipment from the wall outlet before making any connections. The output sound of the DVD player has a wide
dynamic range.

@@Otherwise, the speakers may be damaged by a sudden high volume sound. @@@@ For connection details, see pages 13 through 17.
@@@Place the disc in the correct guide on the disc tray. @@@@The title number does not appear. @@Perform step 5 on page 19 to start play.
@@@Doing so may damage the disc and the DVD player. @@Do not push the disc tray while it is moving. Doing so may cause the DVD player to
malfunction. @@Doing so may cause the DVD video player to malfunction. Keep your fingers well clear of the disc tray as it is closing.
@@@@@Opening the disc tray cancels Resume function. The Resume function may not be available on some DVD discs. @@q CD The
player will be placed in the pause mode. audio subtitle angle marker-search repeat a-b random zoom Frame advance (DVD only) Press PAUSE/STEP during
still playback. (Each time you press PAUSE/STEP, the picture advance one frame) slow/scan rev fwd To resume normal playback, press PLAY. Skipping
chapters or tracks forward or back Skipping forward Press SKIP during playback. A chapter (DVD) or a track (CD) is skipped each time the button is
pressed. Skipping back Press SKIP during playback. q When the button is pressed once midway through a chapter/track, the player returns to the start of that
chapter/track. When it is pressed again, a chapter/track is skipped each time the button is pressed.

BASIC OPERATION PAGE 21 Various speed playback with Shuttle Ring You can play back discs at various speeds, and resume normal playback. To play in
slow-motion During still picture mode, rotate and hold SHUTTLE ring to the positions indicated gives those slow modes. power dvd vcr catv tv q The variable-
speed slow picture will appear on the TV screen. PLAY play Release the SHUTTLE ring to resume the still picture mode. 1/16 1/8 1/16 1/8 skip stop pause
/step setup select/ enter skip open/close 1/4 1/4 ch vol vol ch return/tv input display 1/2 1/2 1 4 7 clear 2 5 8 0 3 sound/mute REVERSE DIRECTION
FORWARD DIRECTION 6 program 9 title menu audio subtitle angle marker-search repeat a-b random zoom To scan at fast forward or fast reverse. During
playback mode, rotate and hold SHUTTLE ring to the positions indicated gives those fast search modes. q The variable-speed search picture will appear on
the TV screen. slow/scan rev fwd SLOW/SCAN Shuttle ring Release the SHUTTLE ring to resume normal playback. G FF X2 GG X2 FF X4 GG X4 FF X16
GG X16 FF X100 GG X100 REVERSE DIRECTION FORWARD DIRECTION Notes The DVD player does not play back sound during slow-motion playback,
the high speed reverse and forward playback of DVD video discs. However, the DVD player plays back sound during fast forward or fast reverse playback of
audio CDs.

Subtitles do not appear on the screen during slow motion and scan playback. The DVD player provides four (4) scan speeds for DVD movie play. Only two
(2) scan speeds are available during Audio CD play. The DVD player does not play back in slow-motion in case of audio CD. PAGE 22 OPERATION USING
GUI MENU ICONS General Information about GUI menu icons This unit features GUI Menu Icons showing disc information (title/chapter/track number,
elapsed playing time, audio/subtitle language, angle, and sound) and player information (repeat play, play mode, marker, etc.
). Some icons only show the indicated information. Other icons allow the settings to be changed. Common procedures 1 Press DISPLAY during playback. q
Title function can be accessed from the stop mode.
2 power dvd vcr catv tv Press D/E to select the desired item. q The currently selected item is indicated by a yellow frame on its GUI menu icons. play 3 skip
Press F/G to select the desired setting. skip stop pause /step setup select/ enter open/close ch vol vol ch return/tv input 1 display 2, 3 q When numbers are
displayed (e.g. title No.), the numeric buttons can also be used for setting instead of F/G. q For some functions, the setting will be registered immediately; for
others, SELECT/ENTER must be pressed. 1 4 7 clear 2 5 8 0 3 sound/mute 6 program To clear the GUI Menu Icons, press DISPLAY. 9 title menu audio
subtitle angle marker-search repeat a-b random zoom Examples of GUI Menu Icons.

(The screens may differ depending on the disc contents.) 1 1 1/5 0:16:57 1 ENG D 6 CH OFF CHAPT 1 16:57 A B 1 STER. OFF NORM. NORM. (DVD GUI)
(CD GUI) (DVD and CD GUI) OPERATION USING GUI MENU ICONS PAGE 23 Detailed description of each GUI menu icon You can view information
about a disc and its operational status on the TV screen. Press DISPLAY during playback. [TV screen] DVD GUI FUNCTION E (Press D/E to select desired
item) To show the current title No.



[You're reading an excerpt. Click here to read official ZENITH](#)

[DVC2200C user guide](#)

<http://yourpdfguides.com/dref/350757>

and to jump to the desired title No. SELECTION METHOD F/G, or Numeric SELECT/ENTER F/G, or Numeric SELECT/ENTER SKIP Numeric SELECT/ENTER F/G, AUDIO 1 1 To show the current chapter No. and to jump to the desired chapter No.

To show the elapsed time and directly select scenes by the desired time. To show the current audio soundtrack language, encoding method, channel No. and to change the settings. 0:16:57 1 ENG D 6 CH OFF To show the current subtitles language and to change the setting. To show the current angle No. and to change the angle. To show the current sound (NORMAL or 3D SURROUND) and to change the setting. F/G, SUBTITLE F/G, ANGLE F/G, SOUND 1 NORM. Press DISPLAY during playback. [TV screen] CD GUI FUNCTION E (Press D/E to select desired item) To show the current track No.

SELECTION METHOD F/G, or Numeric SELECT/ENTER SKIP 1 and to jump to the desired track No. To show the elapsed time. 16:57 (Display only) To show the current audio (STEREO, LEFT, RIGHT) STER. and to select to the desired audio channel. To show the current sound (NORMAL or 3D SURROUND) F/G, AUDIO F/G, SOUND NORM. and to change the setting. Note Some DVD discs may not provide all of the above GUI menu icons. PAGE 24 ADVANCED OPERATION Using a title menu Some movie discs may contain two or more titles. If the disc has a title menu recorded on it, the TITLE button can be used to select the movie title. (The details of operation differ depending on the disc used.

) q Selecting a title may not be possible on certain DVD discs. 1 Press TITLE. A list of the titles on the disc is displayed. stop 2 pause /step setup select/ enter open/close Pressing TITLE again to resume play from the scene when TITLE was first pressed. · Resume play may not be possible on certain discs. ch vol ch return/tv input vol display 2 1 2 1 4 7 clear 2 5 8 0 3 sound/mute Press D/E/F/G and press SELECT/ENTER or PLAY, or press the numeric button(s), to select desired title. 6 program 9 title menu audio subtitle angle marker-search repeat a-b random zoom The selected title now starts playing. Using a DVD menu Some DVDs have unique menu structures called DVD menus. For example, DVDs programmed with complex contents provide guide menus, and those recorded with various languages provide menus for audio and subtitle language. Although the DVD menu's contents and operation differ from disc to disc, the following explains the basic operation when this feature is used.

1 Press MENU during play. The DVD menu available on the disc is now displayed. 1 2 3 4 Pressing MENU again resumes play from the scene when MENU was first pressed. · Resume play may not be possible on certain discs. stop 2 pause /step setup select/ enter open/close ch vol vol ch return/tv input display 2 1 2 1 4 7 clear 2 5 8 0 3 sound/mute Press D/E/F/G and press SELECT/ENTER, or press the numeric button(s), to select desired item.

6 program 9 title menu audio subtitle angle marker-search repeat a-b random zoom The selected item is now executed. ADVANCED OPERATION PAGE 25 Changing subtitle language It is possible to change the subtitle language to a different language from the one selected at the initial settings. (See page 32 for further info.) This operation works only with discs on which multiple subtitle languages are recorded. program 1 Press SUBTITLE during playback.

When no subtitles are recorded, "OFF" will be displayed instead of the language number. 7 clear 8 0 9 title menu OFF 1, 2 Notes audio subtitle angle marker-search repeat a-b random zoom 2 In some cases, the subtitle language is not changed to the selected one immediately. When a disc supporting the closed caption is played, the subtitle and the closed caption may overlap each other on the TV screen. In this case, turn the subtitle off. When the desired language is not selected even after pressing the button several times, it means that the language is not available on the disc. When the power is turned on or the disc is removed, subtitles appears in the language selected at the initial settings. If this language is not recorded on the disc, the disc's priority language appears. Press repeatedly SUBTITLE until the desired language is selected. Number of the subtitle language being played back. 1 ENG To eliminate the On Screen Subtitles.

Press SUBTITLE repeatedly to select OFF at step 2. Changing audio soundtrack language It is possible to change the audio soundtrack language to a different language from the one selected at the initial settings in case of DVD disc. (See page 32 for further info.) This operation works only with discs on which multiple audio soundtrack languages are recorded. And it is possible to change the audio channel in case of audio CD. program · DVD Press AUDIO during play. 1 Number of the audio soundtrack language being played back. 1 ENG D 6 CH 7 clear 8 0 9 title menu 2 Press AUDIO repeatedly until the desired language is selected. 2 FRE D 6 CH 1, 2 Notes audio subtitle angle marker-search repeat a-b random zoom · CD 1 Press AUDIO during play. STER. When the desired language is not selected even after pressing the button several times, it means that the language is not available on the disc. When the power is turned on or the disc is removed, the language heard is the one selected at the initial settings. If this language is not recorded on the disc, only the available language on the disc will be heard. Some discs may not respond to Audio feature. 2 Press AUDIO repeatedly until the desired sound is selected.

LEFT PAGE 26 ADVANCED OPERATION Viewing from another angle Some DVDs may contain scenes which have been shot simultaneously from a number of different angles. For these discs, the same scene can be viewed from each of these different angles using the ANGLE button. (The recorded angles differ depending on the disc used.) 1 Press ANGLE during playback. Number of angle being played back.

1 1 2 3 2 Press ANGLE repeatedly until the desired angle is selected. 2 audio subtitle angle marker-search 1, 2 For your reference · The ANGLE indicator will blink in the DVD display window at scenes recorded at different angles to indicate that angle switching is possible. · The angle number can be programmed beforehand; the angle will be switched to the selected number when the ANGLE indicator blinks. repeat a-b random zoom slow/scan rev fwd Note This function only works for discs having scenes recorded at different angles. Producing a 3D SURROUND effect This unit can produce a 3D Surround effect, using Spatializer™ N-2-2™ technology, which simulates multi-channel audio playback from two conventional stereo speakers instead of the five or more speakers normally required to listen to multi-channel audio from a home theater.



[You're reading an excerpt. Click here to read official ZENITH](http://yourpdfguides.com/dref/350757)

[DVC2200C user guide](http://yourpdfguides.com/dref/350757)

<http://yourpdfguides.com/dref/350757>

This feature works with DVD discs encoded with Dolby Pro Logic, Dolby Digital (AC-3) and DTS multi-channel audio tracks. 1 Press SOUND during playback. Each time this button is pressed, the TV screen display changes: NORM. 2 Press SOUND repeatedly until the desired sound is selected. 3D SUR play skip stop pause /step setup skip Notes select/ enter open/close ch vol vol ch return/tv input display 1 4 7 2 5 8 3 sound/mute 6 program 1, 2 9 This 3D Surround effect may not be available on some DVD discs, such as those recorded with a mono audio soundtrack.

Turn off the TV surround sound and other surround effects when using this 3D surround effect. For best 3D Surround effect using only two speakers it is recommended that the two speakers be positioned approximately 2m to 2.5m apart, and the listening position should be 2m to 2.5m away from the speakers. ADVANCED OPERATION PAGE 27 Repeat Play Repeating viewing (listening) Press REPEAT during playback. Each time this button is pressed, the TV screen changes as shown below and the disc will repeat a chapter or title (DVD) or a track (CD). Repeating sections between two specific points (A-B repeat) 1 Press A-B during play at the point where repeat play is to start (A). A * · DVD Repeat of chapter being played CHAPT · You can select "OFF" at this step by pressing CLEAR. Repeat of title being played TITLE 2 OFF Press A-B during play at the point where repeat play is to be concluded (B). Cancel repeat mode (normal play) A B · CD Repeat of track being played TRACK Repeat play of the selection between points A and B starts. Repeat of entire disc contents ALL To return to normal play Press A-B once "OFF" is displayed. OFF OFF Cancel repeat mode (normal play) Notes To enjoy program repeat play (CD) If REPEAT is pressed during program play, repeat play is operated as below. Repeat of the current programmed track Repeat of all programs TRACK Repeat play works only with discs for which the elapsed playing time appears in the DVD display window during playback. Repeat play may not work correctly with some DVDs. A-B repeat play works only within a title DVD or a track CD.

Some subtitles recorded around point A or B may fail to appear (DVD). ALL OFF Cancel repeat mode (Program play) To return to normal play Press REPEAT several times until "OFF" is displayed. PAGE 28 ADVANCED OPERATION Storing markers in memory to be viewed (listened to) again Storing a MARKER in the DVD memory is similar to marking your page in a book. It allows you to quickly return to any point on the disc. Storing a marker in the memory 1 Press MARKER during play at the starting point to be viewed (listened to) again. 1/5 Indicates "1/5" is stored in the memory. Up to 5 markers can be stored in the memory. Recalling/Clearing a marker power dvd vcr catv tv 2 PLAY Press SEARCH during playback. play skip stop pause /step setup select/ enter skip Marker Picture 1 Marker Picture 2 Marker Picture 3 SELECT/ ENTER Marker Picture 4 open/close Marker Picture 5 Present Picture ch vol vol ch return/tv input display 1 4 7 clear 2 5 8 0 3 sound/mute 3 4 SEARCH MARKER EFG Press D/E/F/G to select the marker to be recalled/cleared. 6 program 9 title menu CLEAR Press PLAY or SELECT/ENTER to recall a marker. or Press CLEAR to clear a marker. audio subtitle angle marker-search repeat a-b random zoom Play resumes from the point corresponding to the selected marker, or the selected marker is cleared. q The "Present Picture" is not cleared. slow/scan rev fwd Notes These operations work only with discs for which the elapsed playing time appears in the DVD display window during playback or stop. Some subtitles recorded around the marker may fail to appear (DVD).

All the markers are cleared when the power is turned off or the disc is removed and when TV Aspect mode is changed at the SETUP menu. The marker is not stored when the DVD or title menu is displayed on the TV screen. ADVANCED OPERATION PAGE 29 Zoom feature The Zoom feature allows you to "ZOOM-IN" and enlarge the picture on the screen to either 4 times (X4) or 16 times (X16) its normal size. 1 Press ZOOM during normal playback or still playback. · The square frame will be displayed in the center of the picture. If any button is not pressed for more than 10 seconds, the square frame will disappear. · Each press of the ZOOM button changes the TV screen in the left sequence. · The magnification level will be displayed in the upper right corner of the zoom area. program 7 clear 8 0 9 title menu audio subtitle angle marker-search repeat a-b random zoom 1, 2 If you press D/E/F/G buttons the zoom point shifts. 2 Press SELECT/ENTER.

The selected frame is displayed in full size on the TV screen. 3 X4 X16 To resume normal playback Press ZOOM again to cancel Zoom feature and resume normal playback or still playback. Notes (X4) (X16) (Normal) Some discs may not respond to Zoom feature. Zoom does not work on subtitles or menus included on DVD video discs. Random play Note: This function only works with karaoke DVD and with audio CD discs. Random does not work with DVD movies. You can playback titles, or tracks in random order. (Random playback) The DVD player automatically selects the titles in a DVD video karaoke disc only and plays them back randomly. program Random play (DVD) 1 q Press RANDOM during stop. The DVD player starts random playback. If you press the RANDOM during normal playback, the DVD player will randomly select another title and begin random playback immediately. 2 7 clear 8 0 9 title menu To resume normal playback, press RANDOM. The RANDOM indicator in the DVD display window disappears. audio subtitle angle marker-search repeat a-b random zoom 1, 2 Random play (CD) The player plays the tracks in the disc in random order. 1 q Press RANDOM during stop. The random playback screen appears on the TV screen. If you press the RANDOM button during normal playback, the DVD player immediately selects another track and begins random playback. Notes Random playback may not be possible on certain discs. If you press the SKIP button during random playback, the DVD player goes to another track randomly and starts playback. 2 To resume normal playback, press RANDOM during random playback.

The RANDOM indicator in the DVD display window disappears. PAGE 30 ADVANCED OPERATION Program play The player plays the tracks in the disc in an order you specify. Note: Program play function is possible only with audio CDs. It does not work with DVD movie discs.



[You're reading an excerpt. Click here to read official ZENITH DVC2200C user guide](http://yourpdfguides.com/dref/350757)
<http://yourpdfguides.com/dref/350757>

1 Press PROGRAM during playback or stop mode. The program playback screen appears on the TV screen. Program Step 1 Total Time 00:00 power dvd vcr catv tv Clear All play 3 skip · To exit the screen, press PLAY, PROGRAM. skip stop 2 EFG Press D/E/F/G and press the numeric button(s), to select the desired track number. Program 3 pause /step setup select/ enter open/close ch vol vol ch return/tv input display 2 1 1 5 19 Step 3 Total Time 08:32 1 4 7 clear 2 5 8 0 3 sound/mute 6 program Clear All 9 title menu audio subtitle angle marker-search repeat a-b random zoom · Repeat step 2 to select another track. ·

Up to 20 tracks can be programmed.

3 slow/scan rev fwd Press PLAY or SELECT/ENTER to exit the screen. The selected track is stored in the memory and play now begins in the programmed sequence. q If you press PROGRAM to exit the screen, the selected tracks are not memorized. After playback all tracks programmed Play is stopped. Clearing the program q To clear the program one by one Press D/E/F/G to select the unwanted No.

and then press CLEAR. q To clear all the programs Press D/E/F/G to select the "Clear All" and press SELECT/ENTER. Press PLAY or SELECT/ENTER to exit the screen. If you press PROGRAM to exit the screen, the programs are not cleared. (The programs are also cleared when the power is turned off or the disc is removed.

) INITIAL SETTINGS PAGE 31 Common procedures of initial settings Once the initial settings have been completed, the player can always be operated under the same conditions (especially with DVD discs). The settings will be retained in the memory until they are changed, even if the power is switched off.

Common procedures of initial settings 1 Press SETUP in the stop or playback mode. The SETUP menu is displayed. Disc Audio Disc Subtitle Disc Menu Rating Password TV Aspect Menu Language TV Output Select Pseudo PAL Digital Audio Output 5.1 Speaker Setup Original English French German Spanish Italian Chinese Polish Hungarian Russian Other -- -- -- -- power dvd vcr catv tv play 2 skip E Press D/E to select the desired item. The screen will show the current setting for the selected item, and the alternate setting(s). · Disc Audio (see page 32) · Disc Subtitle (see page 32) · Disc Menu (see page 32) · Rating (see page 33) · Password (see page 34) · TV Aspect (see page 35) · Menu Language (see page 36) · Digital Audio Output (see page 37) skip 3 1 stop pause /step setup select/ enter open/close ch vol vol ch return/tv input display 2, 3 1 4 7 clear 2 5 8 0 3 sound/mute 6 program 9 title menu audio subtitle angle marker-search 3 repeat a-b random zoom E Press G and then D/E to select the desired setting and press SELECT/ENTER. · Some items require additional steps. (See the respective page.

) slow/scan rev fwd When the alternate setting is selected the screen returns to the Initial Settings display. To exit SETUP menu Press SETUP, RETURN or PLAY. PAGE 32 INITIAL SETTINGS Selecting disc languages This is to select the audio soundtrack language, subtitle language and the language used in title menus or DVD menus which will always be used for every disc to be played back. When you play back a DVD video disc, the DVD player automatically displays the pre-selected subtitle language if it is included on the disc. 1 E At the setup screen, press D/E to select "Disc Audio" and press G. Disc Audio Disc Subtitle Disc Menu Rating Password TV Aspect Menu Language TV Output Select Pseudo PAL Digital Audio Output 5.1 Speaker Setup Original English French German Spanish Italian Chinese Polish Hungarian Russian Other -- -- -- -- power dvd vcr catv tv 2 play E Press D/E to select the desired language and then press SELECT/ENTER. skip stop skip 2 pause /step setup select/ enter open/close ch vol vol ch return/tv input display 1, 2 Original :The original language of each disc will be selected. English : The English will be Selected. Other : Another language can be selected.

You can input 4-digit language code. (Refer to the language codes on page 38. Press CLEAR if an incorrect language code is entered.) The "Disc Subtitle" and "Disc Menu" are selected by the same method. Note If the language selected is not available on the disc, the original language designated by each disc will be selected.

1 4 7 clear 2 5 8 0 3 sound/mute 6 program 9 title menu audio subtitle angle marker-search repeat a-b random zoom slow/scan rev fwd INITIAL SETTINGS PAGE 33 Selecting rating level and password This is to prohibit the playing of specified DVDs which are unsuitable for children. q Some DVD discs contain a restriction level which enables parents to remove scenes or prevent playback of discs by children. DVD players are equipped with a password designed to prevent children changing the level. Selecting rating level (DVD only) 1 At the SETUP screen, press "Rating" and press G. Disc Audio Disc Subtitle Disc Menu Rating Password TV Aspect Menu Language TV Output Select Pseudo PAL 8 7 6 5 4 3 2 1 D/E E to select Unlock power dvd vcr catv tv Digital Audio Output 5.

1 Speaker Setup play skip stop skip 2 open/close 2 pause /step setup E Press D/E to select the desired level and press SELECT/ENTER. Disc Audio Disc Subtitle Disc Menu Rating Password TV Aspect Menu Language TV Output Select Pseudo PAL Digital Audio Output 5.1 Speaker Setup 8 Blocked 7 Blocked 6 5 4 3 2 1 Unlock select/ enter ch vol vol ch return/tv input display 1, 2 1 4 7 clear 2 5 8 0 3 sound/mute 6 program 9 title menu audio subtitle angle marker-search repeat a-b random zoom slow/scan rev fwd You cannot play DVD video discs rated higher than the level you selected unless you cancel the parental lock function. For example, when you select level 7, discs rated higher than level 7 are blocked and cannot be played. The parent lock level is equivalent to the following USA movie ratings. Level 7: NC-17 Level 3: PG Level 6: R Level 1: G Level 4: PG 13 · Some titles do not match with the rating level described as above. If you change the level and enter a password, playback of all DVDs with ratings higher than your selection will be blocked, unless the correct password is entered again. For example: if you change the level to "5", the DVD player will not play discs with ratings of "6", "7" or "8" unless the correct password is entered on the remote control. PAGE 34 INITIAL SETTINGS Selecting rating level and password Setting your password (DVD only) If you change the rating level to "7" or lower, you must enter a 4-digit "password" to prevent playback of discs with higher ratings.



[You're reading an excerpt. Click here to read official ZENITH](http://yourpdfguides.com/dref/350757)

[DVC2200C user guide](http://yourpdfguides.com/dref/350757)

<http://yourpdfguides.com/dref/350757>

dvd vcr catv tv power 1 play skip stop skip At the SETUP screen, press "Password" and press G.

Disc Audio Disc Subtitle Disc Menu Rating Password NEW ----- E to select 2, 3 2, 3 pause /step setup select/ enter open/close ch vol vol ch return/tv input display 1 2 TV Aspect Menu Language TV Output Select Pseudo PAL Digital Audio Output 5.1 Speaker Setup 1 4 7 clear 2 5 8 0 3 sound/mute 6 program 9 title menu Input a 4-digit password and press SELECT/ENTER. Example : 1234 Do not forget your password. audio subtitle angle marker-search repeat a-b random zoom 3 slow/scan rev fwd Input the 4-digit password again and press SELECT/ENTER to verify. Setting is finished. q The rating is locked. Any discs whose rating is higher than the setting cannot be played back unless the correct password is entered. To change/clear memorized password 1 2 To clear your 4-digit password If you forget your password, to clear the current password, follow the procedure below. At the SETUP screen Press E to select "Password" item. Enter 6-digit number "210499" and then press SELECT/ENTER.

The 4-digit password is cleared. At the SETUP screen, press E to select "Password" and press G. Input your password and Press SELECT/ENTER. Disc Audio Disc Subtitle Disc Menu Rating Password TV Aspect Menu Language TV Output Select Pseudo PAL Digital Audio Output 5.1 Speaker Setup Change Clear 1 2 3 3 Enter a new password Refer to "Setting your password" section on the right.

E To change or clear your password, press D/E to select the "Change" or "Clear" and press SELECT/ENTER. To change the rating level/password, follow the steps on page 33-34 again. INITIAL SETTINGS PAGE 35 Selecting TV Aspect Select the appropriate screen type according to your TV set; conventional size screen (4:3) or wide-screen (16:9). 1 E At the SETUP screen, press D/E to select "TV Aspect" and press G. Disc Audio Disc Subtitle power 4:3 Letterbox 4:3 Panscan 16:9 Wide Disc Menu dvd vcr catv tv Rating Password TV Aspect Menu Language TV Output Select play skip stop skip Pseudo PAL Digital Audio Output 5.

1 Speaker Setup 2 pause /step setup select/ enter open/close ch vol vol ch return/tv input display 1, 2 2 1 4 7 clear 2 5 8 0 3 sound/mute E Press D/E to select the desired Aspect and press SELECT/ENTER. Disc Audio 4:3 Letterbox 4:3 Panscan 16:9 Wide 6 program Disc Subtitle Disc Menu Rating Password 9 title menu audio subtitle angle marker-search TV Aspect Menu Language TV Output Select Pseudo PAL Digital Audio Output 5.1 Speaker Setup repeat a-b random zoom slow/scan rev fwd 4:3 Letterbox : The video material not formatted in the Pan & Scan style is played back in the letterbox style (black bands appear at top and bottom of screen). 4:3 Panscan : Select when a conventional TV set is connected. The video material formatted in the Pan & Scan style is played back in that style (the left and right edges are cut off). 16:9 Wide : Select when a wide-screen TV set is connected. Played in "FULL" size. (Setting the wide-screen TV to "FULL" mode is also necessary.) * Each screen shows an example when the video material for a wide-screen is played. (This setting does not affect the video material for conventional size.

) 4:3 Letterbox Cut Off 4:3 Panscan 16:9 Wide PAGE 36 INITIAL SETTINGS Selecting Menu Language Selects language for DVD menus and displays on the TV. 1 E At the SETUP screen, press D/E to select "Menu Language" and press G. Disc Audio Disc Subtitle Disc Menu English Spanish French power dvd vcr catv tv Rating Password TV Aspect Menu Language TV Output Select Pseudo PAL Digital Audio Output 5.1 Speaker Setup play skip stop skip 2 pause /step setup select/ enter open/close ch vol vol ch return/tv input display 1, 2 2 E Press D/E to select the desired Language and press SELECT/ENTER. Disc Audio Disc Subtitle Disc Menu Rating Password TV Aspect Menu Language TV Output Select Pseudo PAL Digital Audio Output 5.1 Speaker Setup English Spanish French 1 4 7 clear 2 5 8 0 3 sound/mute 6 program 9 title menu audio subtitle angle marker-search repeat a-b random zoom slow/scan rev fwd INITIAL SETTINGS PAGE 37 Selecting Digital Audio Output Each DVD disc has a variety of audio output options. Set the player's Digital Audio Output according to the type of audio system you use. 1 E At the SETUP screen, press D/E to select Digital Audio Output and press G. Disc Audio Disc Subtitle Disc Menu Rating DOLBY DIGITAL /PCM Stream/PCM PCM power dvd vcr catv tv Password TV Aspect Menu Language TV Output Select play Pseudo PAL skip skip stop Digital Audio Output 5.1 Speaker Setup 2 pause /step setup select/ enter open/close 2 ch vol vol ch return/tv input display 1, 2 E Press D/E to select the desired output and press SELECT/ENTER.

Disc Audio DOLBY DIGITAL /PCM 1 4 7 clear 2 5 8 0 3 sound/mute Disc Subtitle Disc Menu Rating Password TV Aspect Menu Language TV Output Select Pseudo PAL Digital Audio Output 5.1 Speaker Setup Stream/PCM PCM 6 program 9 title menu audio subtitle angle marker-search repeat a-b random zoom slow/scan rev fwd DOLBY DIGITAL/PCM: Select "DOLBY DIGITAL/PCM" if an active digital output is supplied to Dolby Digital decoder, (or an amplifier or other equipment with Dolby Digital decoder). Stream/PCM: Select "Stream/PCM" if an active digital output is supplied to an amplifier or other equipment with DTS decoder, Dolby Digital decoder and MPEG decoder. PCM: Select "PCM" if an active digital output is OUTPUT Playback Disc 96 kHz Linear PCM DVD DTS DVD Dolby Digital DVD MPEG DVD Audio CD DTS Audio CD Stream/PCM PCM Dolby Digital/ PCM PCM PCM only PCM DTS bit Stream Dolby Digital bit Stream Not Output Dolby Digital bit Stream Not Output PCM PCM PCM DTS bit Stream supplied to an amplifier or other equipment with linear PCM only (or MD recorder or DAT deck). Notes When you are not using the player's digital audio output, don't select any of the options. If an active digital audio output signal is supplied to an receiver or other equipment without a corresponding digital decoding capability, a very loud noise may be produced which could permanently damage the speakers. The DTS DVD disc sound is played back only when the DVD player is connected with receiver with a DTS decoder. MPEG bit Stream PCM PCM DTS bit Stream PCM DTS bit Stream PAGE 38 INITIAL SETTINGS Table of Language and Their Abbreviations Enter the appropriate code number for the initial settings "Audio", "Subtitle" and/or "Menu" (See page 32).



[You're reading an excerpt. Click here to read official ZENITH](#)

[DVC2200C user guide](#)

<http://yourpdfguides.com/dref/350757>